



ИЛЛЮСТРАЦИИ
ILLUSTRATIONS
ILLUSTRATIONS
ABBILDUNGEN
ILUSTRACIONES

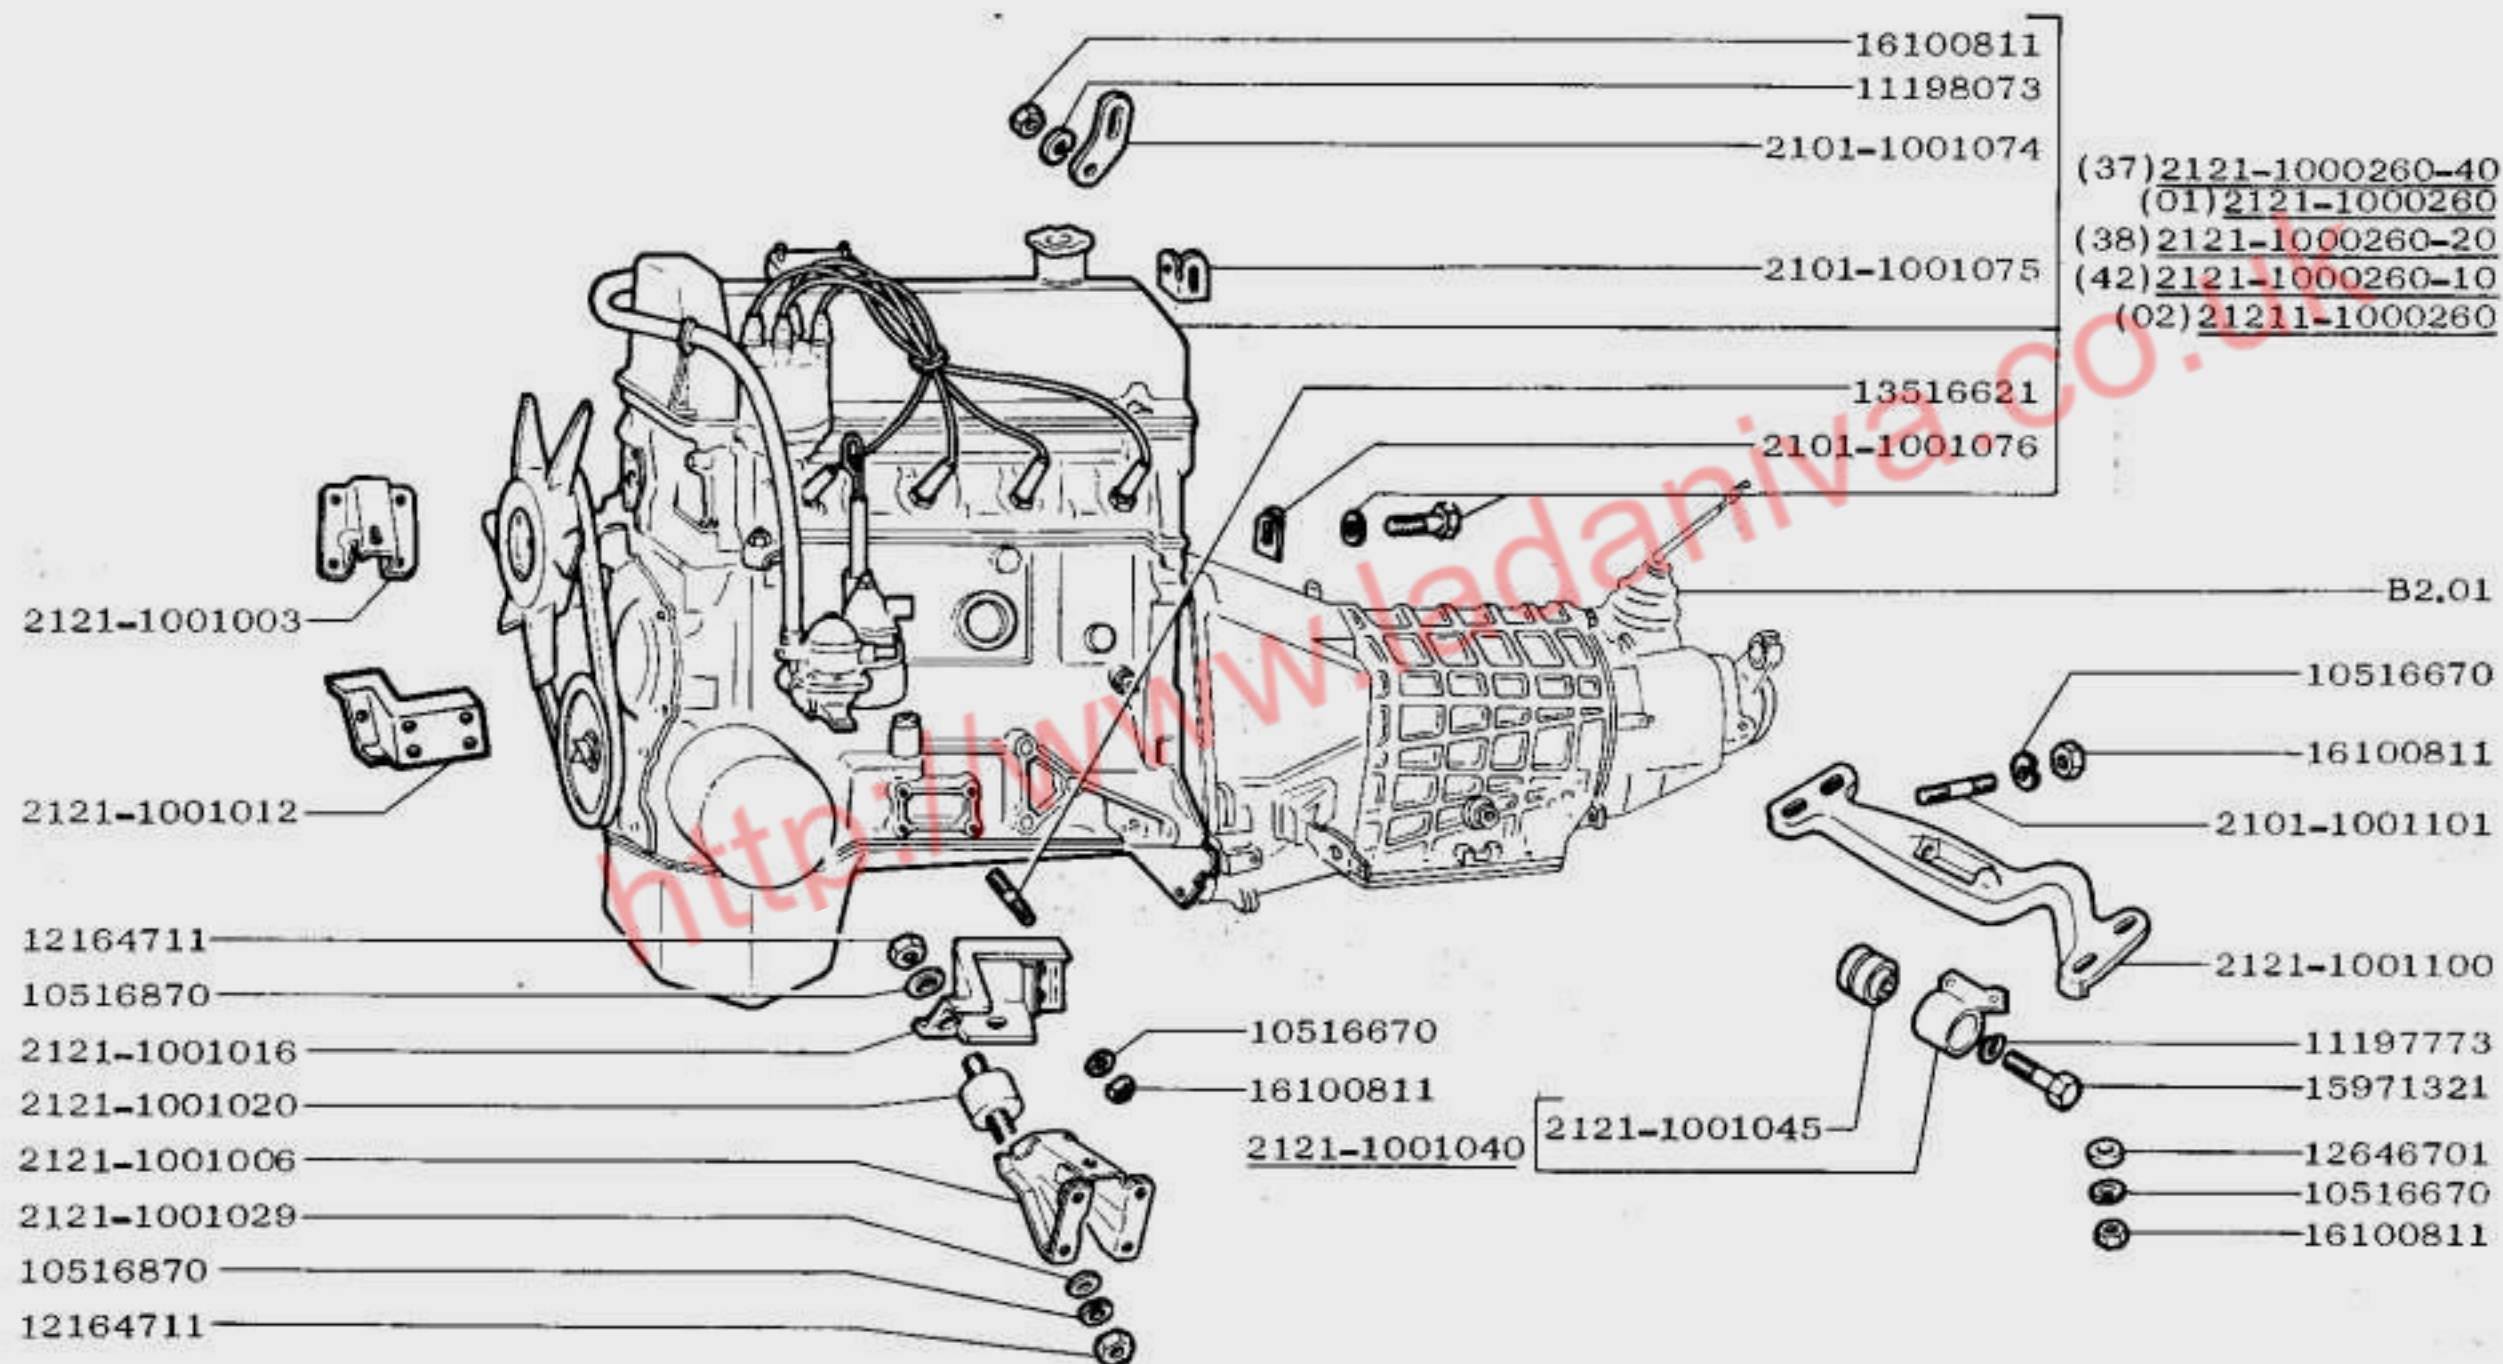

BA3-2121 (01)
BA3-21211 (02)

Двигатель и подвеска двигателя
Engine and Engine Mounting
Moteur et suspension du moteur
Motor und Motorlagerung
Motor y suspensión del motor


A0. 01

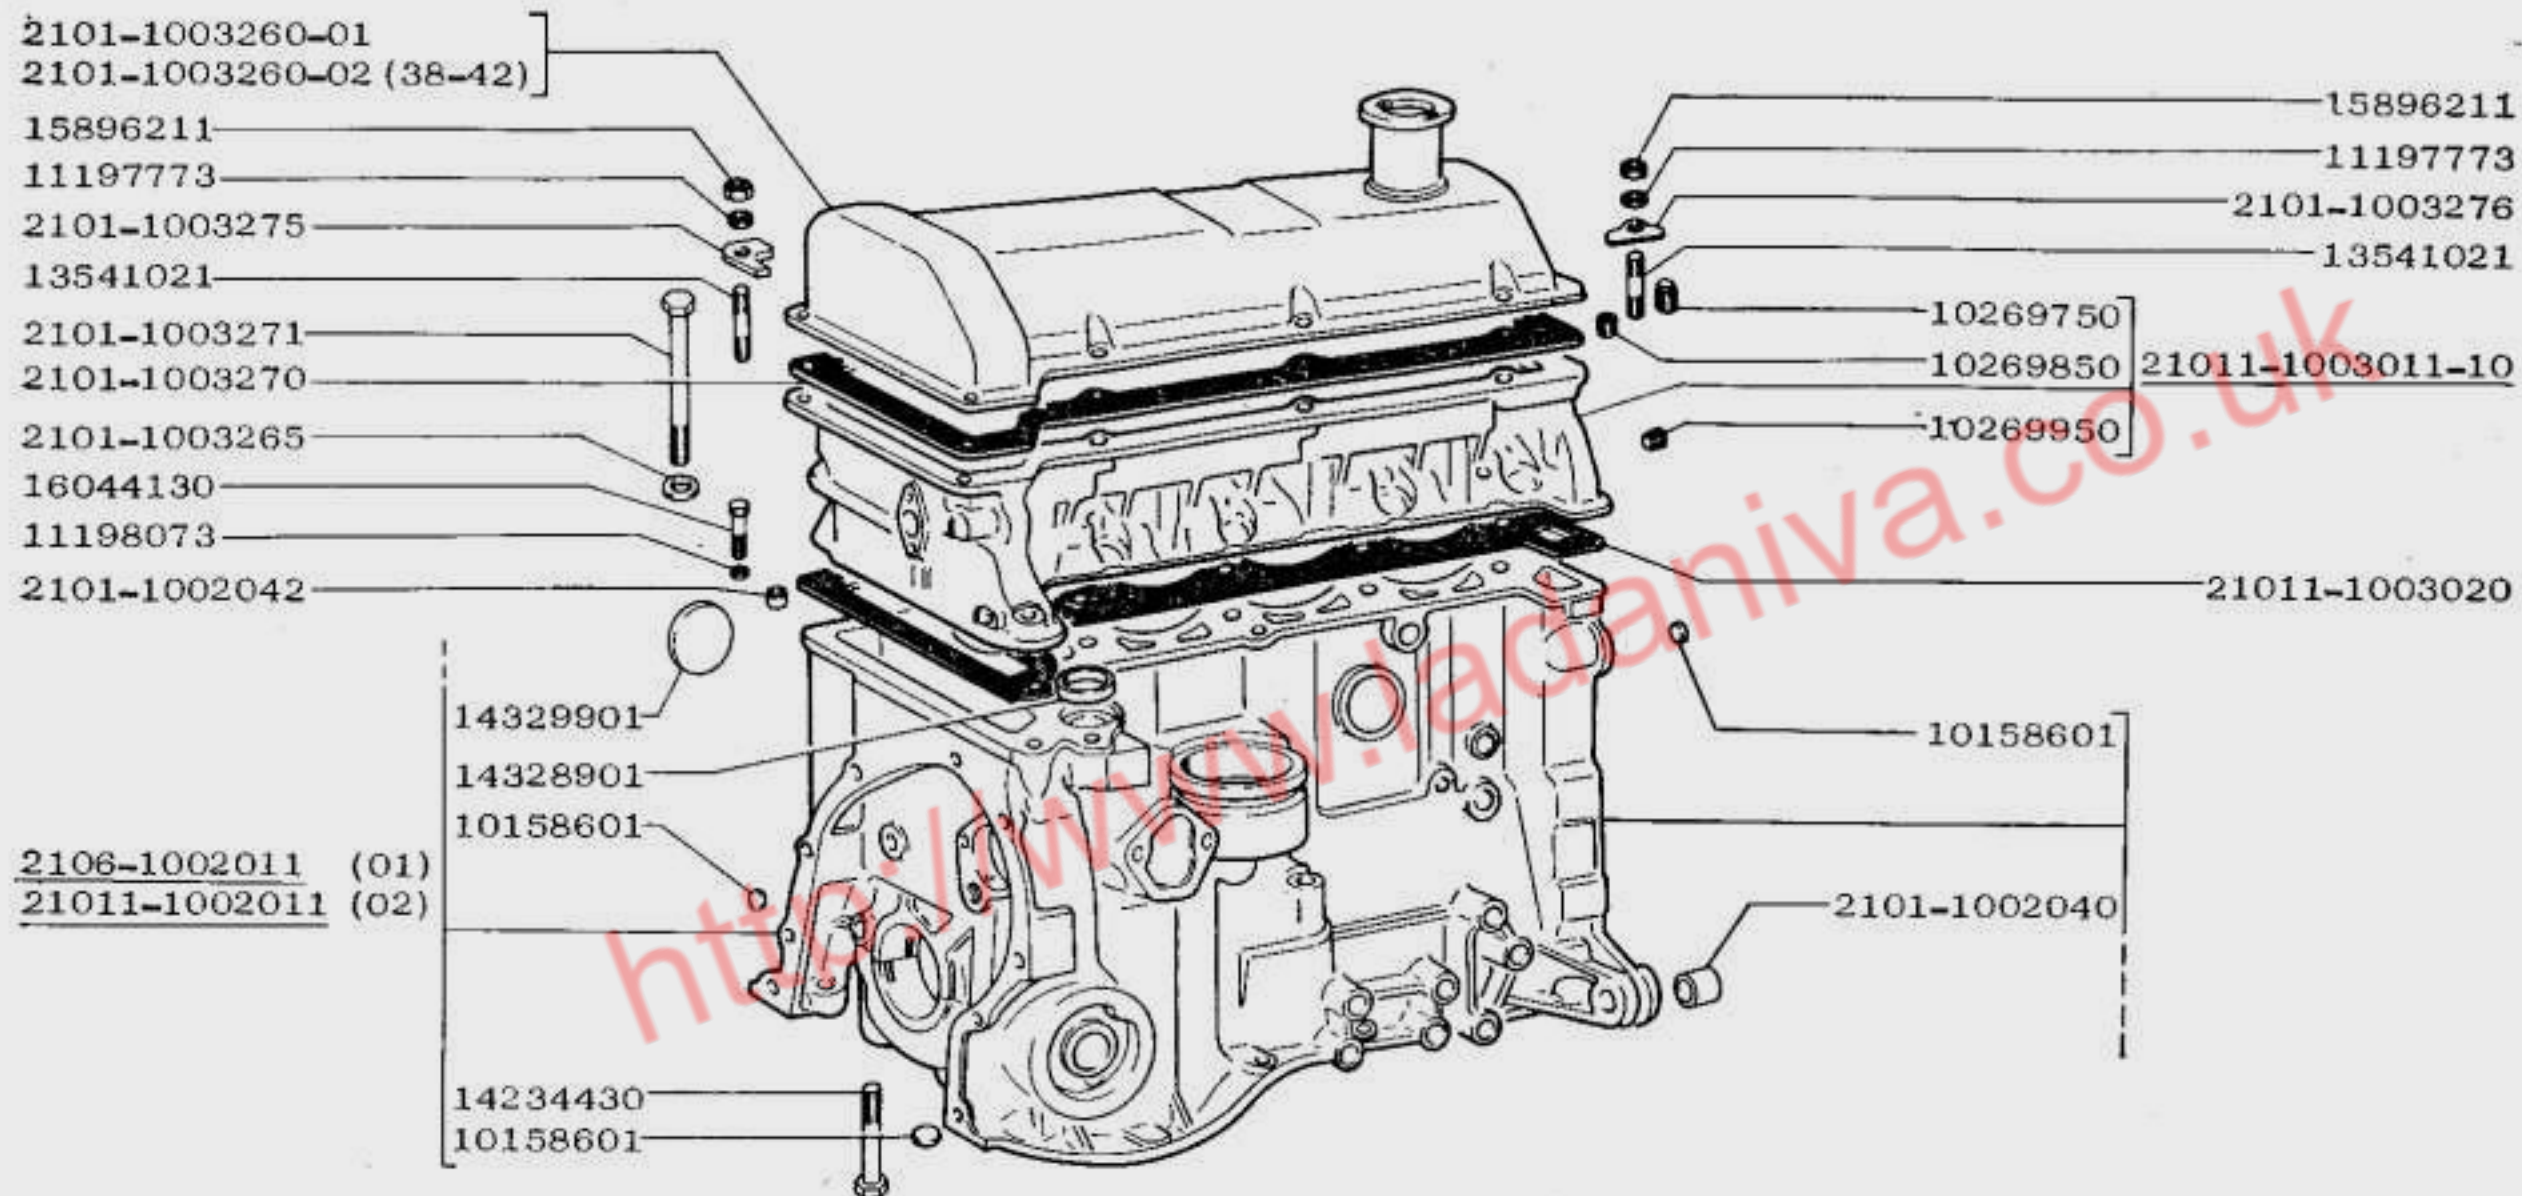

BA3-2121 (01)
BA3-21211 (02)

Блок цилиндров и головка блока
Cylinder Block and Head
Bloc-cylindres et culasse
Zylinderblock und Zylinderkopf
Bloque de los cilindros y culata del bloque

A1.01

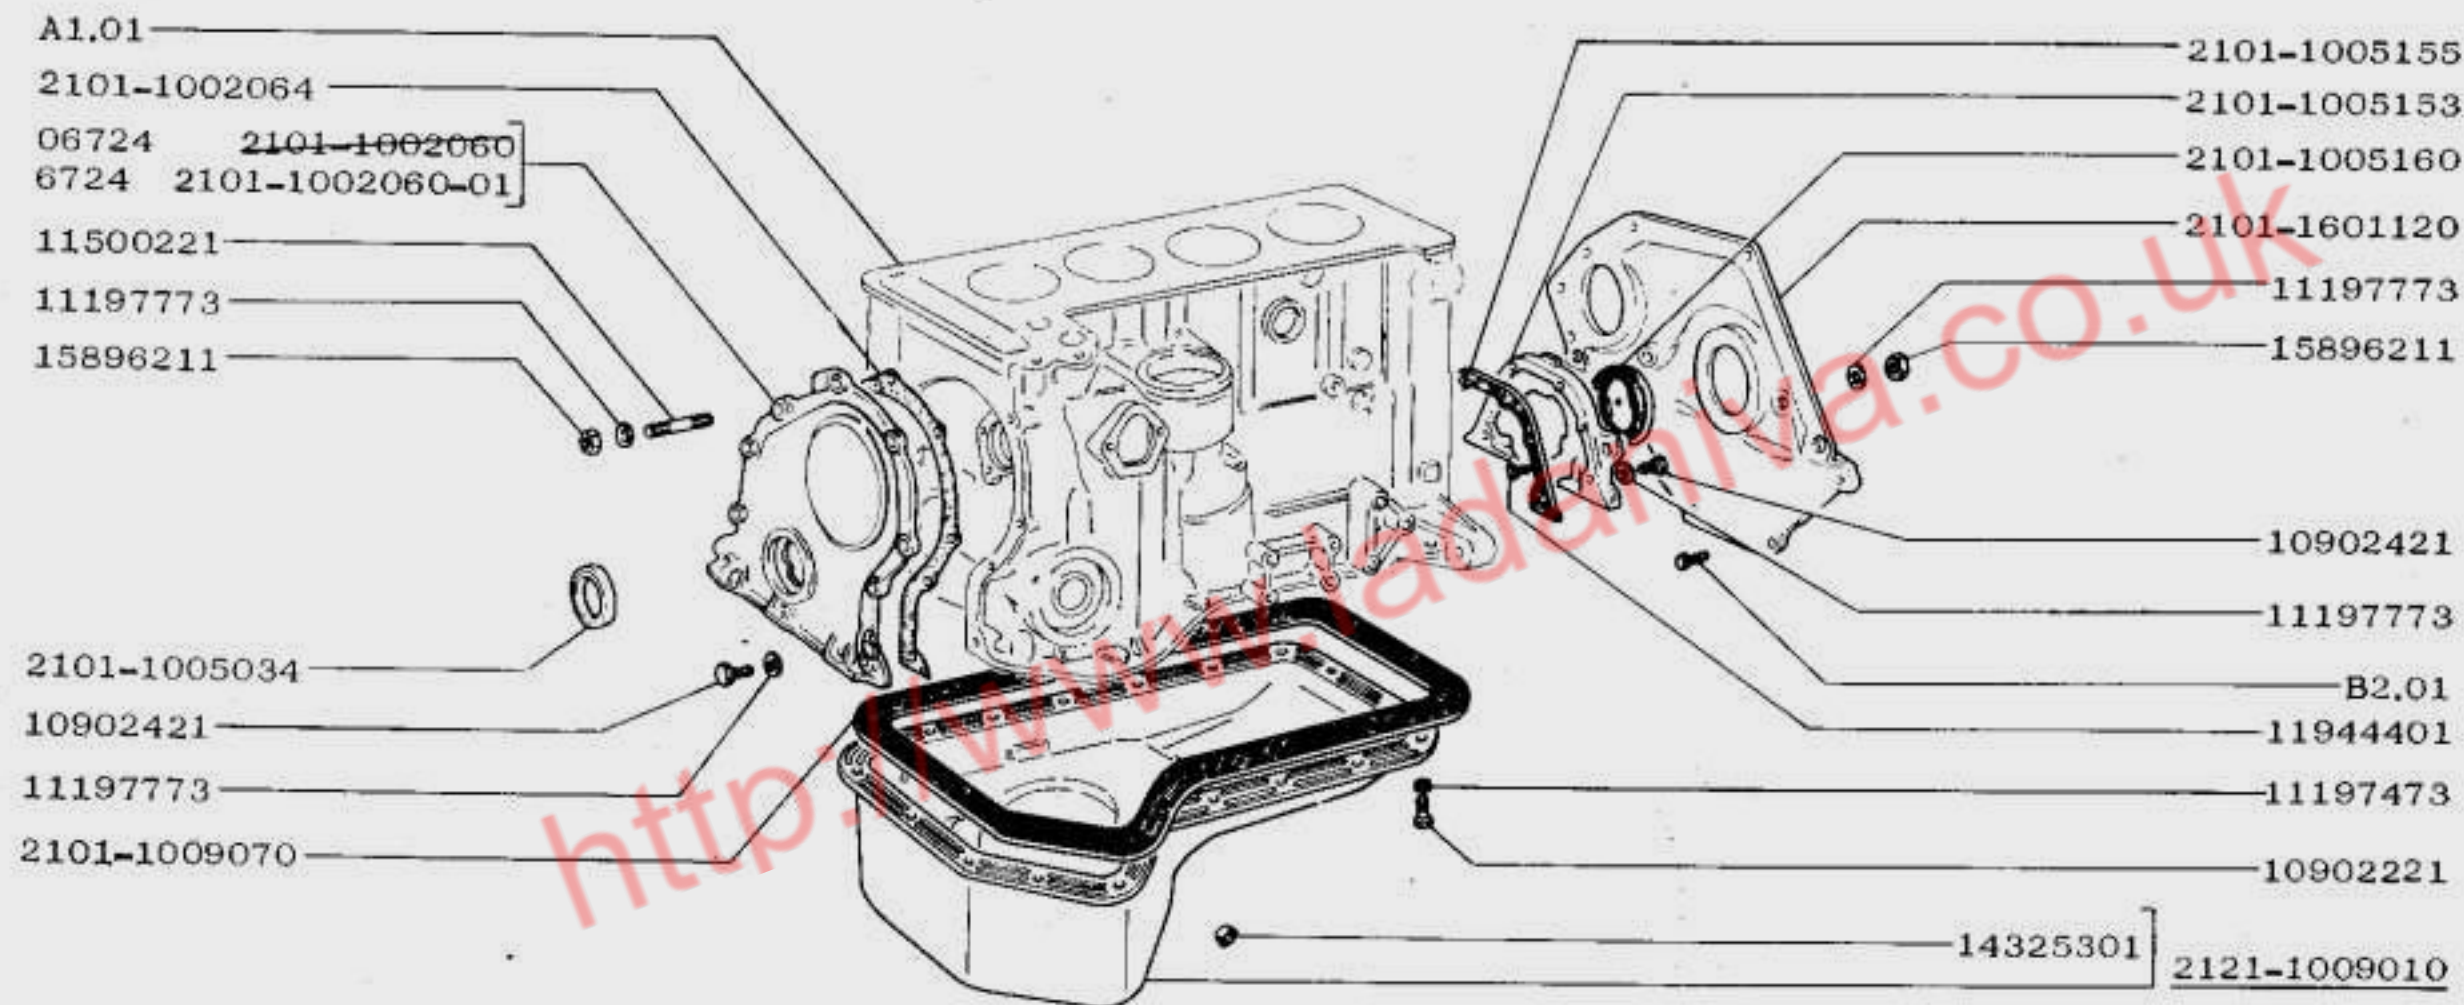

BA3-2121
BA3-21211

Картер масляный и крышки блока
Oil Pan and Cylinder Block Covers
Carter d'huile, carter de distribution et couvercles
Kurbelgehäuse und Zylinderblockdeckel
Carter de aceite y tapas del bloque

A1.02

	2101-1000102	= 1
	2101-1000102-21	= 2
	2101-1000102-22	= 3
	2101-1000102-23	= 4
	2101-1000102-24	= 5

2103-1005015 (01)
2101-1005015 (02)

2101-1701031
14328201

2101-1005174 -0,00 1
2101-1005174-21 -0,25 2
2101-1005174-22 -0,50 3
2101-1005174-23 -0,75 4
2101-1005174-24 -1,00 5

2101-1005183 +0,000
2101-1005183-20 +0,127

2101-1005126 2101-1005115

2101-1005127

2101-1005128

1 -0,00 2101-1005170
2 -0,25 2101-1005170-21
3 -0,50 2101-1005170-22
4 -0,75 2101-1005170-23
5 -1,00 2101-1005170-24

+0,000 2101-1005183 05805
+0,127 2101-1005183-20 05805
+0,000 2106-1005183 5805
+0,127 2106-1005183-20 5805

BA3-2121 (01)
BA3-21211 (02)

Вал коленчатый и маховик
Crankshaft and Flywheel
Vilebrequin et volant
Kurbelwelle und Schwungrad
Cigüeñal y volante



A1.03

21011-1004030 +0,0 1
 21011-1004030-21 +0,4 2
 21011-1004030-22 +0,7 3
 21011-1004030-23 +1,0 4

21011-1004025 +0,0 1
 21011-1004025-21 +0,4 2
 21011-1004025-22 +0,7 3
 21011-1004025-23 +1,0 4

21011-1004035 +0,0 1
 21011-1004035-21 +0,4 2
 21011-1004035-22 +0,7 3
 21011-1004035-23 +1,0 4

2101-1004058 -0,00 5
 2101-1004058-21 -0,25 6
 2101-1004058-22 -0,50 7
 2101-1004058-23 -0,75 8
 2101-1004058-24 -1,00 9

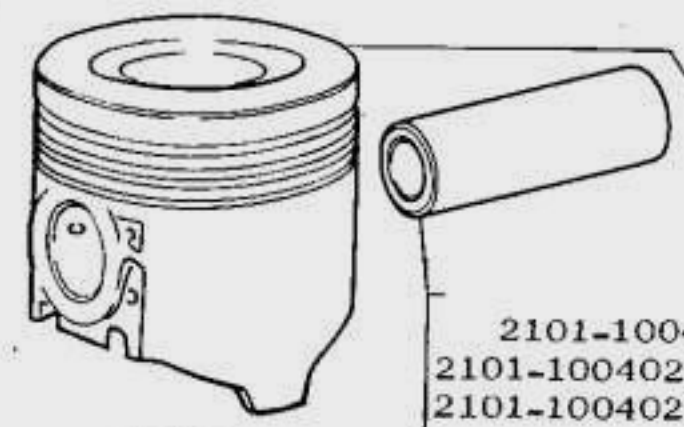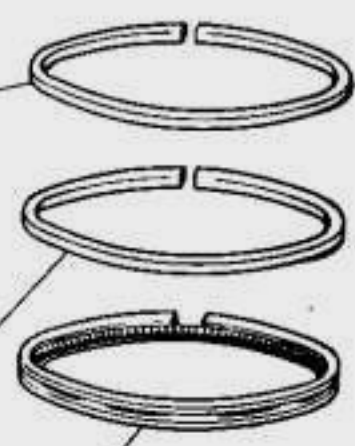

21011-1004015-10
 21011-1104015-12
 21011-1004015-14
 +0,4 21011-1004015-21
 +0,7 21011-1004015-22
 +1,0 21011-1004015-23

2101-1004020
 2101-1004020-01
 2101-1004020-02



	21011-1000100 = 1
	21011-1000100-21 = 2
	21011-1000100-22 = 3
	21011-1000100-23 = 4
	2101-1000104 = 5
	2101-1000104-21 = 6
	2101-1000104-22 = 7
	2101-1000104-23 = 8
	2101-1000104-24 = 9




2101-1004062
 12555020

2101-1004045

BA3-2121
 BA3-21211

Шатуны и поршни
 Connecting Rods and Pistons
 Bielles et pistons
 Pleuel und Kolben
 Bielas y pistones


A1.05

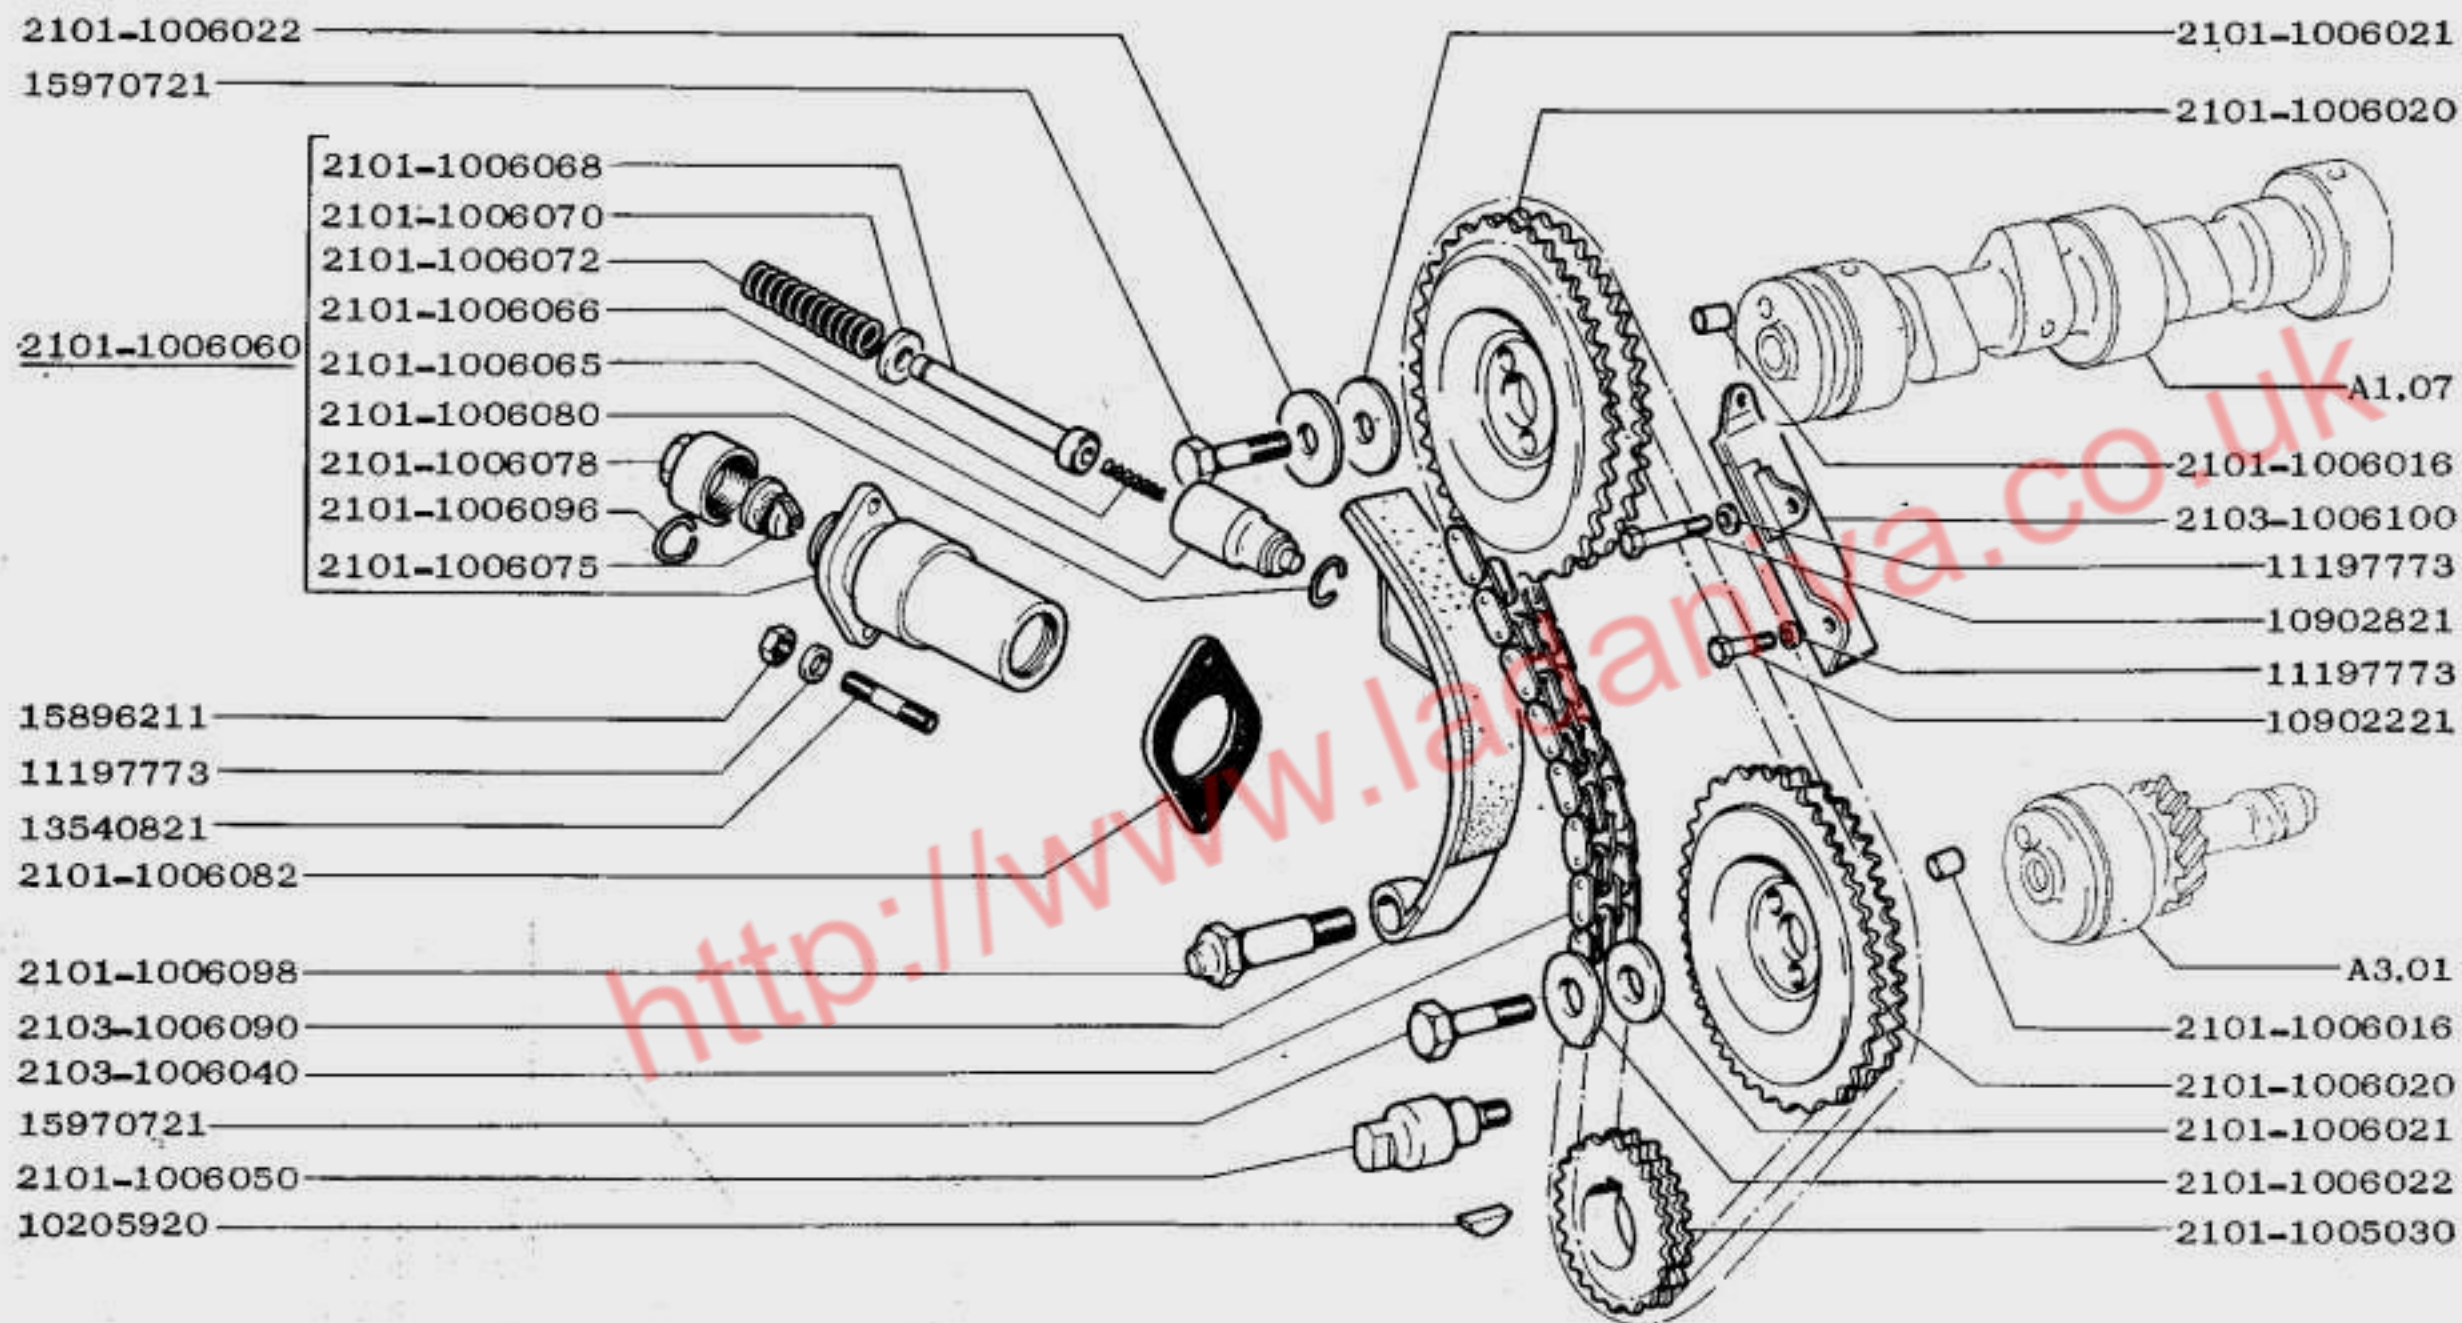

BA3-2121
BA3-21211

Привод распределительного вала
Camshaft Drive
Commande de l'arbre à cames
Nockenwellenantrieb
Accionamiento del árbol de levas


A1.06

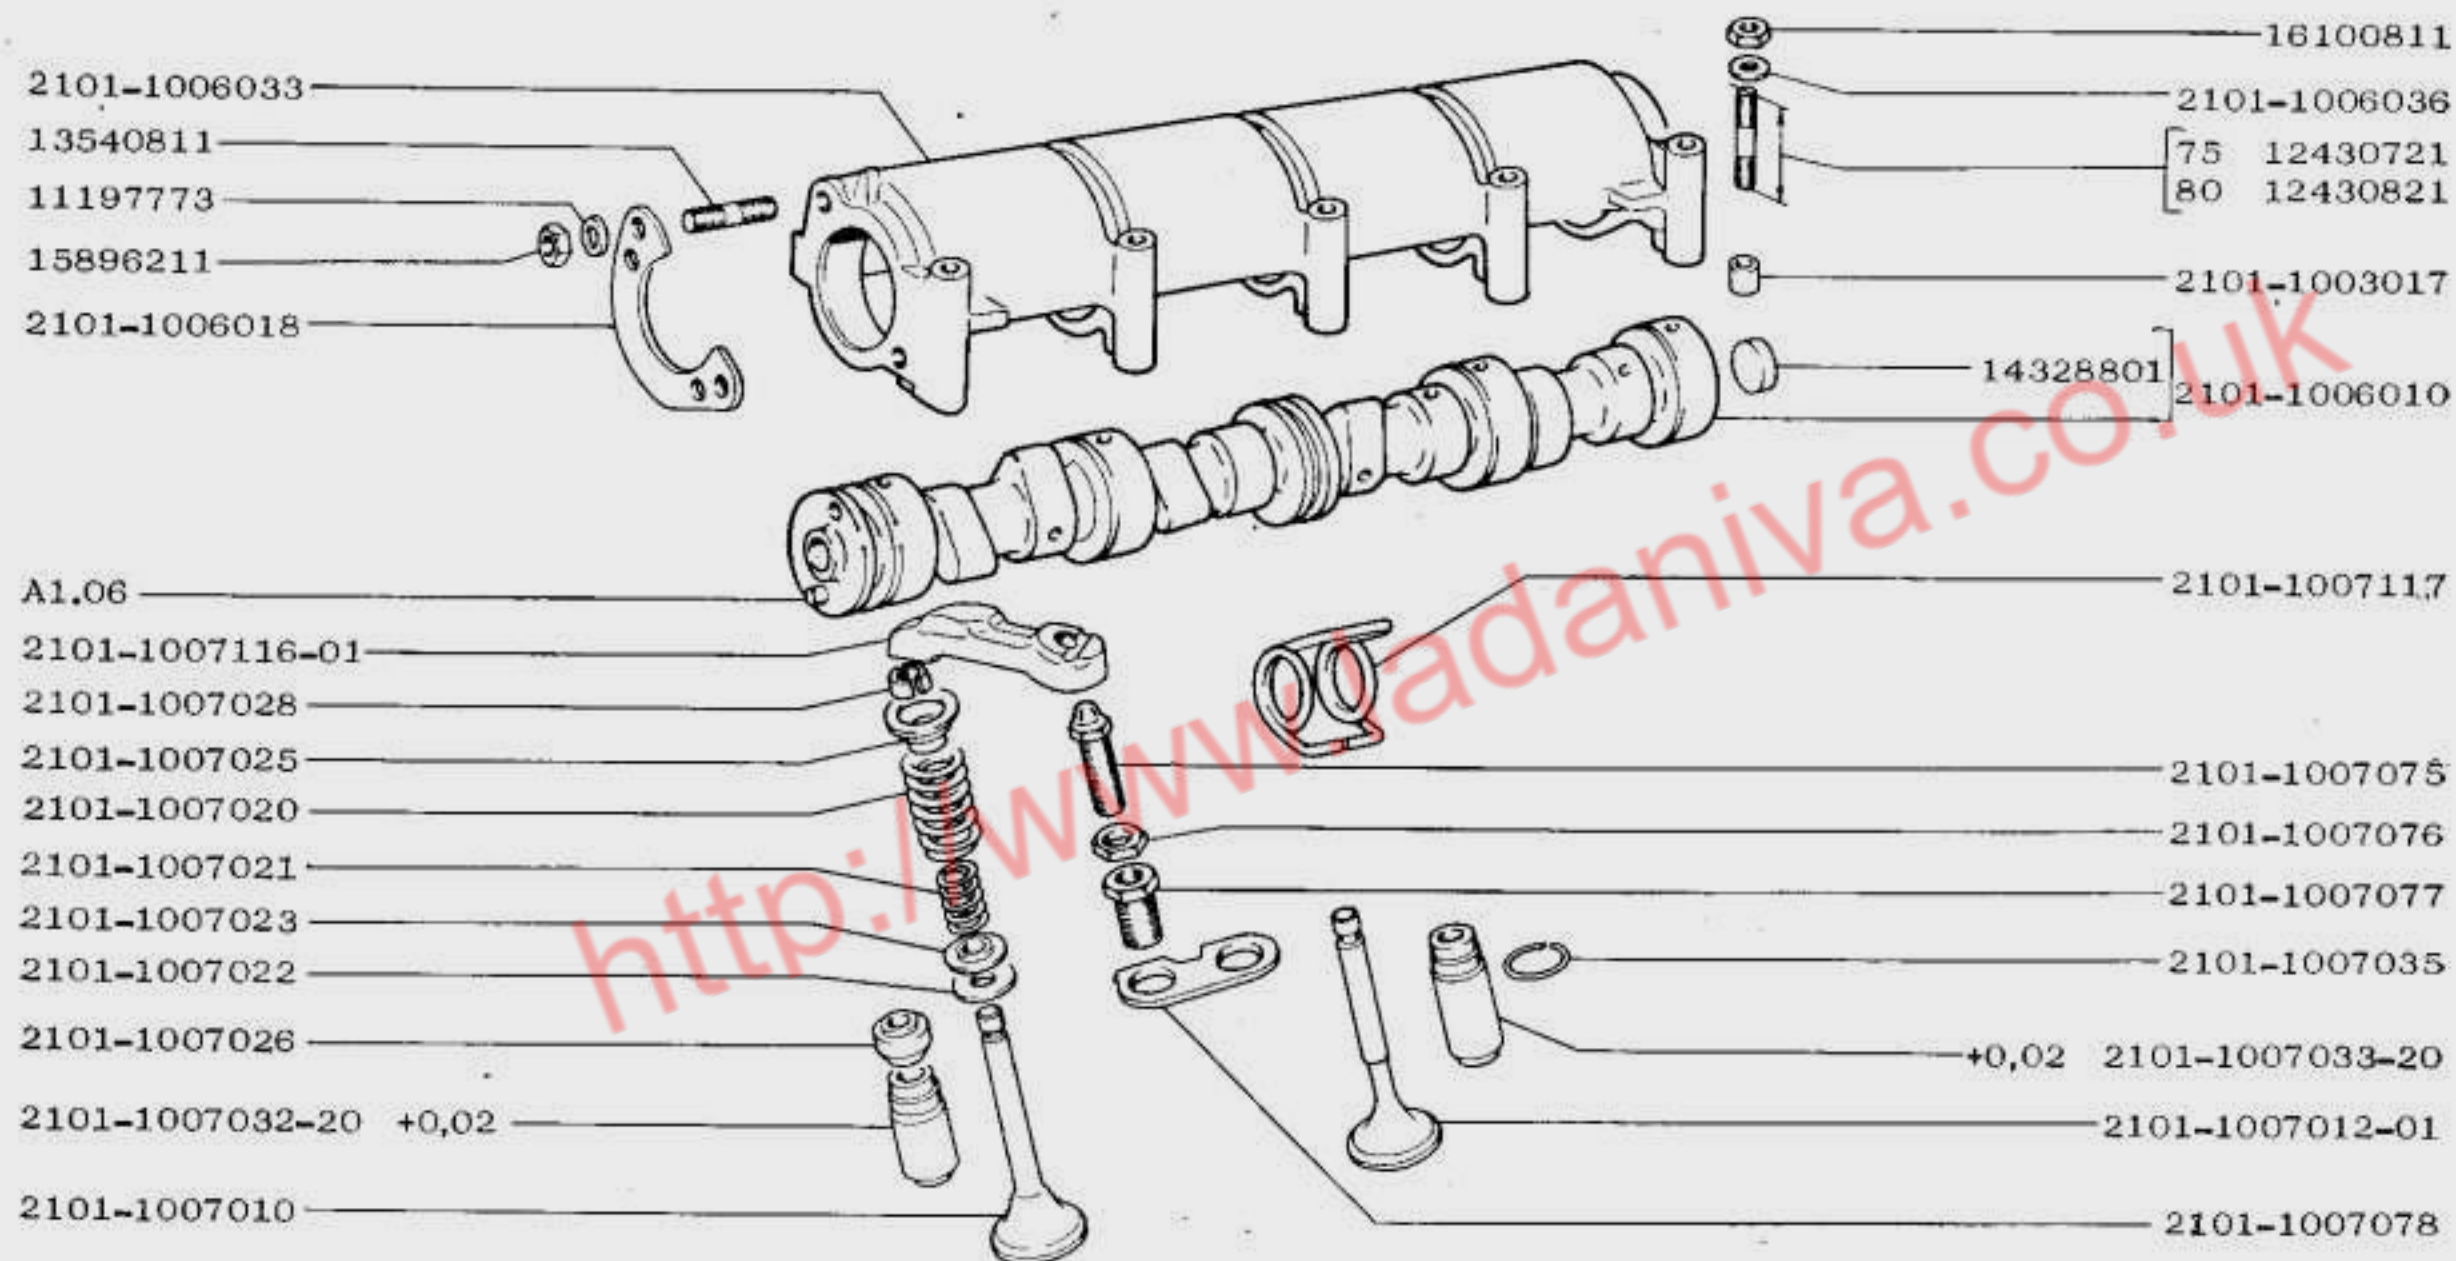

BA3-2121
BA3-21211

Механизм распределительный
Valve Gear
Mécanisme de distribution
Motorsteuerung
Mecanismo de la distribución


A1.07

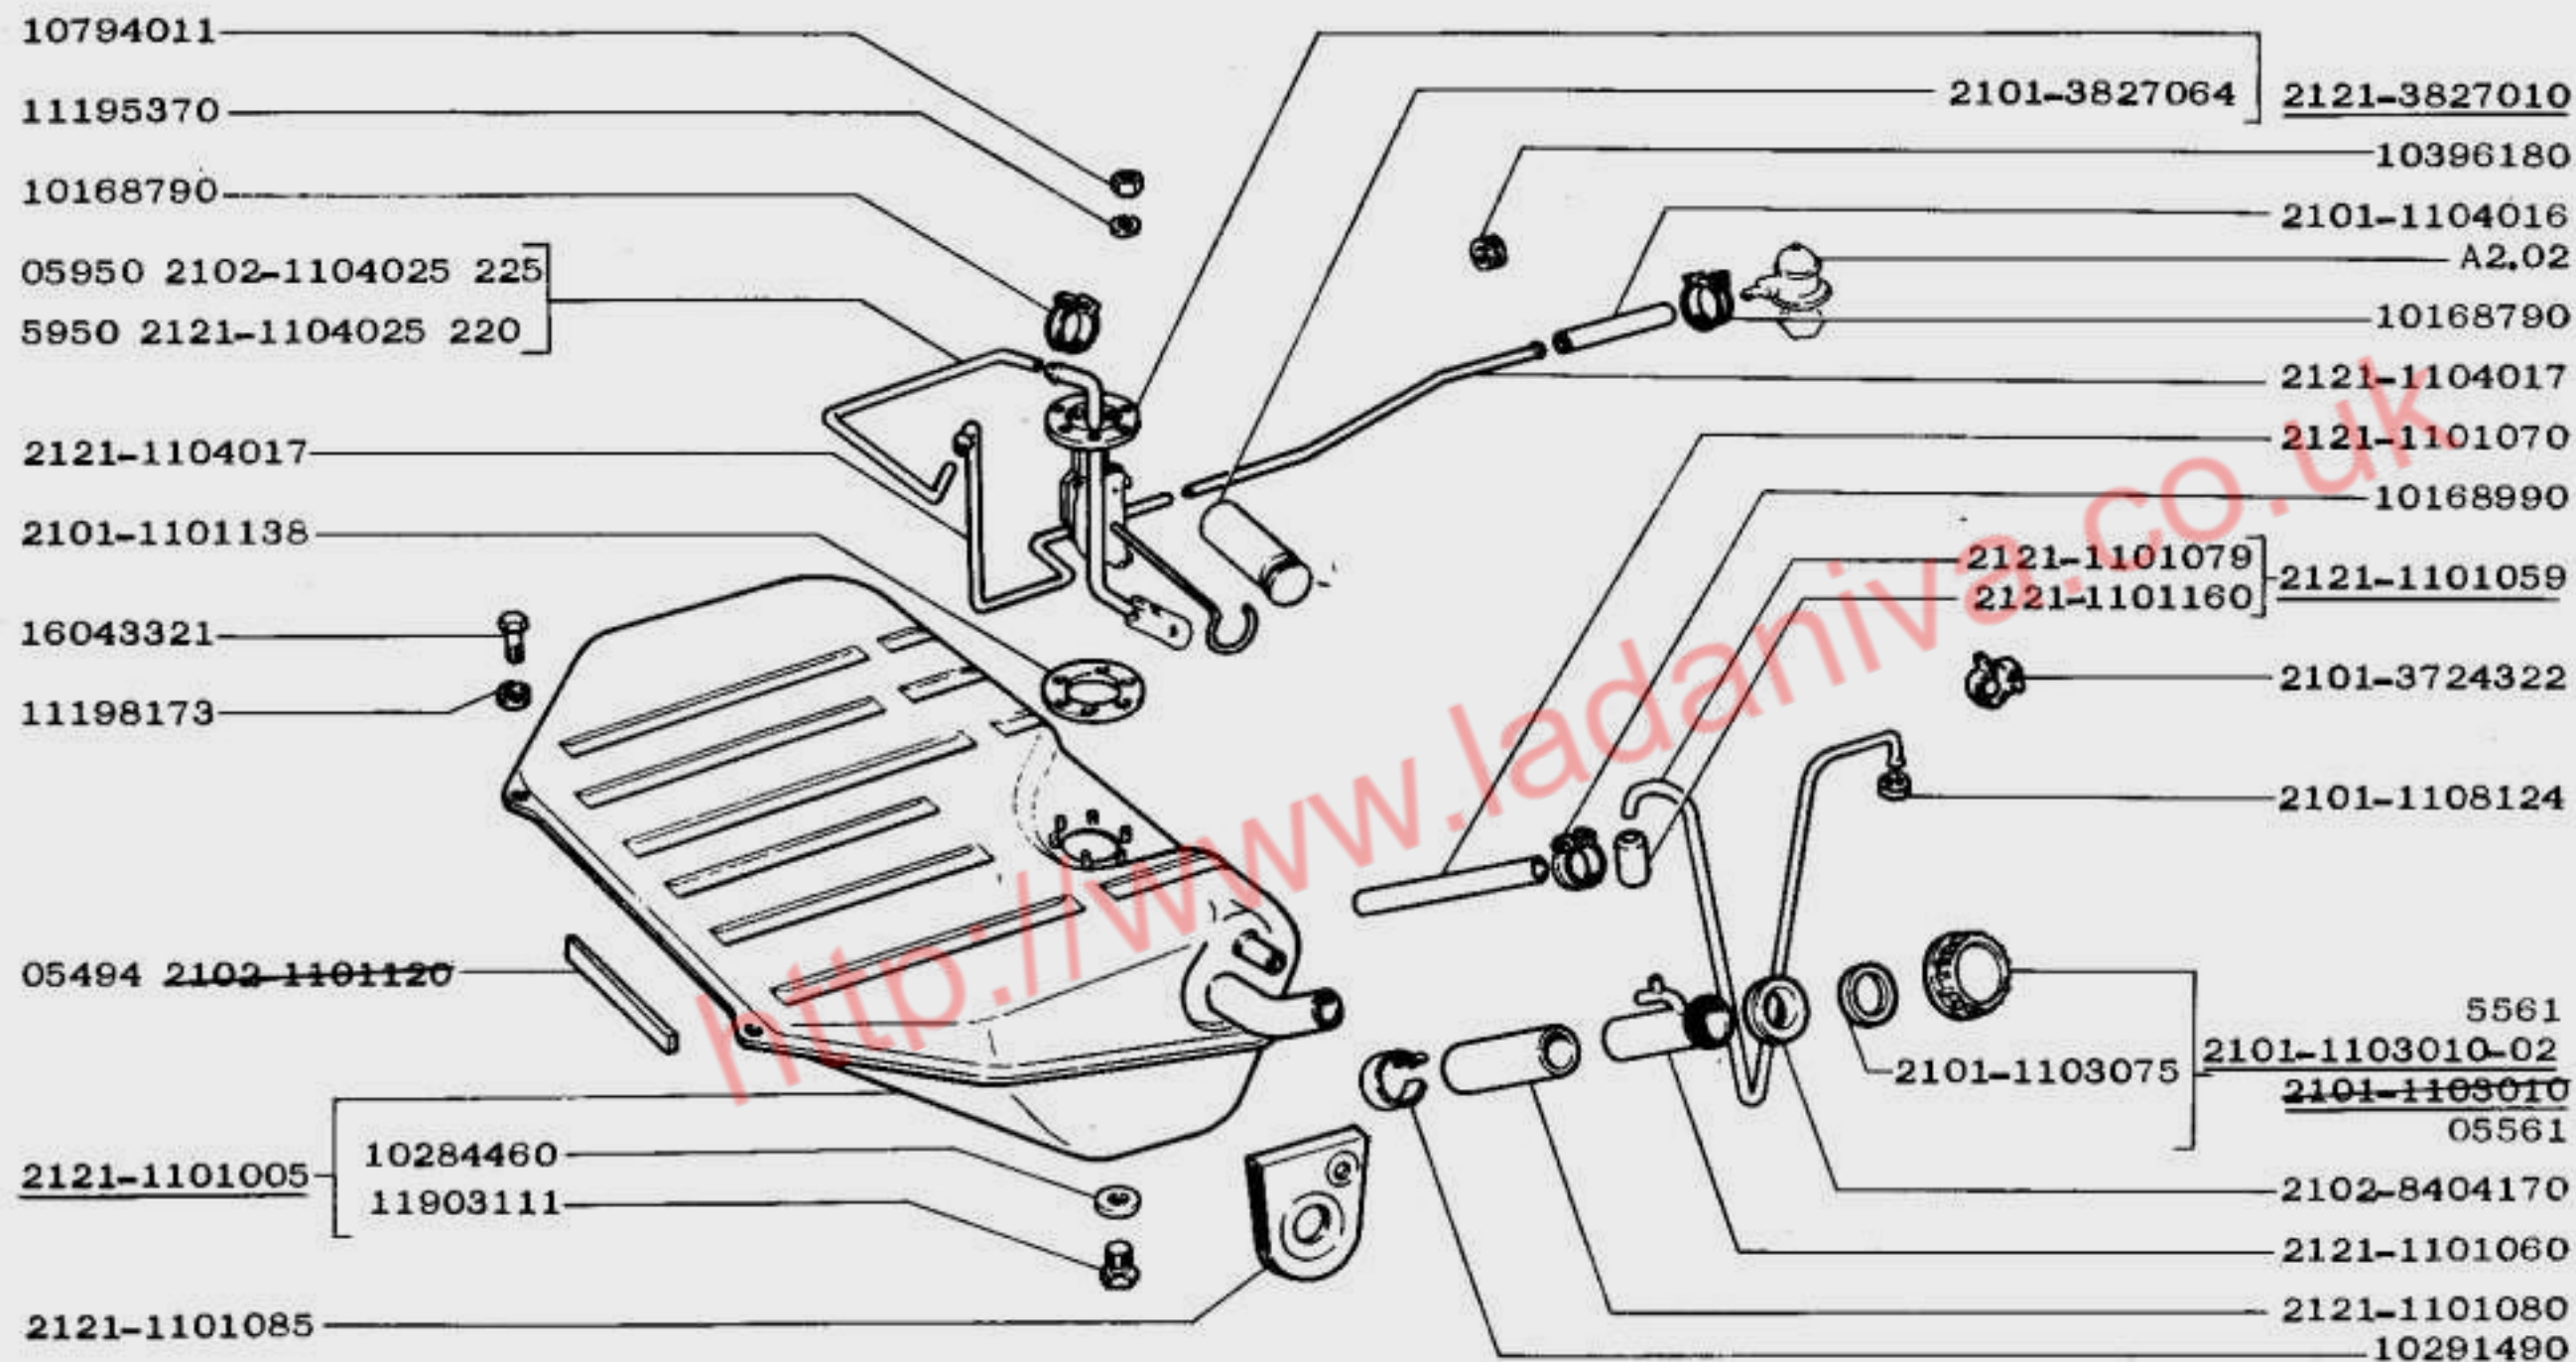

BA3-2121
BA3-21211

Бак топливный и трубопровод
Fuel Tank and Line
Réservoir d'essence et tuyauterie
Kraftstofftank und Rohrleitung
Depósito de combustible y tubería


A2.01

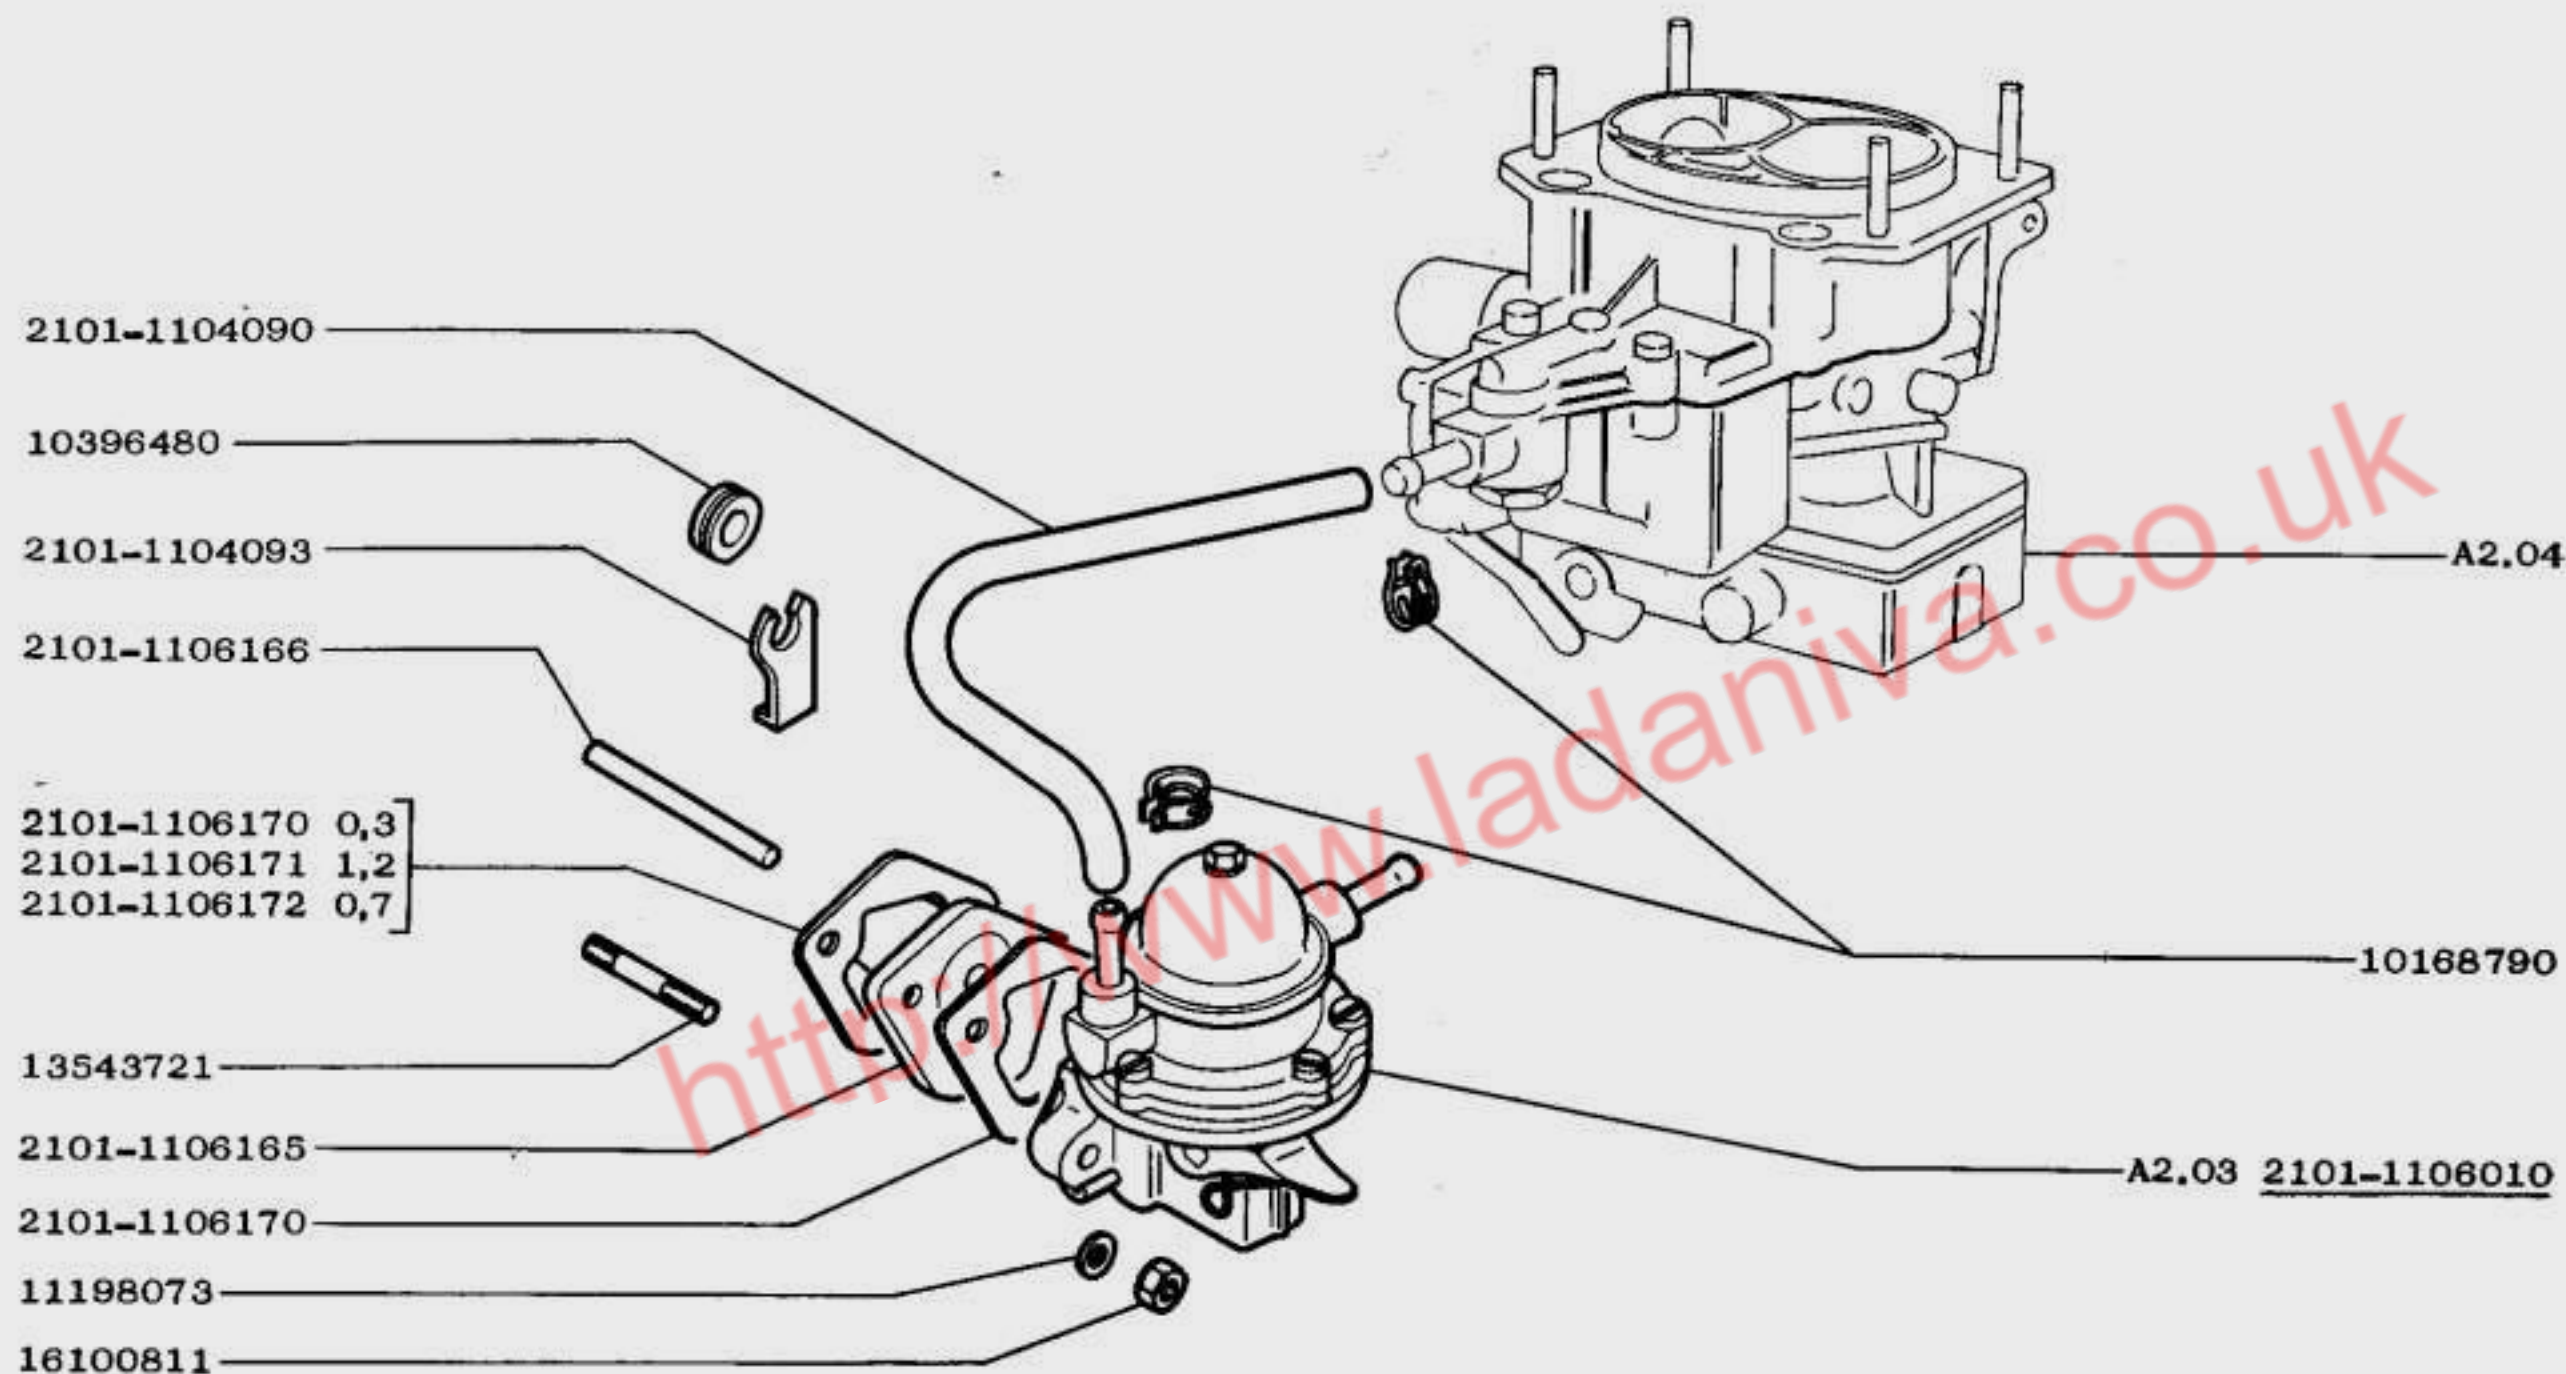

BA3-2121
BA3-21211

Насос топливный и трубопровод
Fuel Pump and Line
Pompe à essence et tuyauterie
Kraftstoffpumpe und Rohrleitung
Bomba de combustible y tubería


A2.02

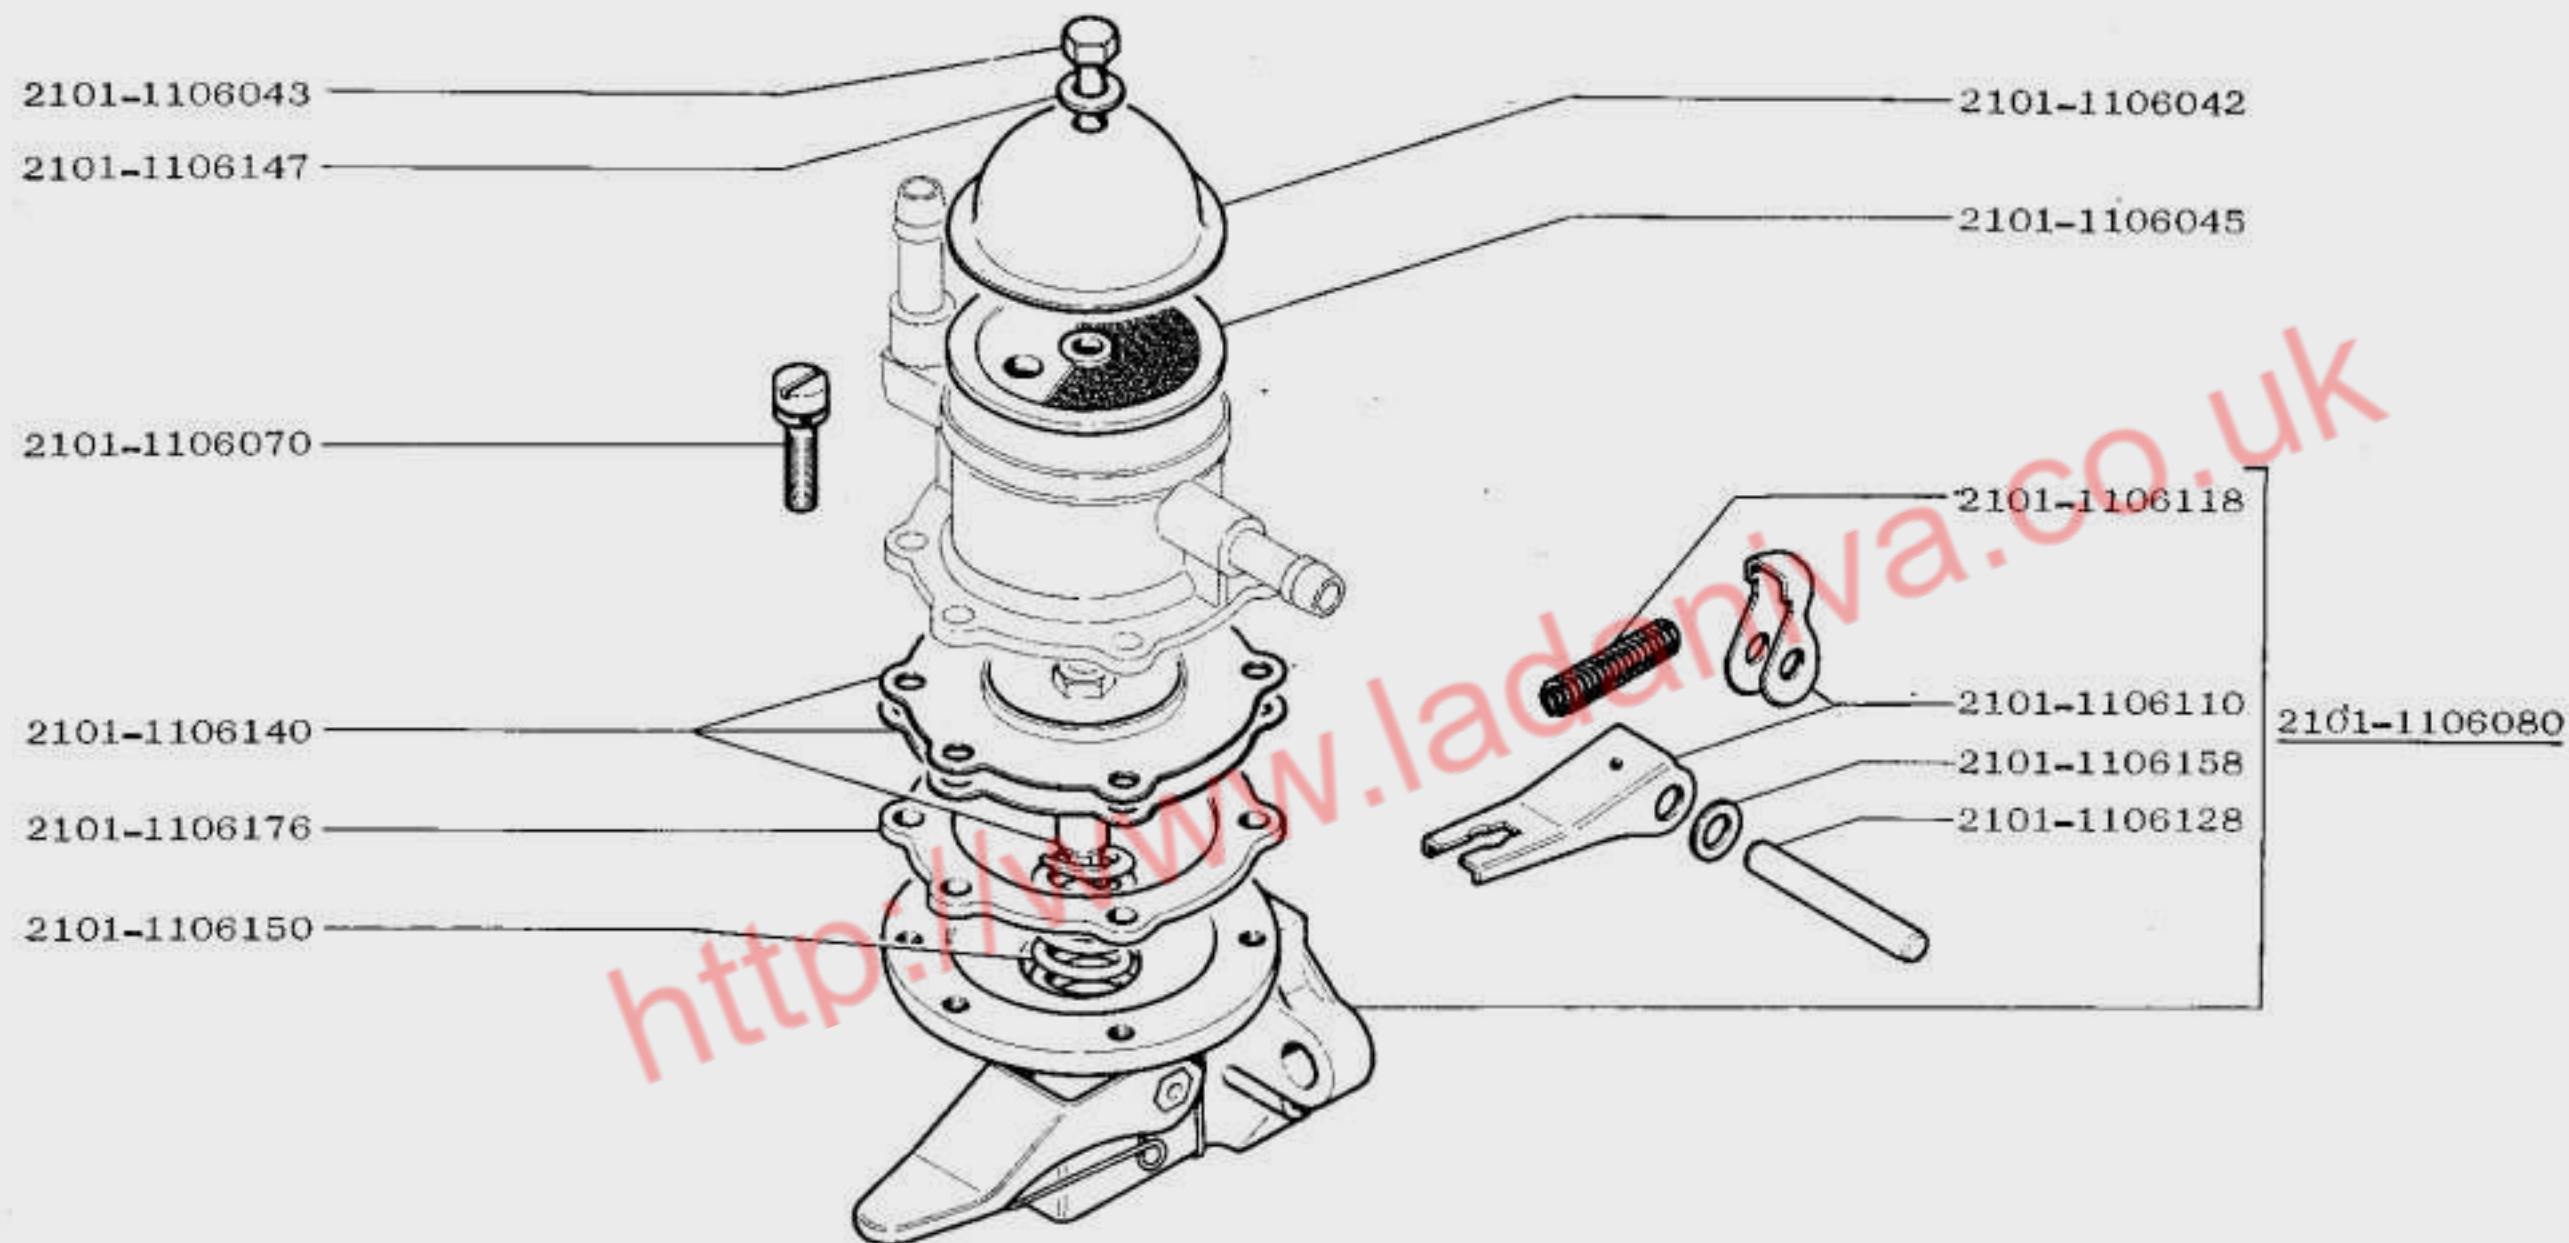

BA3-2121
BA3-21211

Насос топливный
Fuel Pump
Pompe à essence
Kraftstoffpumpe
Bomba de combustible

A2.03

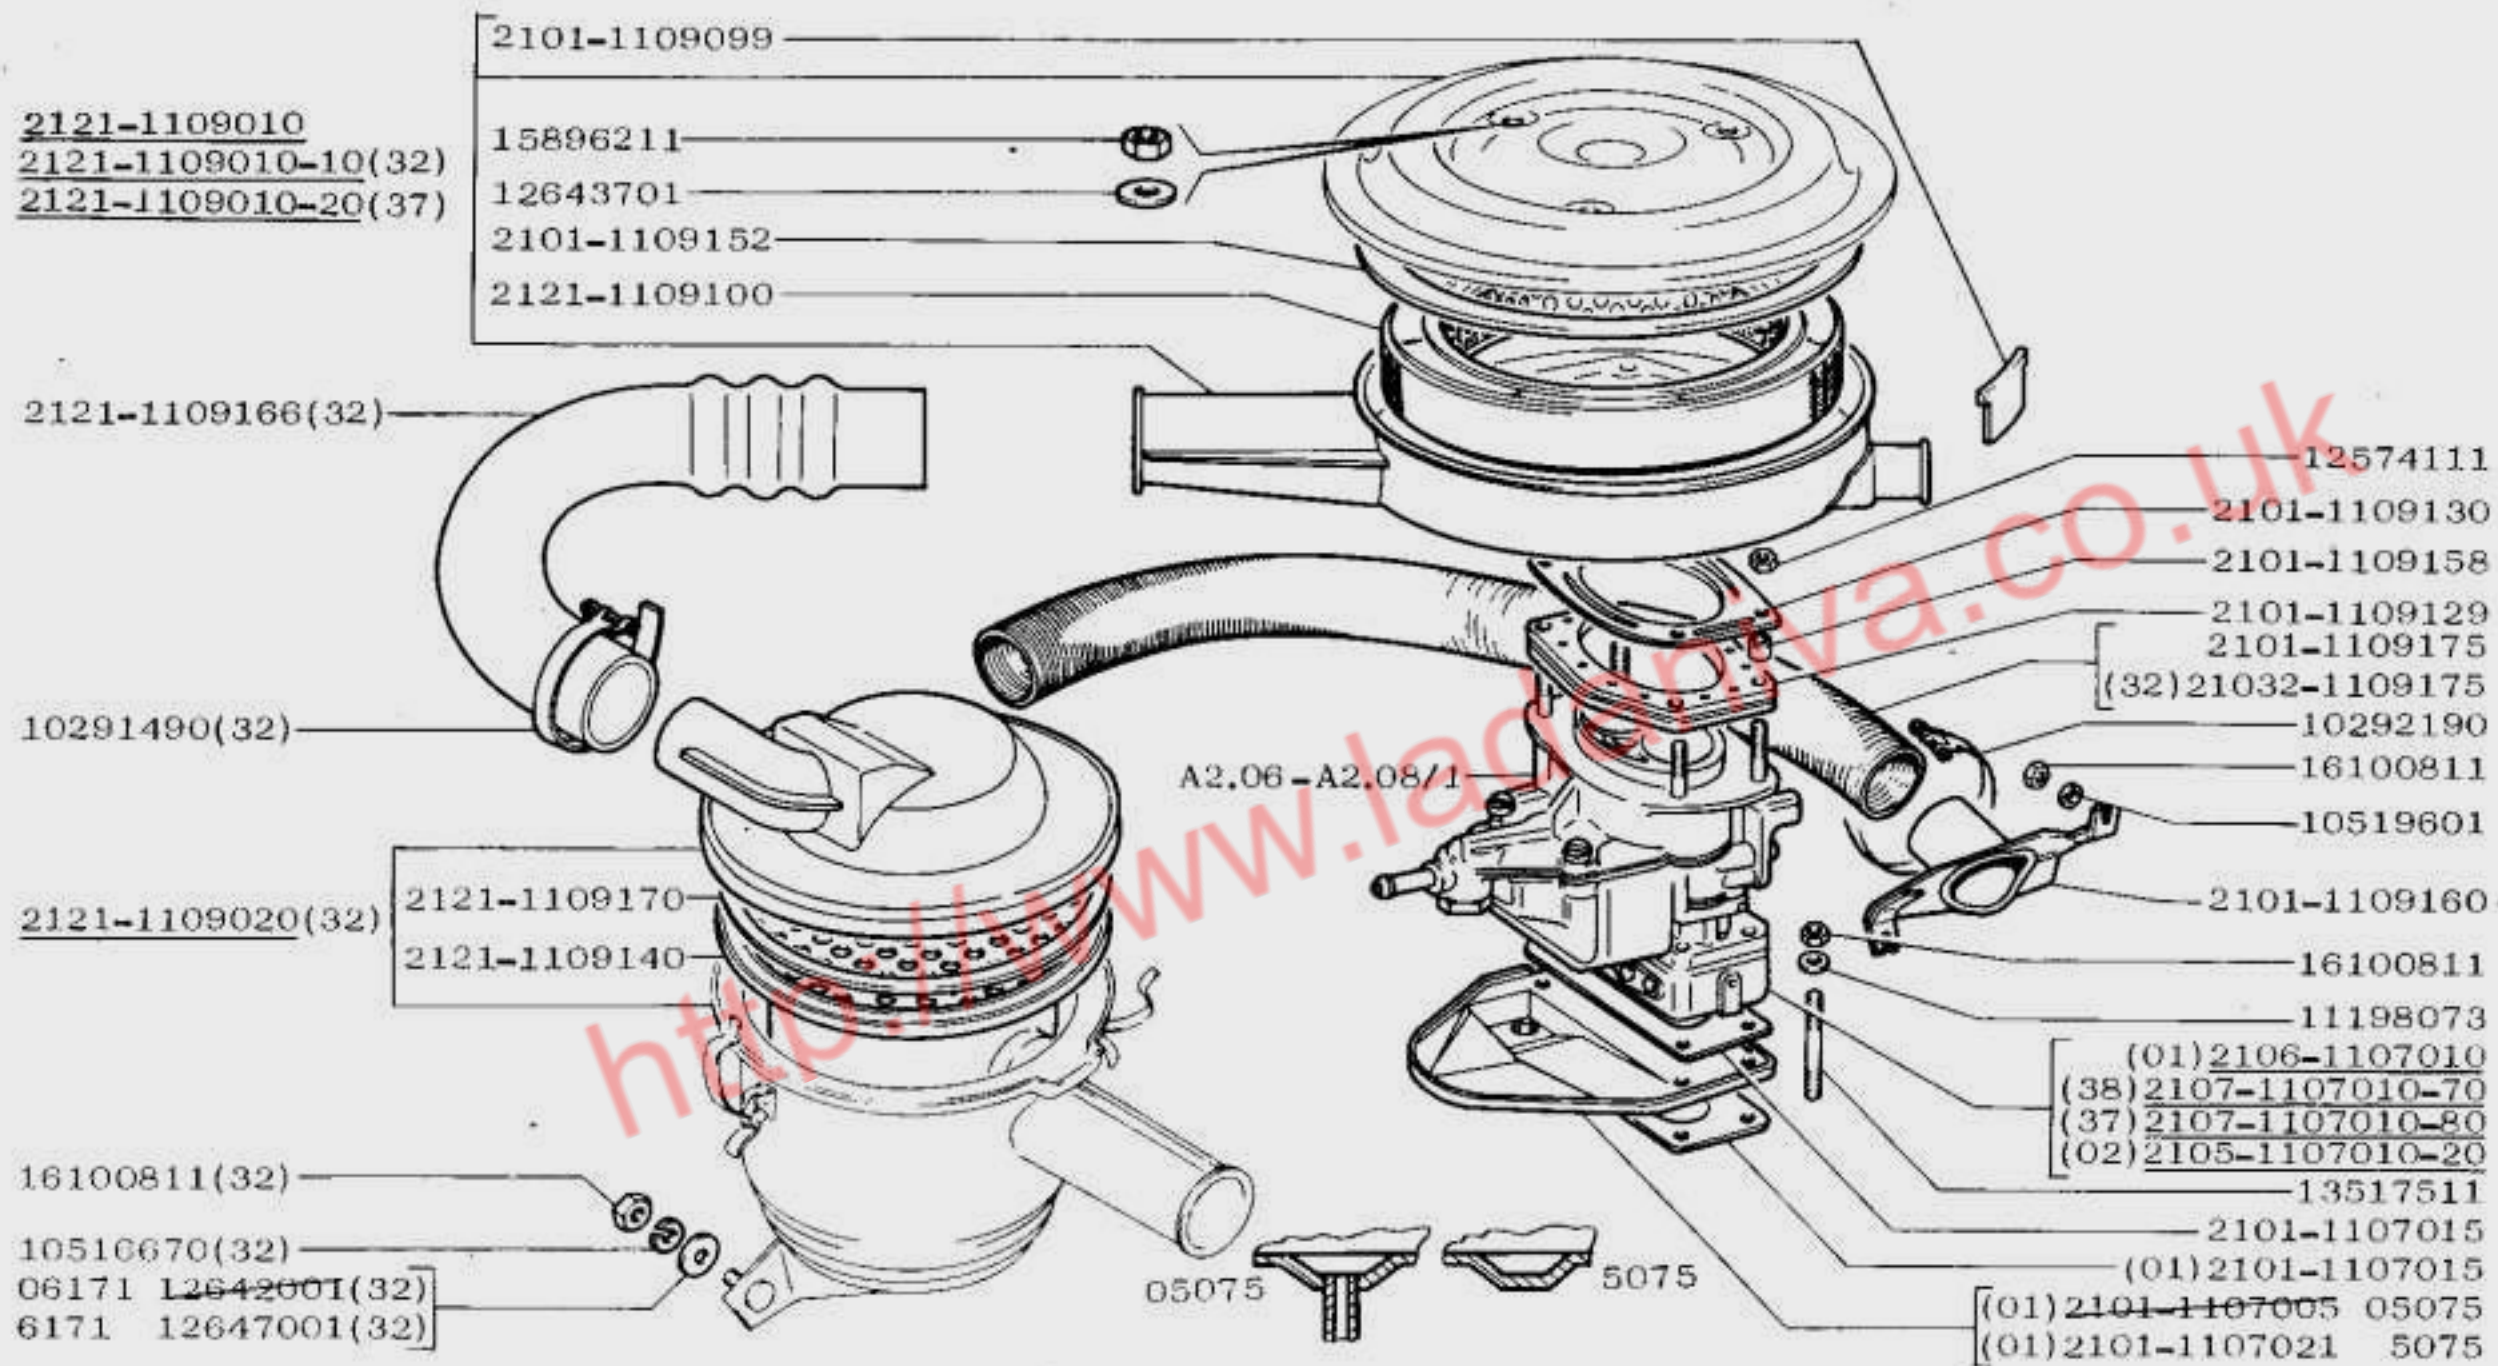


BA3-2121 (01)
BA3-21211 (02)

Карбюратор и воздушный фильтр
Carburettor and Air Cleaner
Carburateur et filtre à air
Vergaser und Luftfilter
Carburador y filtro de aire

A2.04


2103-1107600-10(01)
 2105-1107600-20(02)
 2107-1107600-20(37-38)

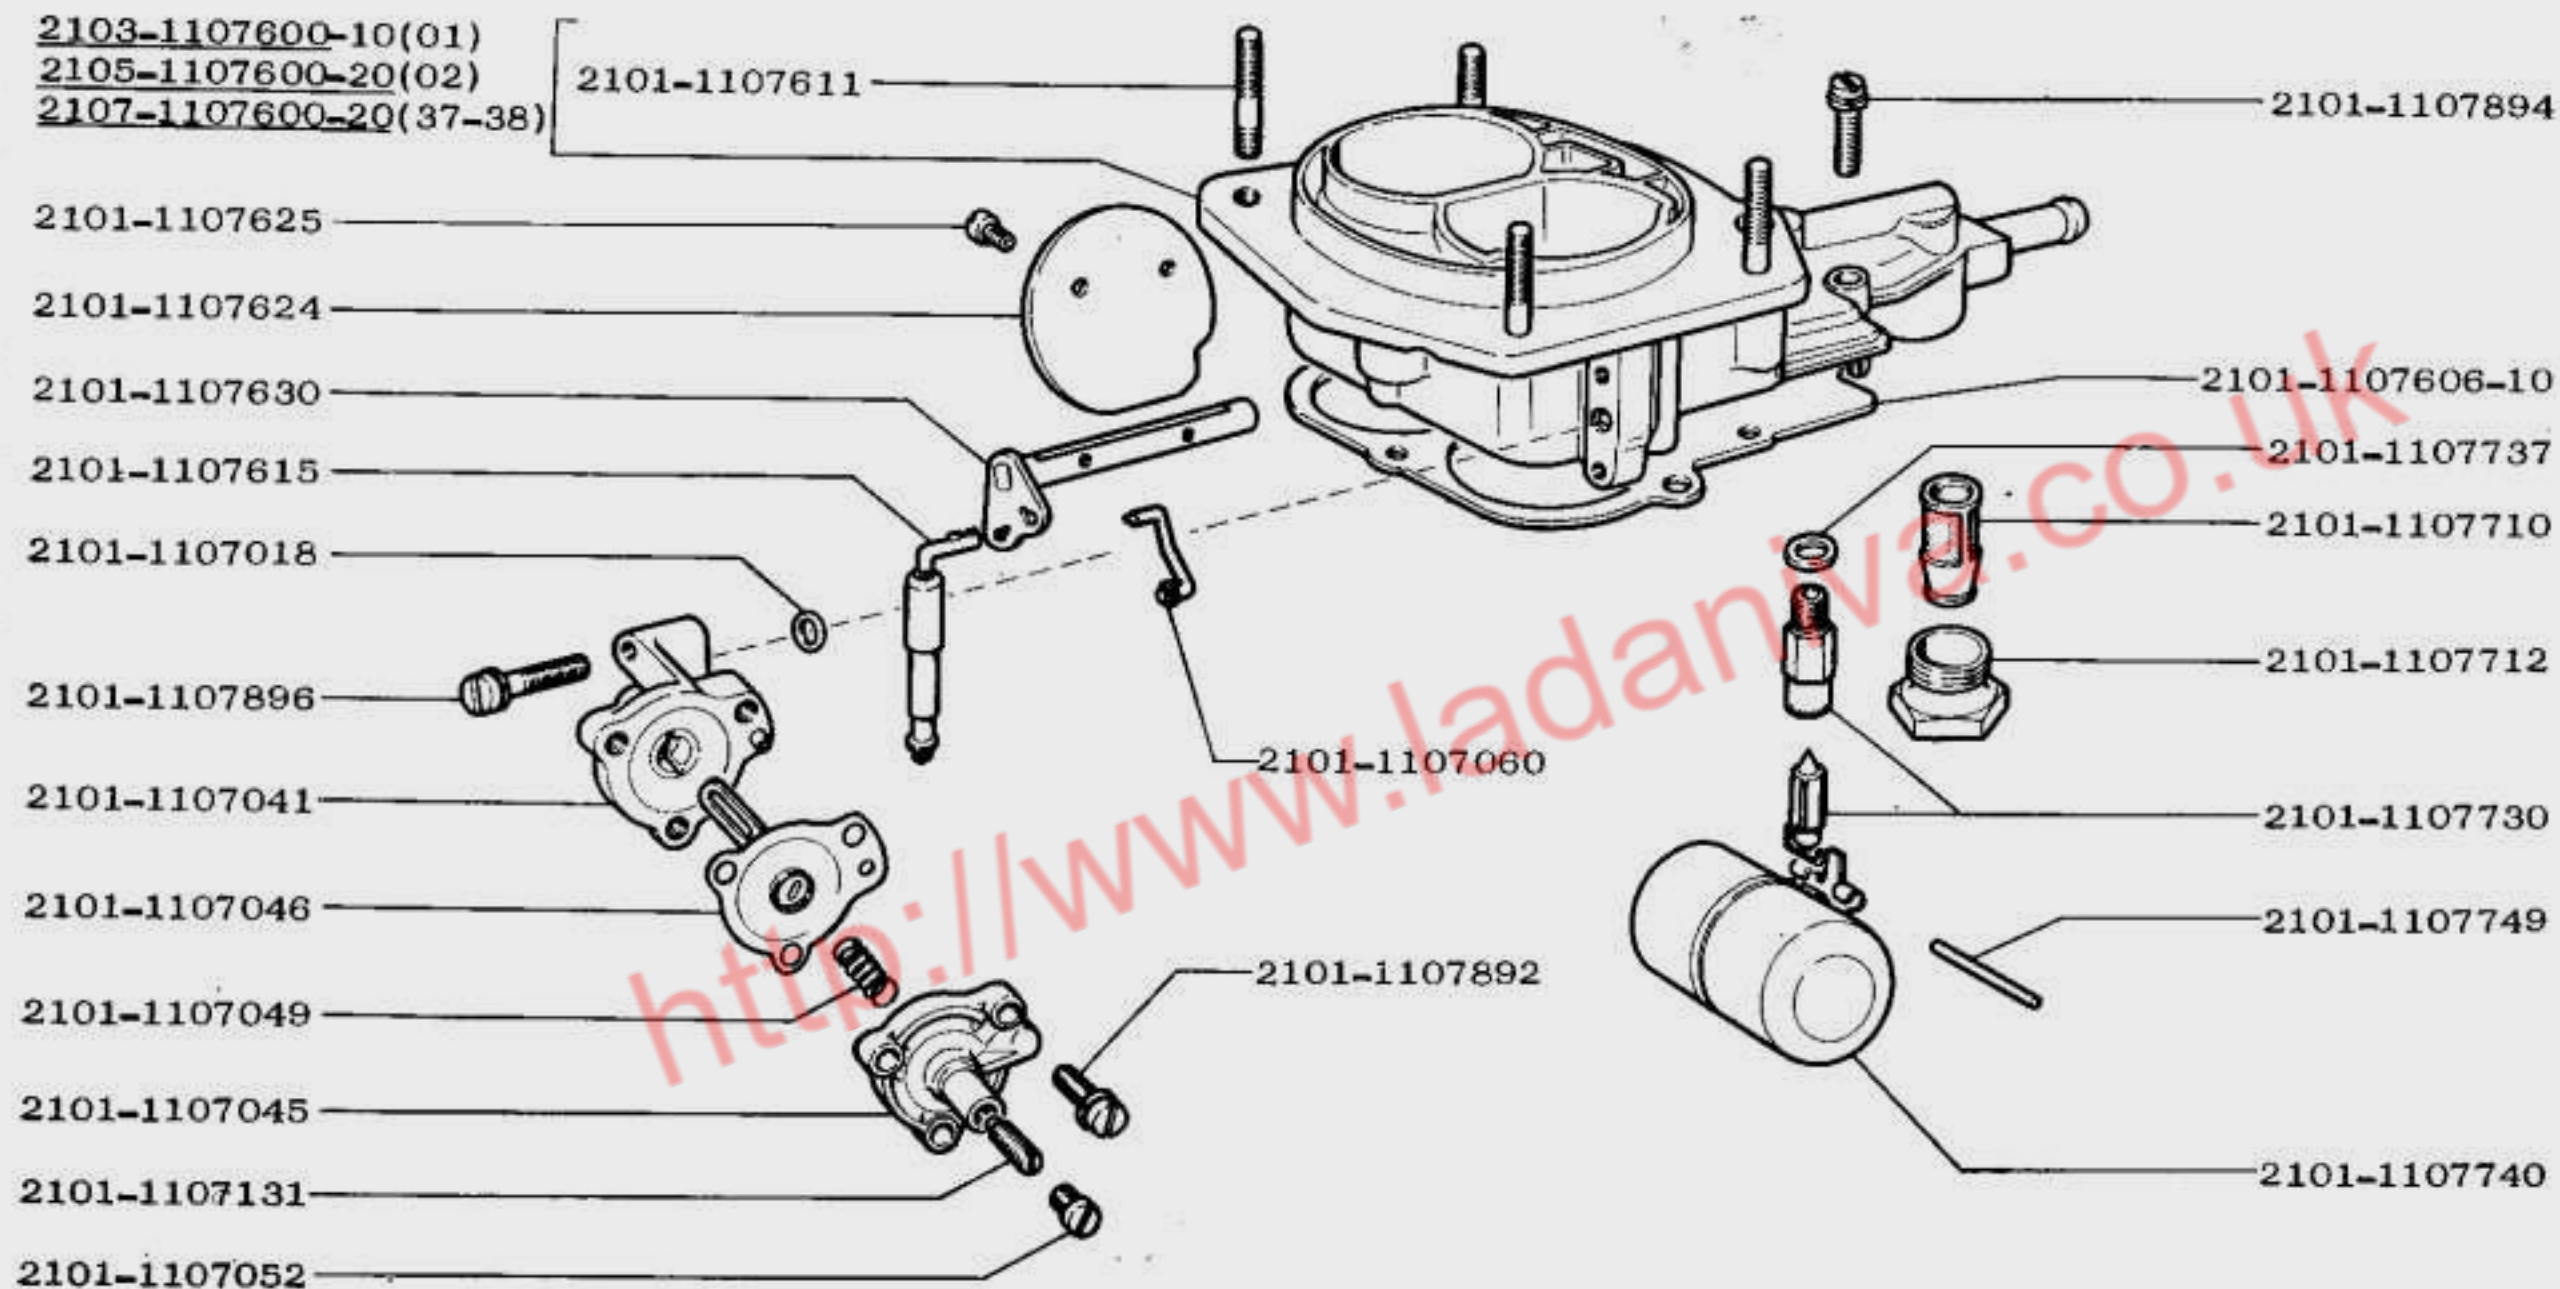

BA3-2121 (01)
 BA3-21211 (02)

Крышка карбюратора
 Carburettor Cover
 Dessus de cuve de carburateur
 Vergaserdeckel
 Tapa del carburador


A2.06

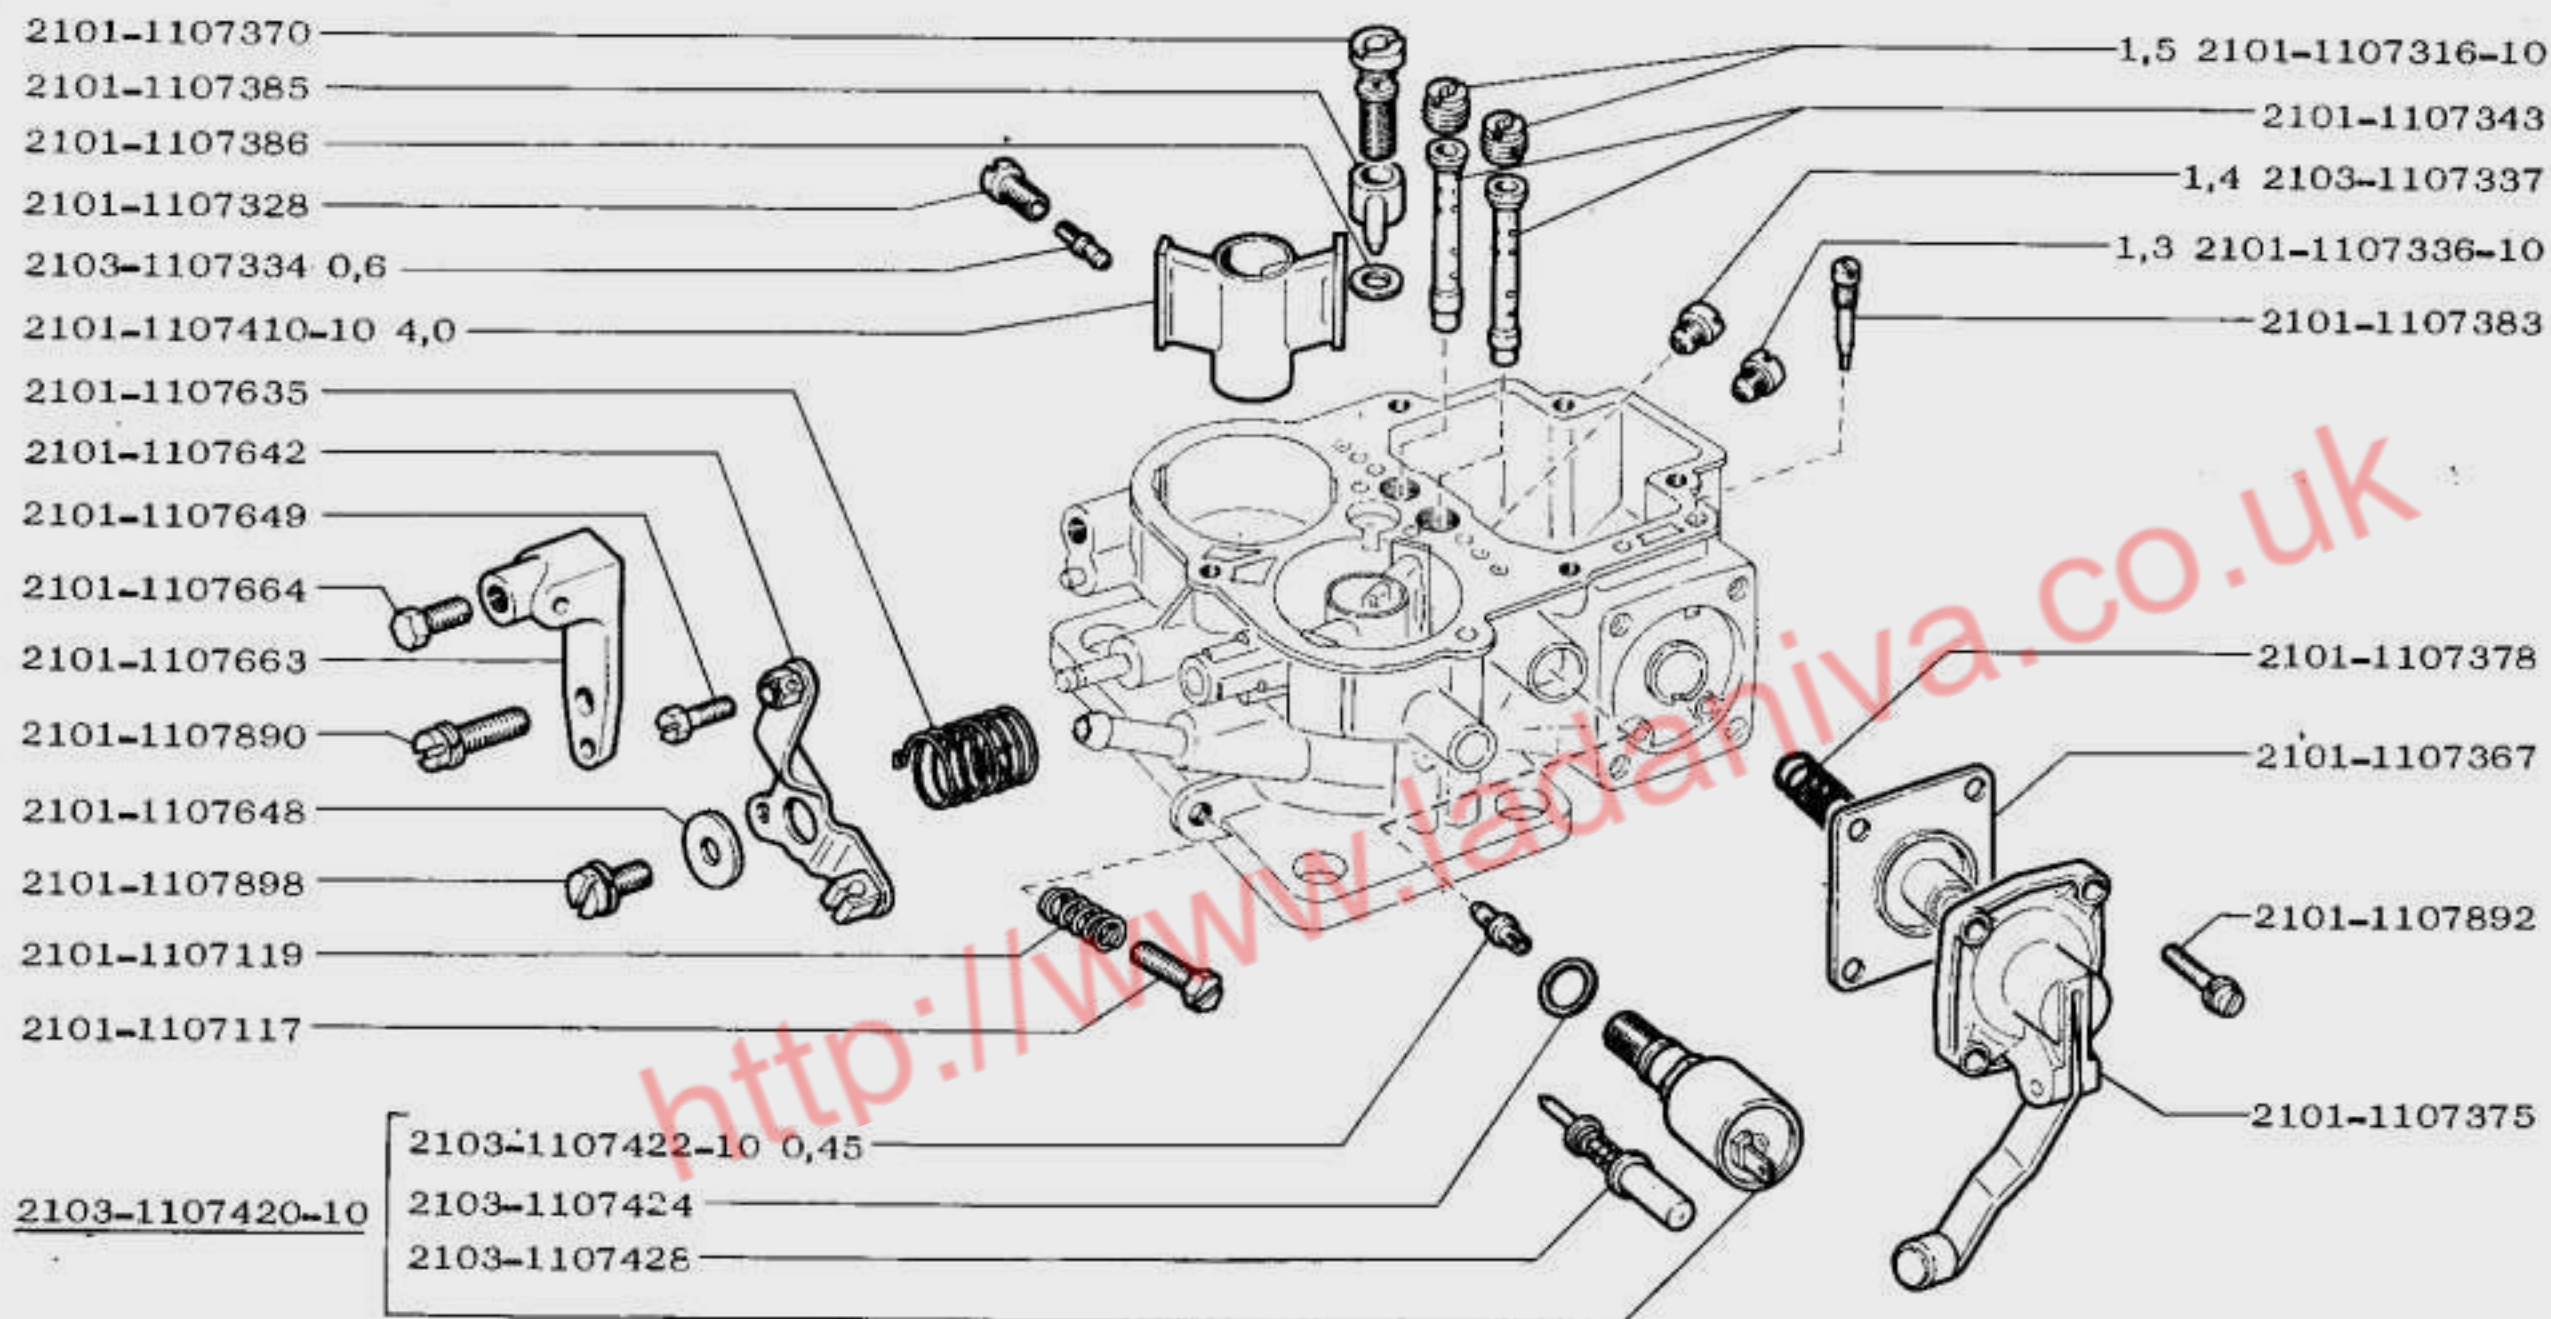

BA3-2121
BA3-21211

Корпус карбюратора
 Carburettor Casing
 Corps de carburateur
 Vergasergehäuse
 Cuerpo del carburador


A2.07

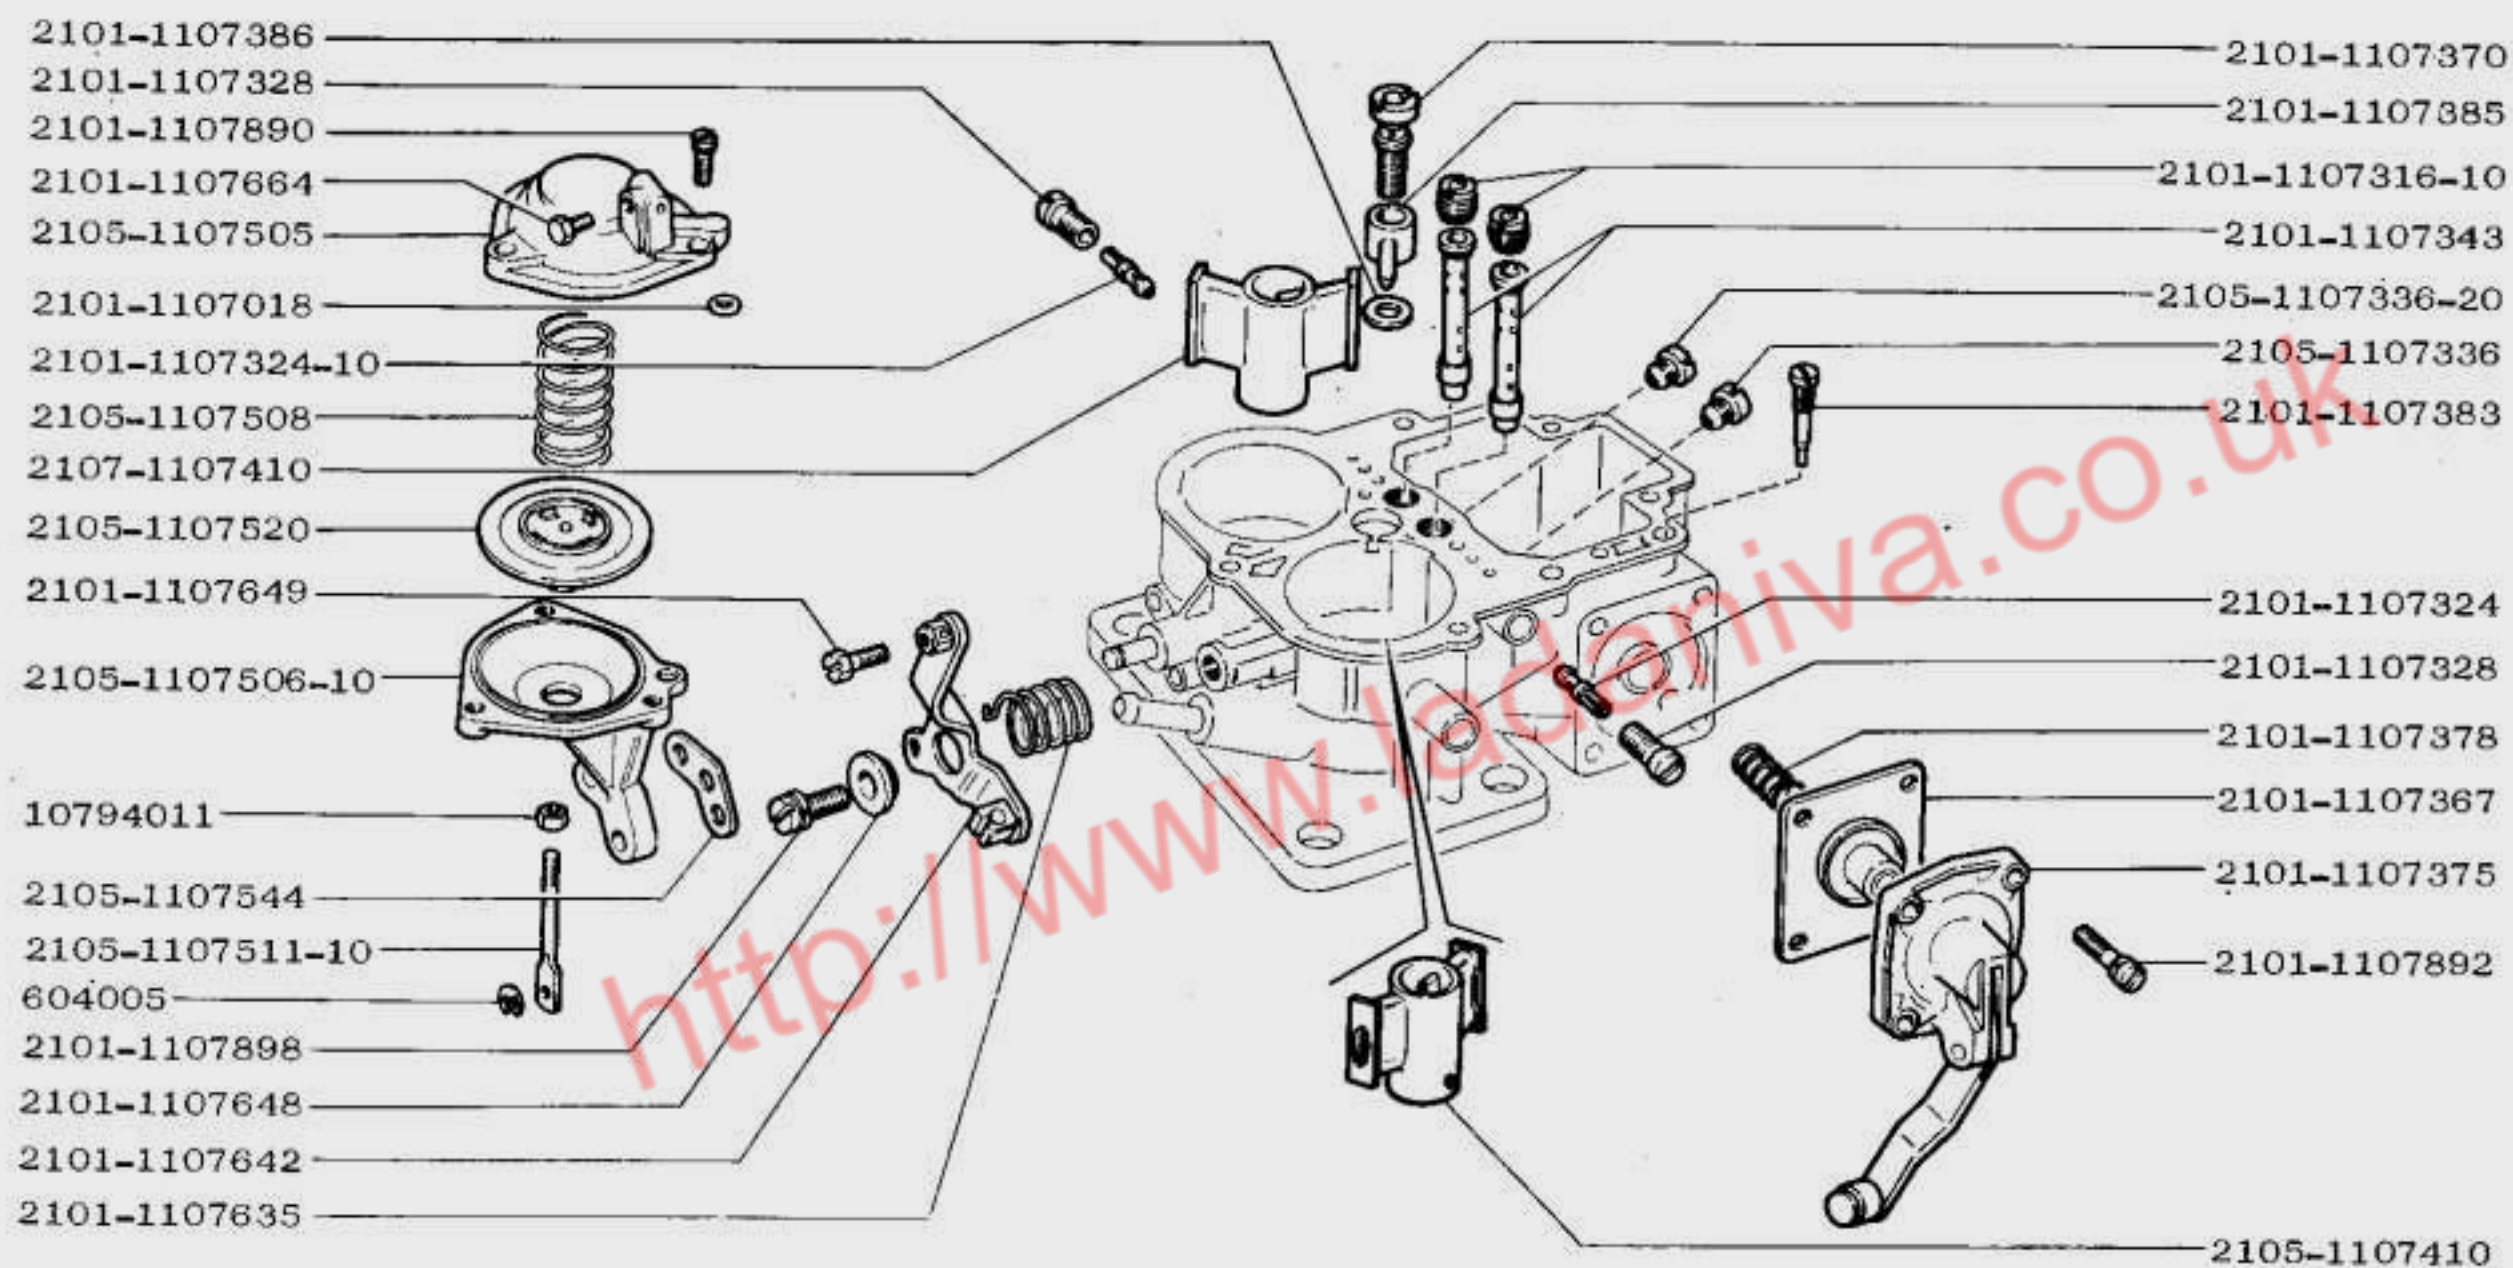

BA3-2121

Корпус карбюратора
 Carburettor Casing
 Corps de carburateur
 Vergasergehäuse
 Cuerpo del carburador


A2.07/1

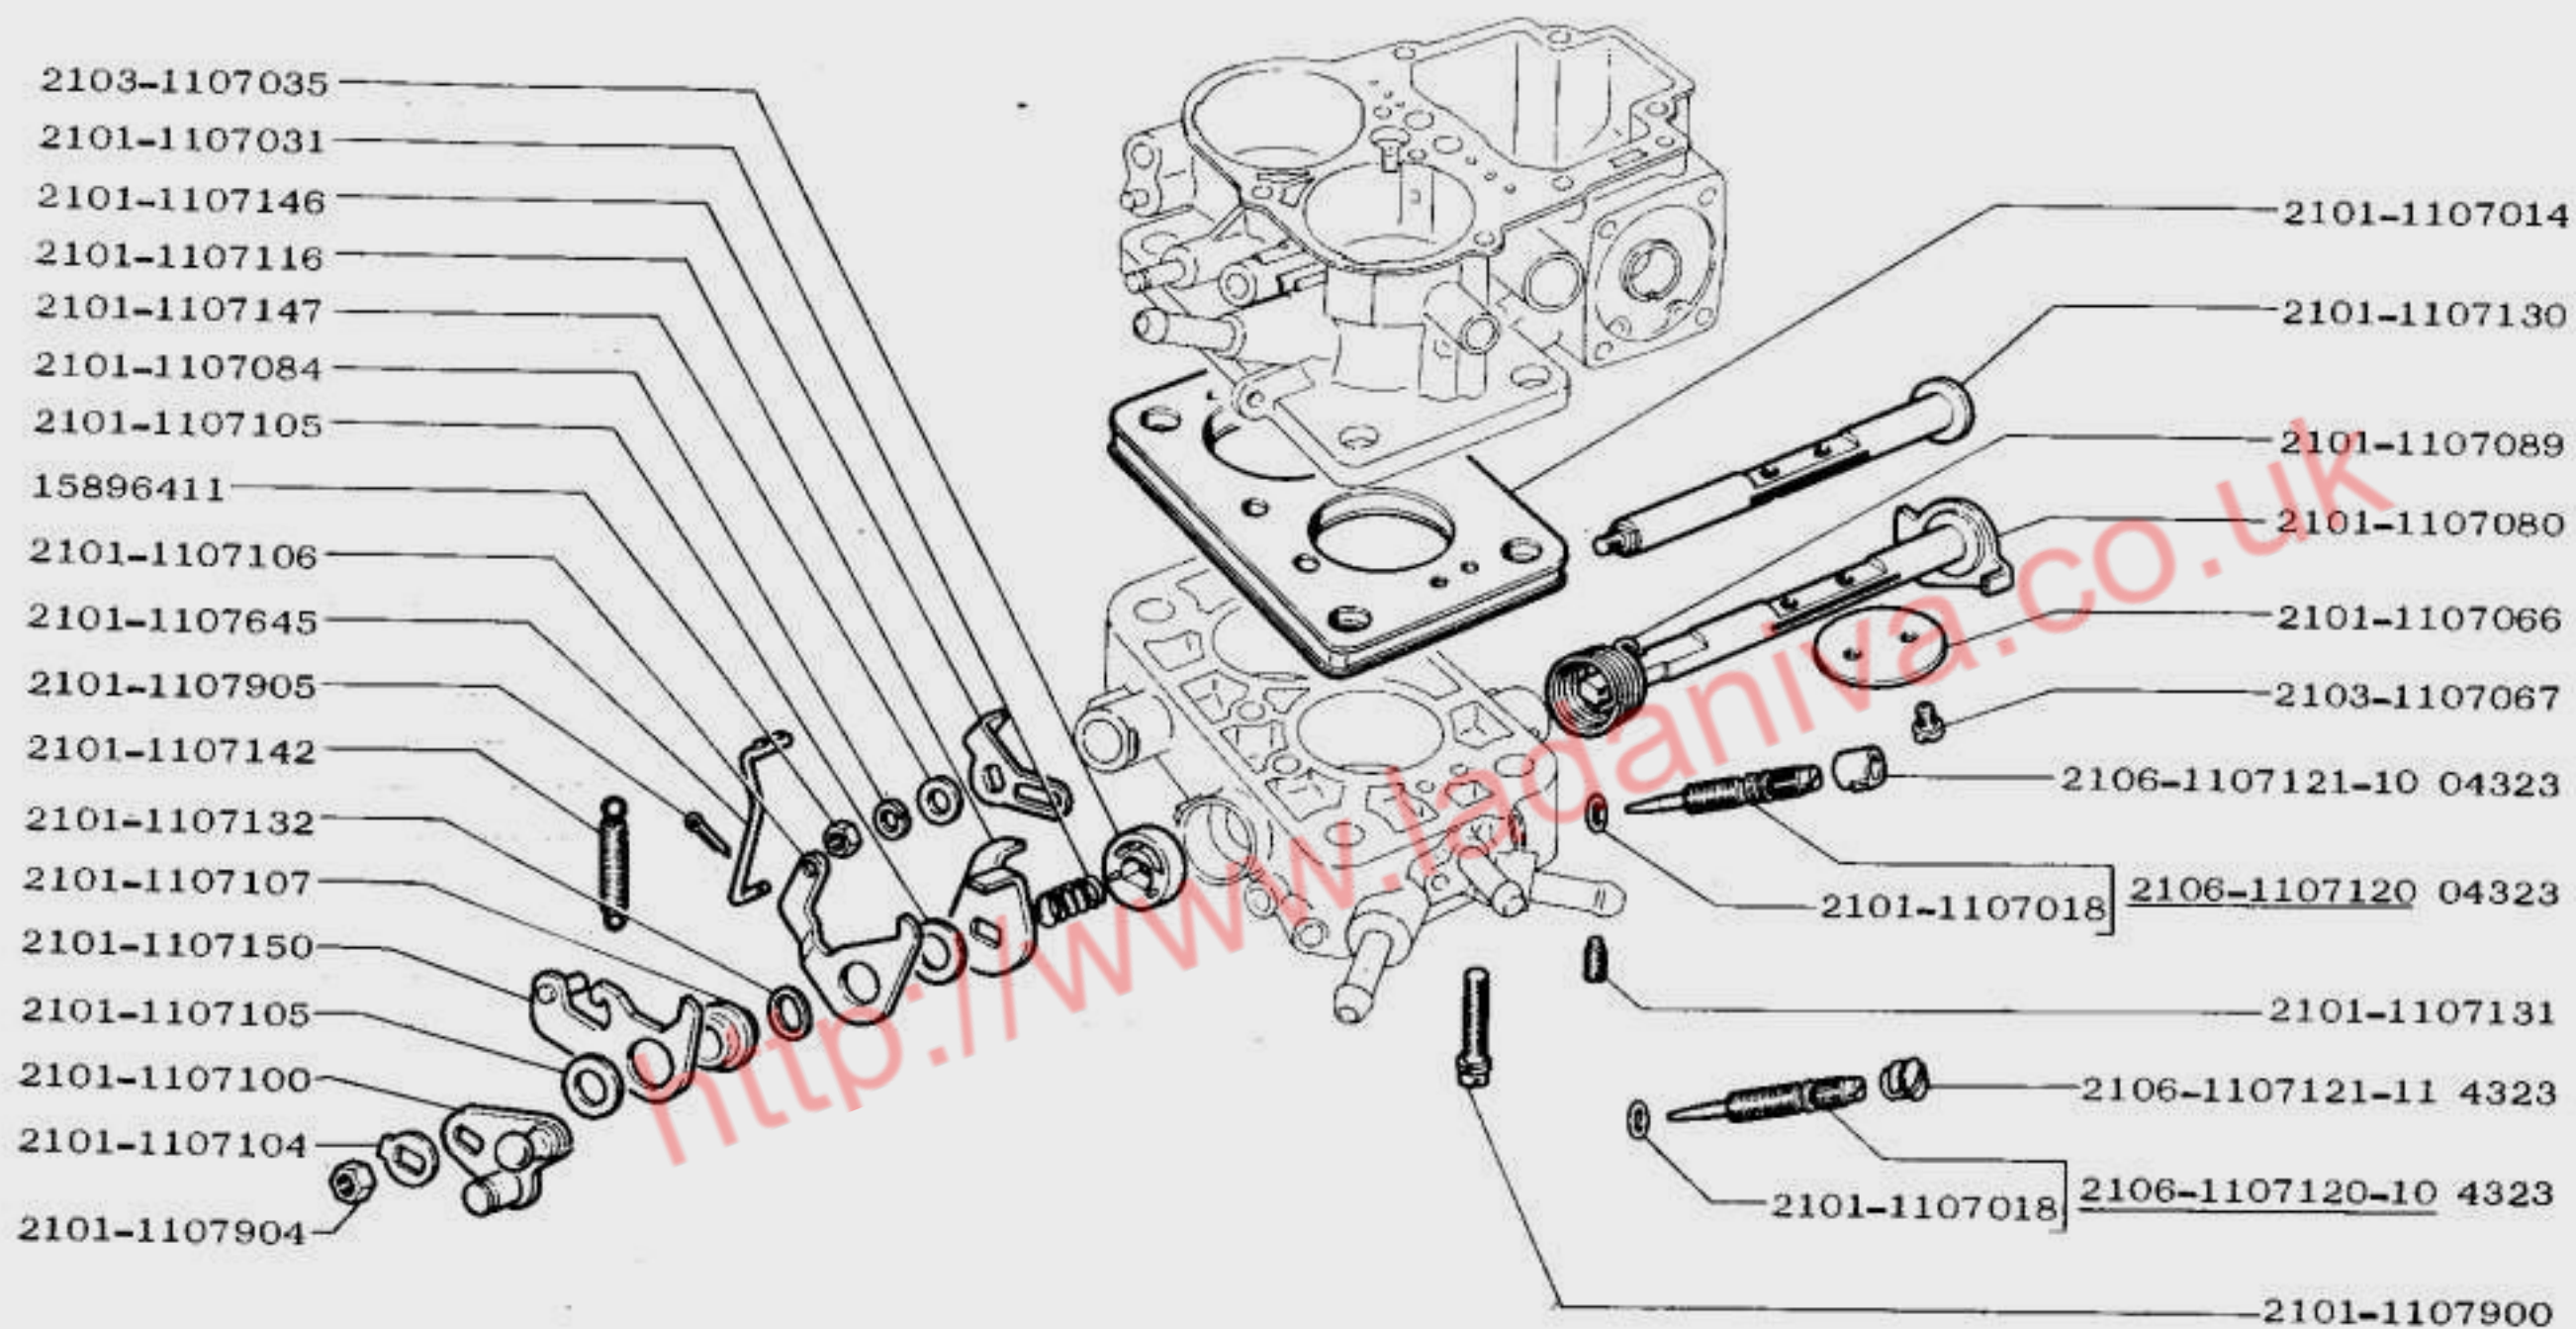

BA3-2121
BA3-21211

Корпус дроссельных заслонок
Throttle Valve Casing
Pied de carburateur
Drosselklappengehäuse
Cuerpo de las mariposas de gases


A2.08

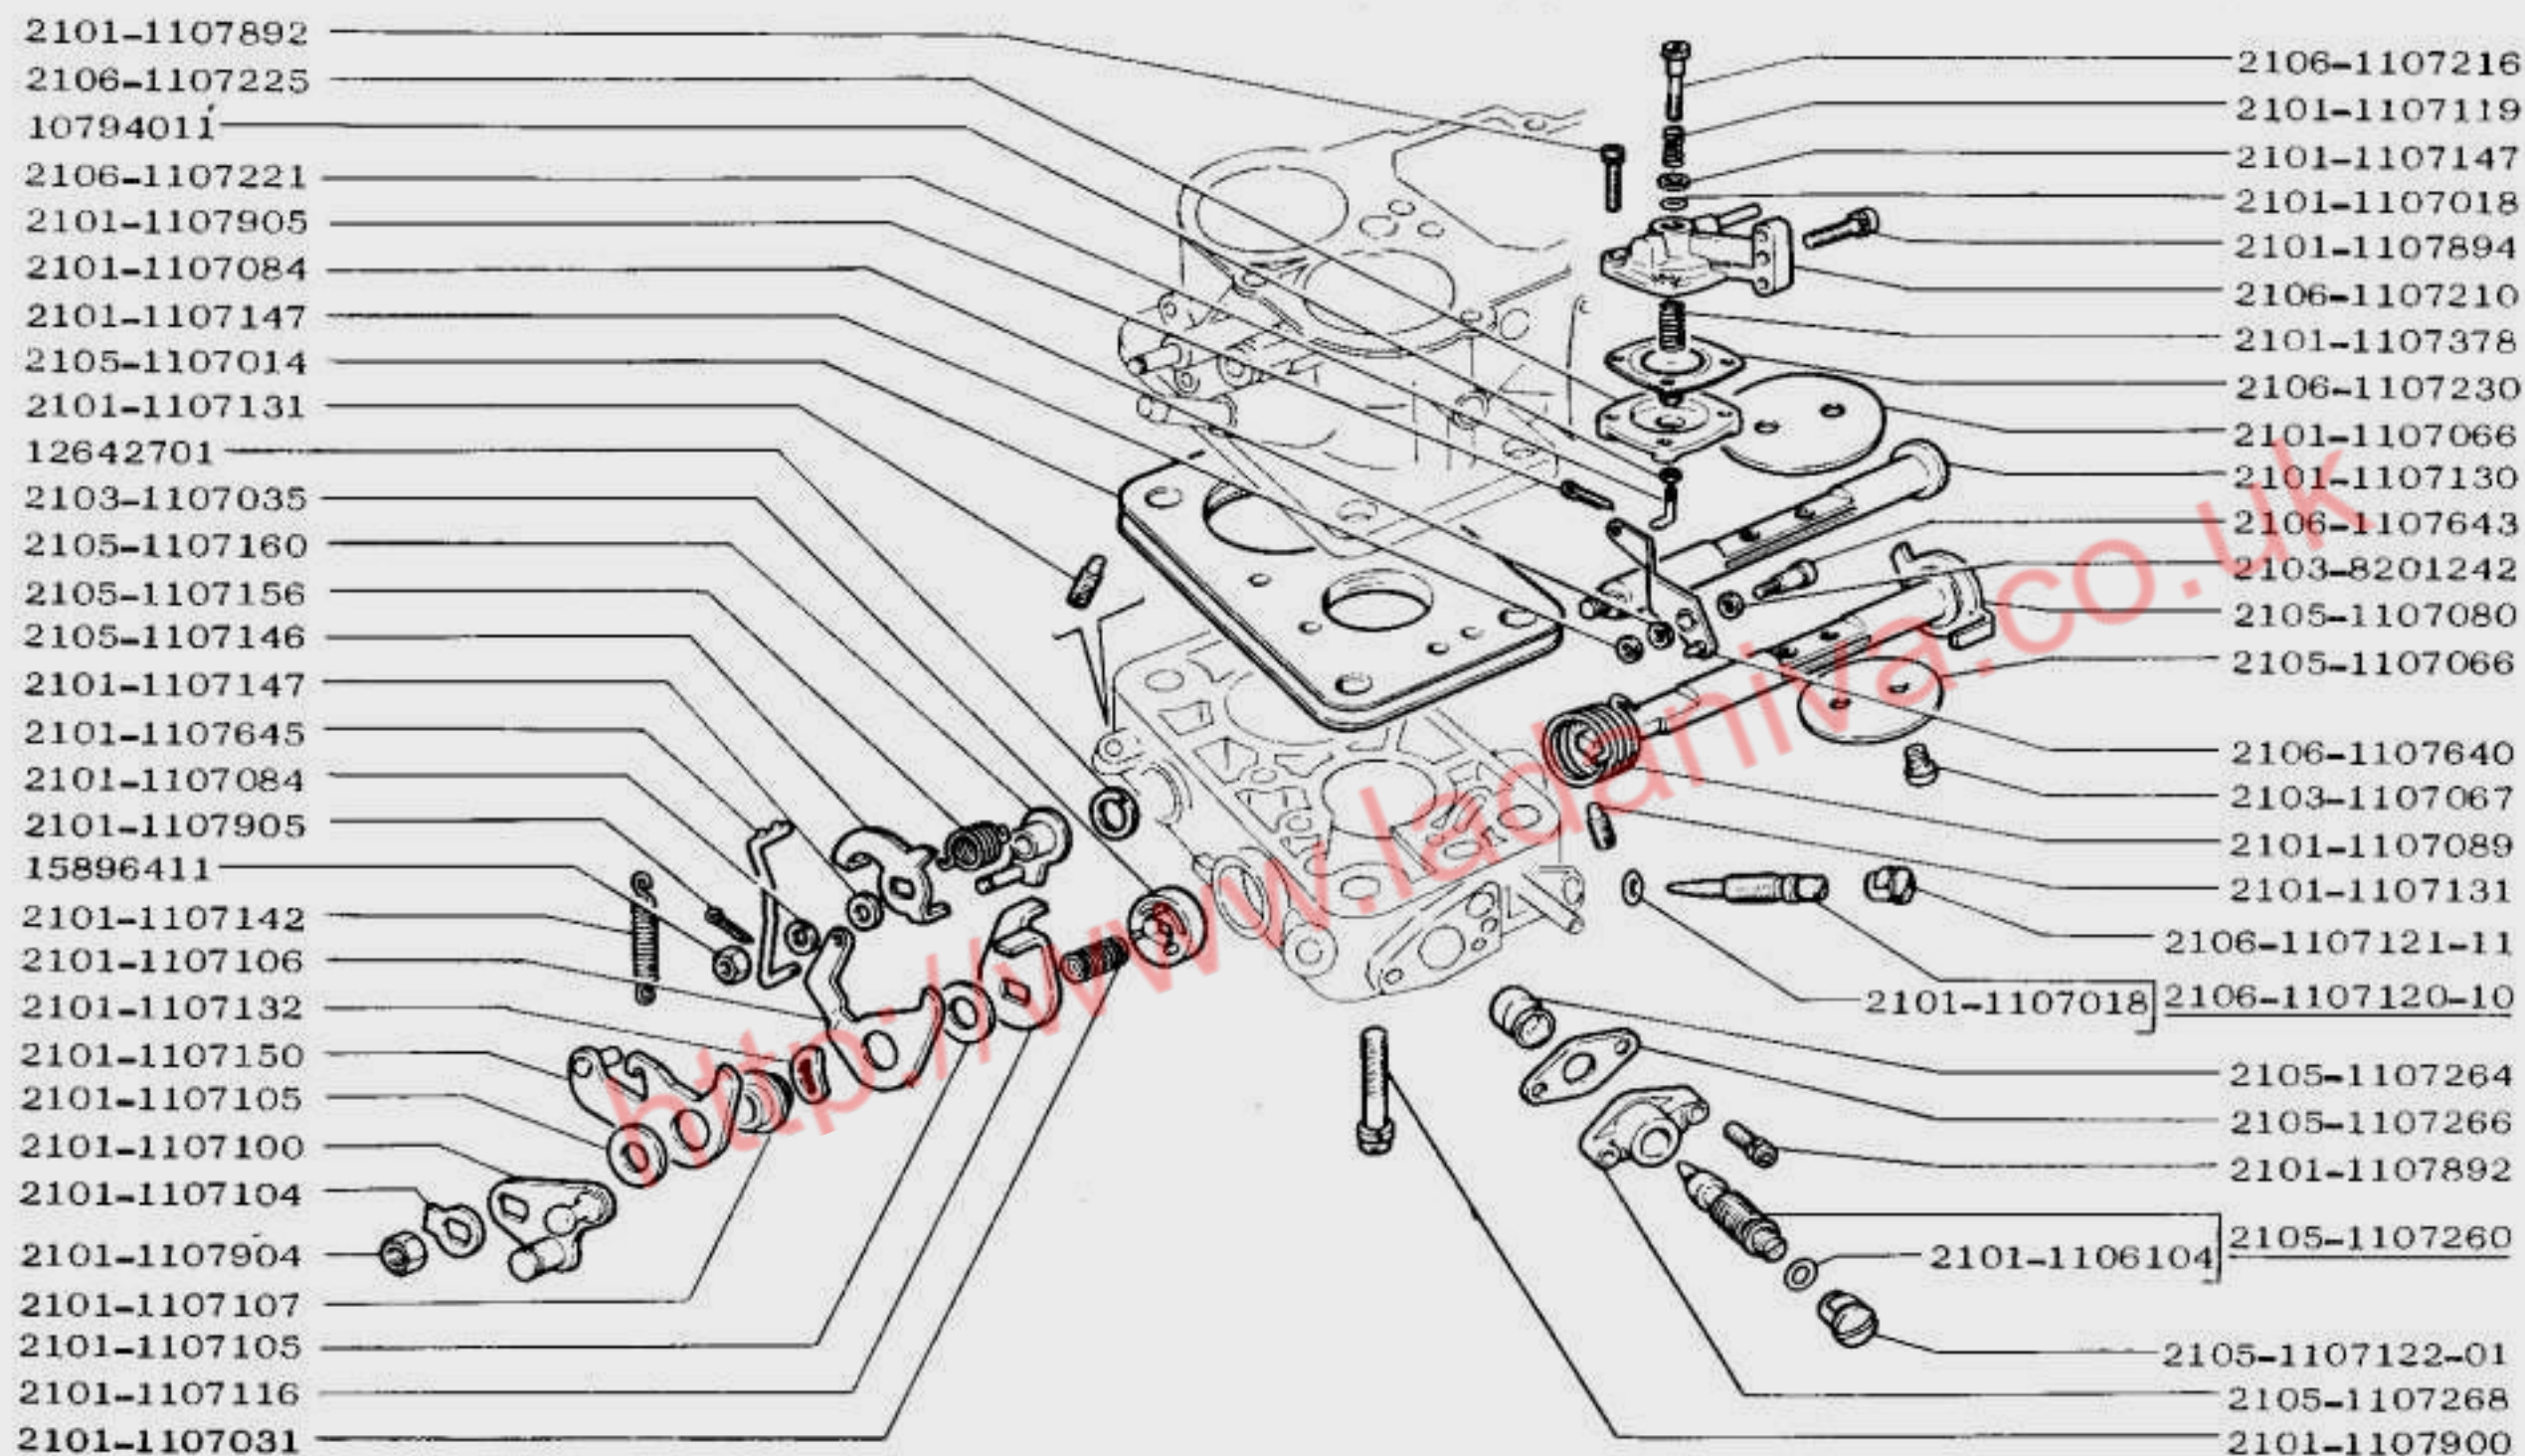

BA3-2121

Корпус дроссельных заслонок
 Throttle Valve Casing
 Pied de carburateur
 Drosselklappengehäuse
 Cuerpo de las mariposas de gases


A2.08/1

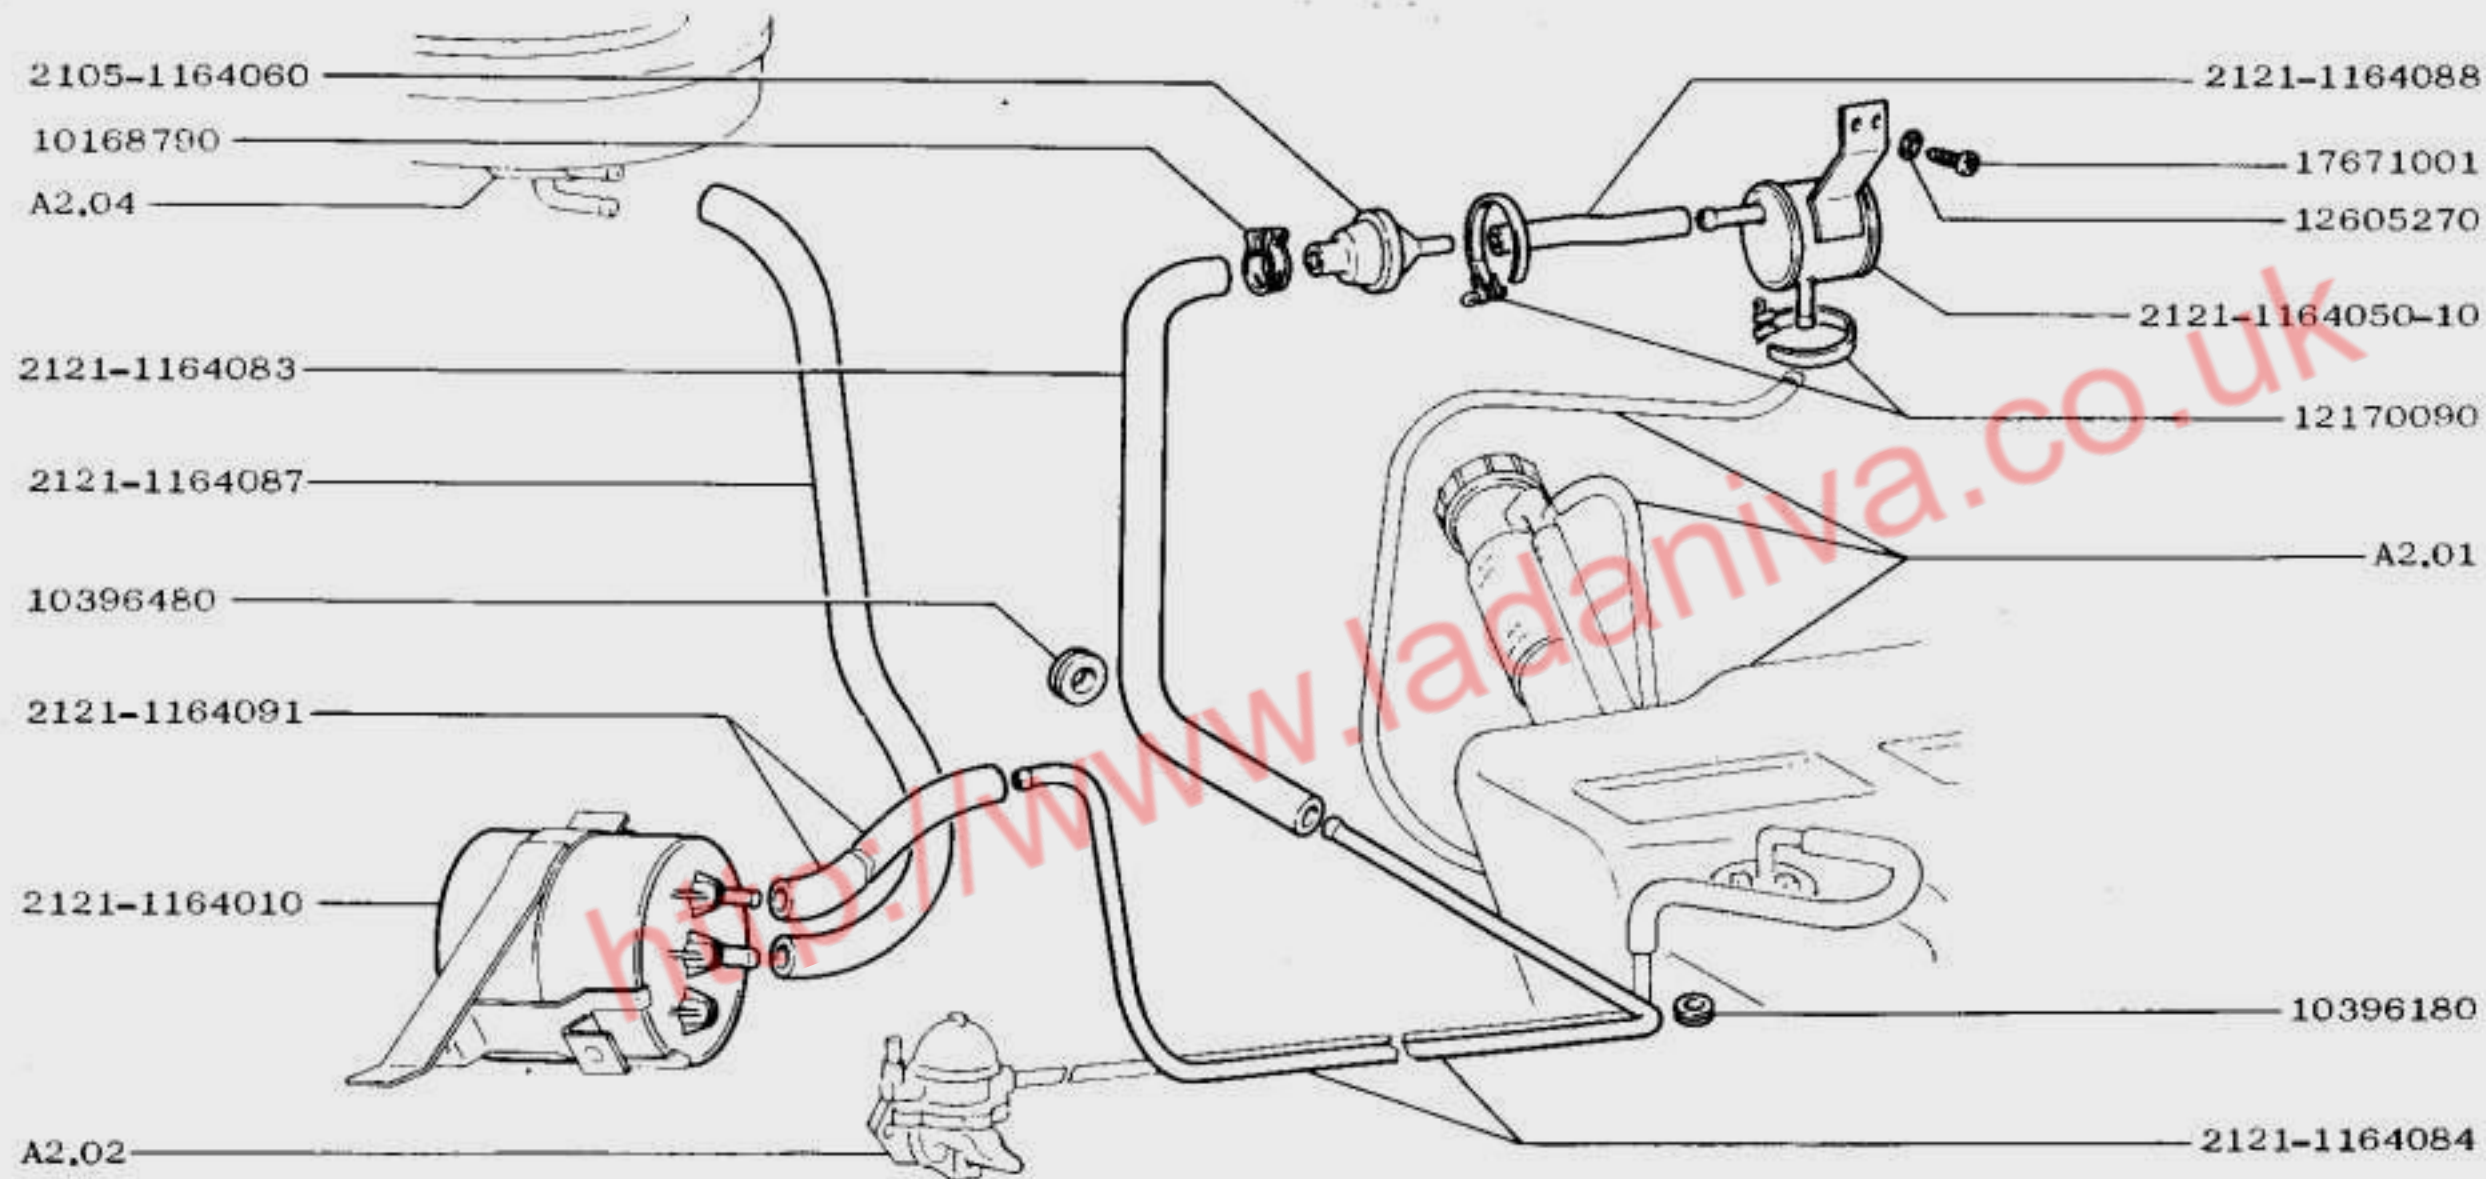

BA3-2121

Ансорбер
 Adsorber
 Dispositif d'adsorption
 Adsorptionsgerät
 Adsorbedor


A2.13

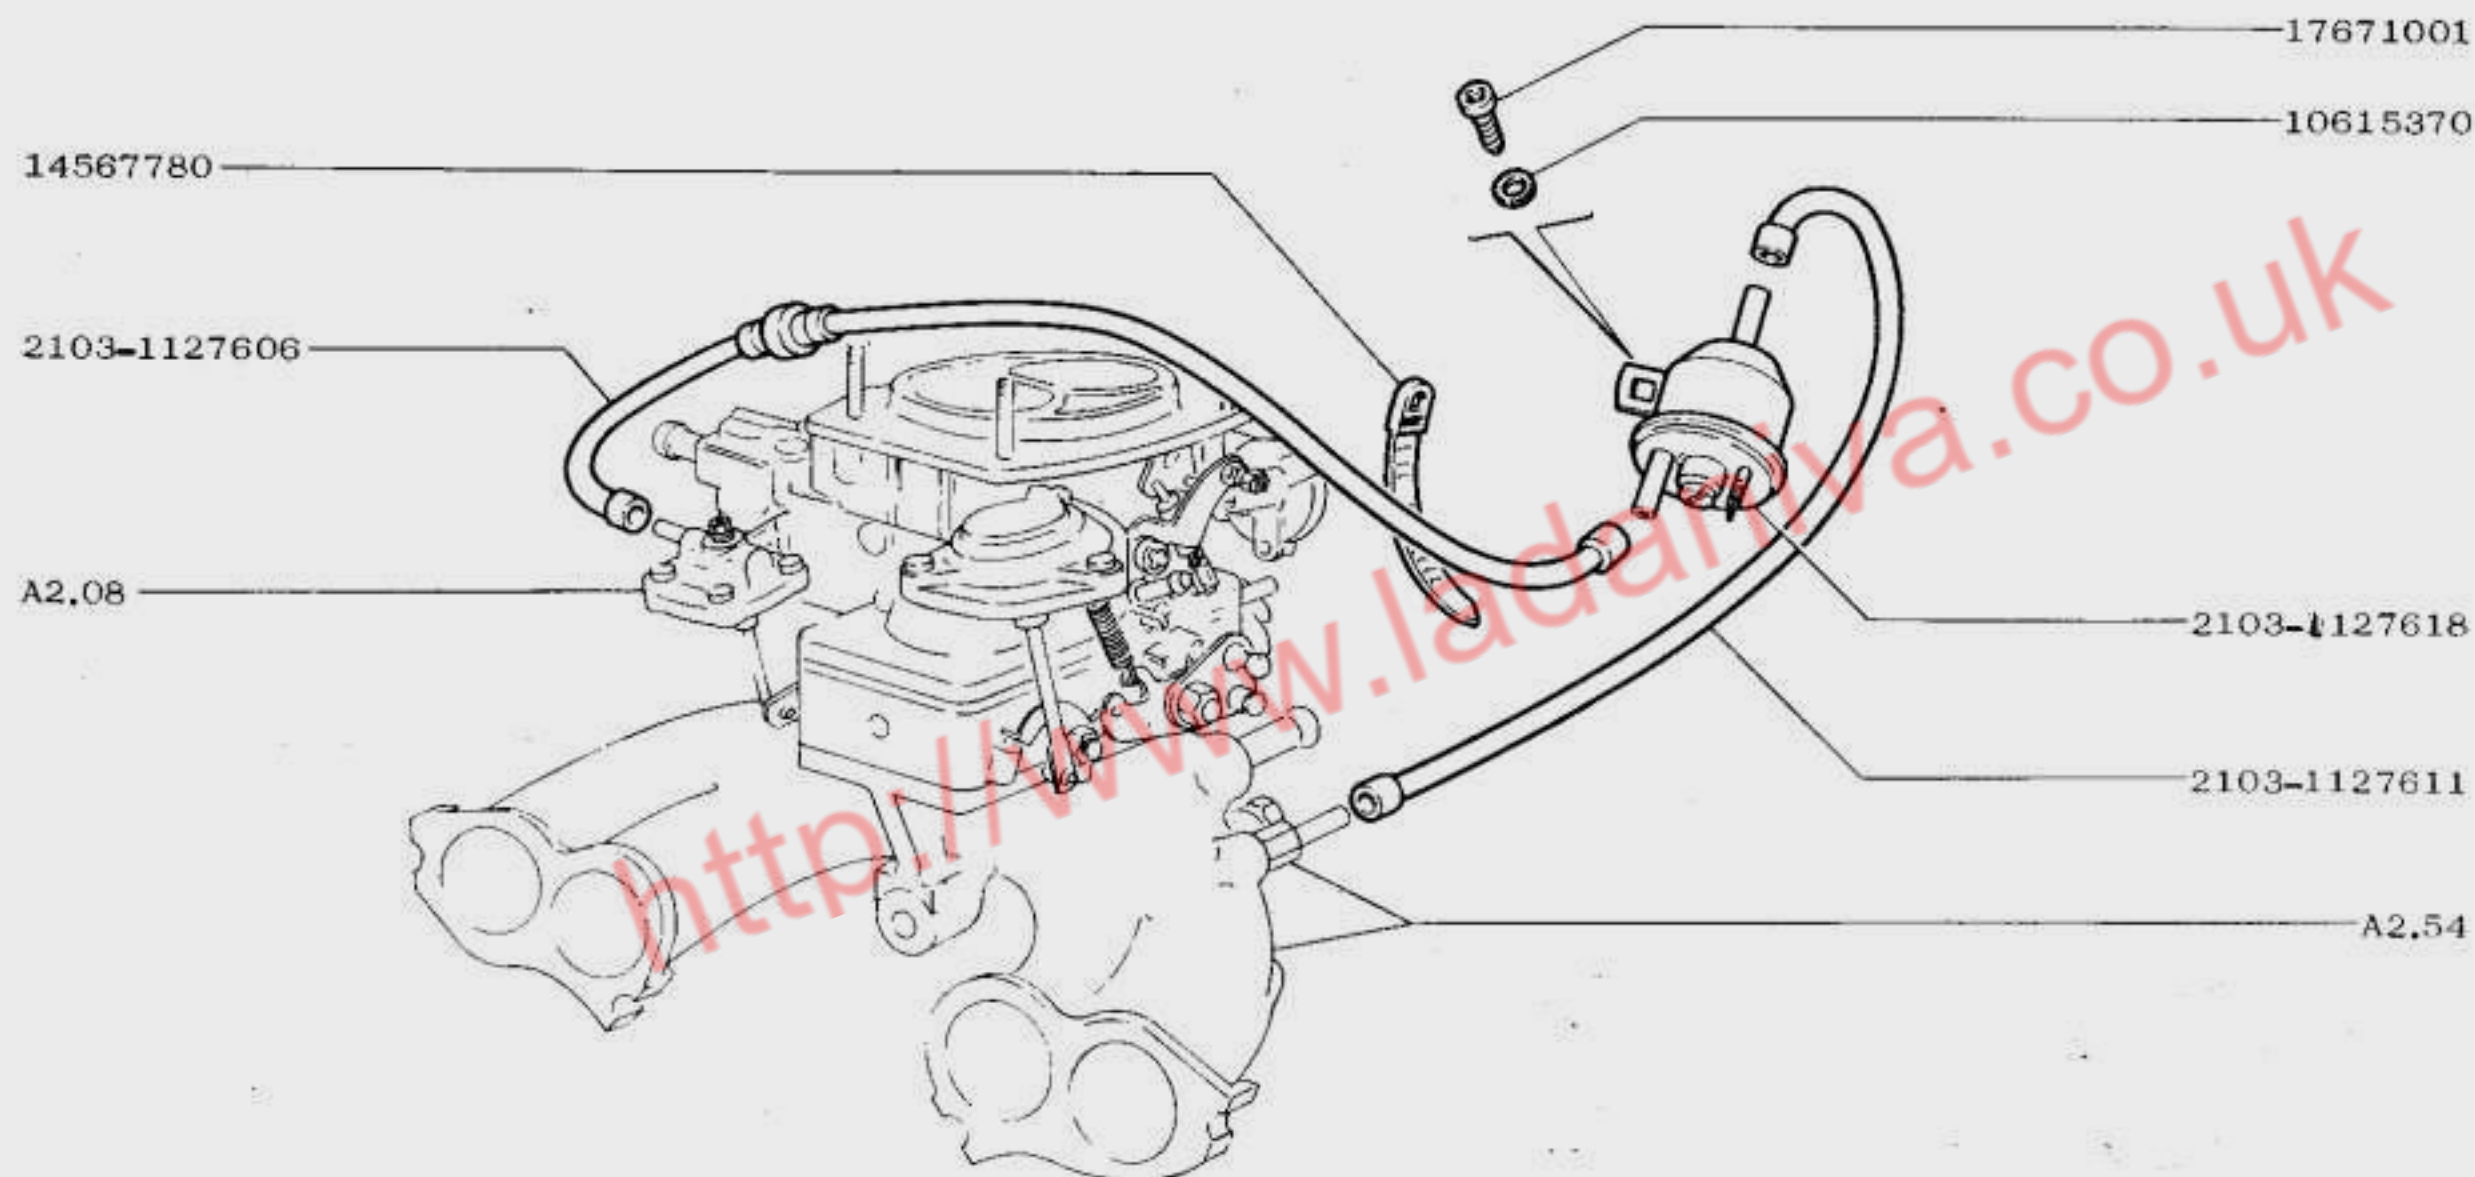

BA3-2121

Система уменьшения токсичности
 Toxicity-Control System
 Système de réduction des polluants
 Giftschutzsystem
 Sistema de reducción de la toxicidad


A2.14

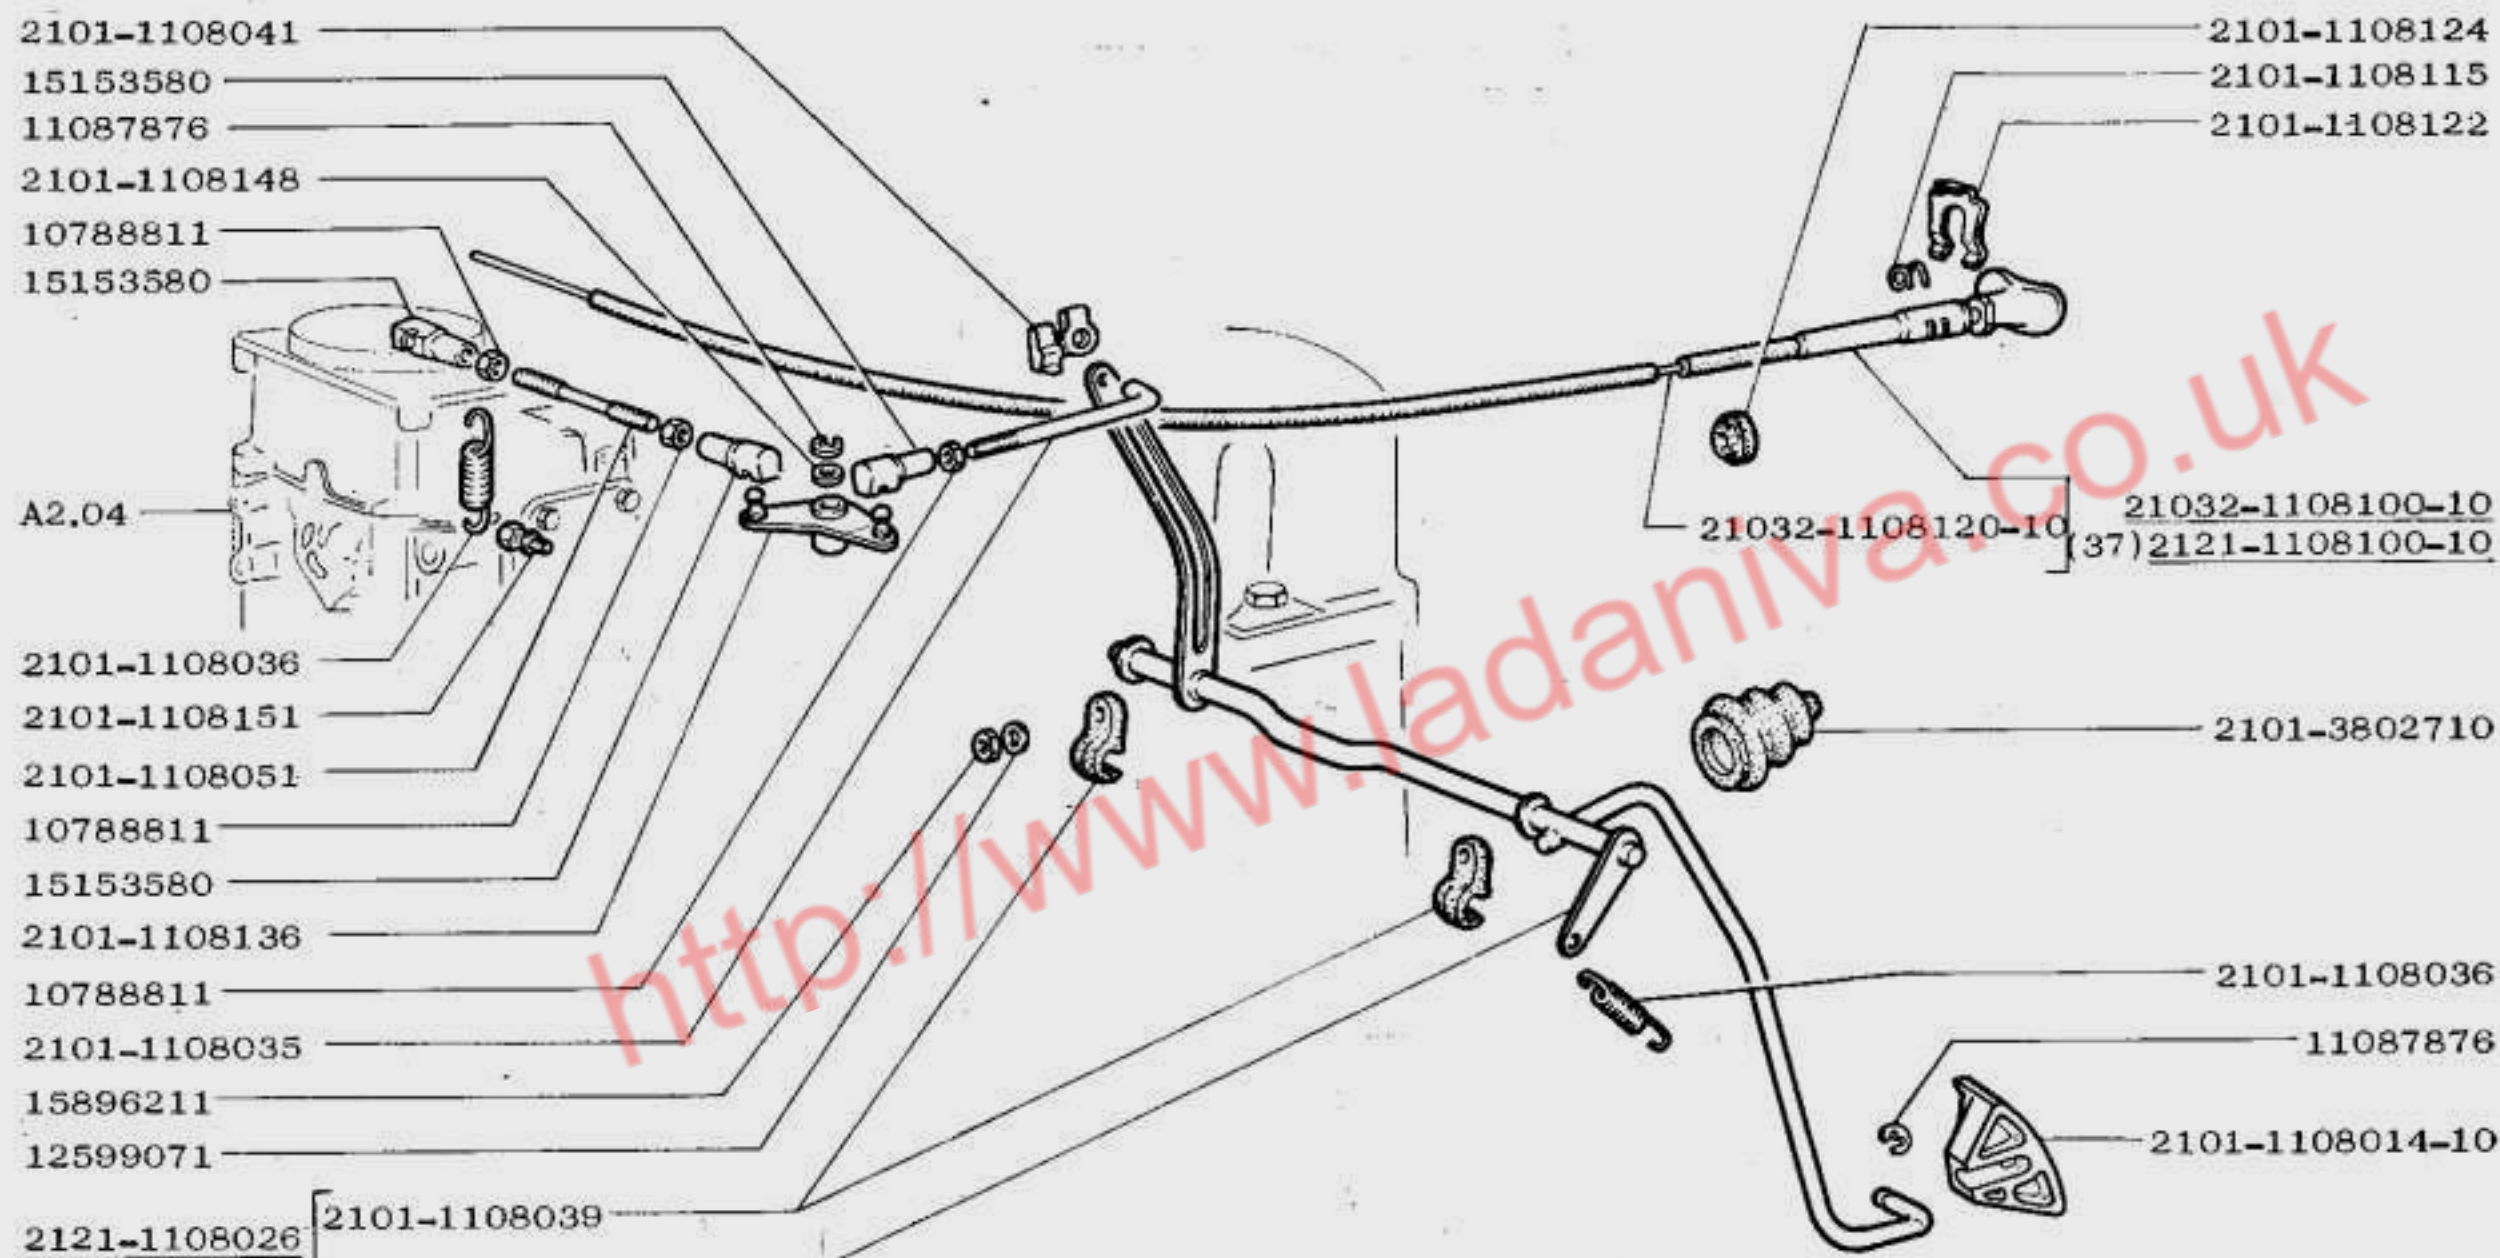

BA3-2121
BA3-21211

Привод акселератора
 Throttle Controls
 Commande d'accélérateur
 Fahrpedalbetätigung
 Mando del acelerador


A2.21

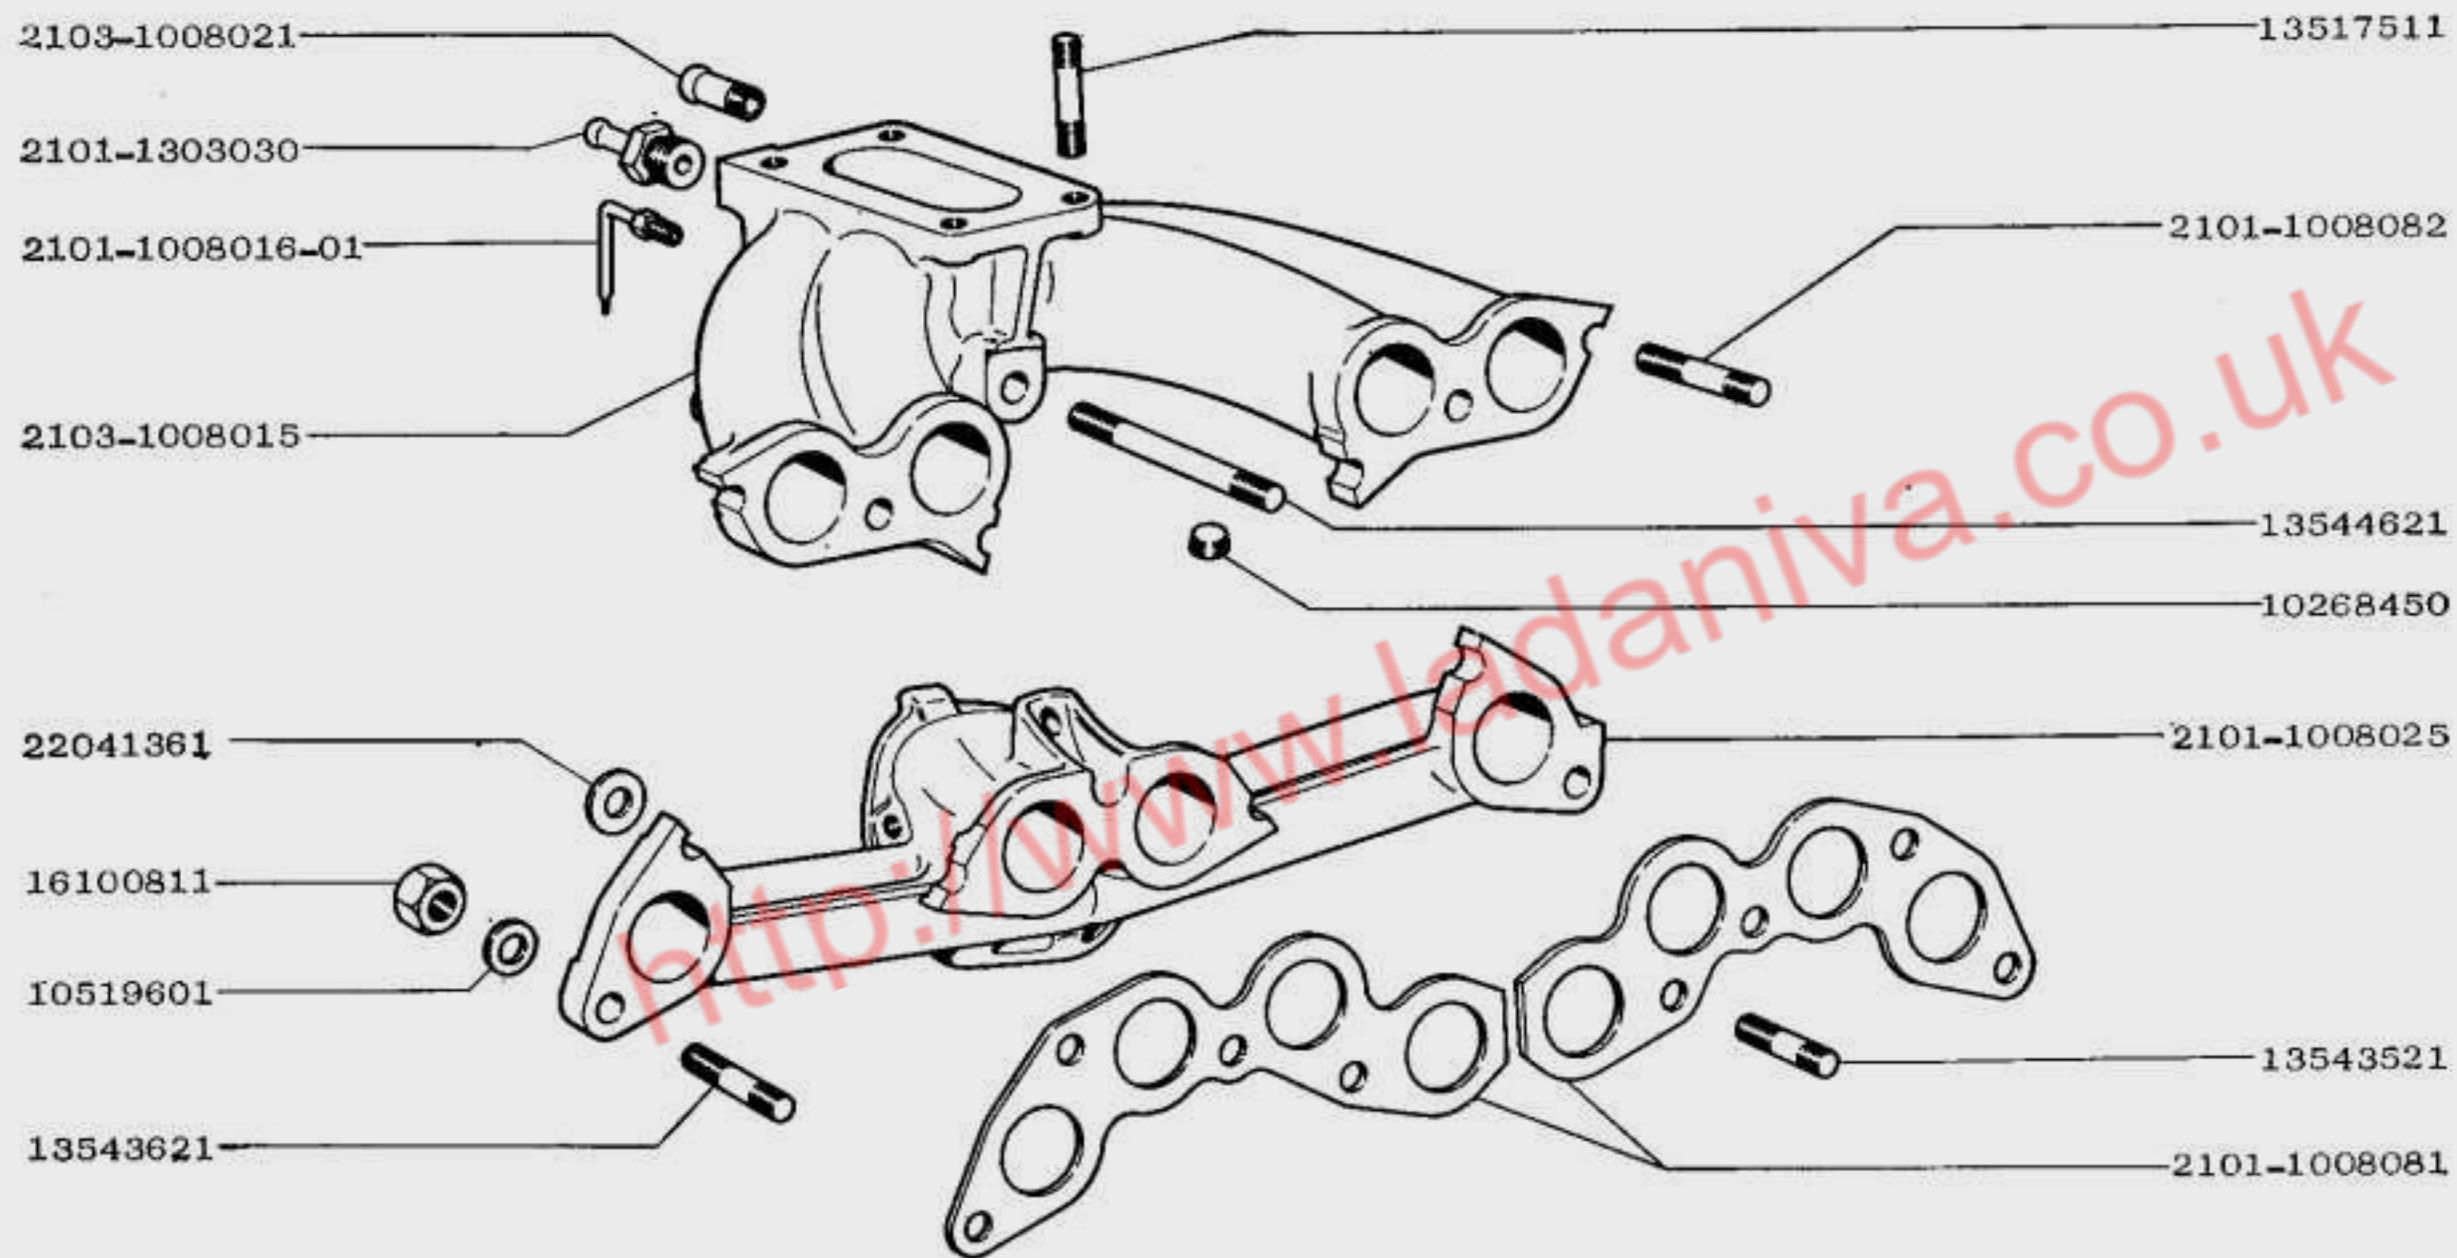

BA3-2121
BA3-21211

Труба впускная и выпускной коллектор
 Inlet and Exhaust Manifolds
 Tuyauterie d'admission et collecteur d'échappement
 Einlaßrohr und Auspuffkrümmer
 Tubo de admisión y colector de escape


A2.54

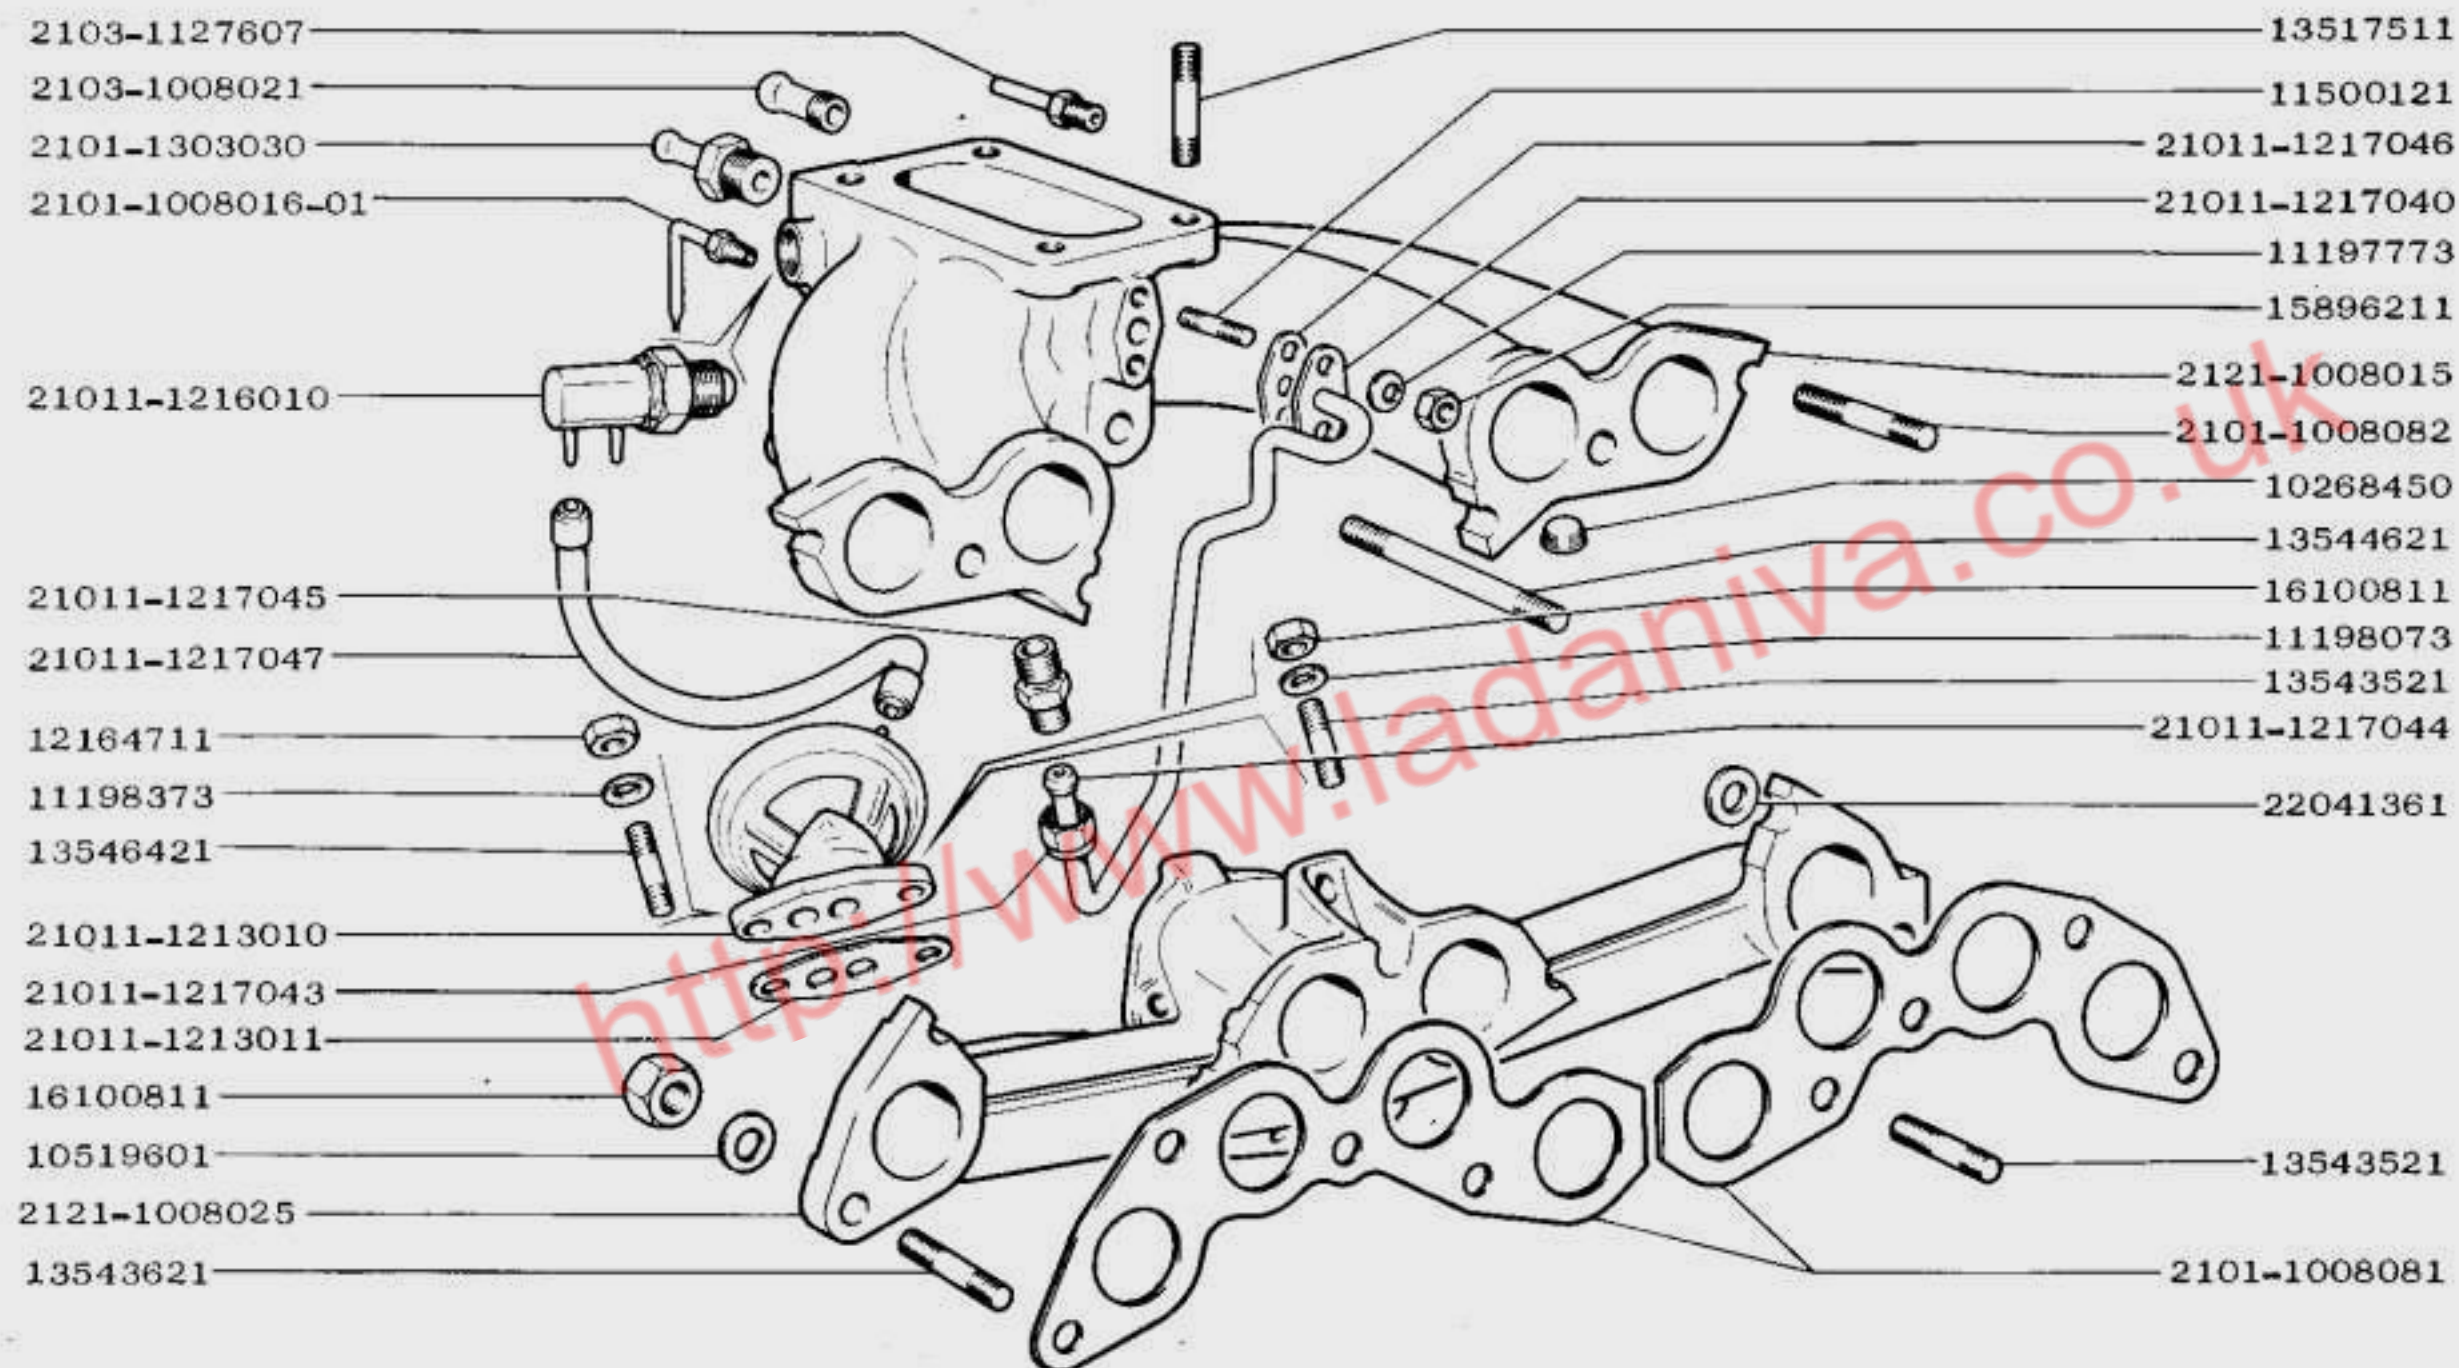

BA3-2121

Труба впускная и выпускной коллектор
 Inlet and Exhaust Manifolds
 Tuyauterie d'admission et collecteur d'échappement
 Einlaßrohr und Auspuffkrümmer
 Tubo de admisión y colector de escape


A2.55

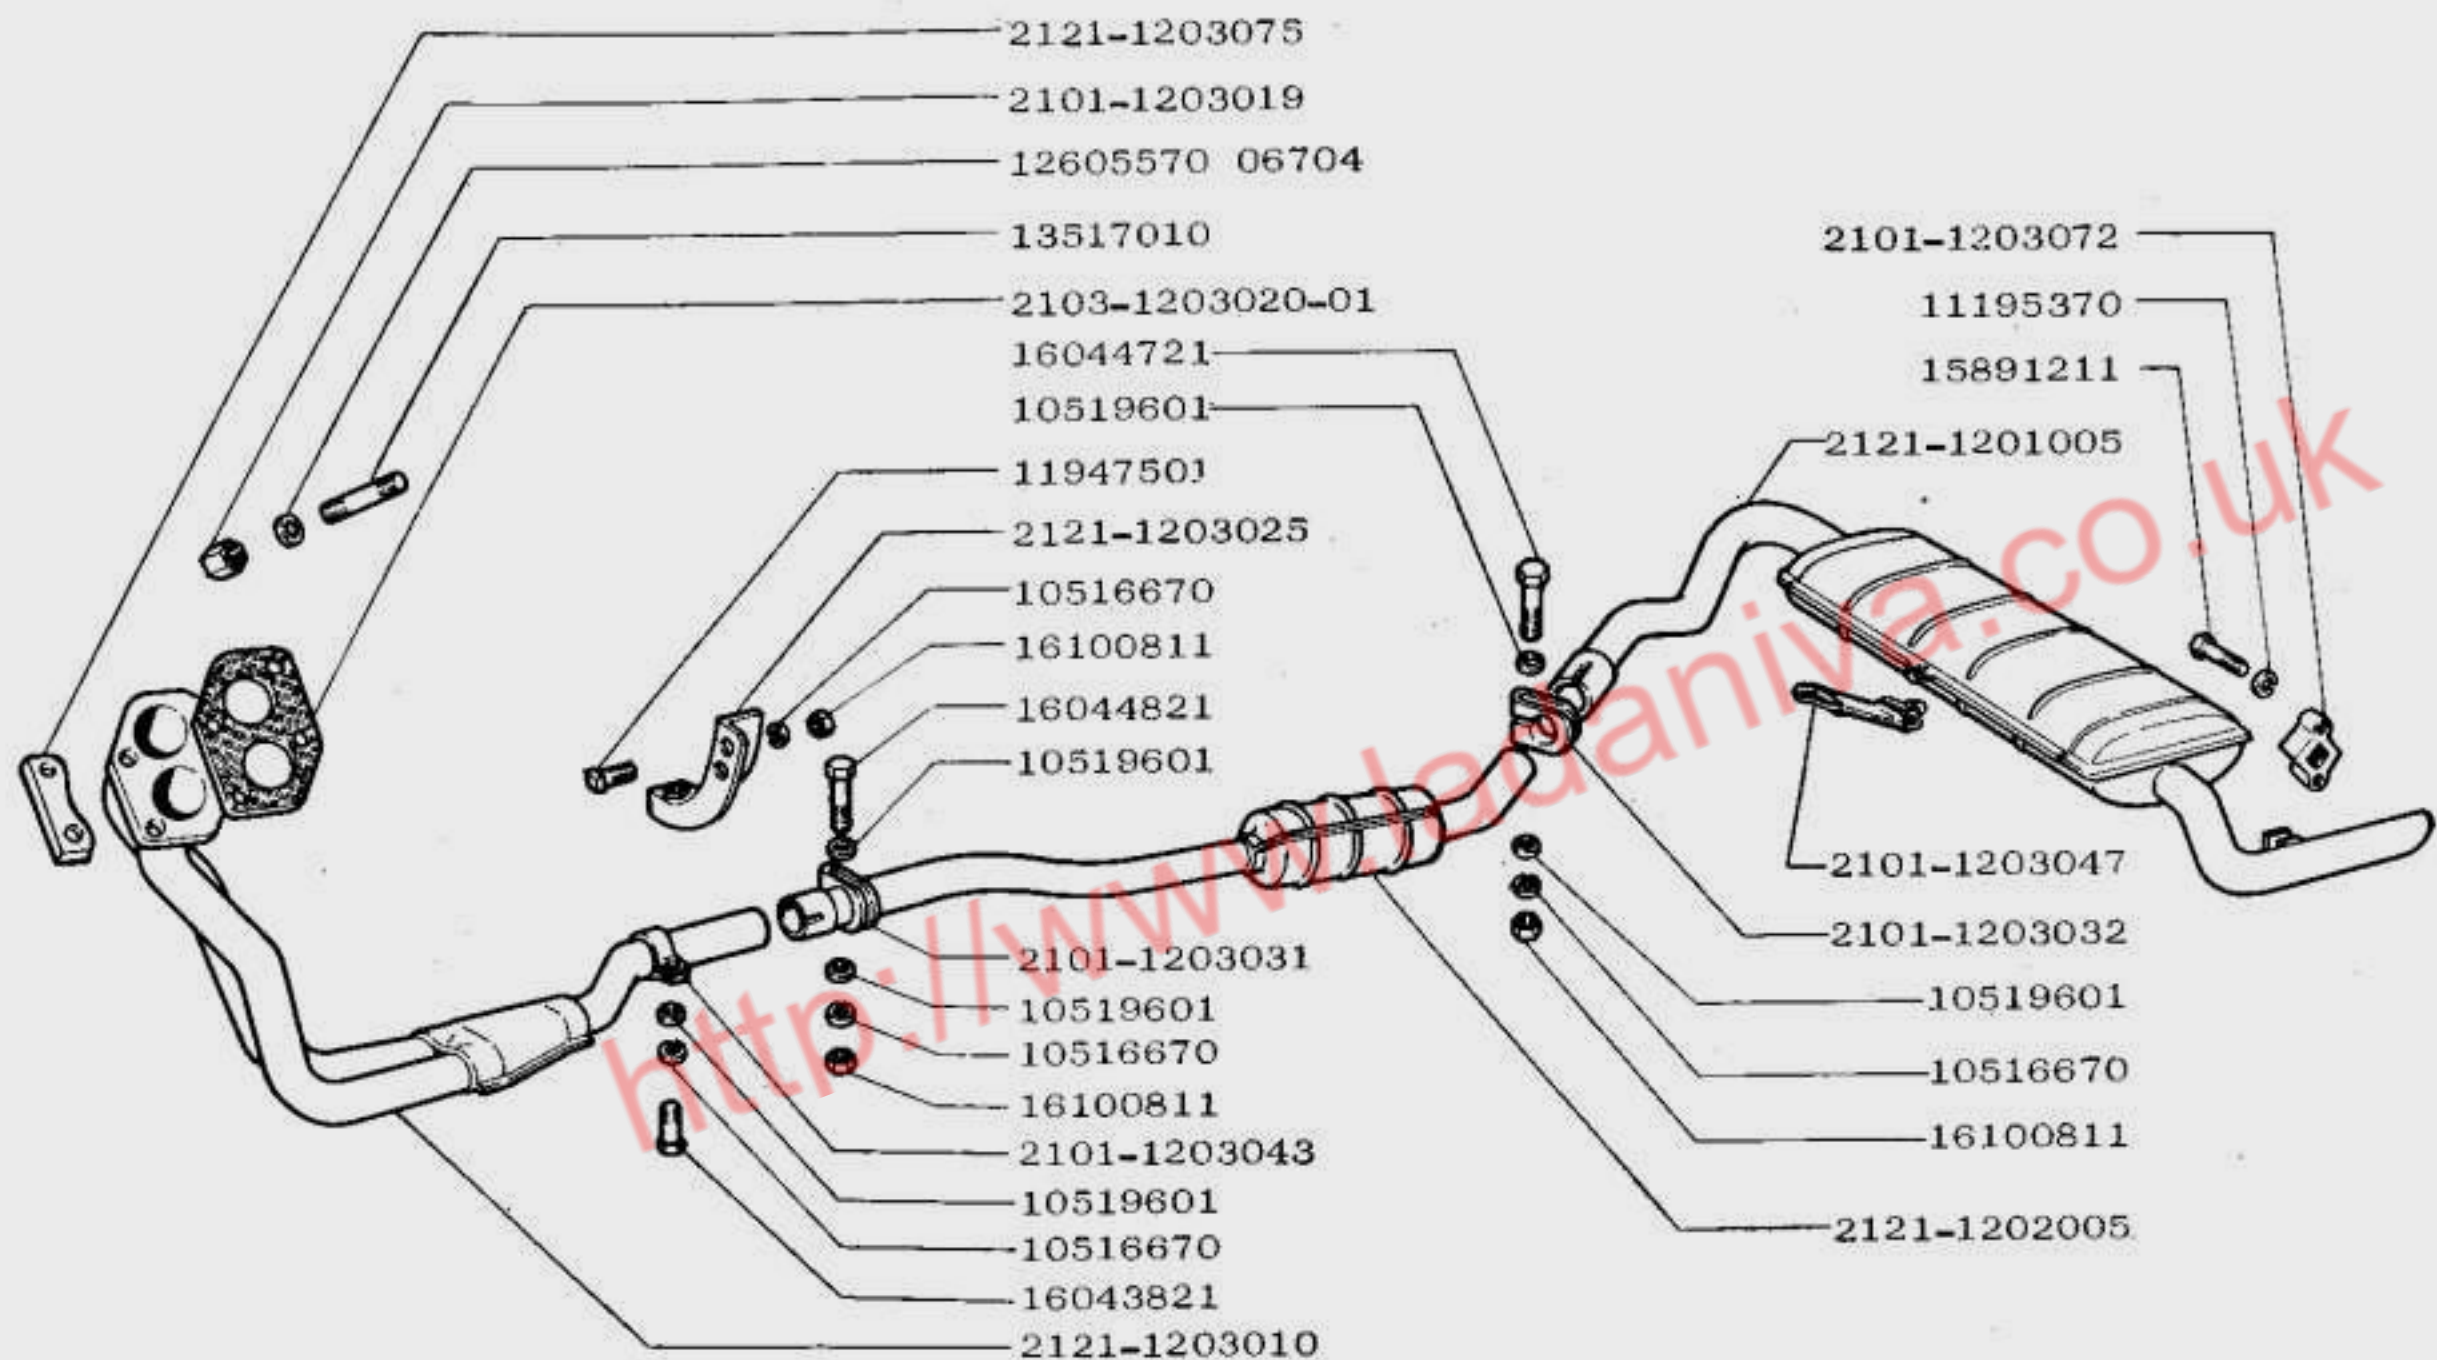

BA3-2121
BA3-21211

Трубы выпускные и глушители
Exhaust Pipes and Mufflers
Tubes d'échappement et silencieux
Auspuffrohre und Schalldämpfer
Tubos de escape y silenciosos


A2.56

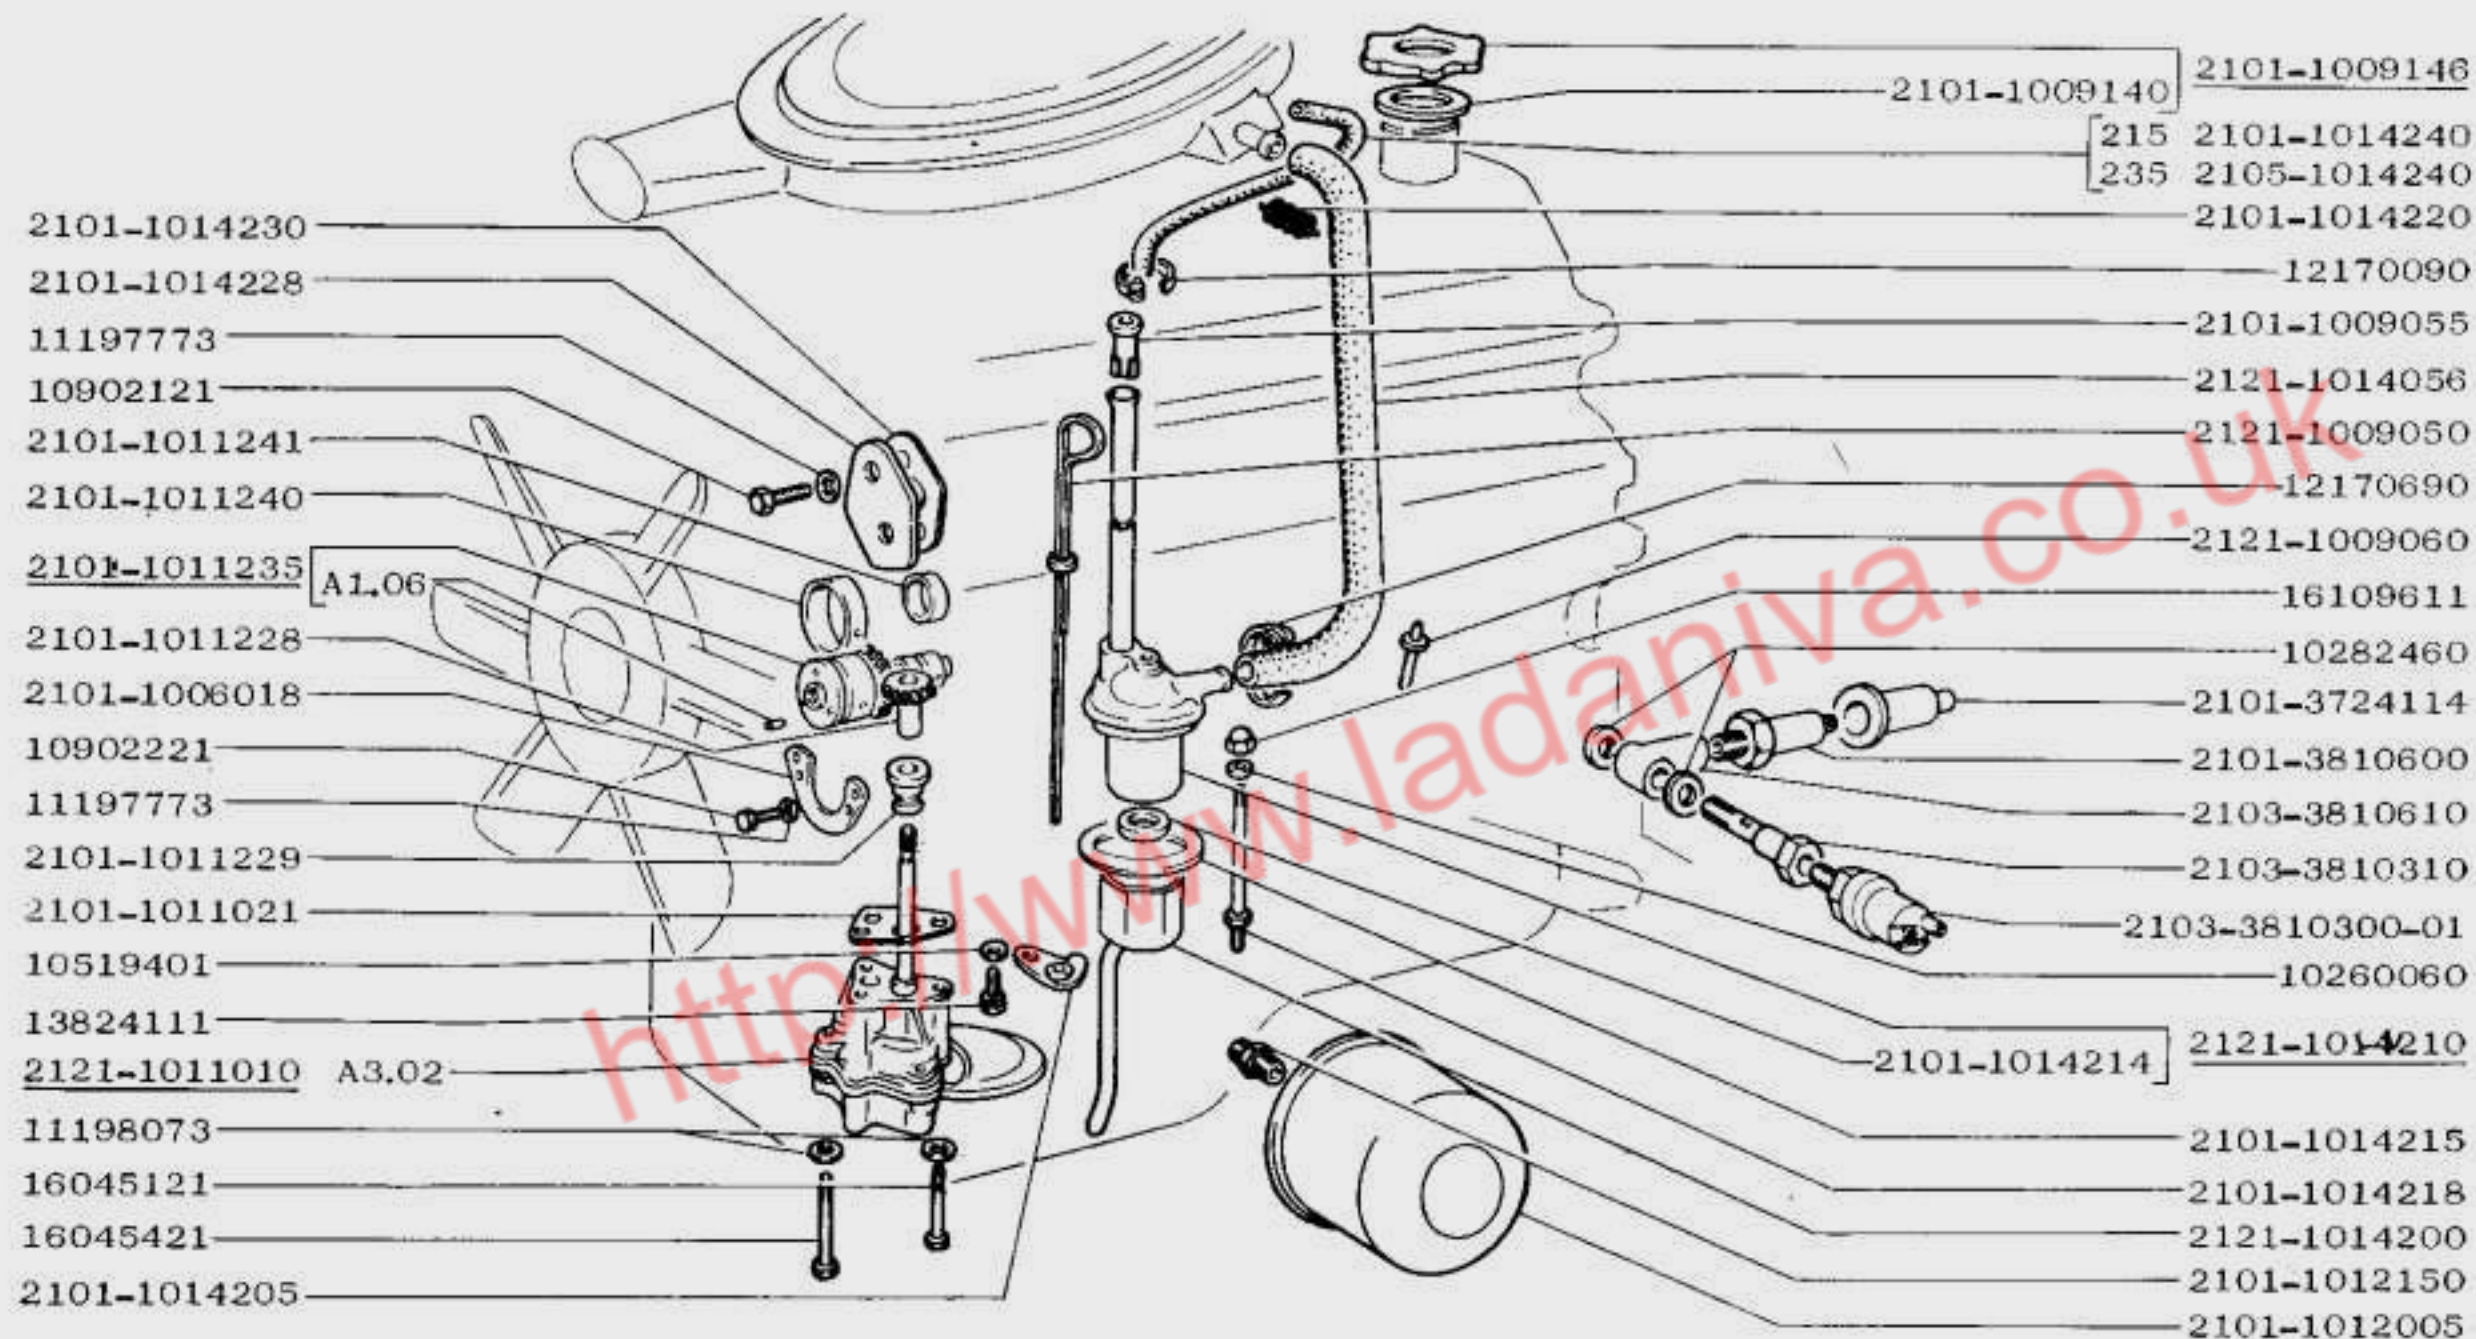

BA3-2121
BA3-21211

Система смазки
Lubricating System
Système de graissage
Schmiersystem
Sistema de engrase


A3.01

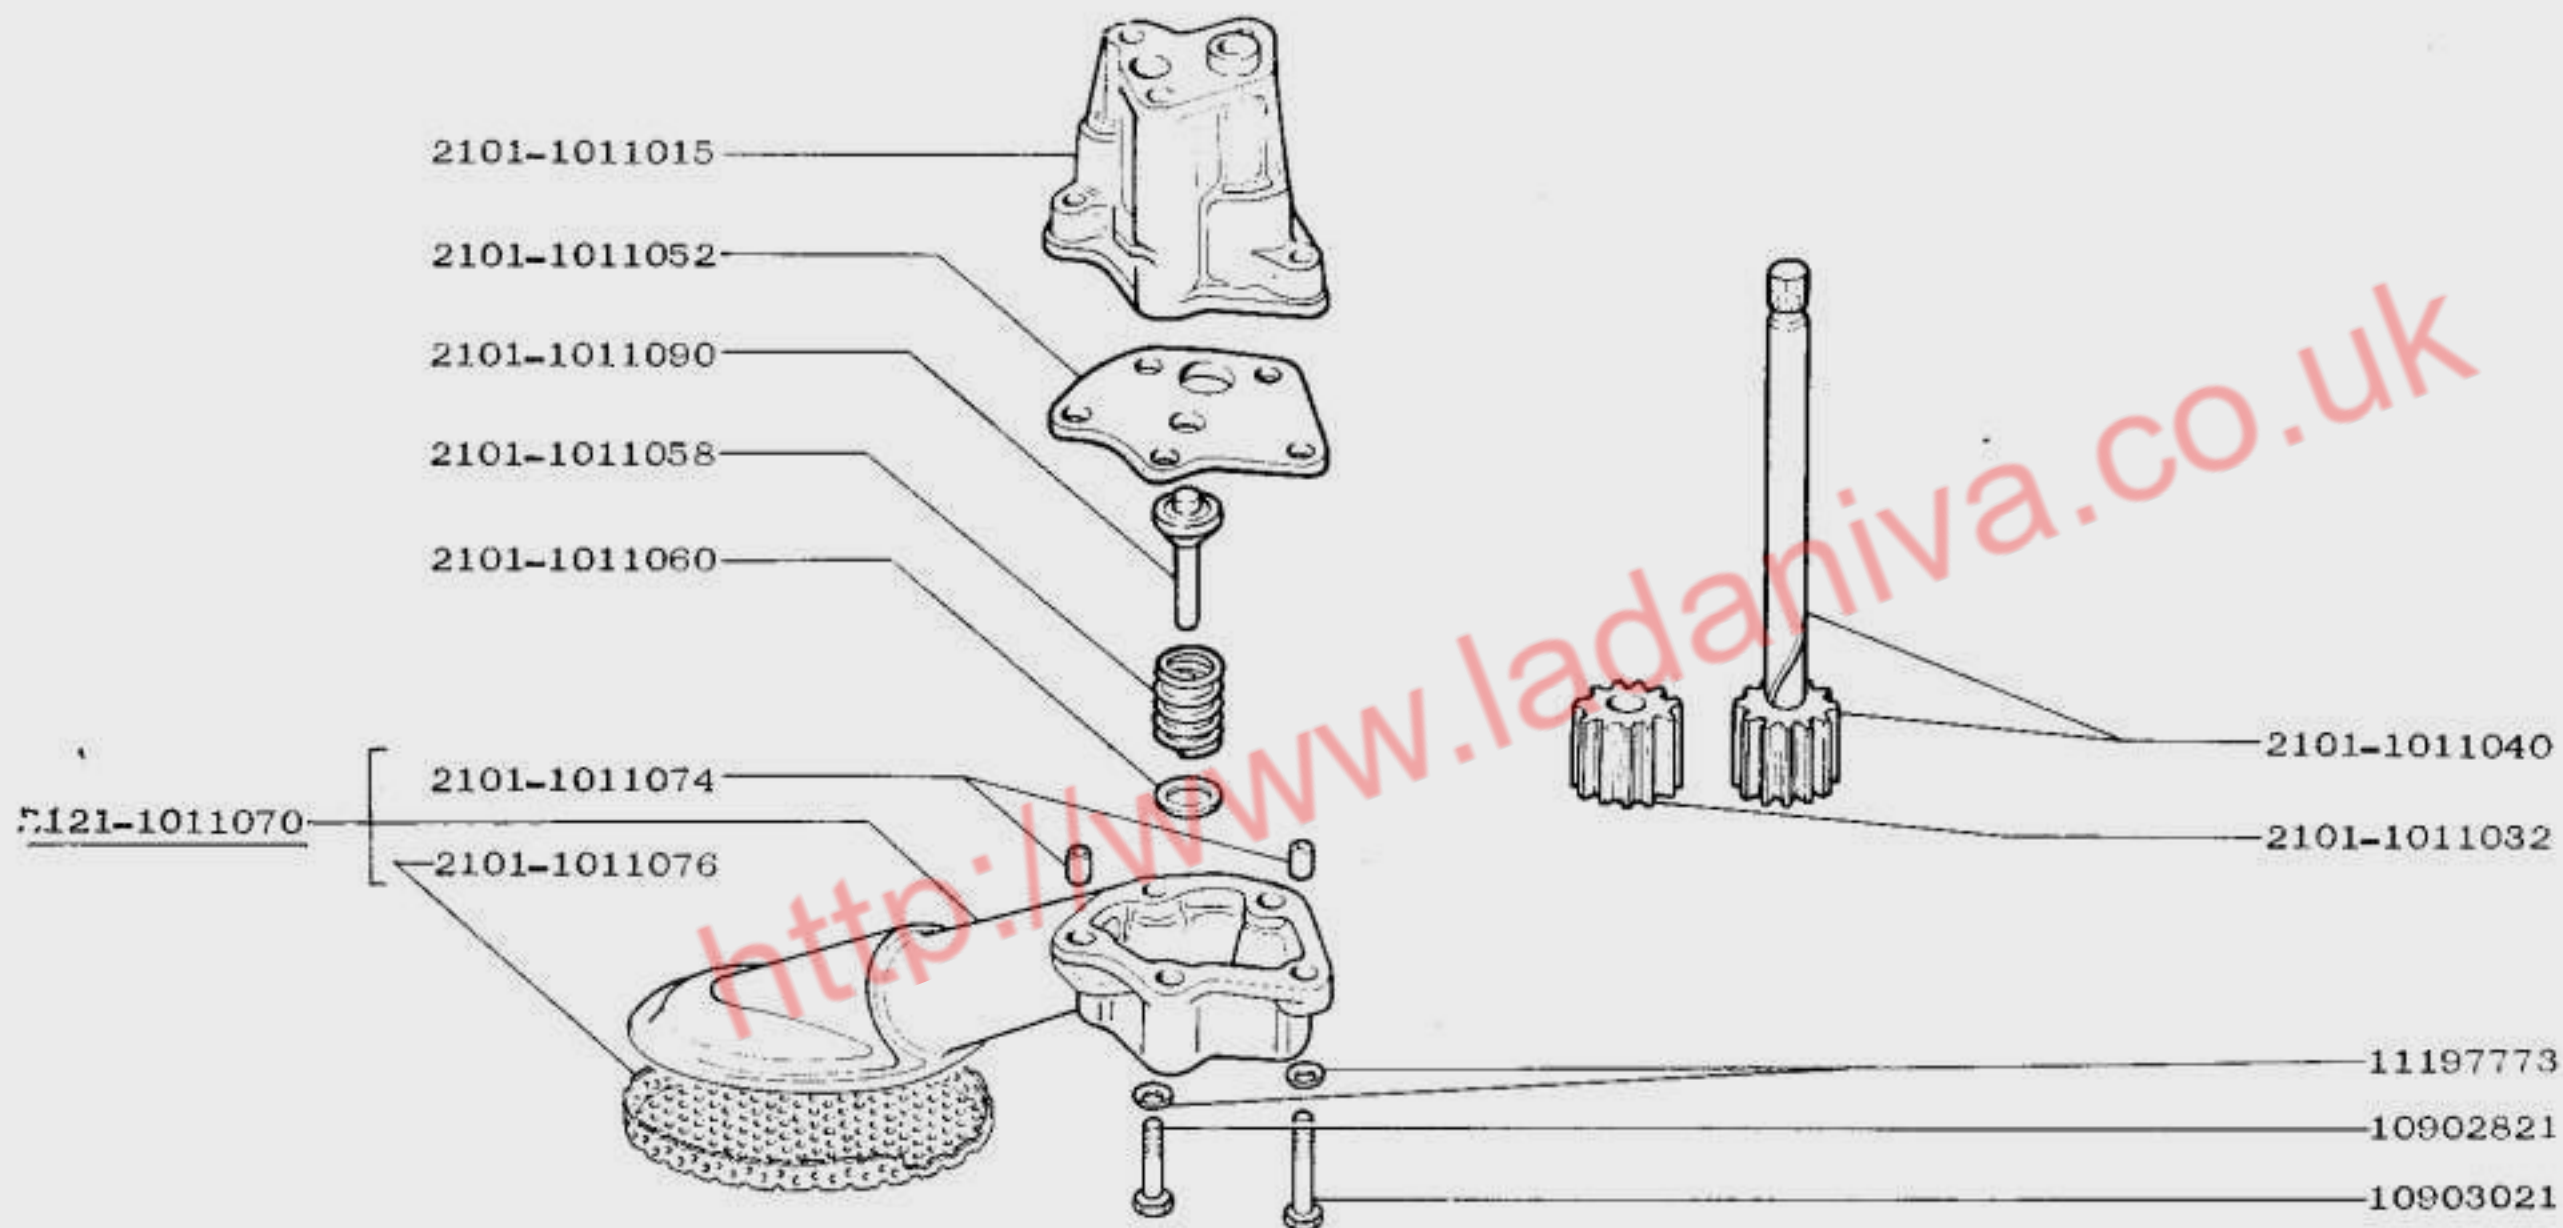

BA3-2121
BA3-21211

Насос масляный
Oil Pump
Pompe à huile
Ölpumpe
Bomba de aceite


A3.02

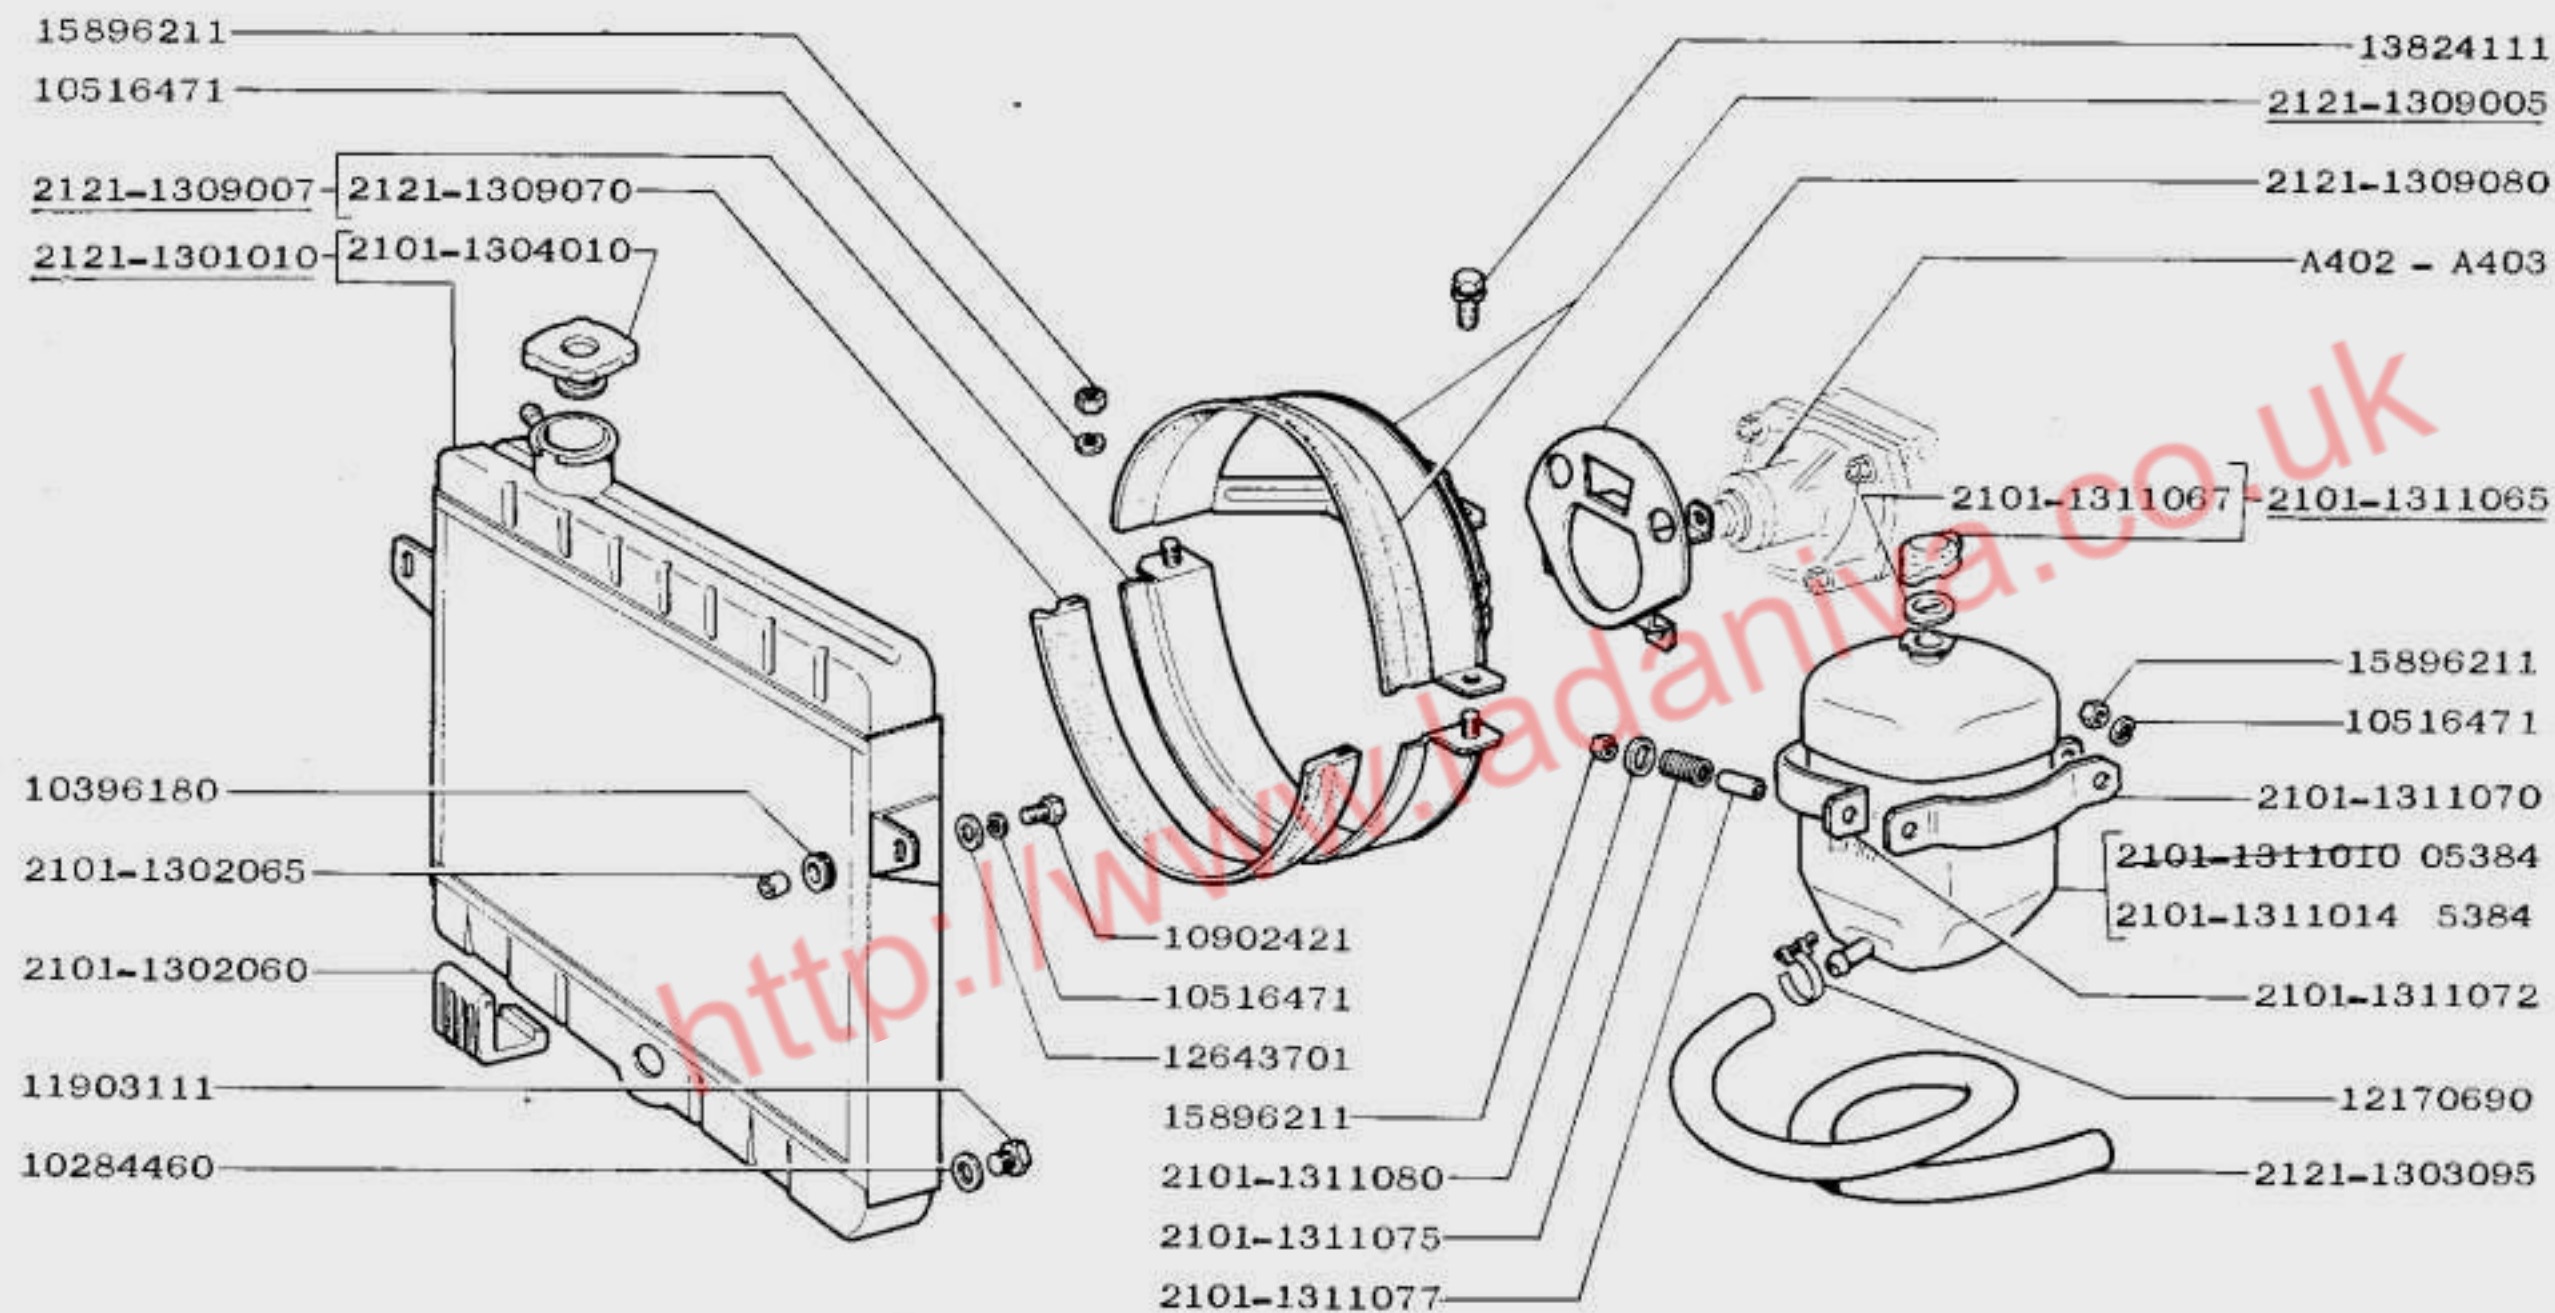

BA3-2121
BA3-21211

Радиатор
Radiator
Radiateur
Kühler
Radiador


A4.01

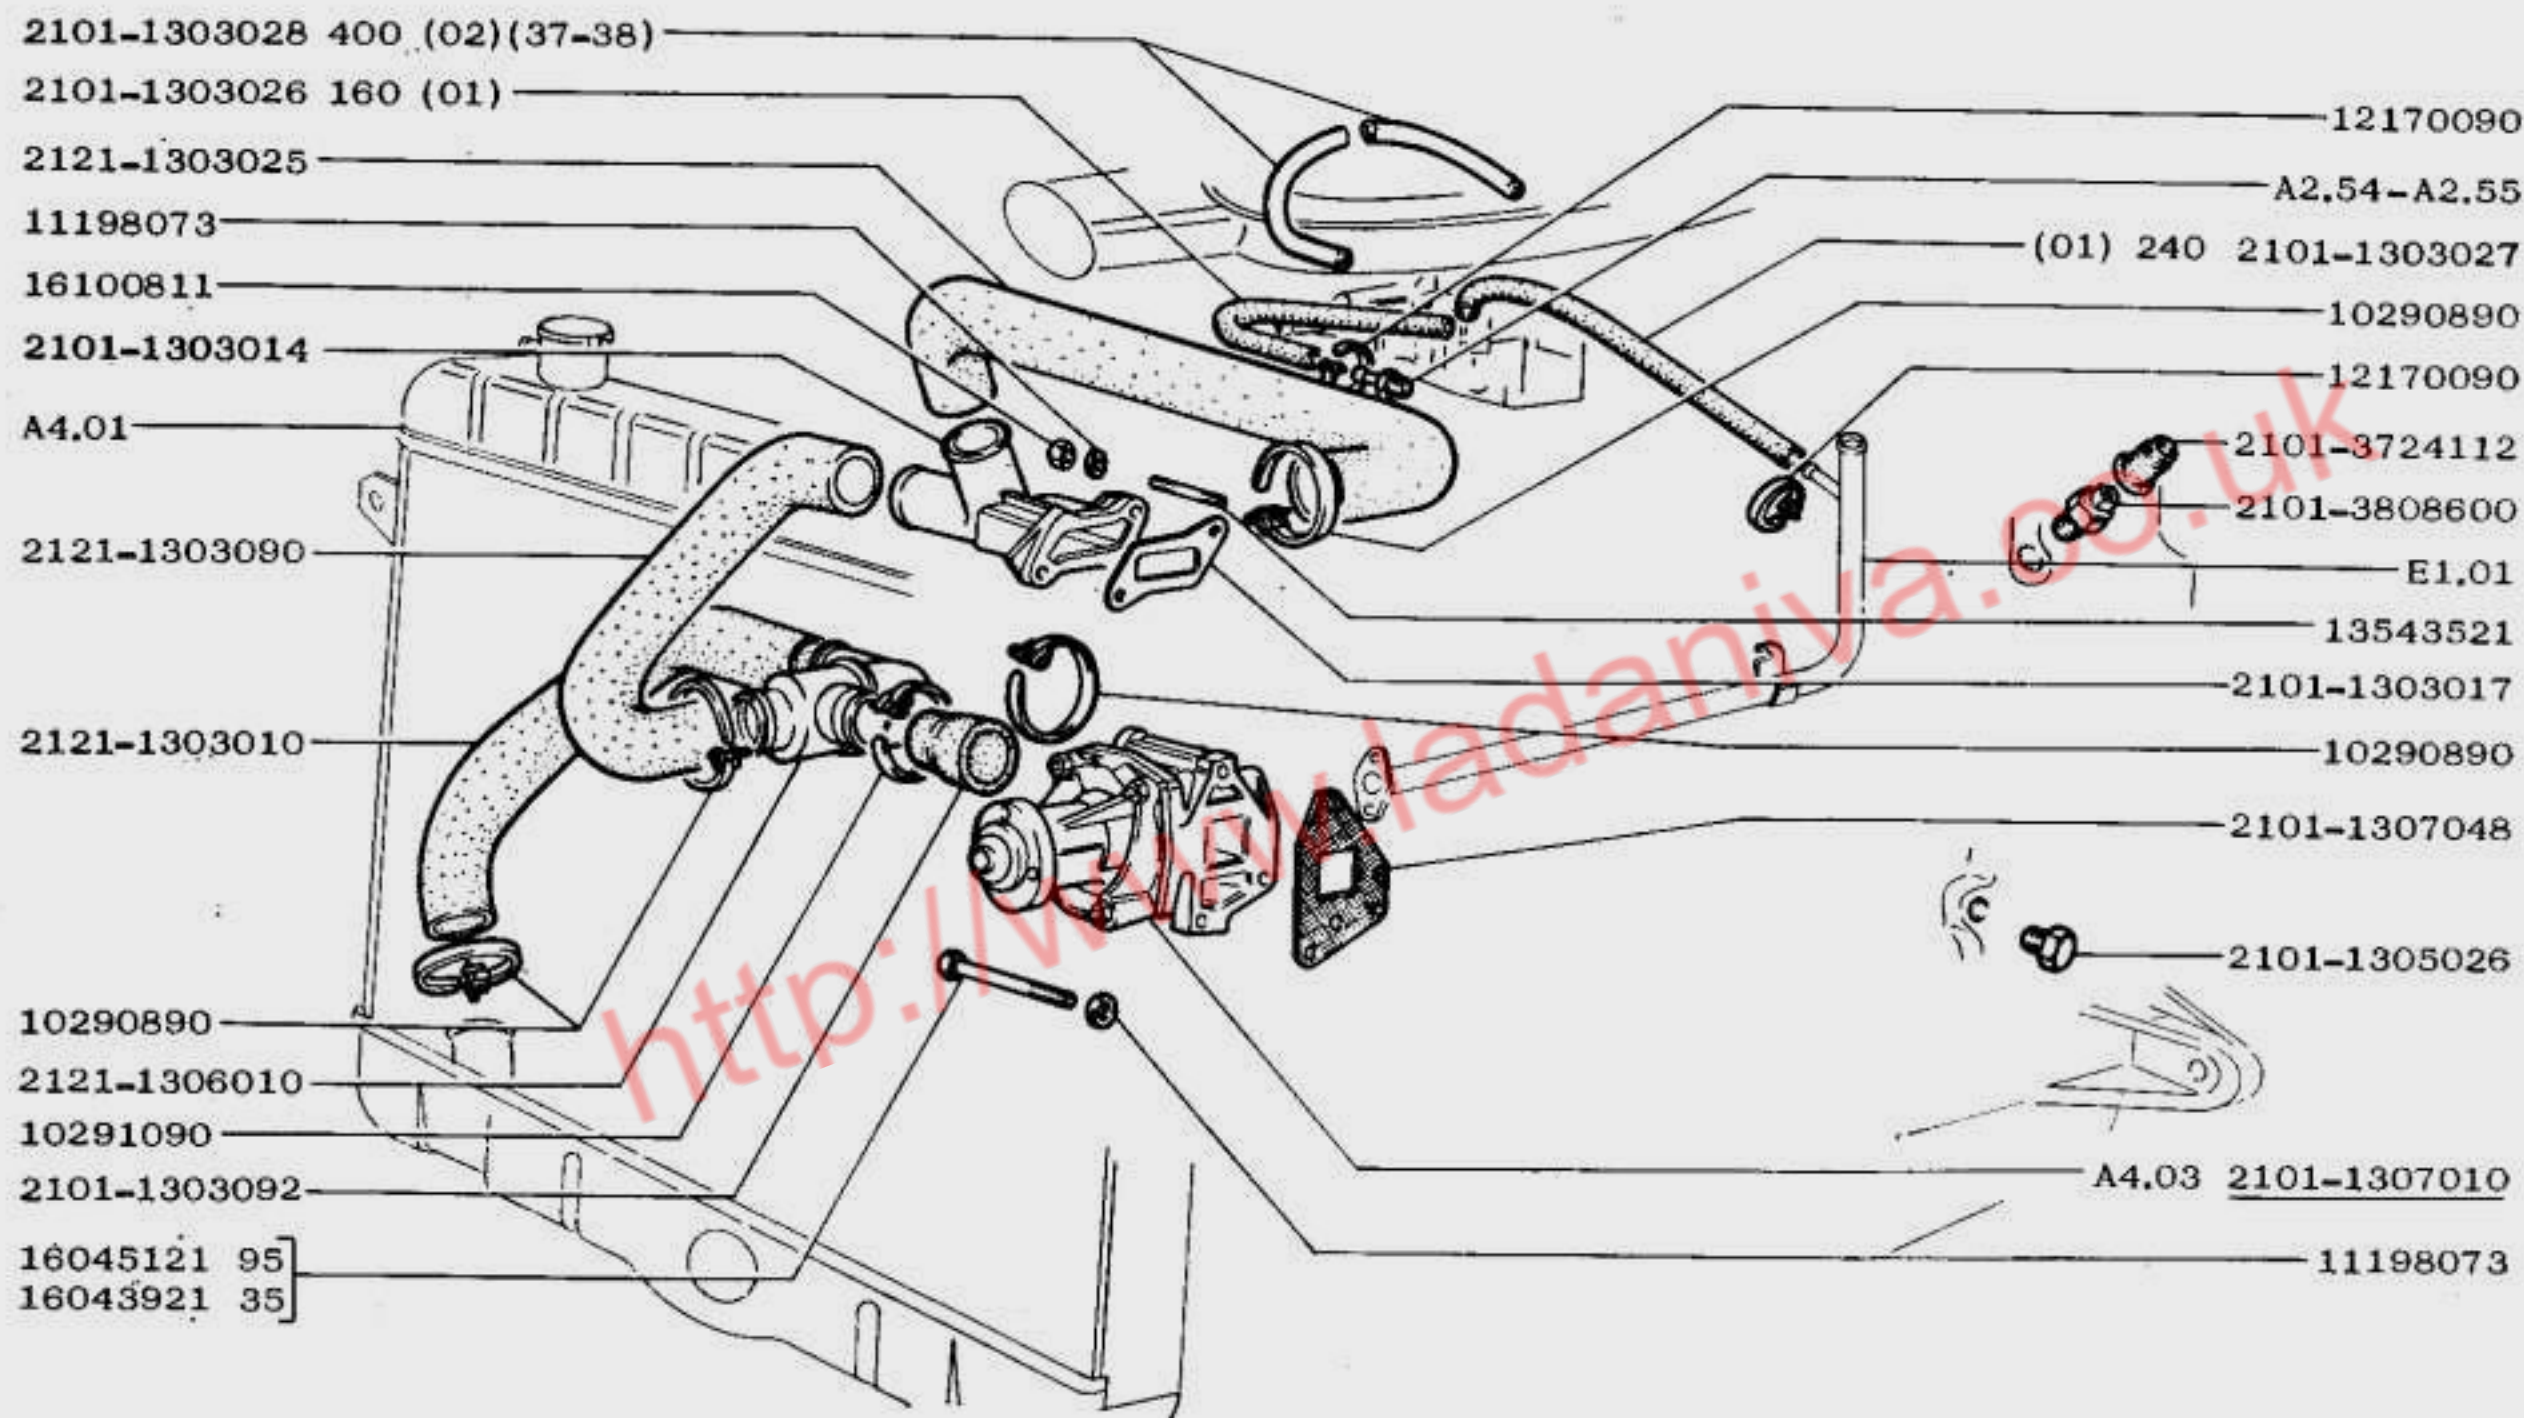

BA3-2121 (01)
BA3-21211 (02)

Насос водяной и трубопроводы
 Water Pump and Piping
 Pompe à eau et tuyauteries
 Wasserpumpe und Rohrleitungen
 Bomba de agua y tuberías


A4.02

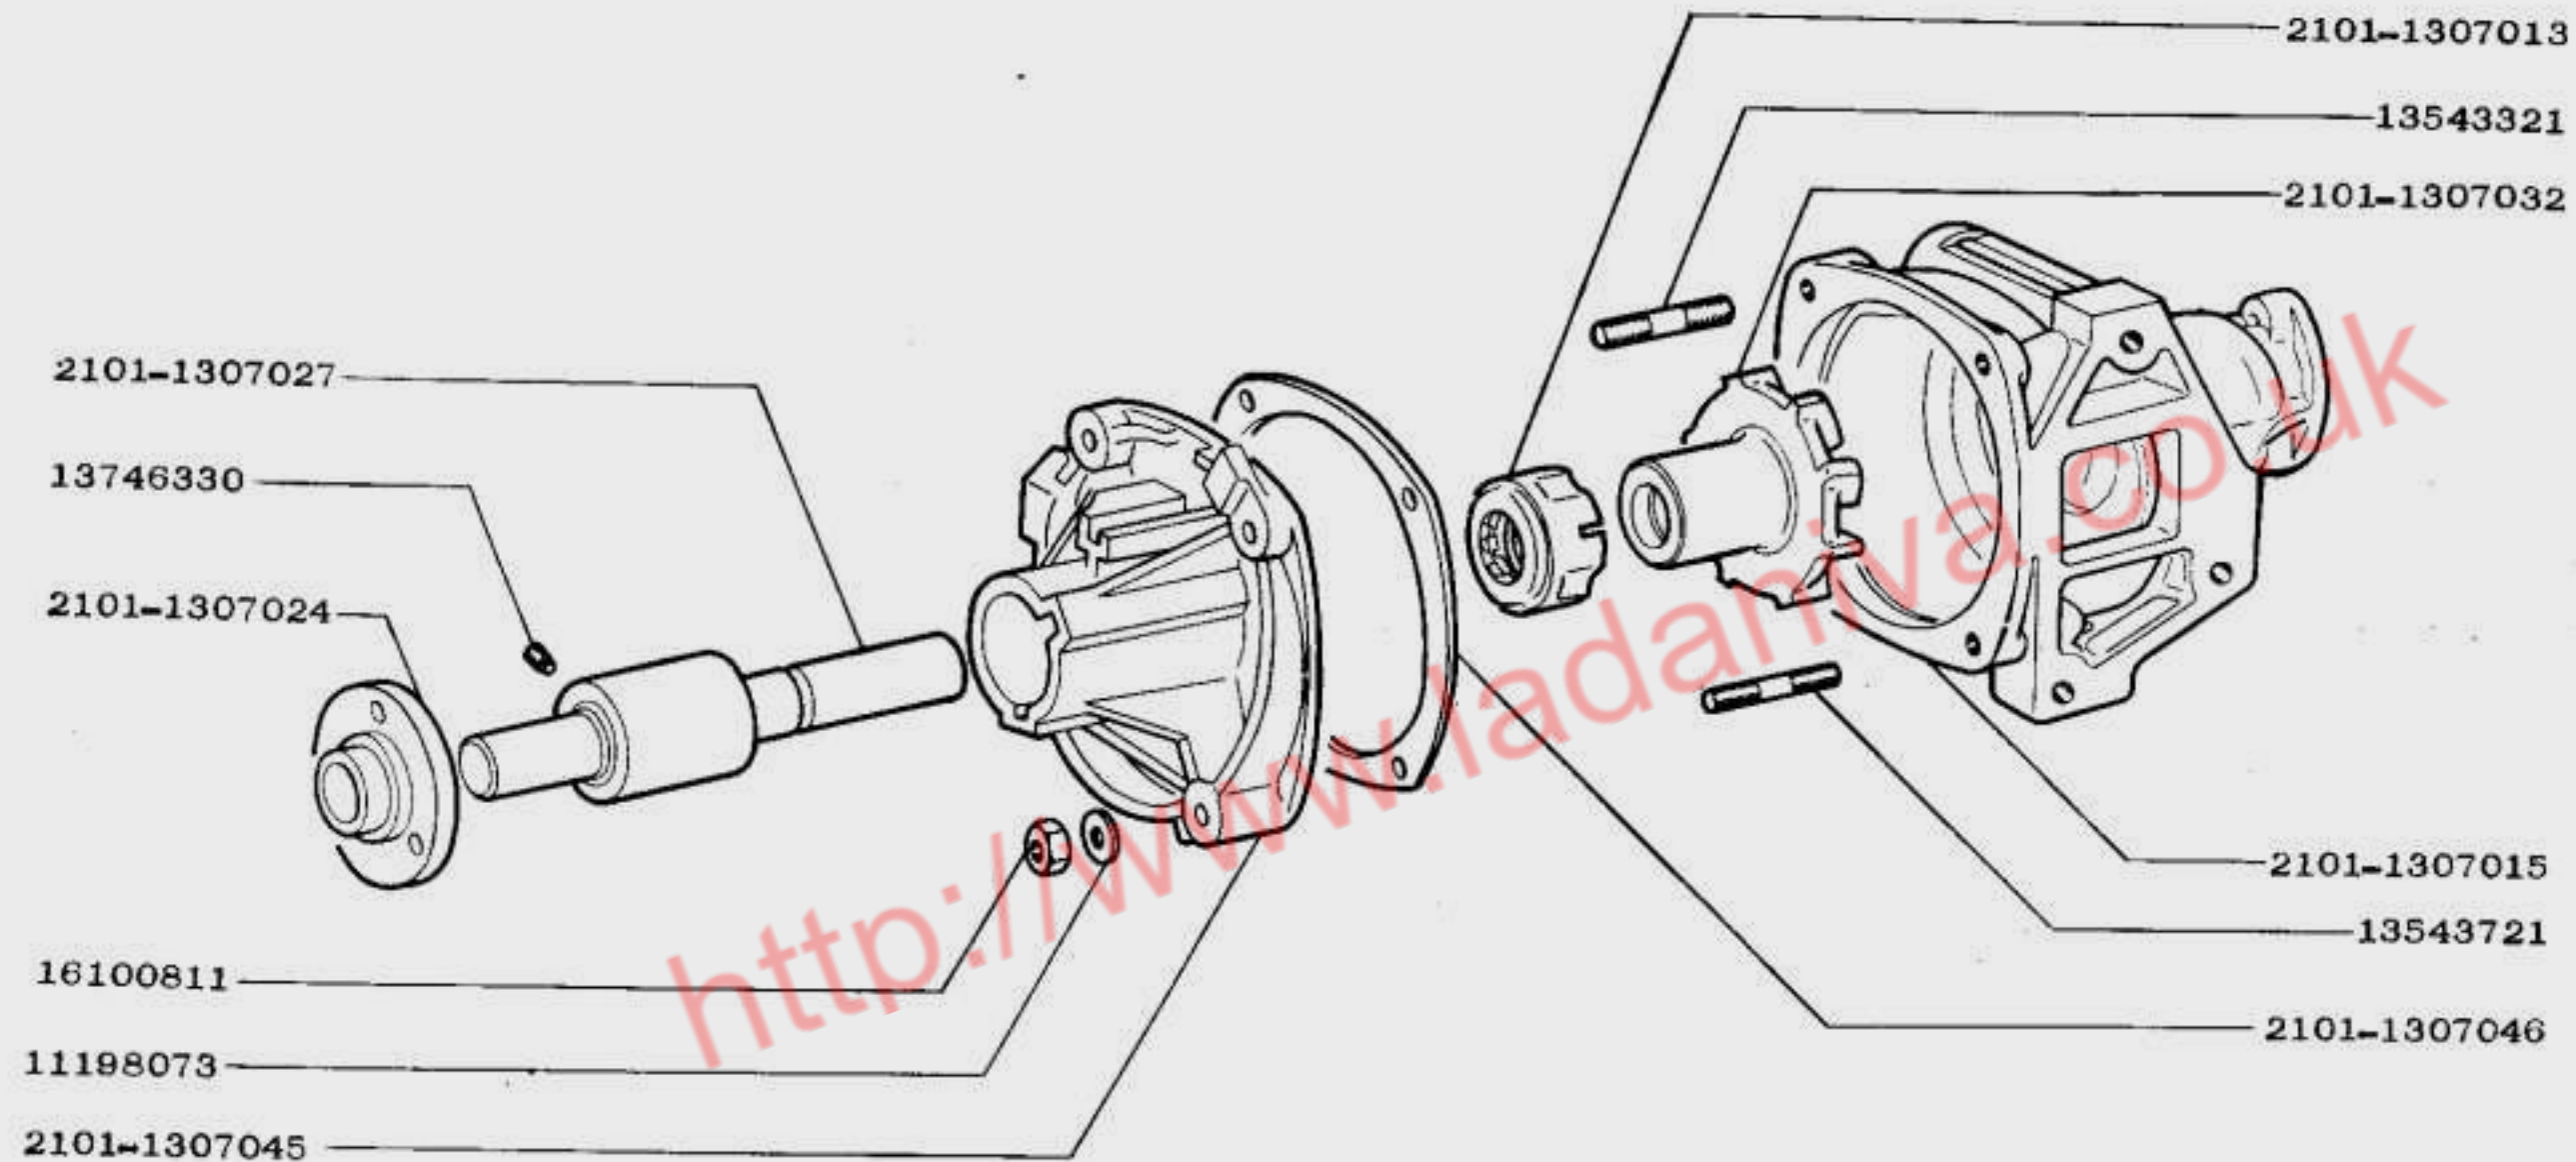

BA3-2121
BA3-21211

Насос водяной
Water Pump
Pompe à eau
Wasserpumpe
Bomba de agua


A4.03

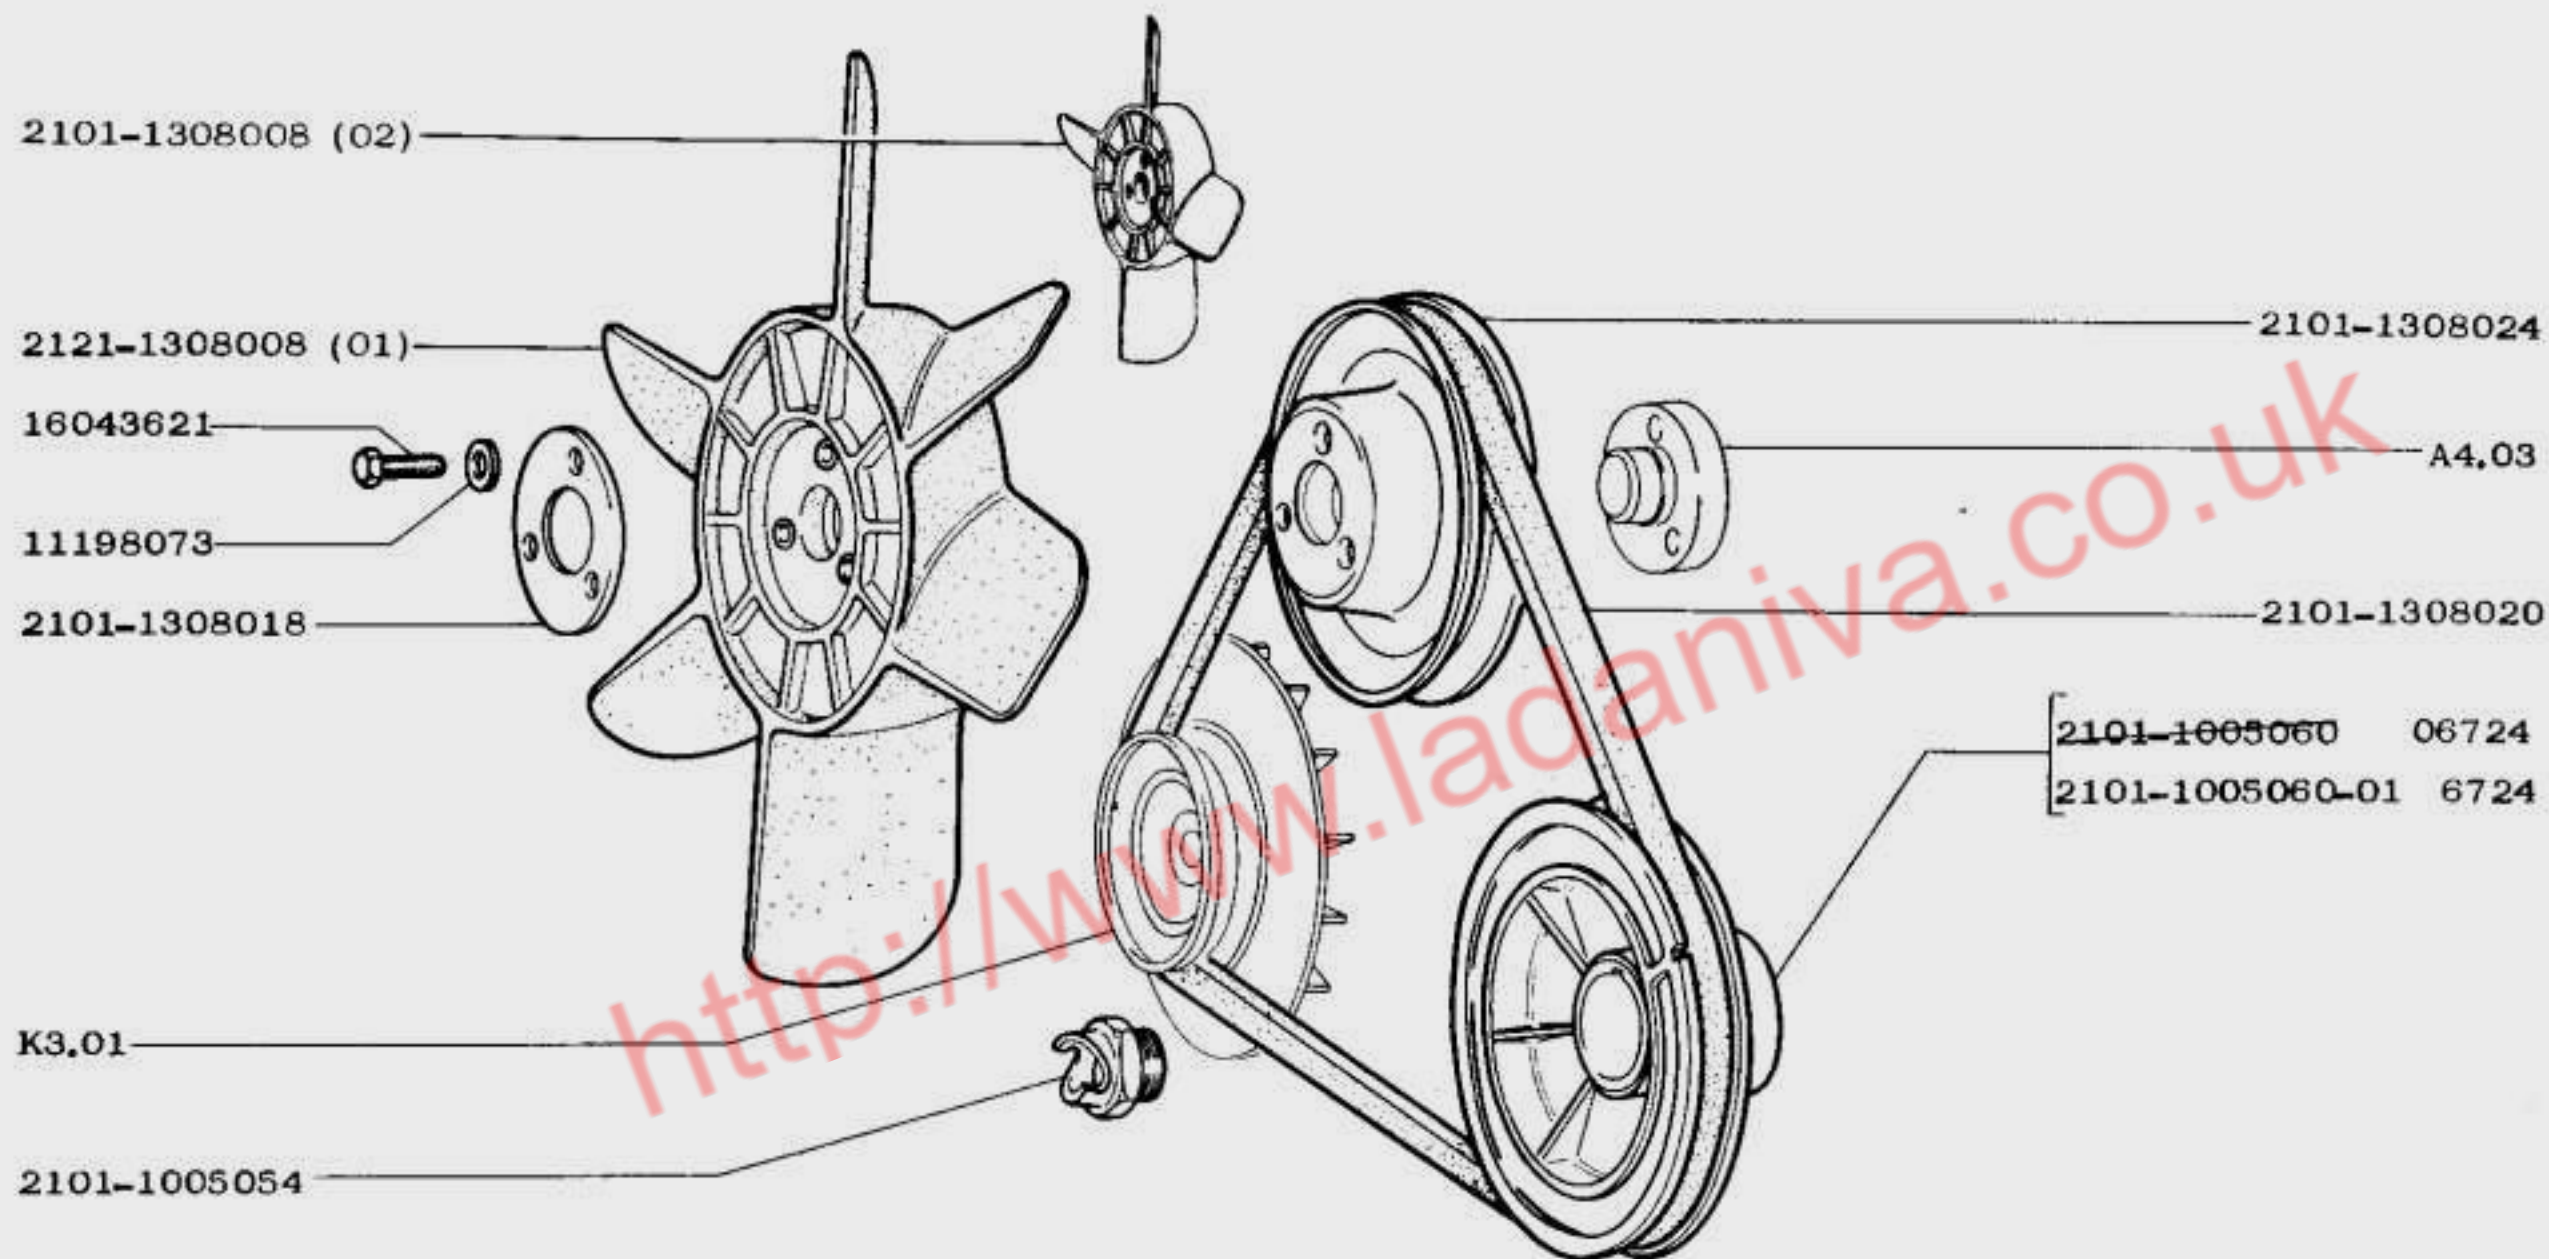

BA3-2121 (01)
BA3-21211 (02)

Привод водяного насоса
Water Pump Drive
Entraînement de la pompe à eau
Wasserpumpenantrieb
Accionamiento de la bomba de agua


A4.09

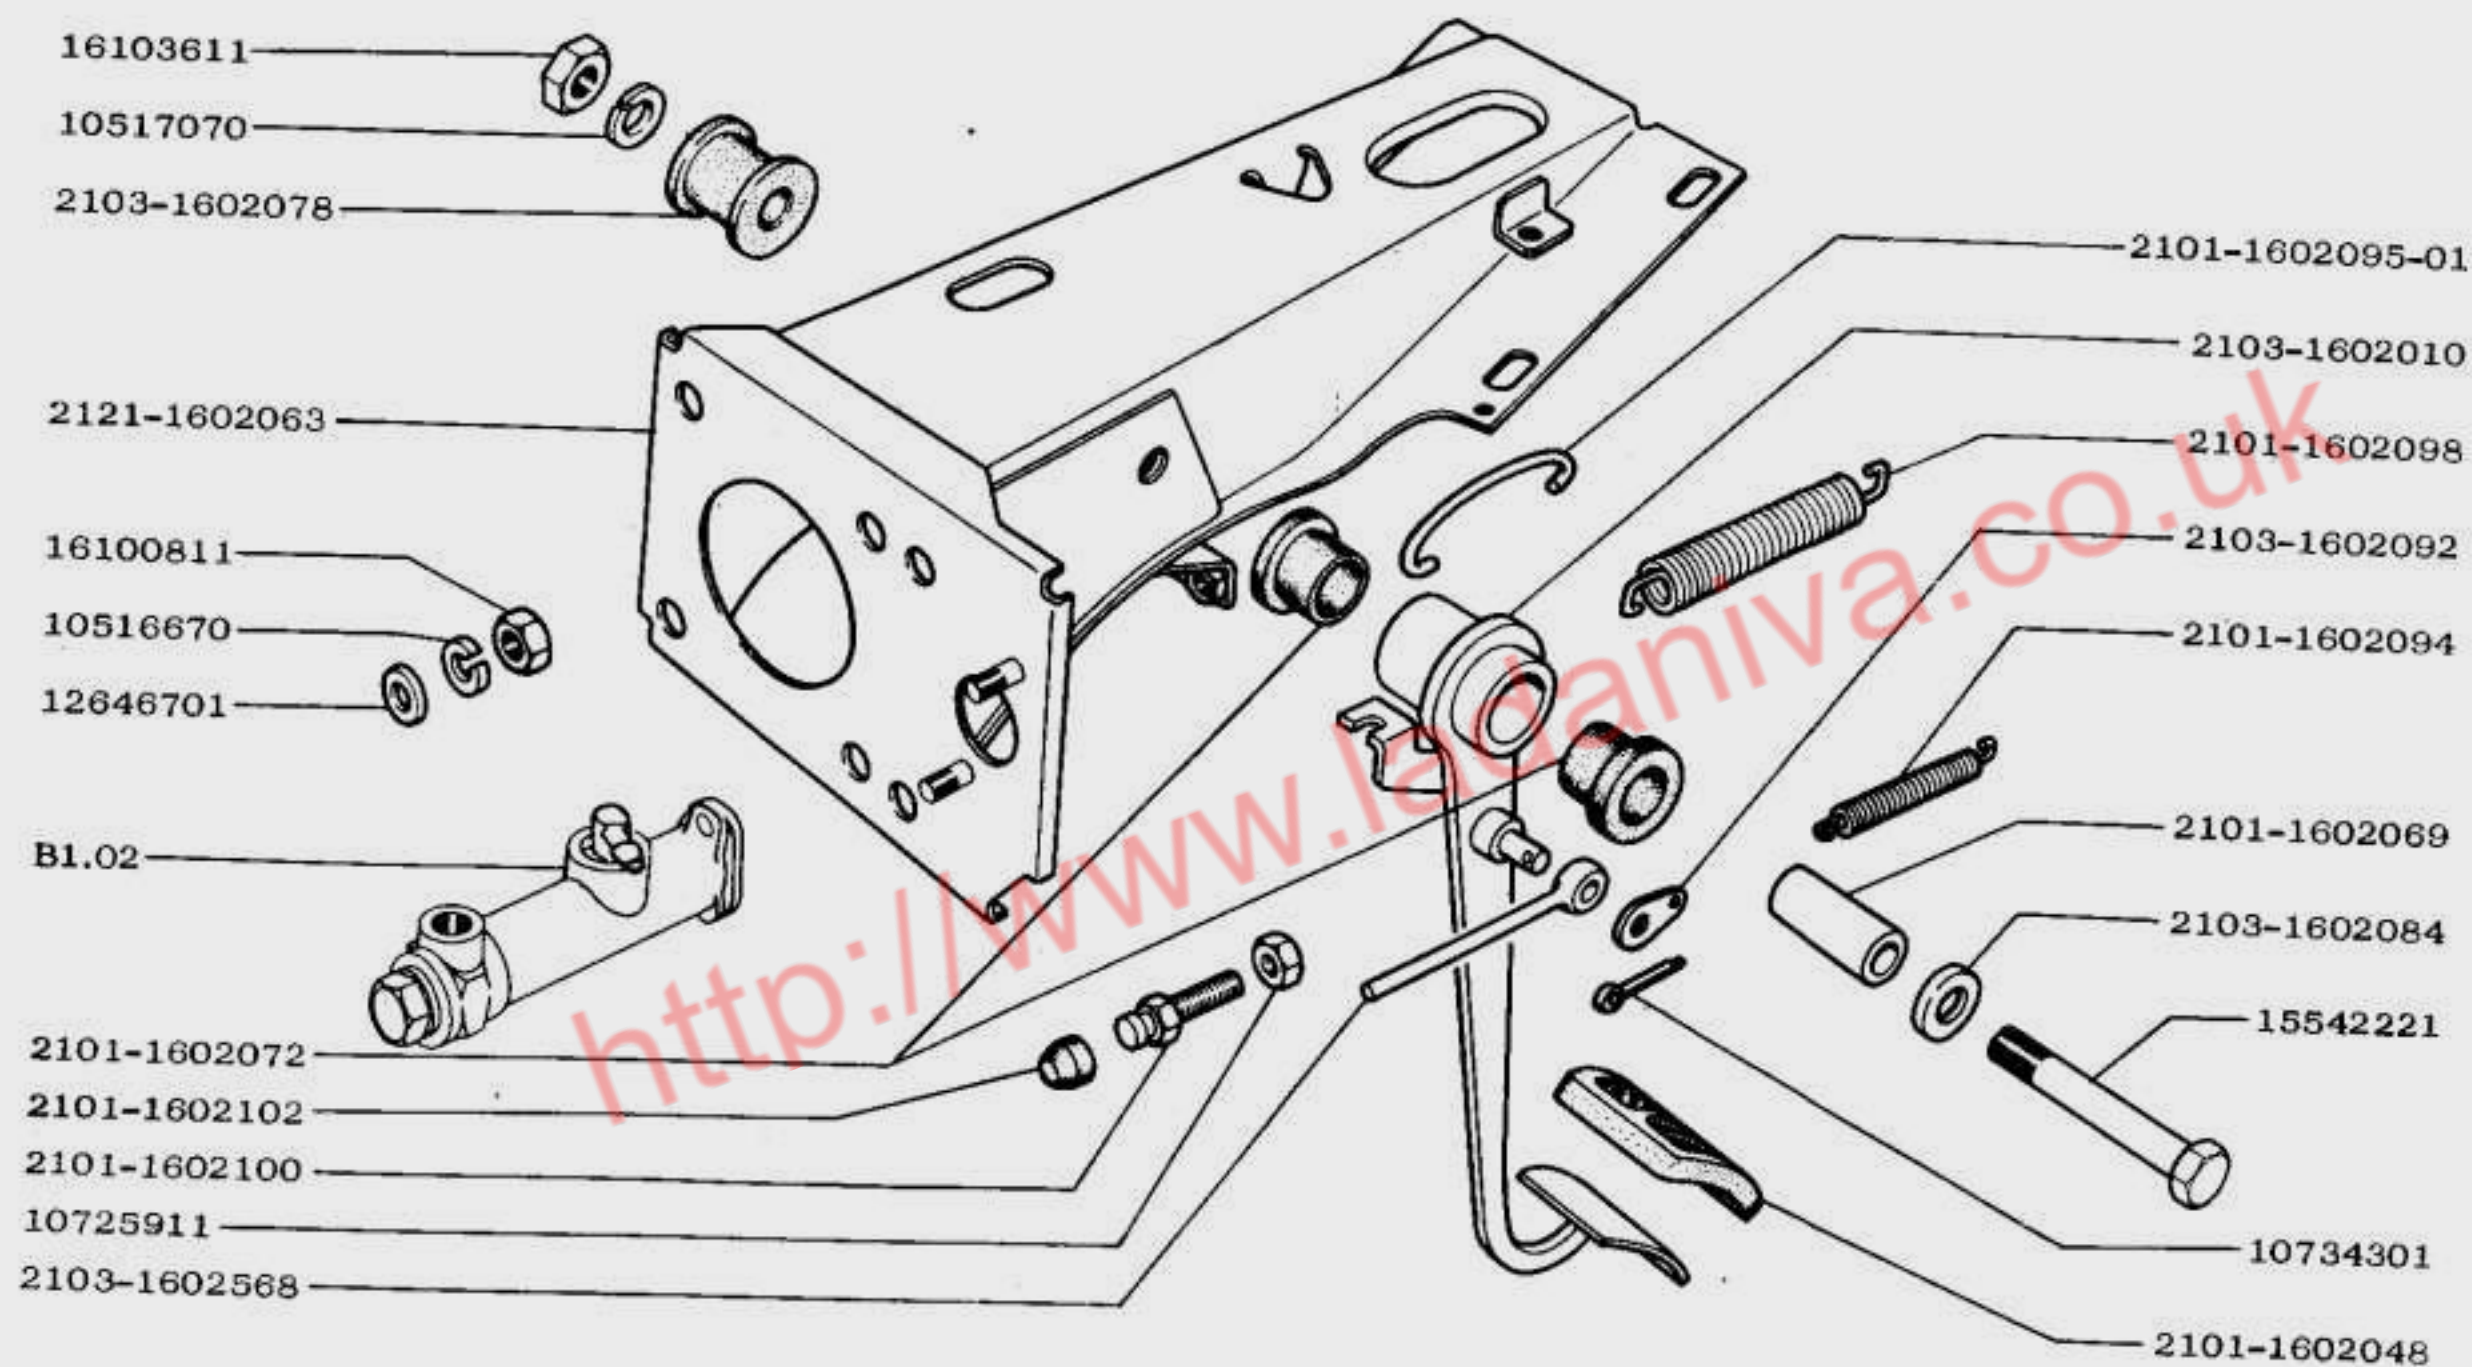

BA3-2121
BA3-21211

Механизм управления сцеплением
Clutch Control Mechanism
Pédalier d'embrayage
Kupplungsbetätigung
Mecanismo de mando del embrague


B1.01

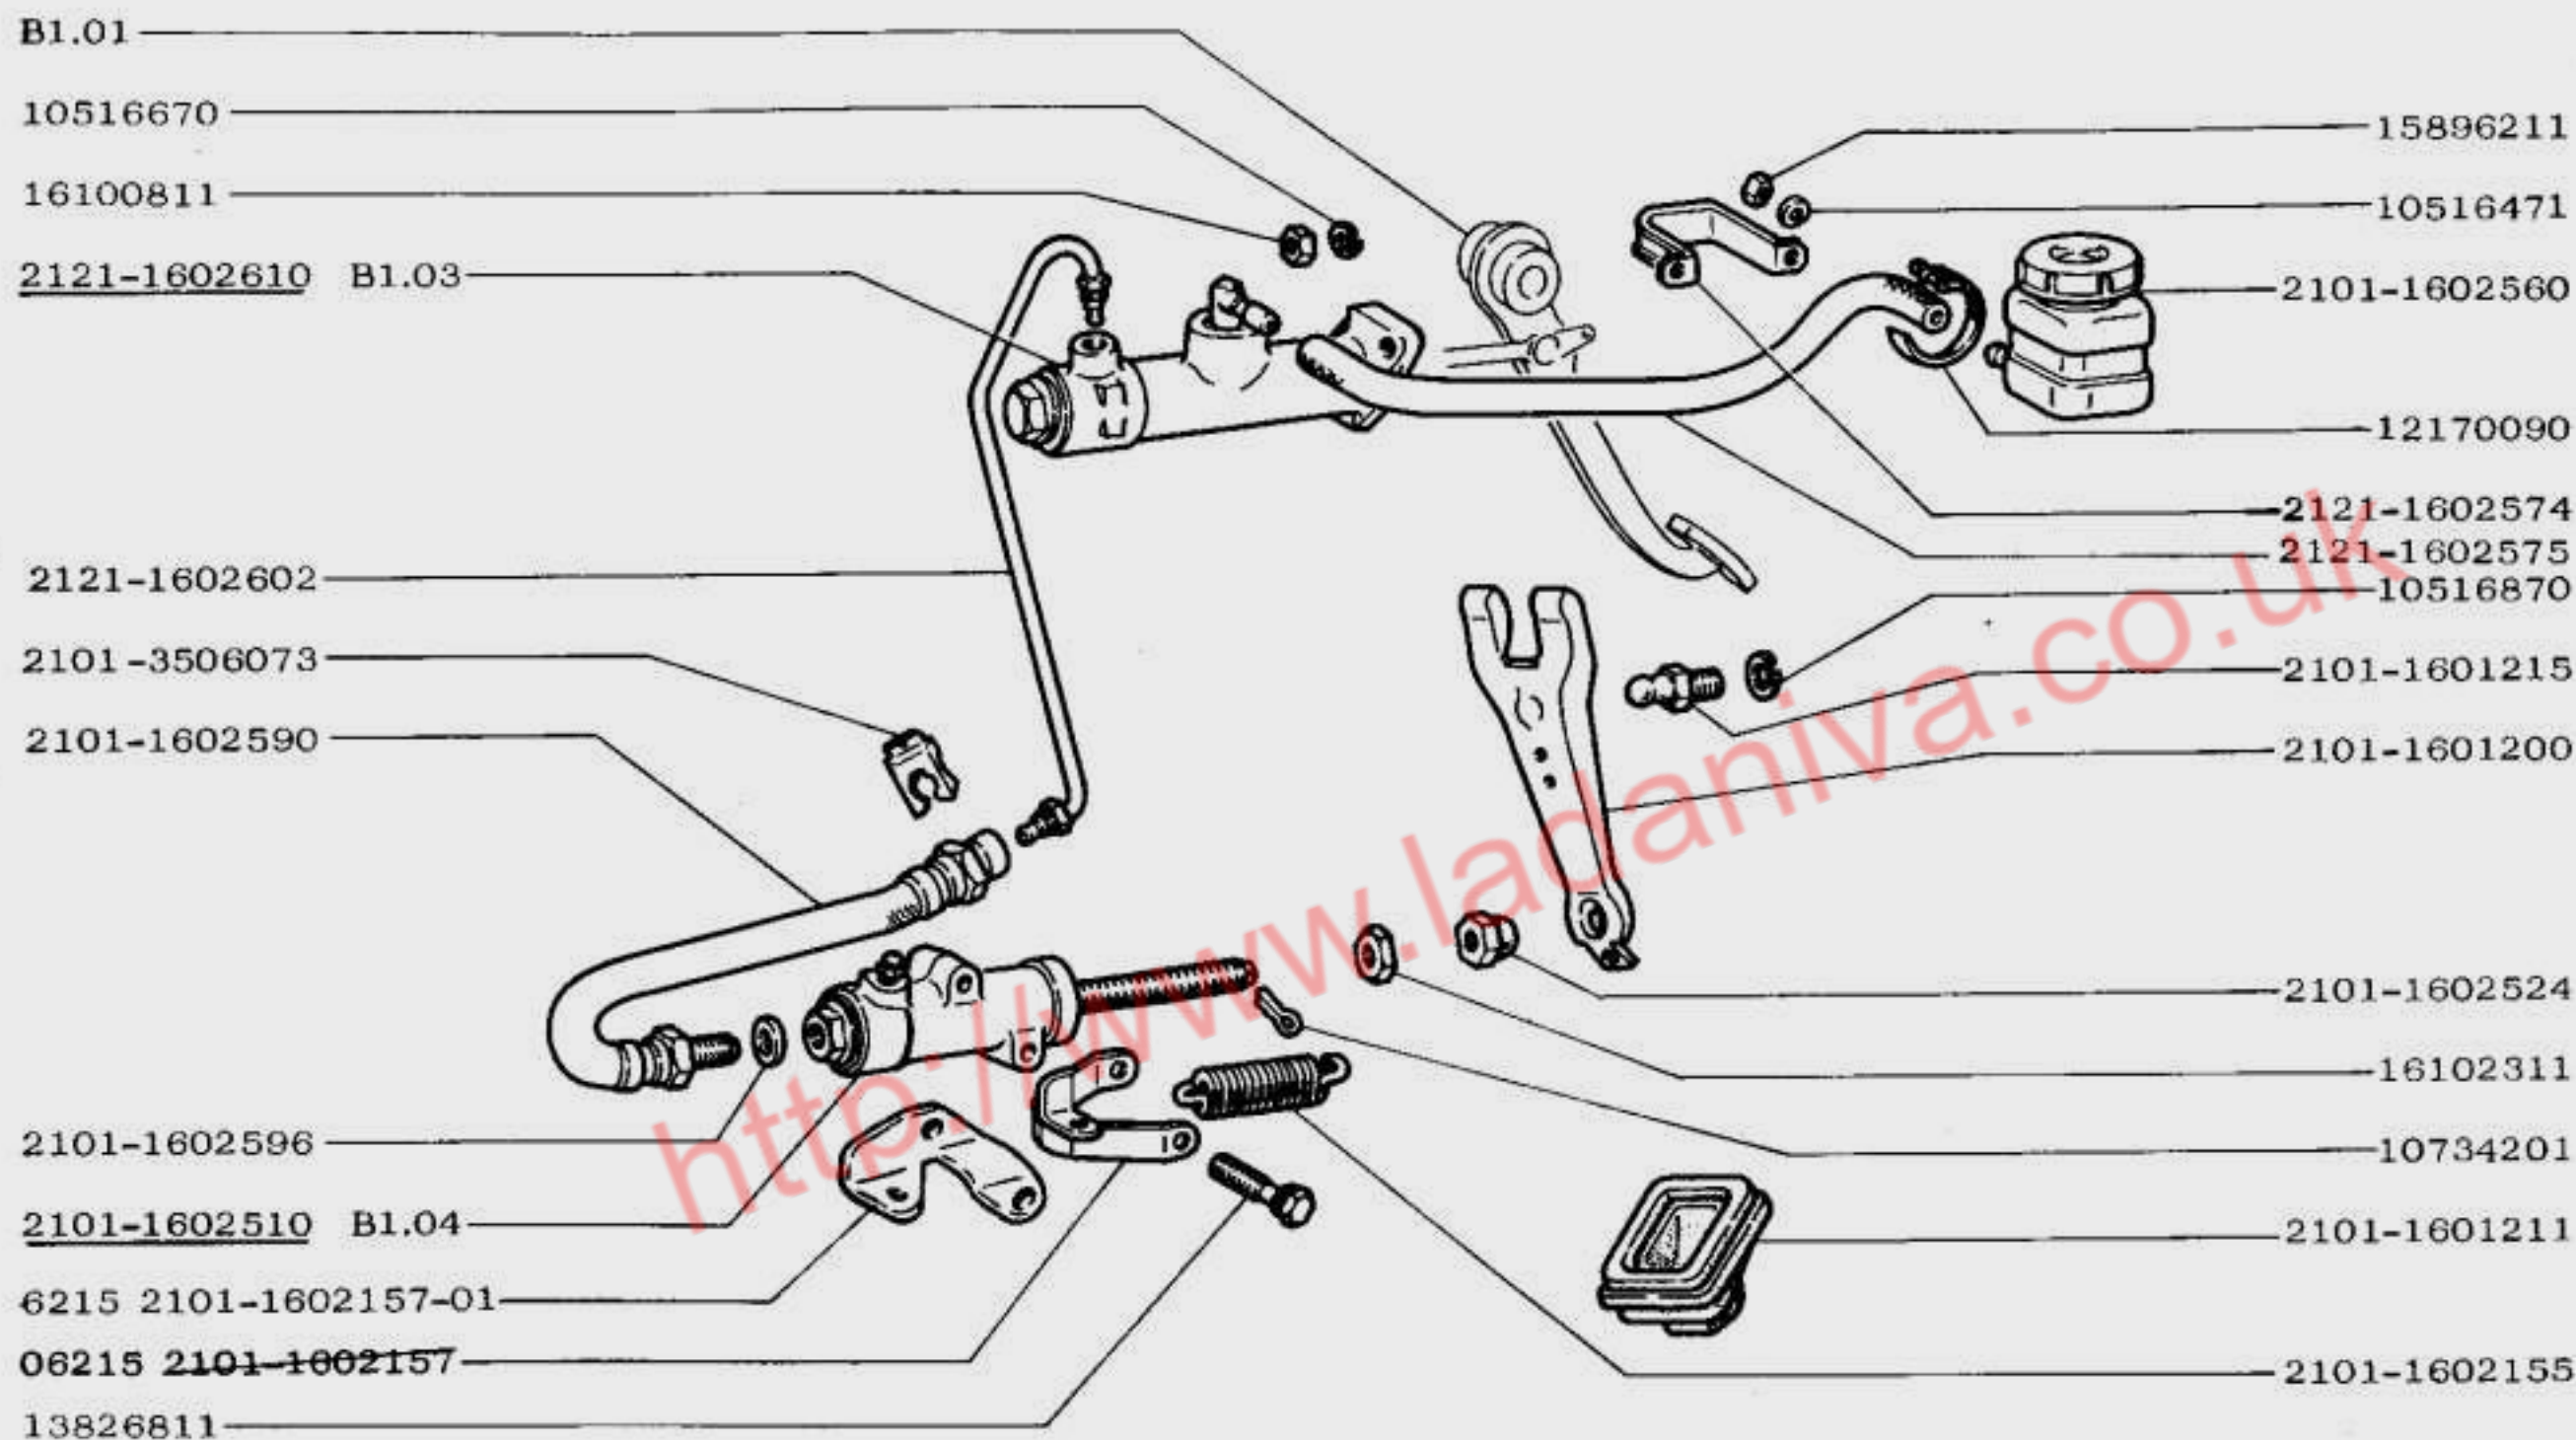

BA3-2121
BA3-21211

Привод сцепления
Clutch Control Linkage
Commande d'embrayage
Kupplungsantrieb
Mando del embrague


B1.02

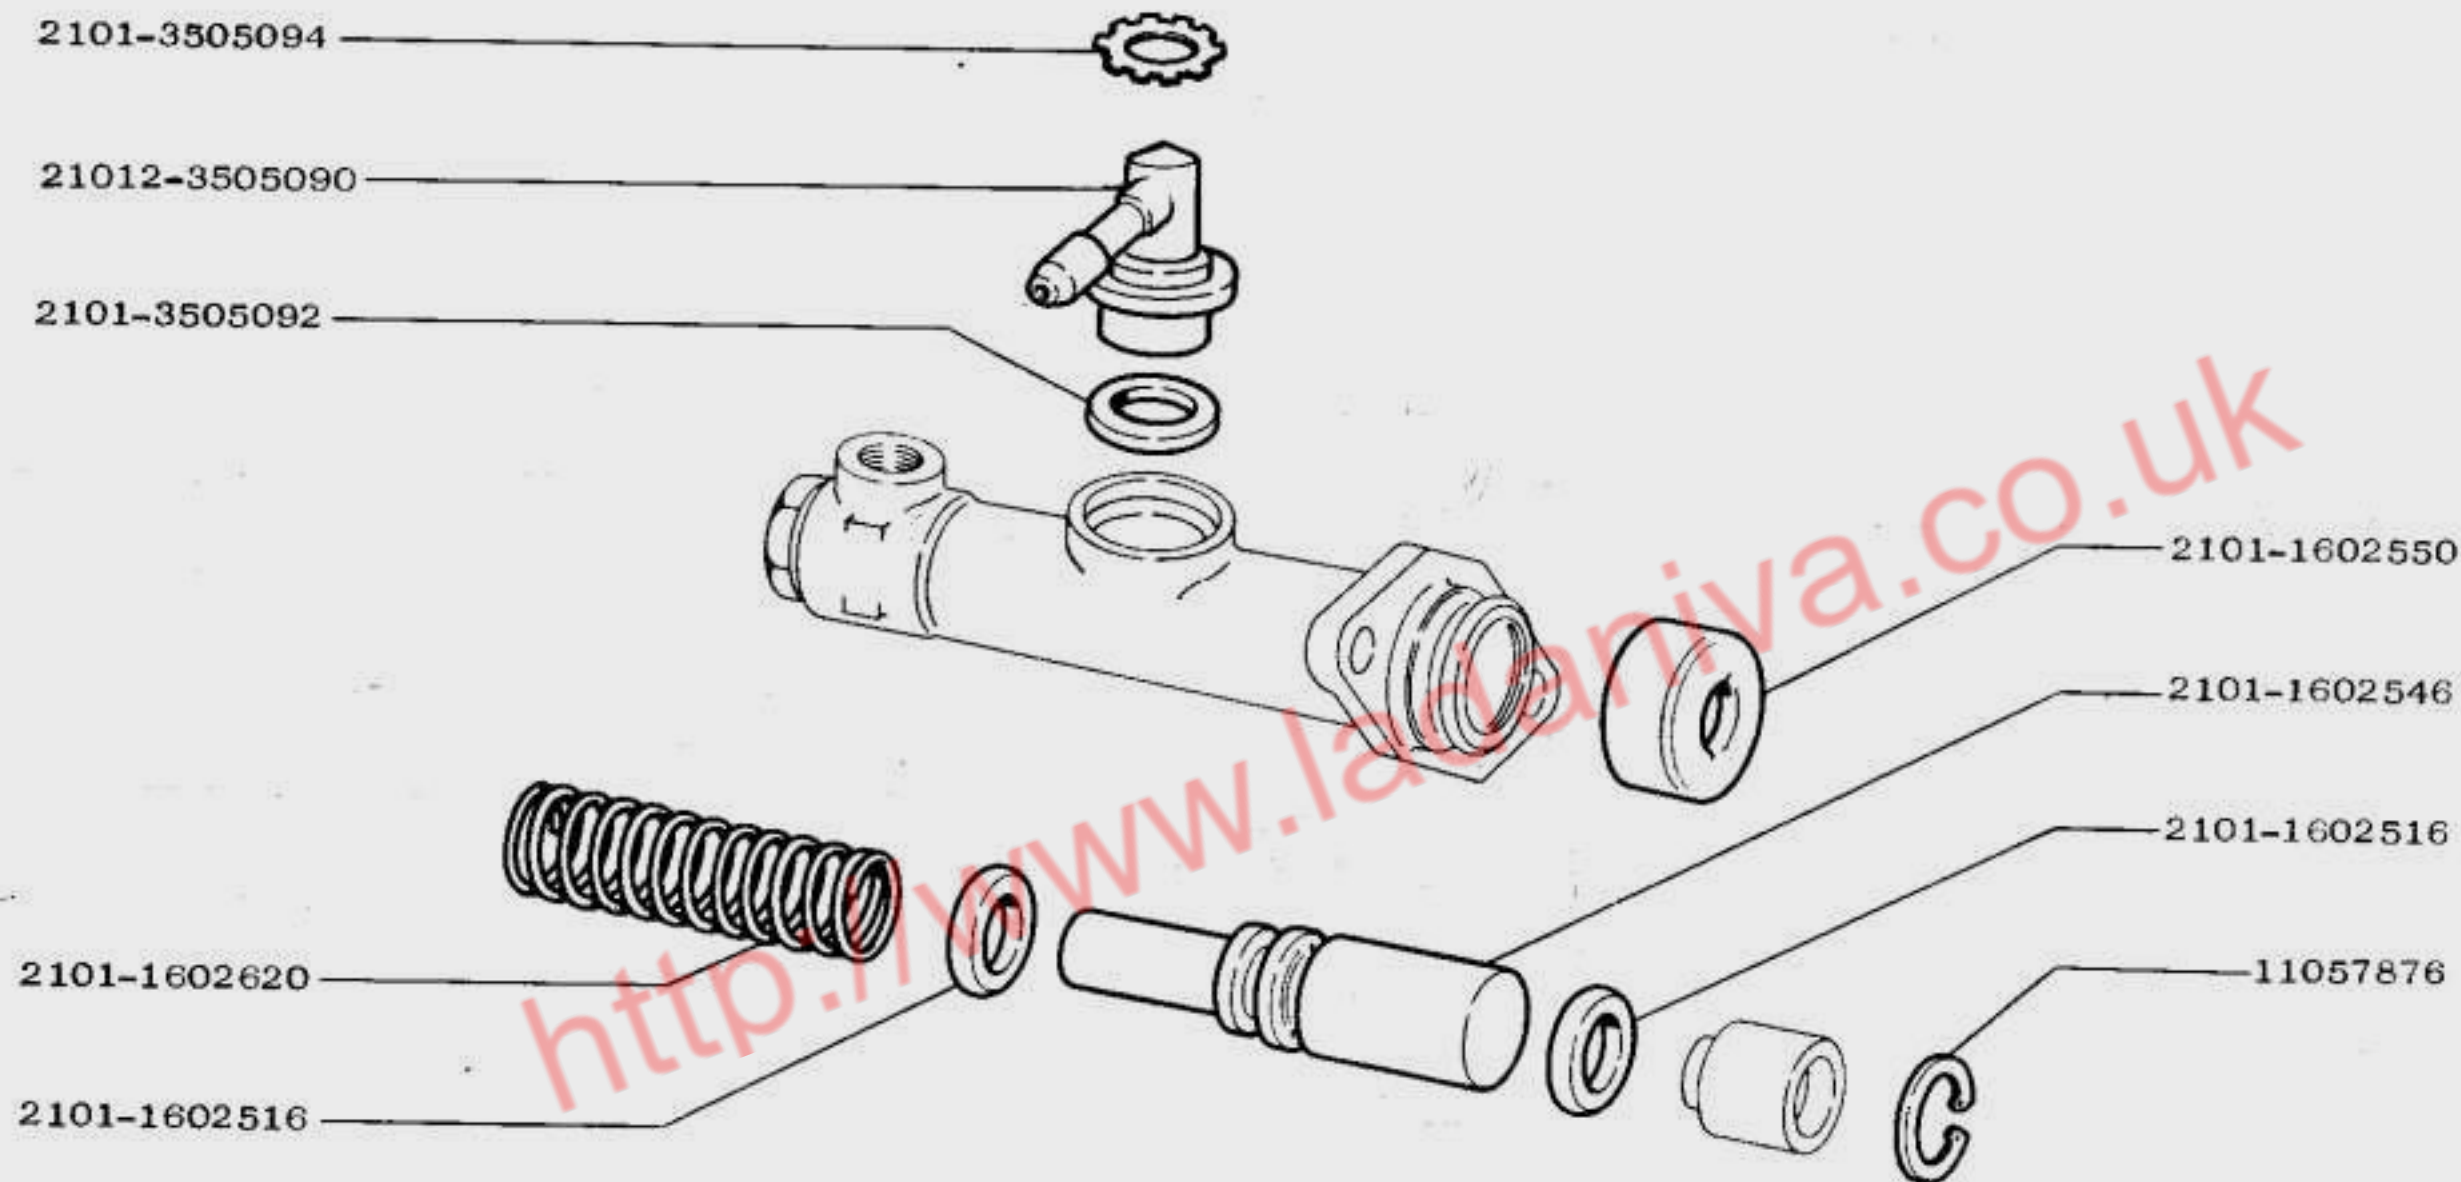

BA3-2121
BA3-21211

Цилиндр главный сцепления
 Clutch Master Cylinder
 Maître-cylindre d'embrayage
 Hauptkupplungszylinder
 Cilindro principal del embrague


B1.03

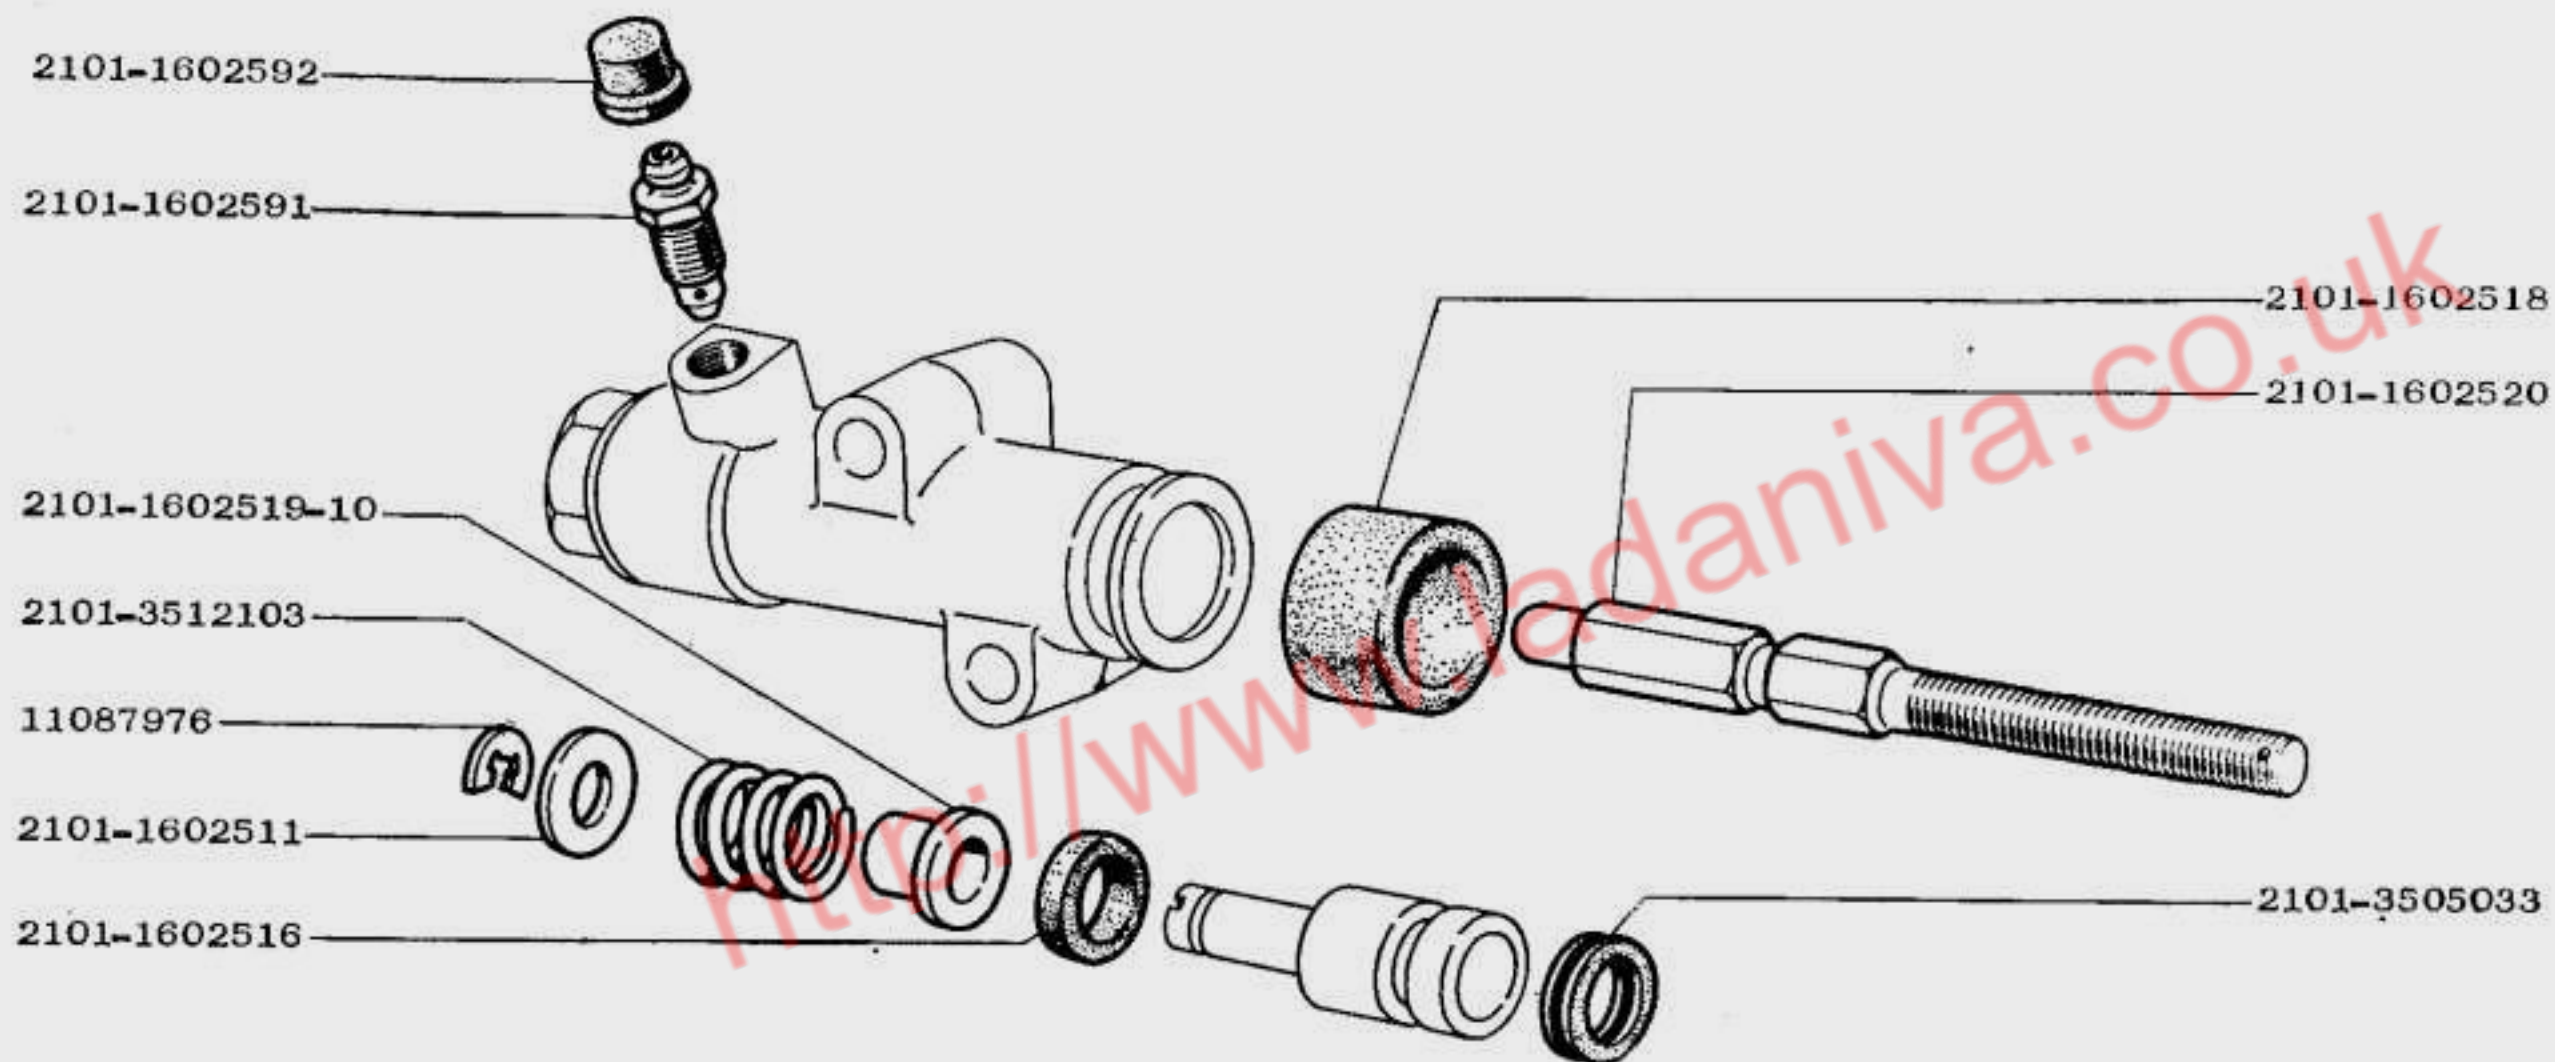

BA3-2121
BA3-21211

Цилиндр привода выключения сцепления
Clutch Operating Cylinder
Cylindre récepteur d'embrayage
Kupplungsausrückzylinder
Cilindro de mando de desembrague


B1.04

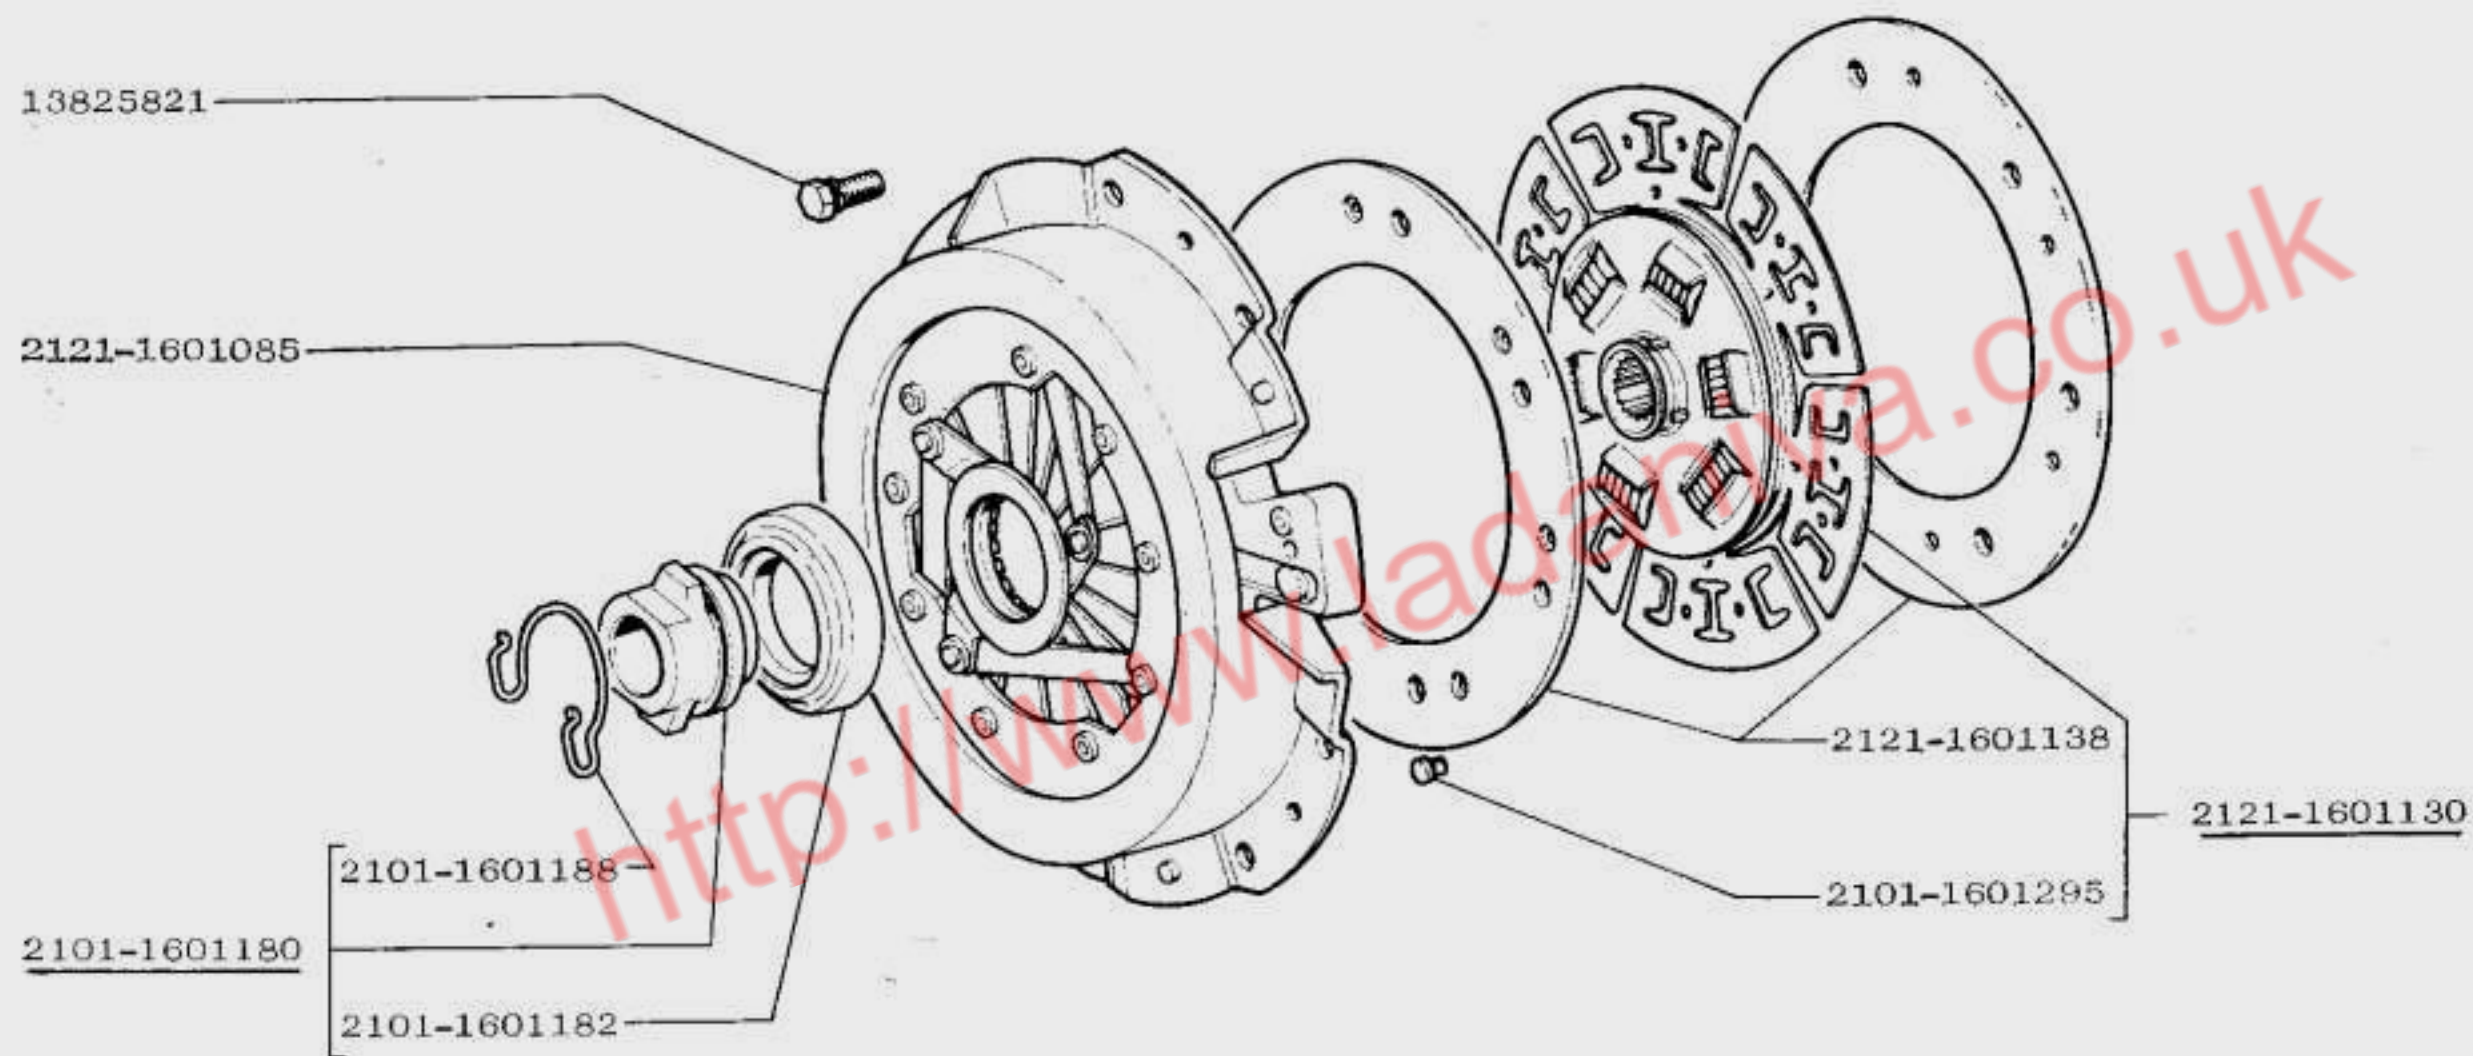

BA3-2121
BA3-21211

Сцепление
Clutch
Embrayage
Kupplung
Embrague


B1.05

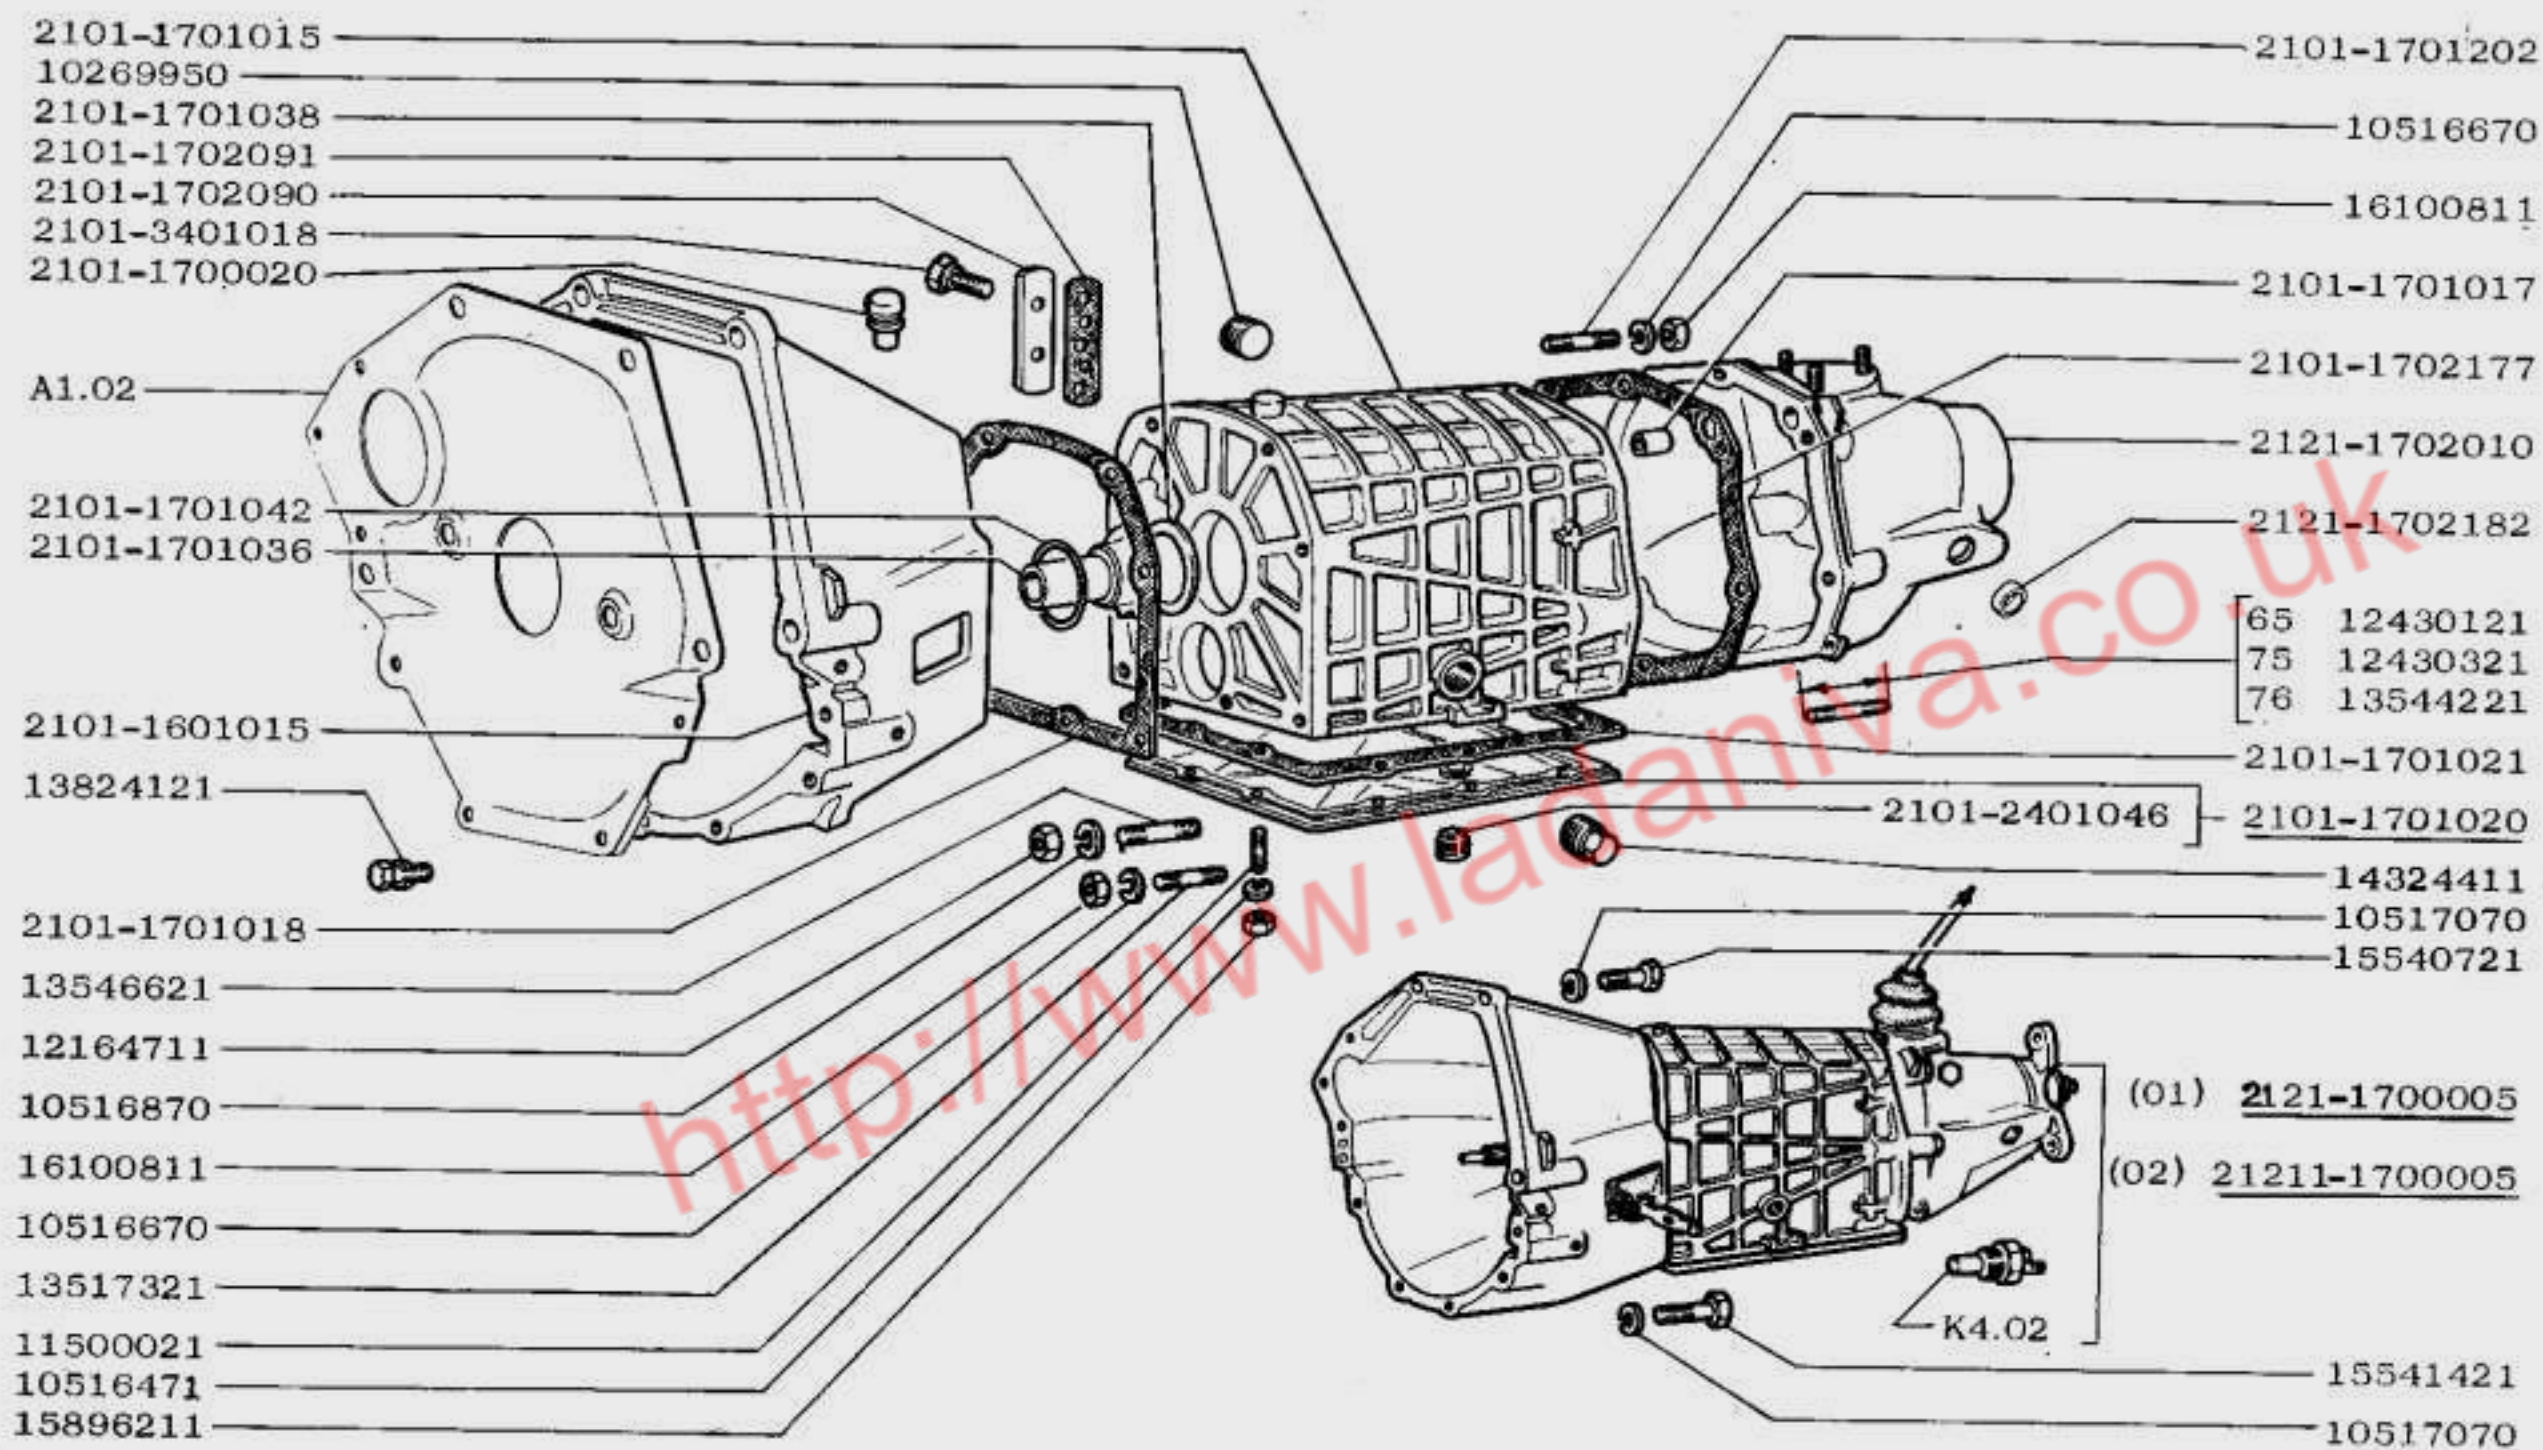

BA3-2121 (01)
BA3-21211 (02)

Коробка передач
Gearbox
Boîte de vitesses
Wechselgetriebe
Caja de cambios


B2.01

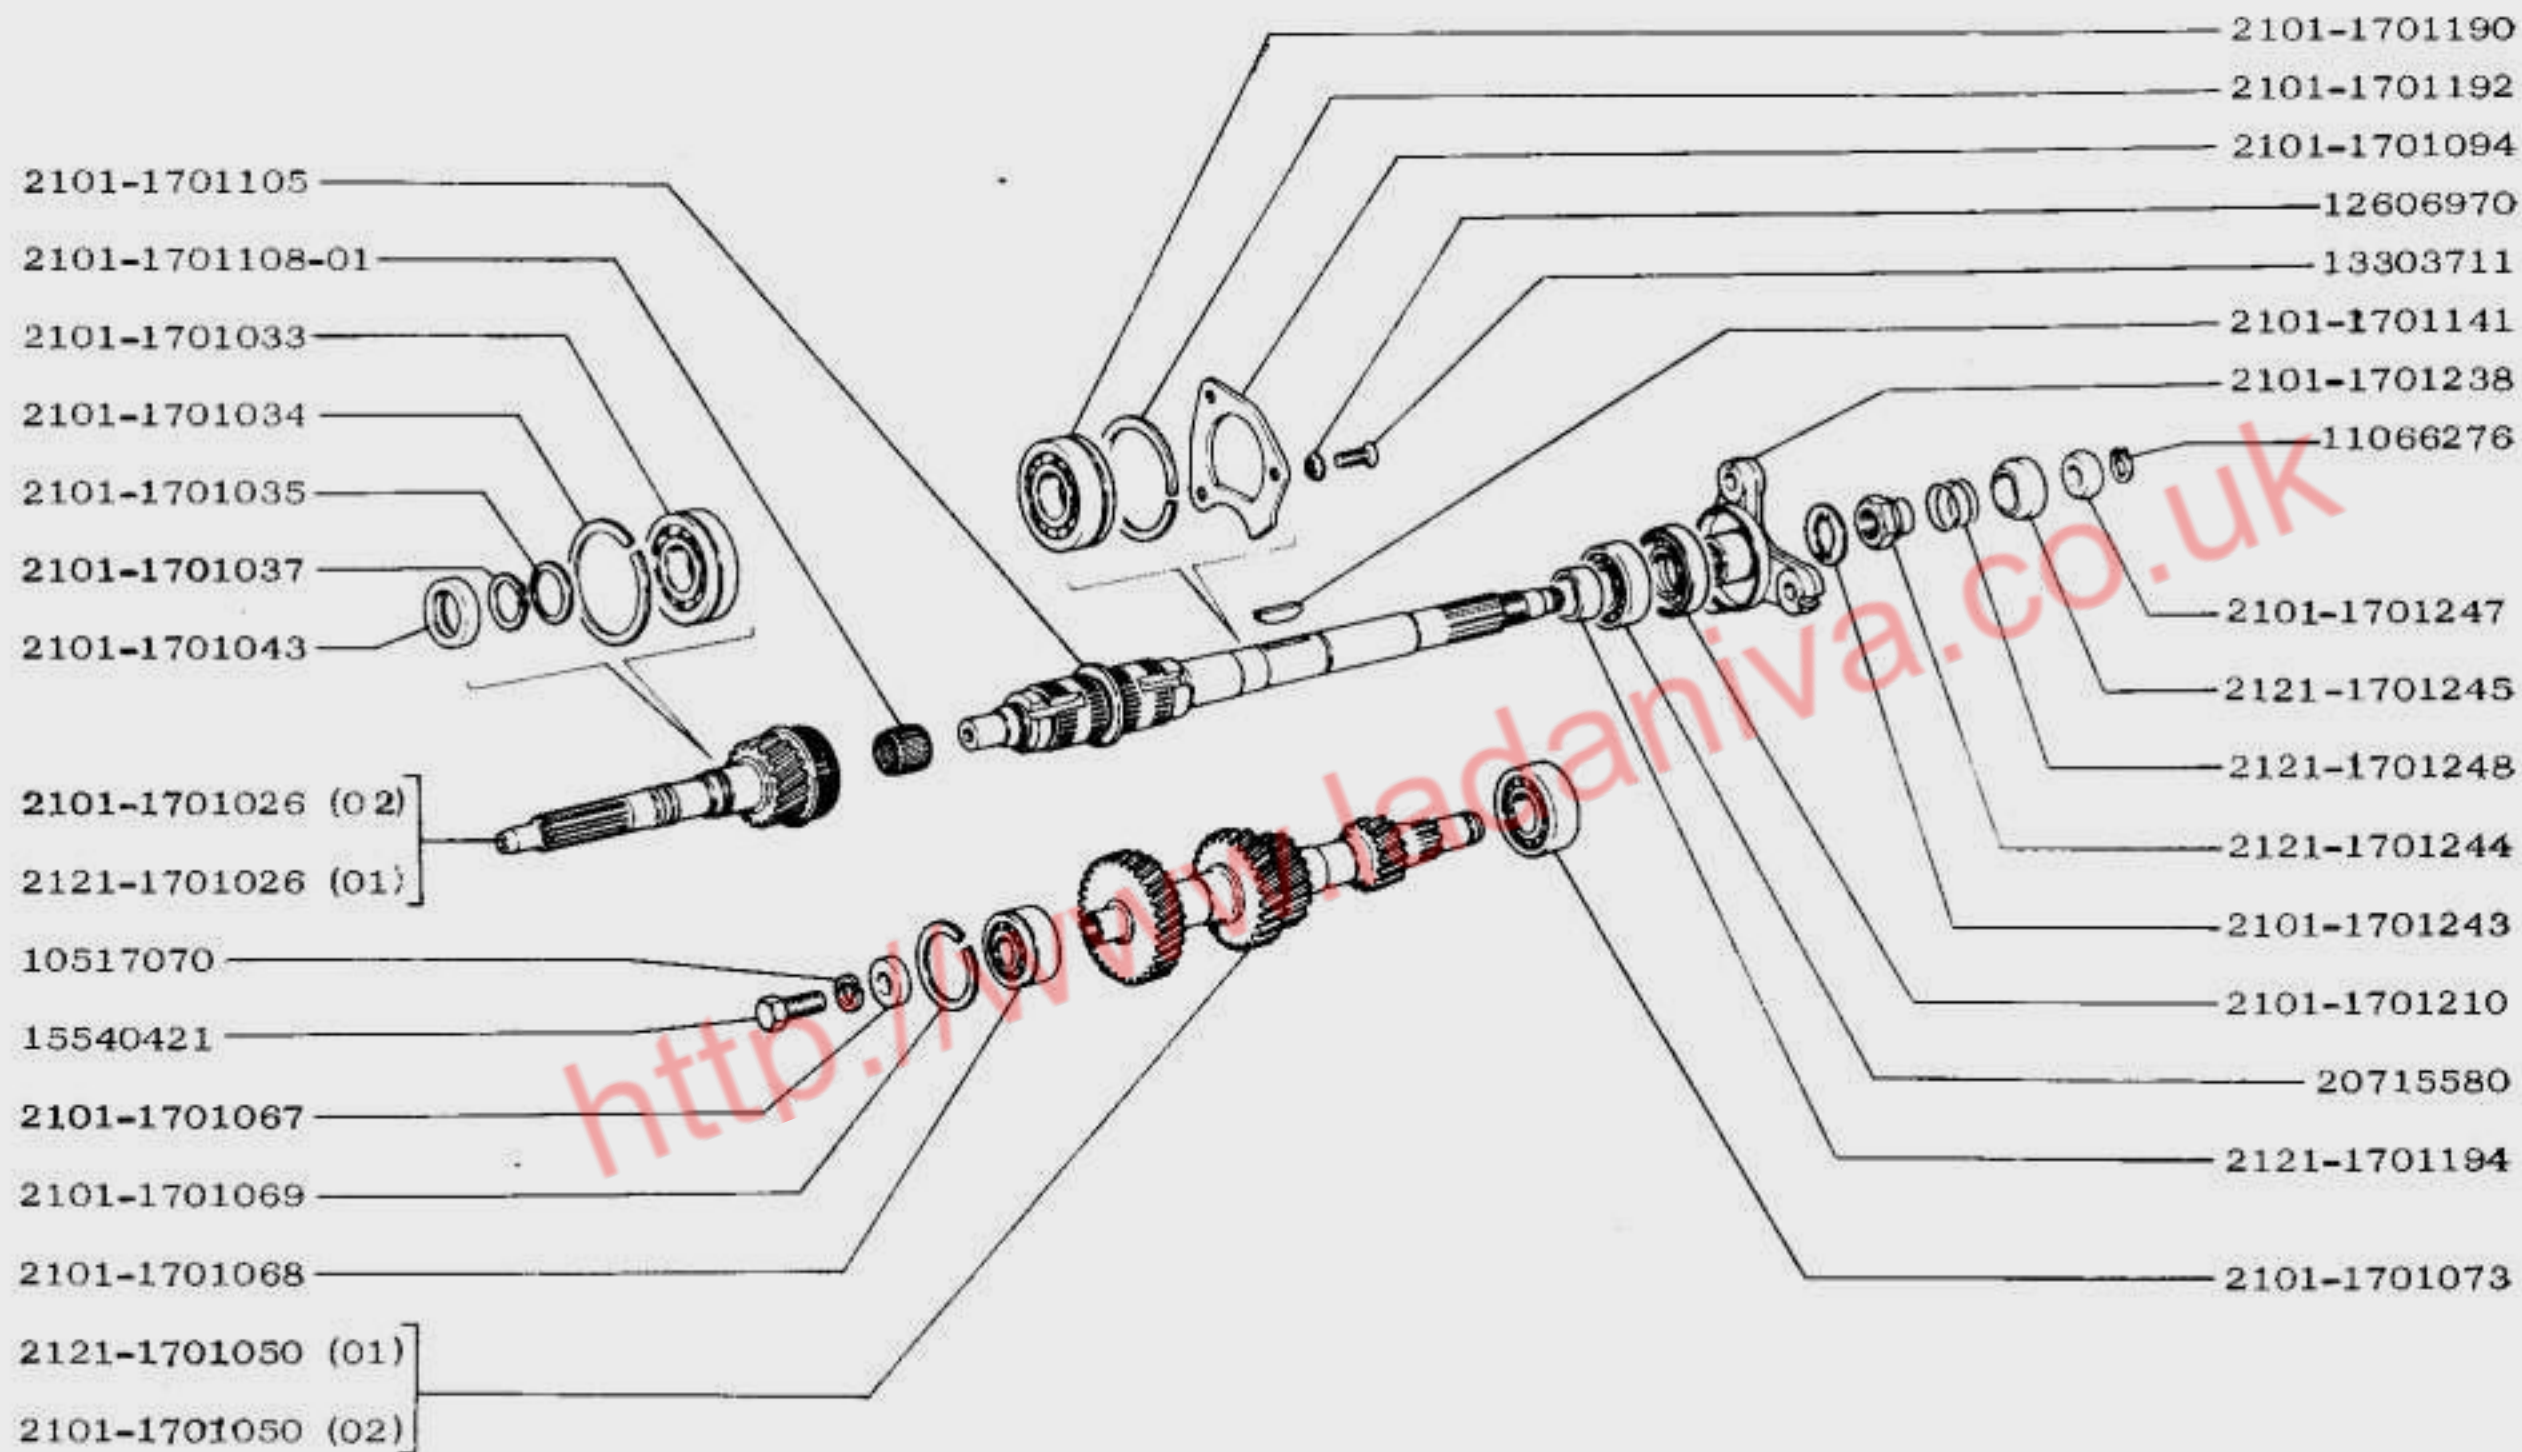

BA3-2121 (01)
BA3-21211 (02)

Валы коробки передач
 Gearbox Shafts
 Arbres de boîte de vitesses
 Wechselgetriebewellen
 Árboles de la caja de cambios


B2.04

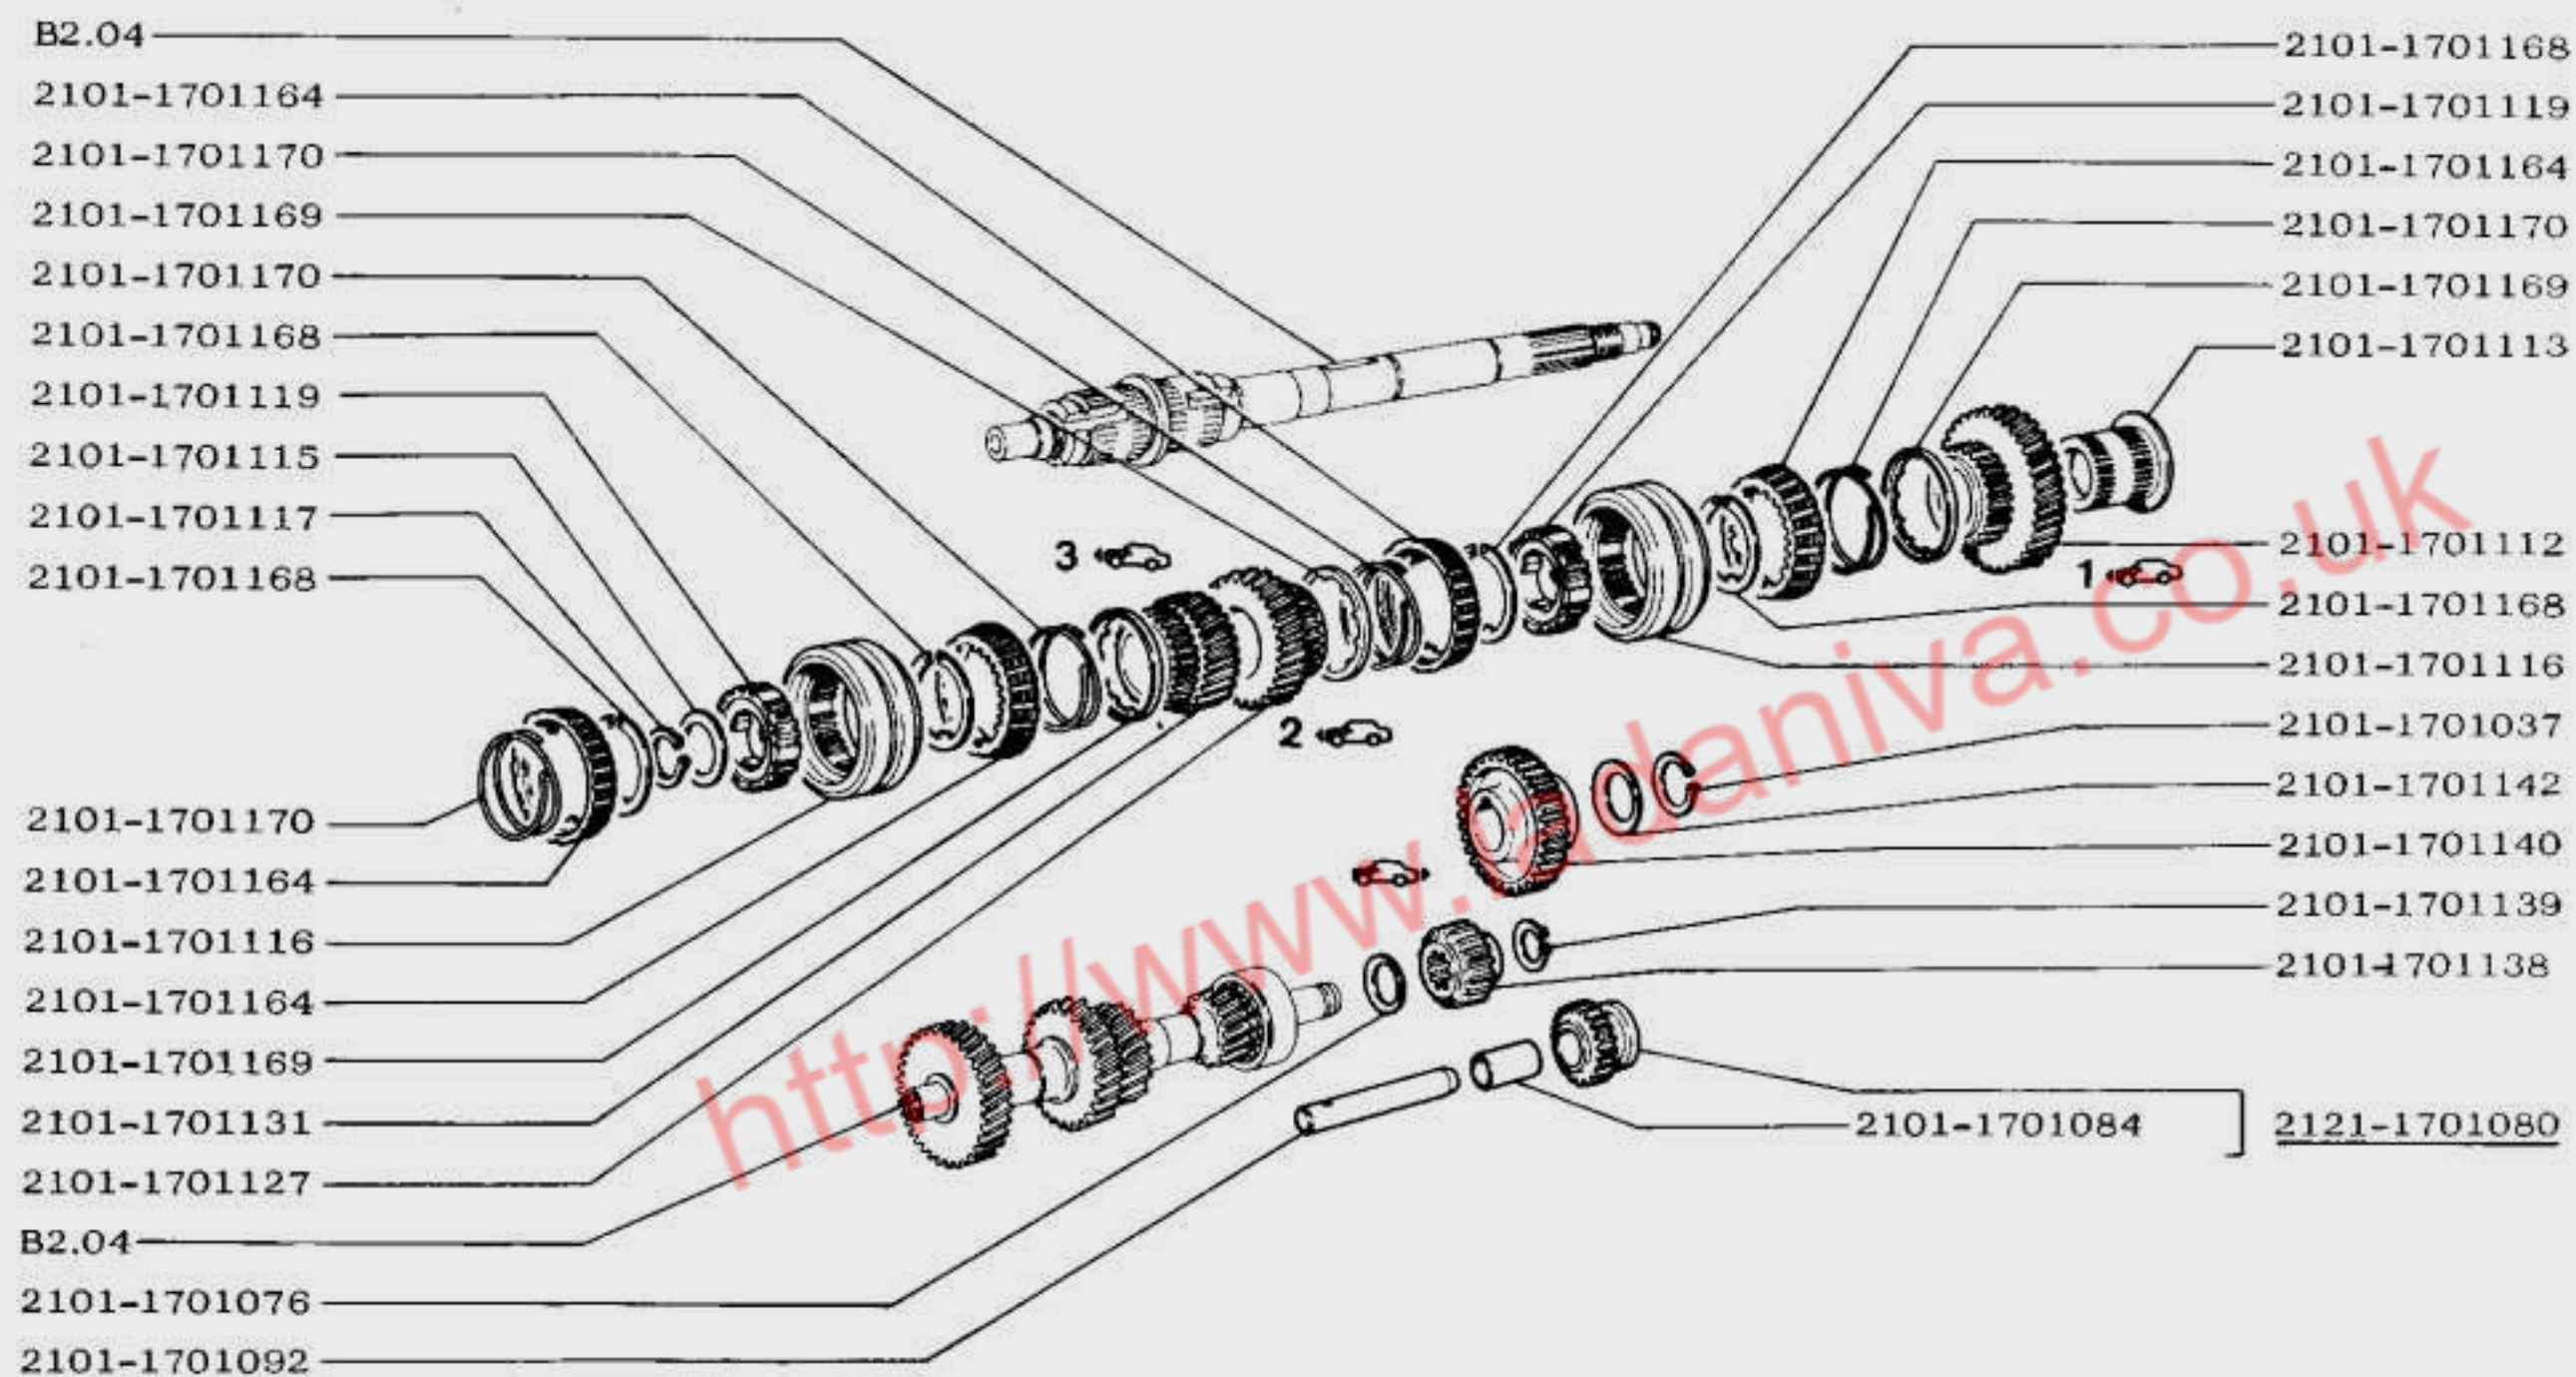

BA3-2121
BA3-21211

Шестерни коробки передач
Gearbox Gears
Pignonnerie de la boîte de vitesses
Wechselgetrieberäder
Piñones de la caja de cambios


B2.05

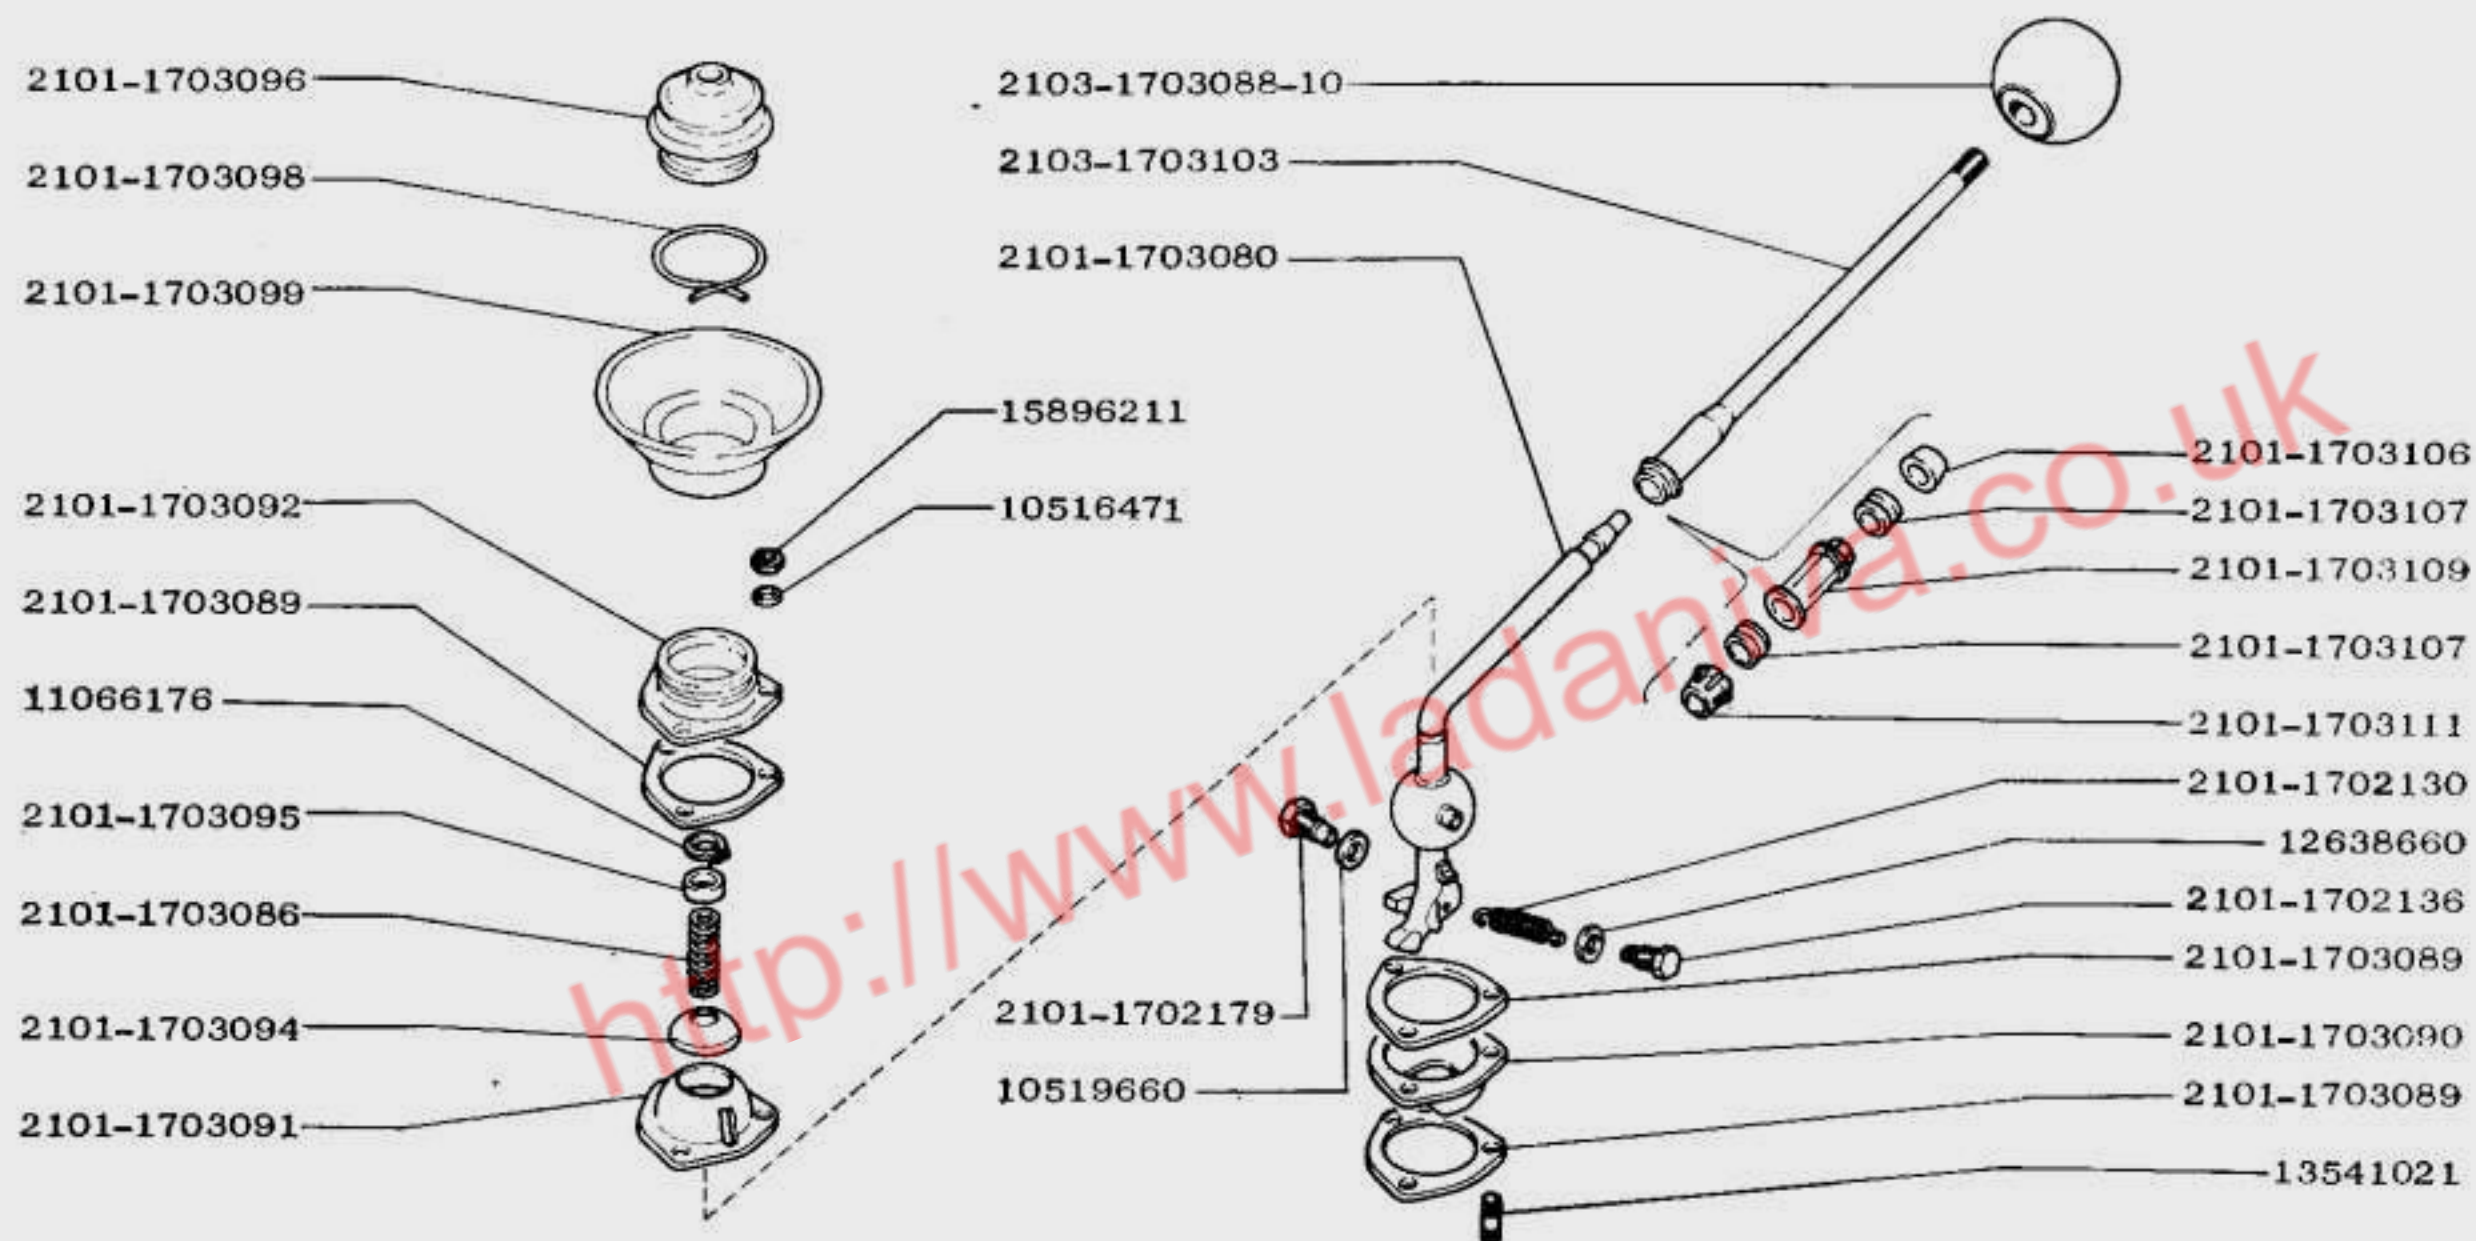

BA3-2121
BA3-21211

Привод механизма переключения передач
 Gearbox Gearshift Control
 Commande externe des vitesses
 Gangschaltgestänge
 Mando del mecanismo de cambio de las velocidades


B2.07

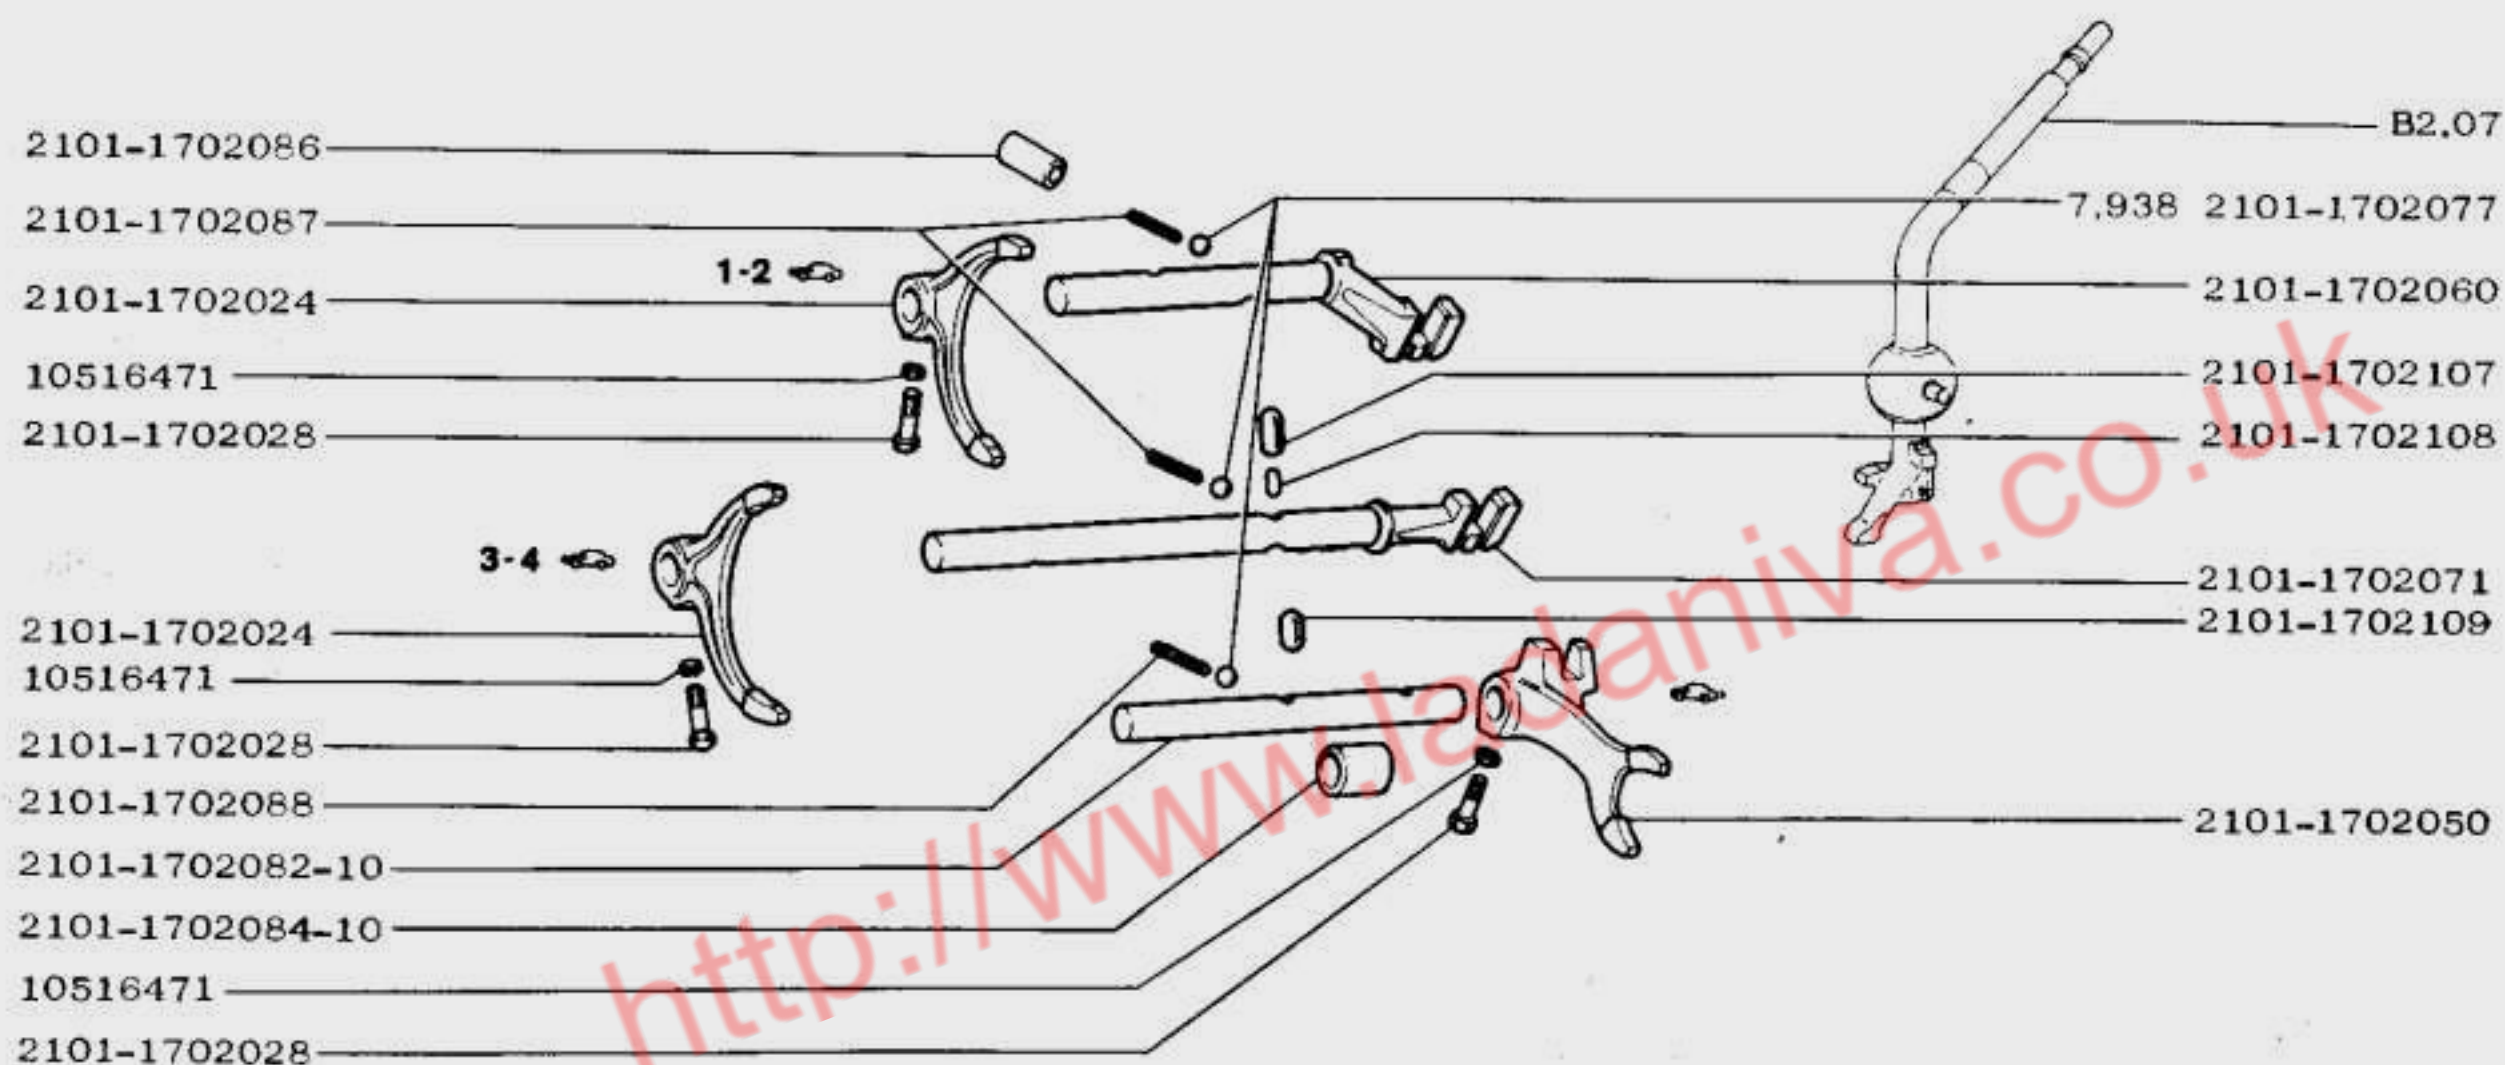

BA3-2121
BA3-21211

Механизм переключения передач
Gearbox Gearshift Mechanism
Commande interne des vitesses
Gangschaltung
Mecanismo del cambio de las velocidades


B2.08

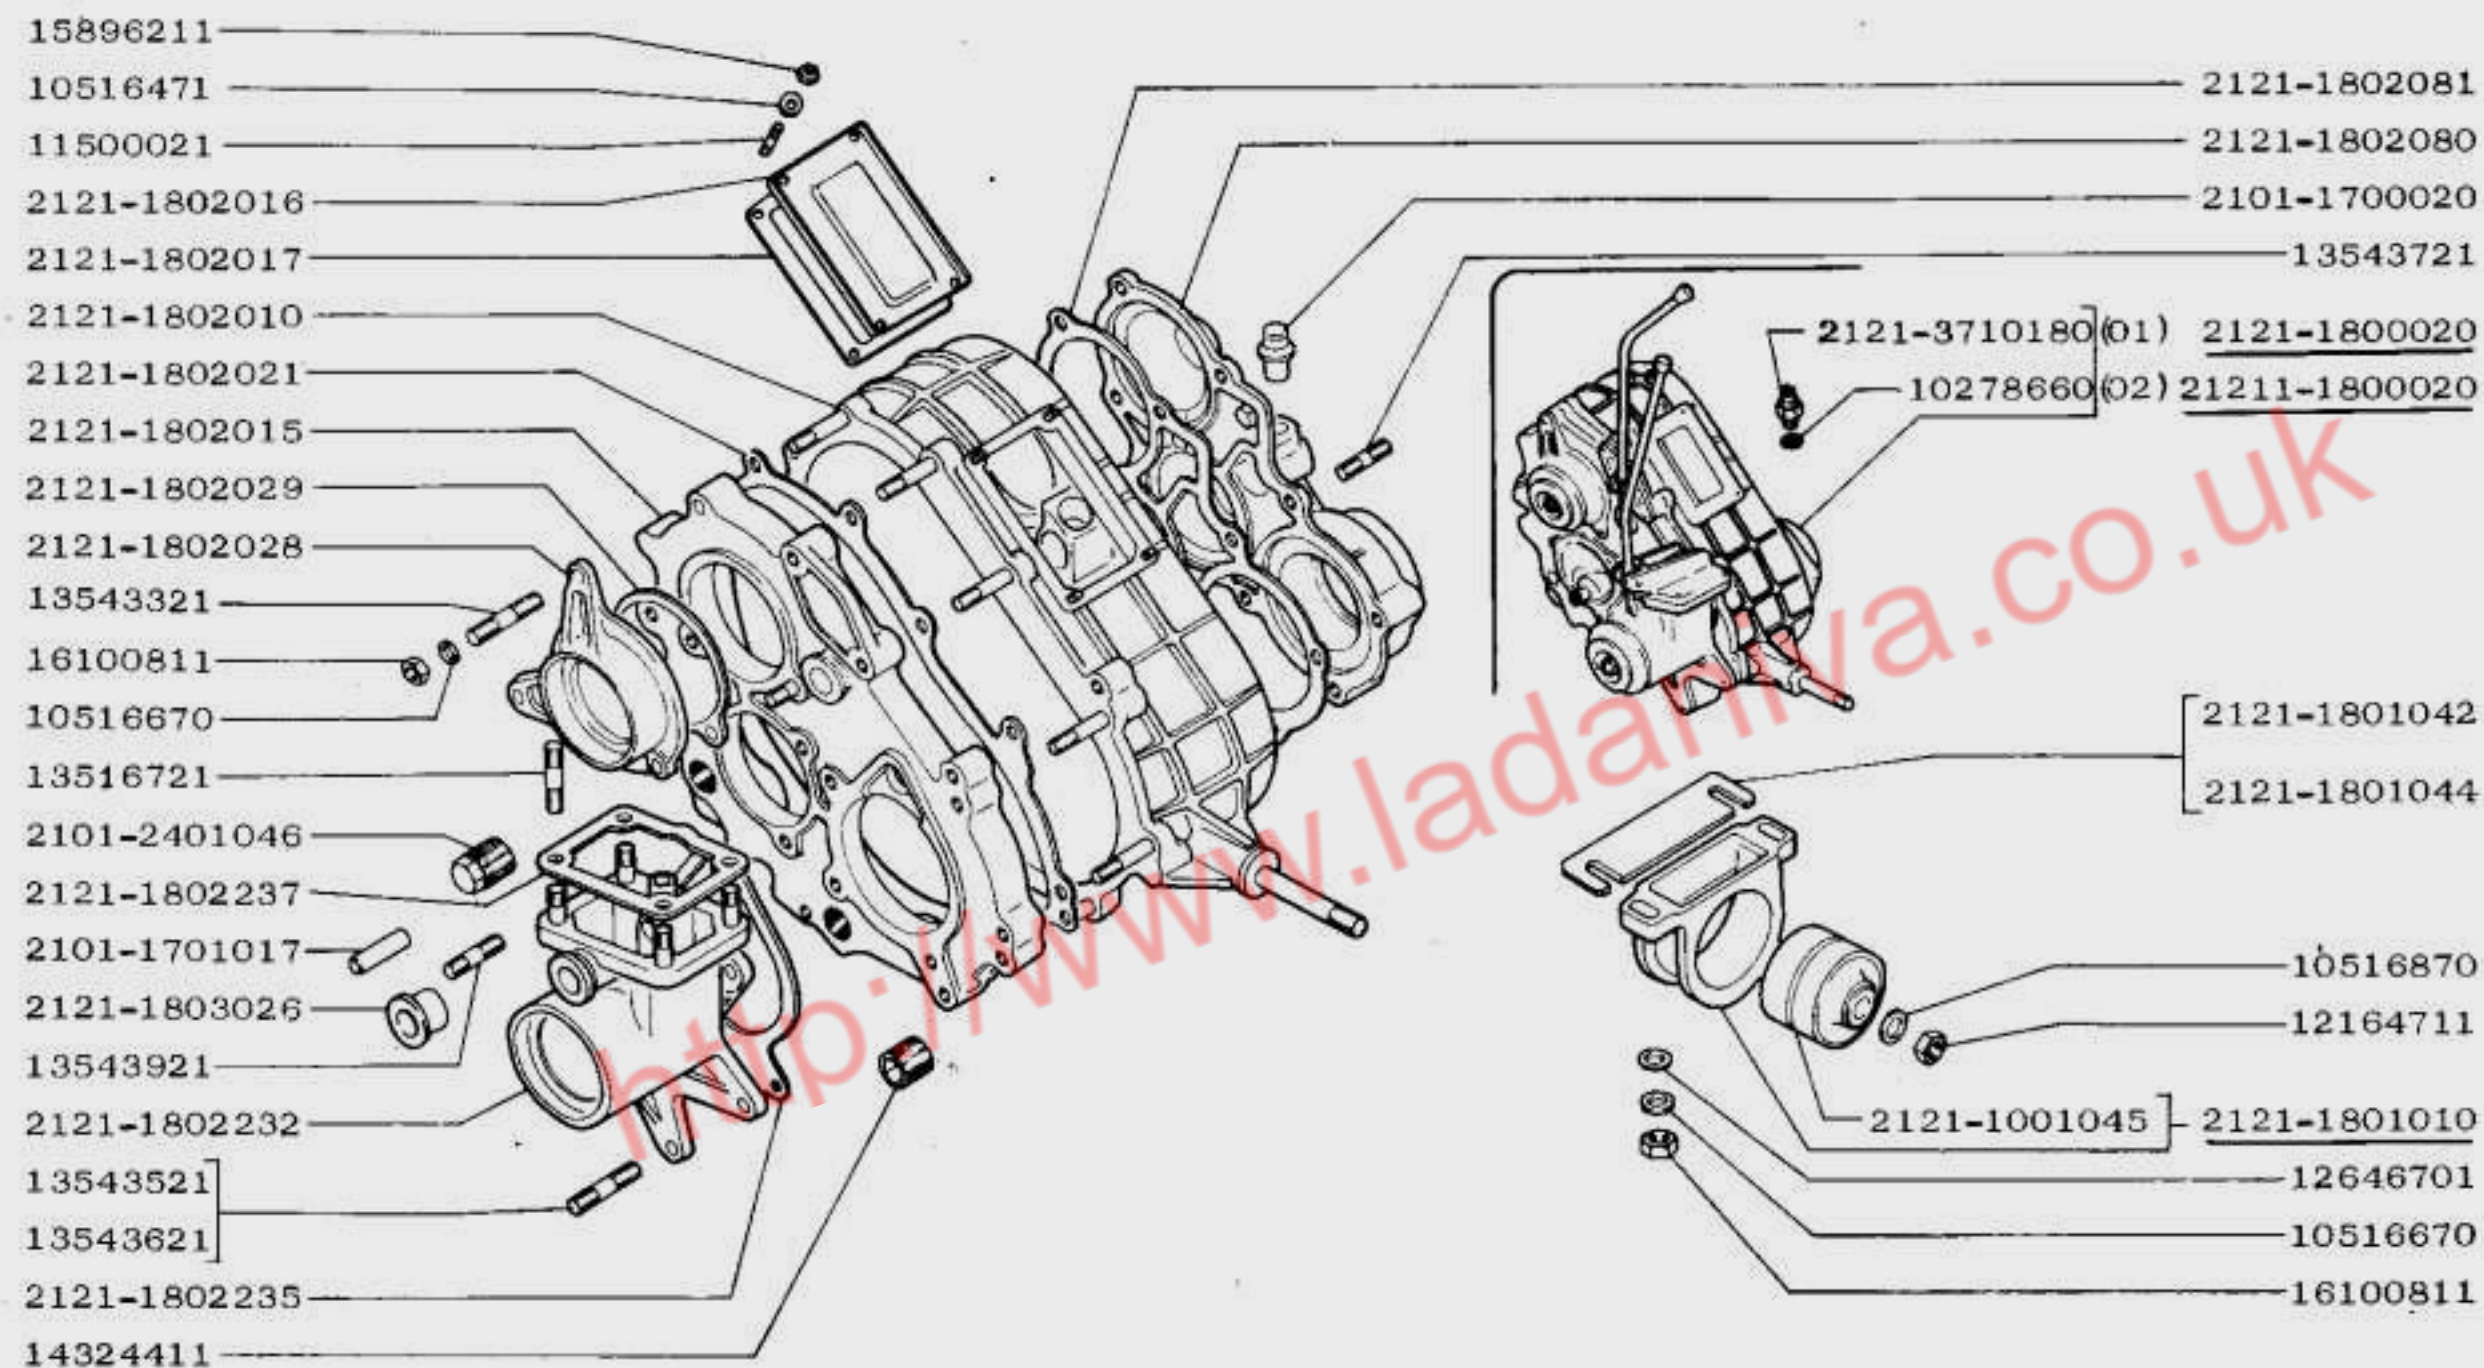

BA3-2121 (01)
BA3-21211 (02)

Коробка раздаточная
Transfer Case
Boîte de transfert
Verteilergetriebe
Caja de reenvío


B2.10

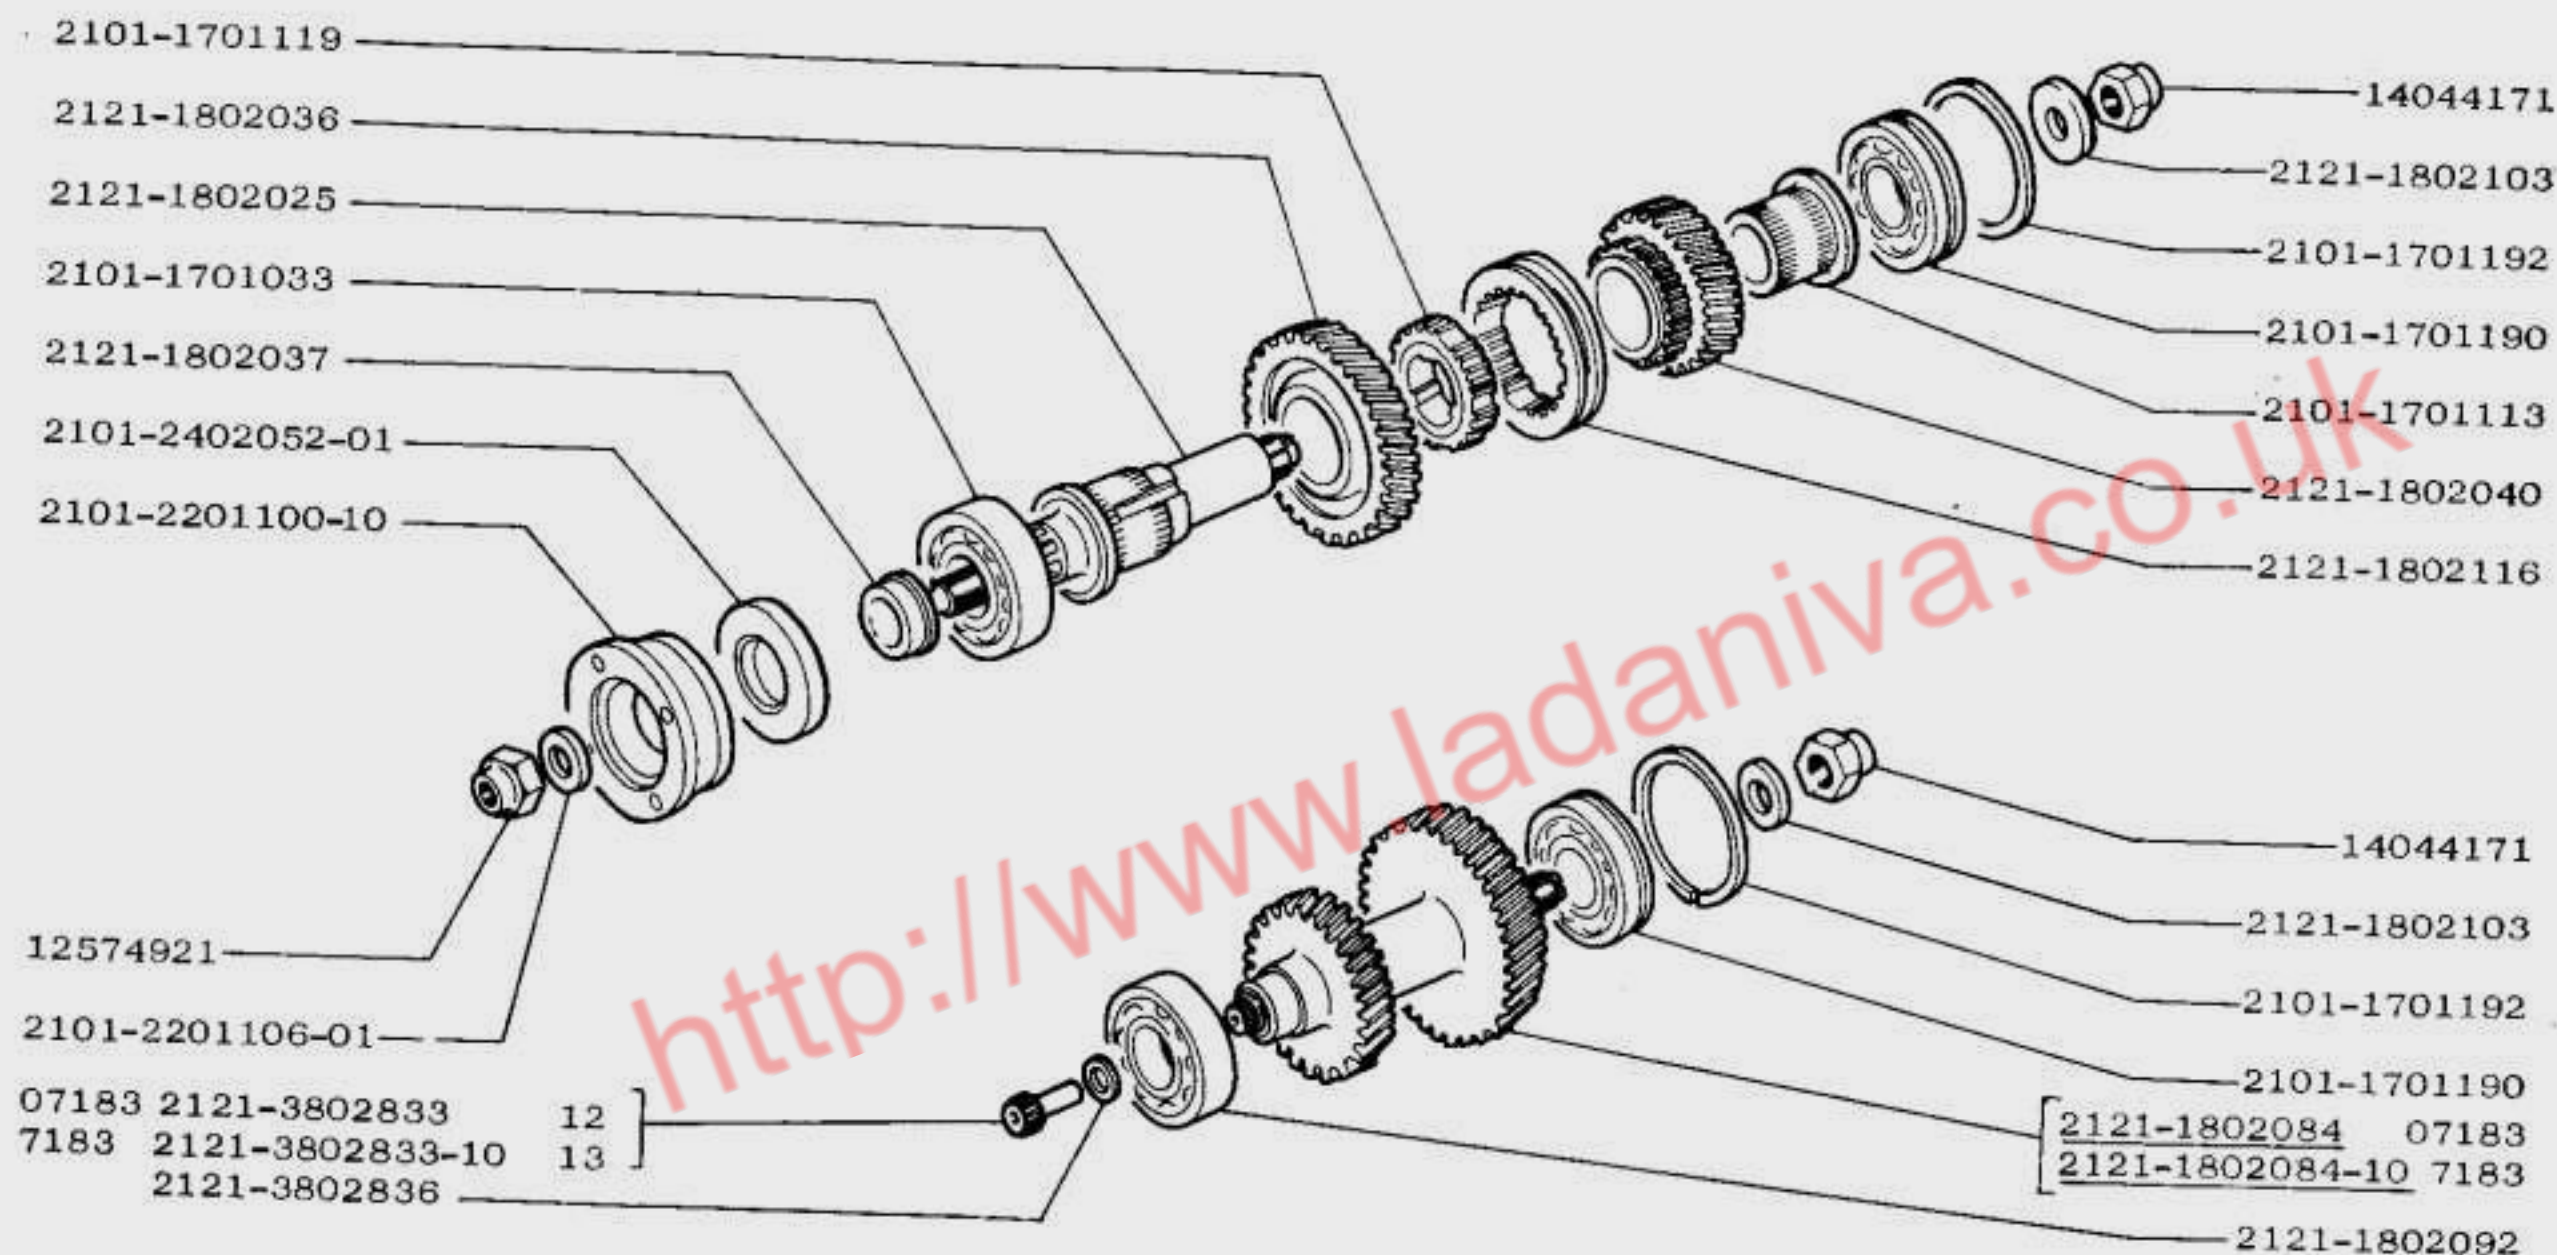

BA3-2121
BA3-21211

Шестерни раздаточной коробки
Transfer Case Gears
Pignonnerie de la boîte de transfert
Verteilergetrieberäder
Piñones de la caja de reenvío


B2.11

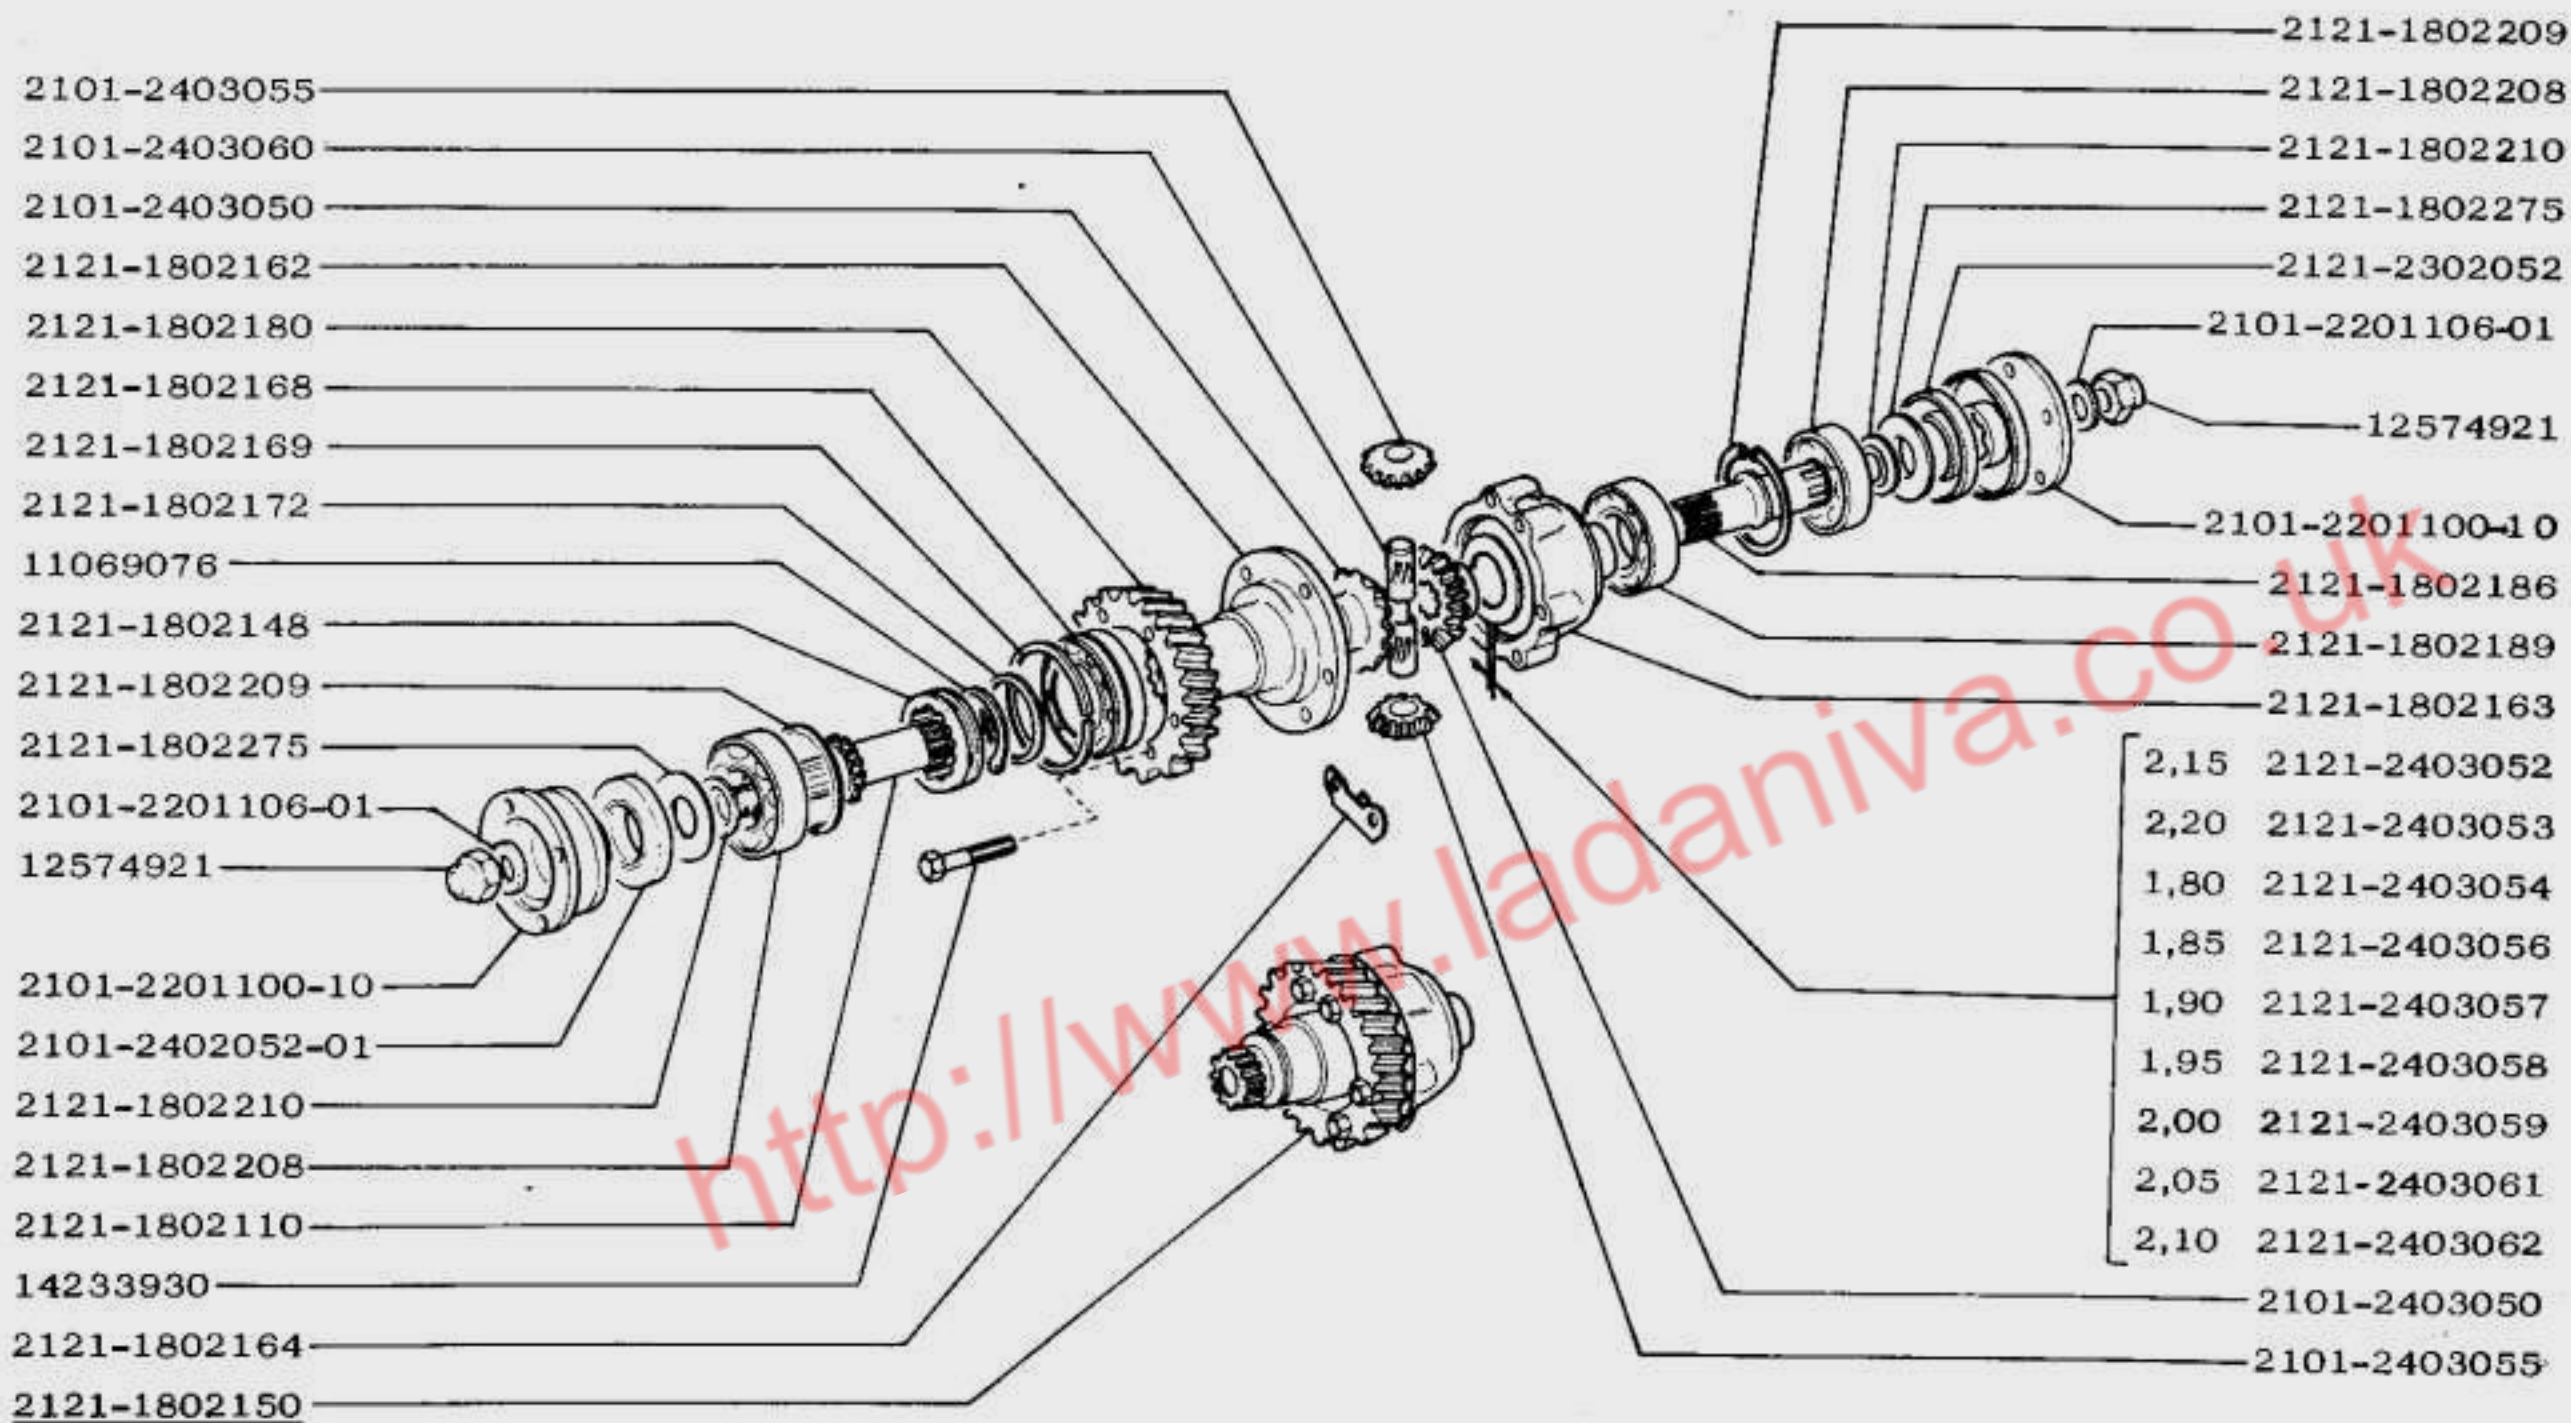

BA3-2121
BA3-21211

Дифференциал раздаточной коробки
 Transfer Case Differential
 Différentiel de la boîte de transfert
 Ausgleichgetriebe des Verteilergetriebes
 Diferencial de la caja de reenvío


B2.17

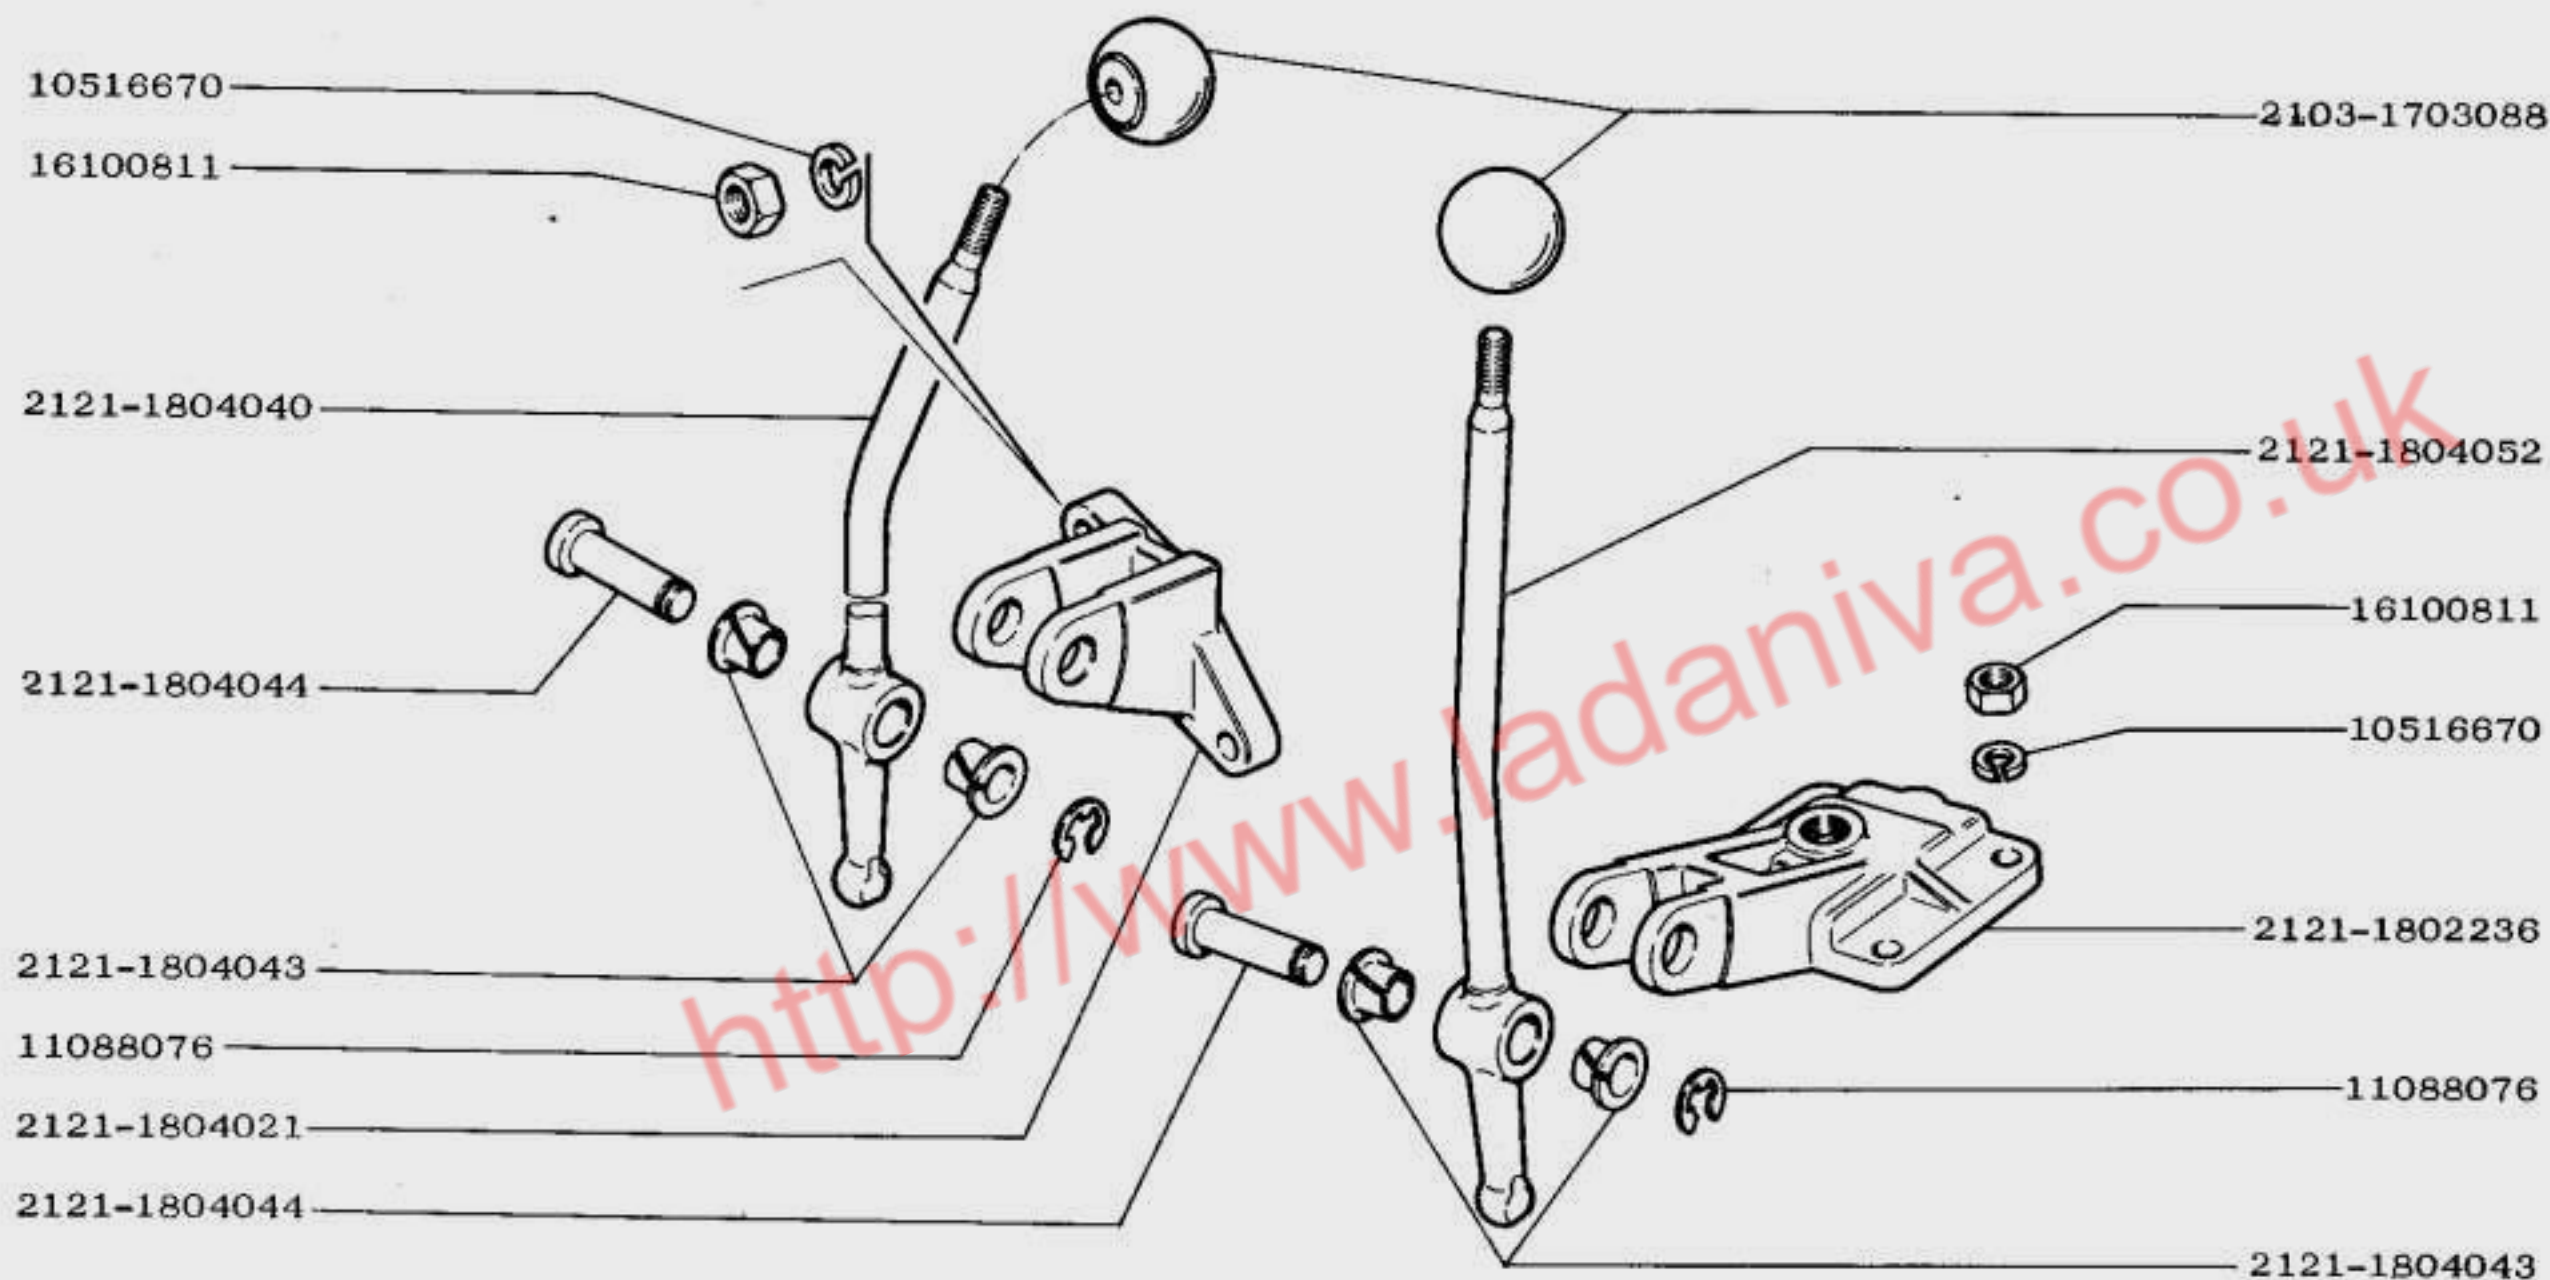

BA3-2121
BA3-21211

Привод управления раздаточной коробкой
 Transfer Case Gearshift Control
 Commande externe de la boîte de transfert
 Verteilergetriebebetätigung
 Accionamiento de mando de la caja de reenvio


B2.20

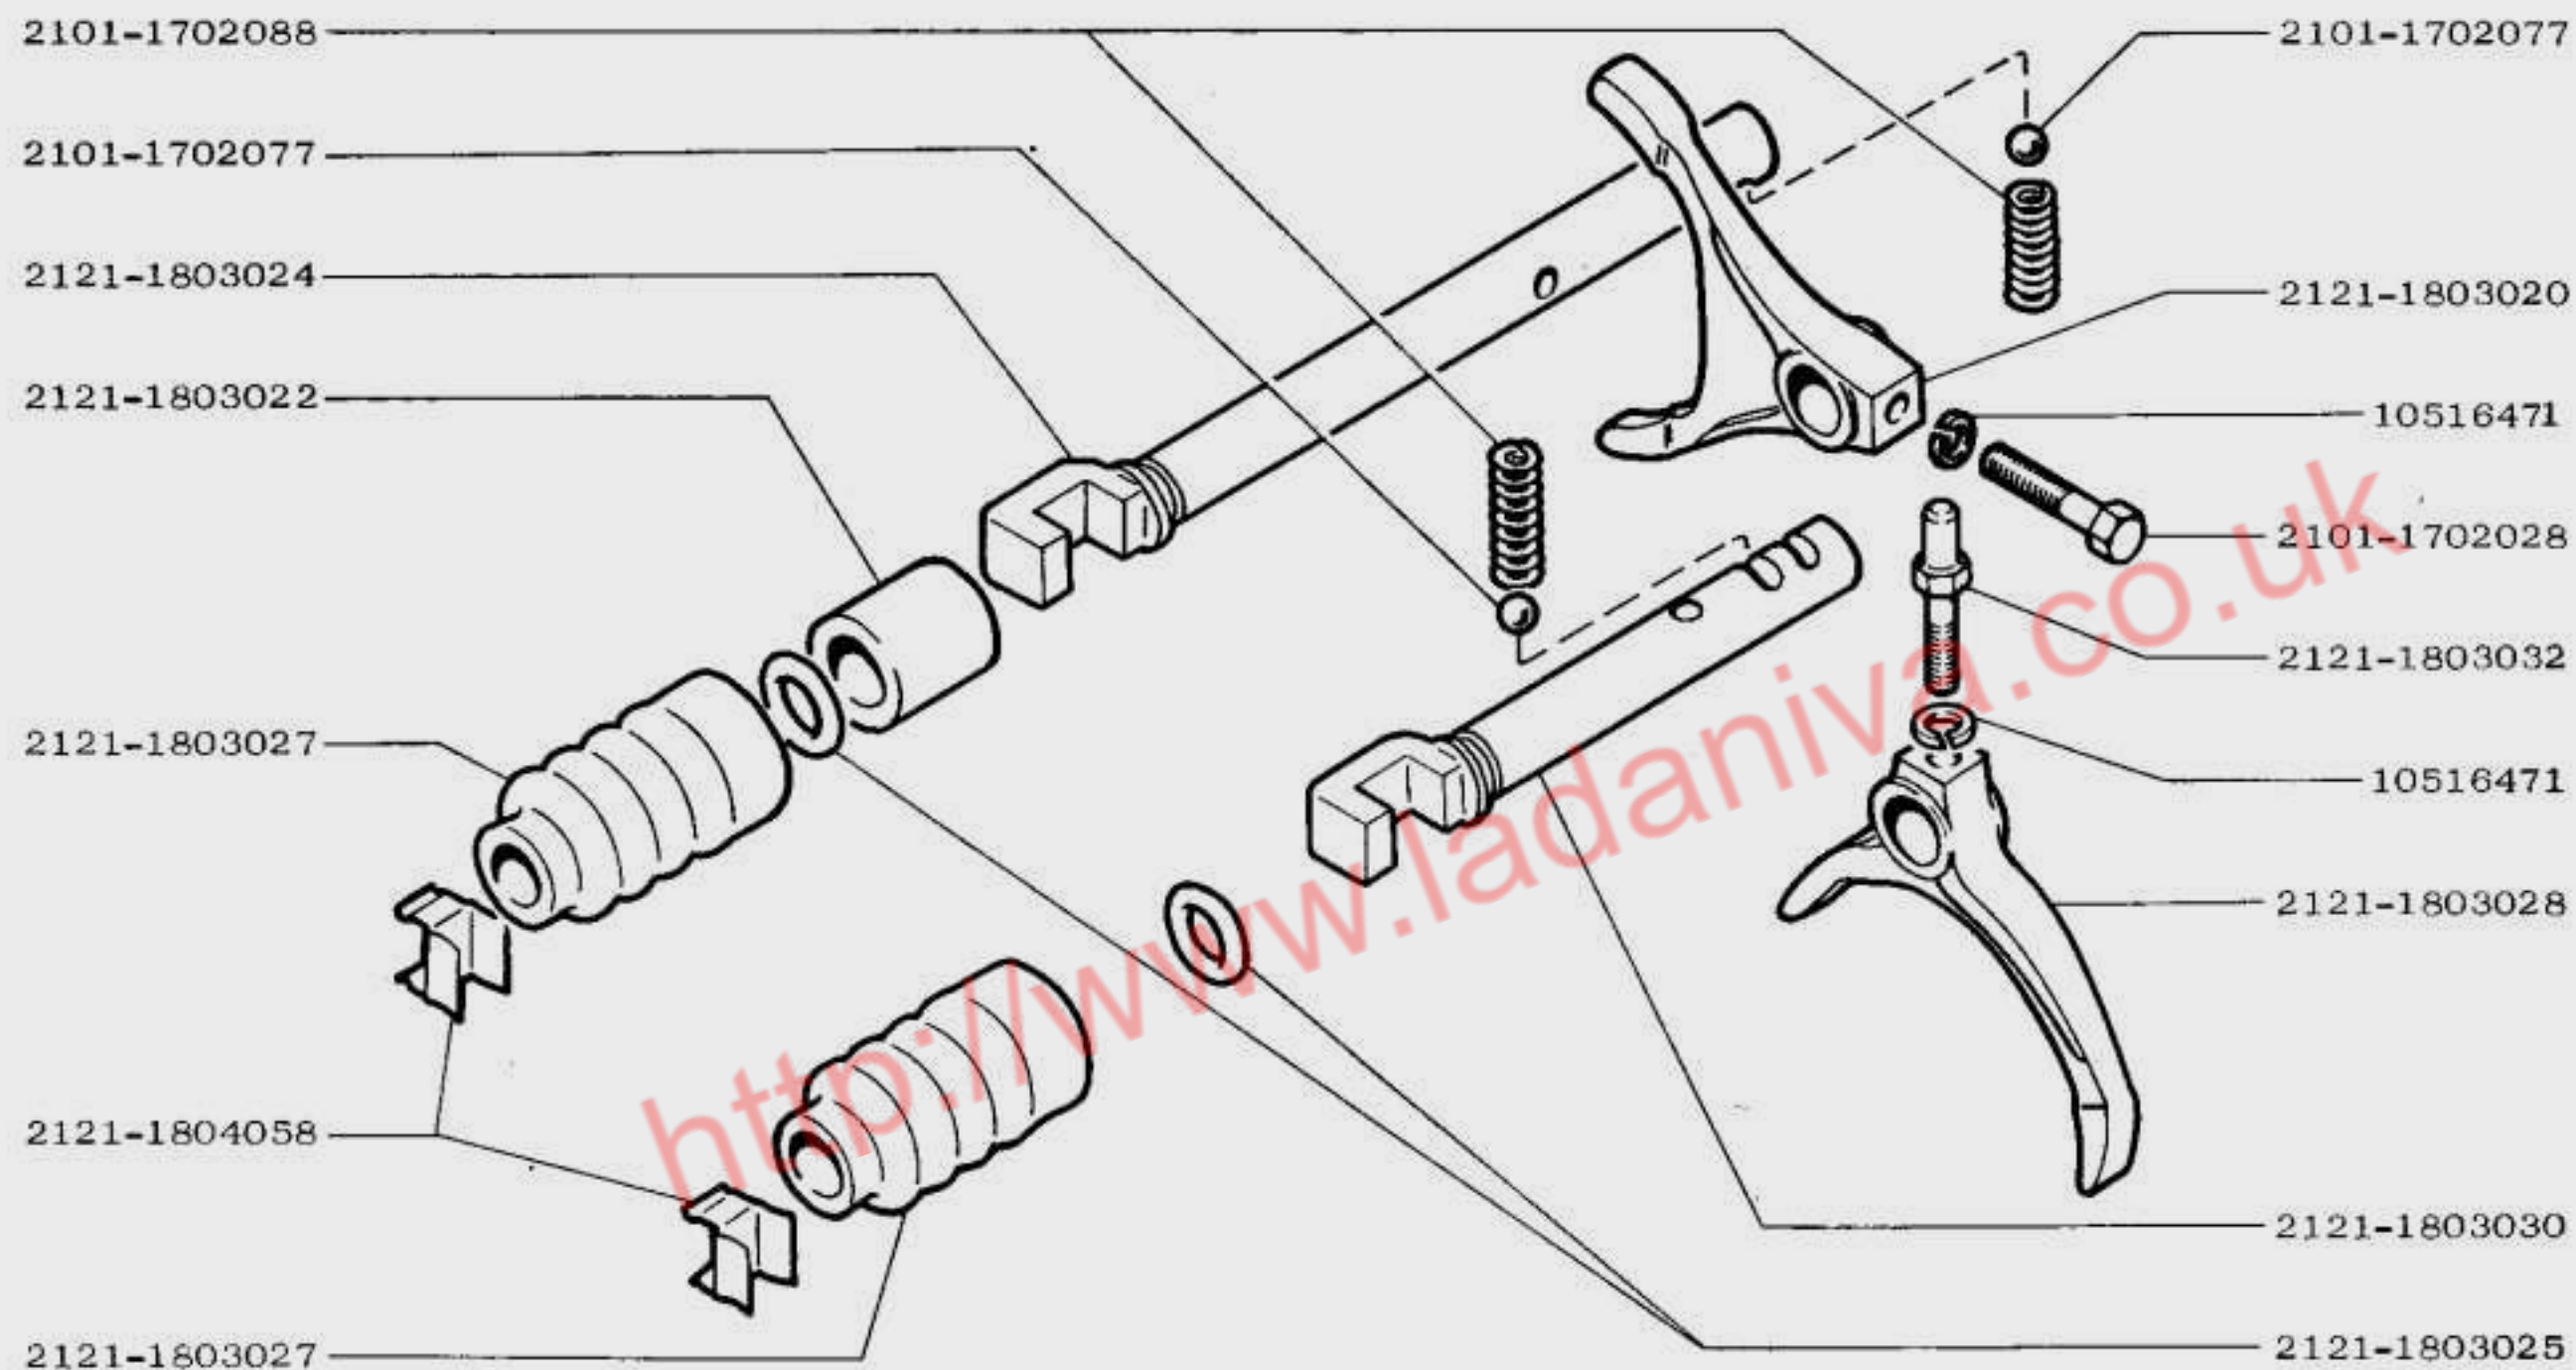

BA3-2121
BA3-21211

Механизм управления раздаточной коробкой
Transfer Case Gearshift Mechanism
Commande interne de la boîte de transfert
Verteilergetriebebeschaltung
Mecanismo de mando de la caja de reenvio


B2.21

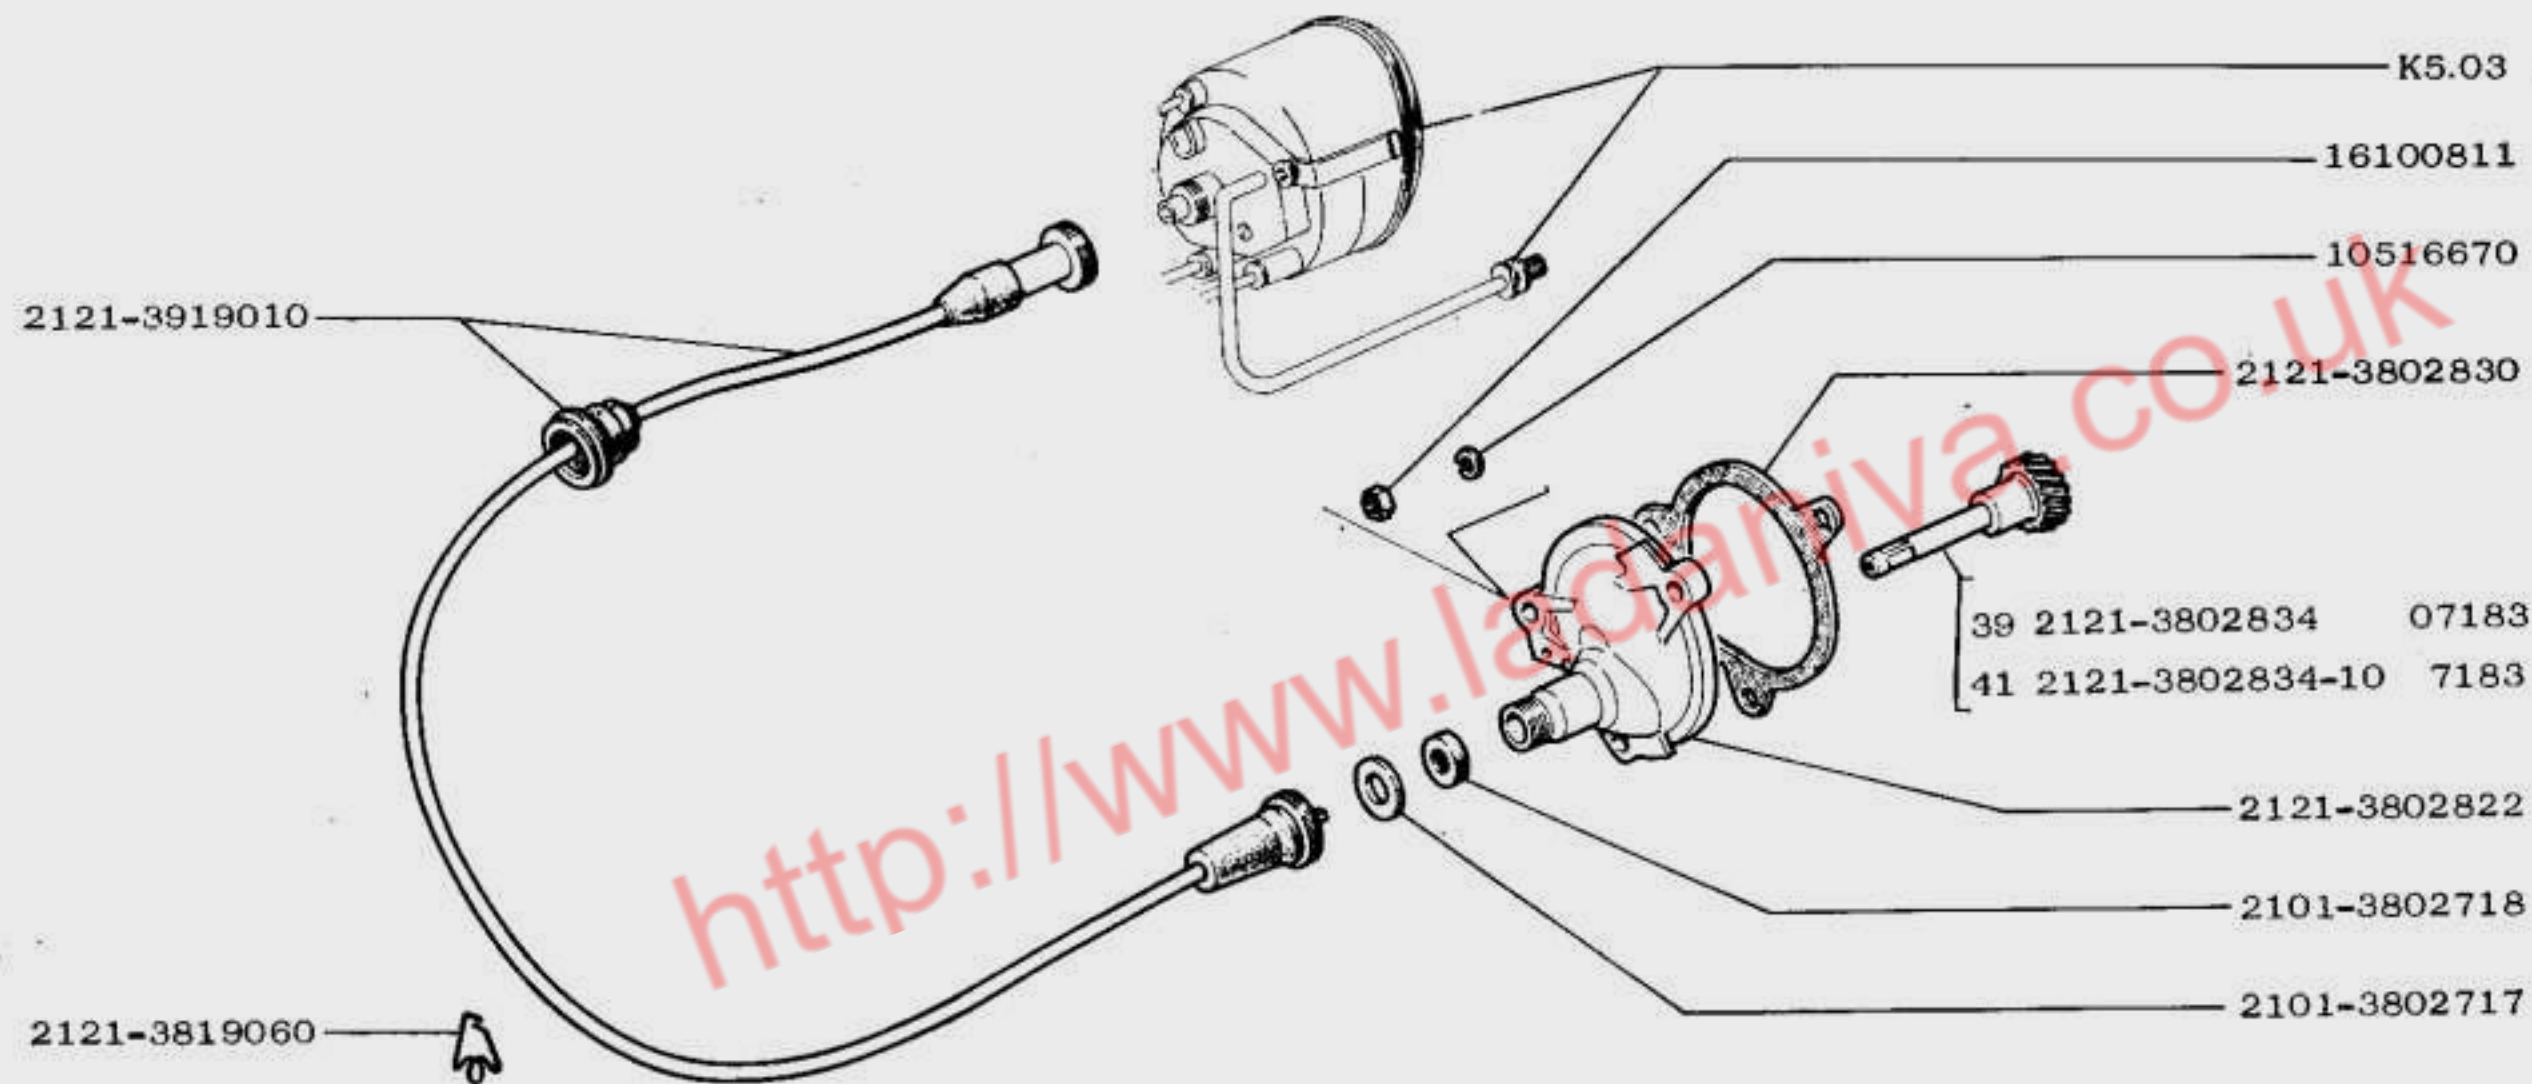

BA3-2121
BA3-21211

Привод спидометра
Speedometer Drive
Commande de l'indicateur de vitesse
Geschwindigkeitsmesserantrieb
Mando del velocímetro


B2.24

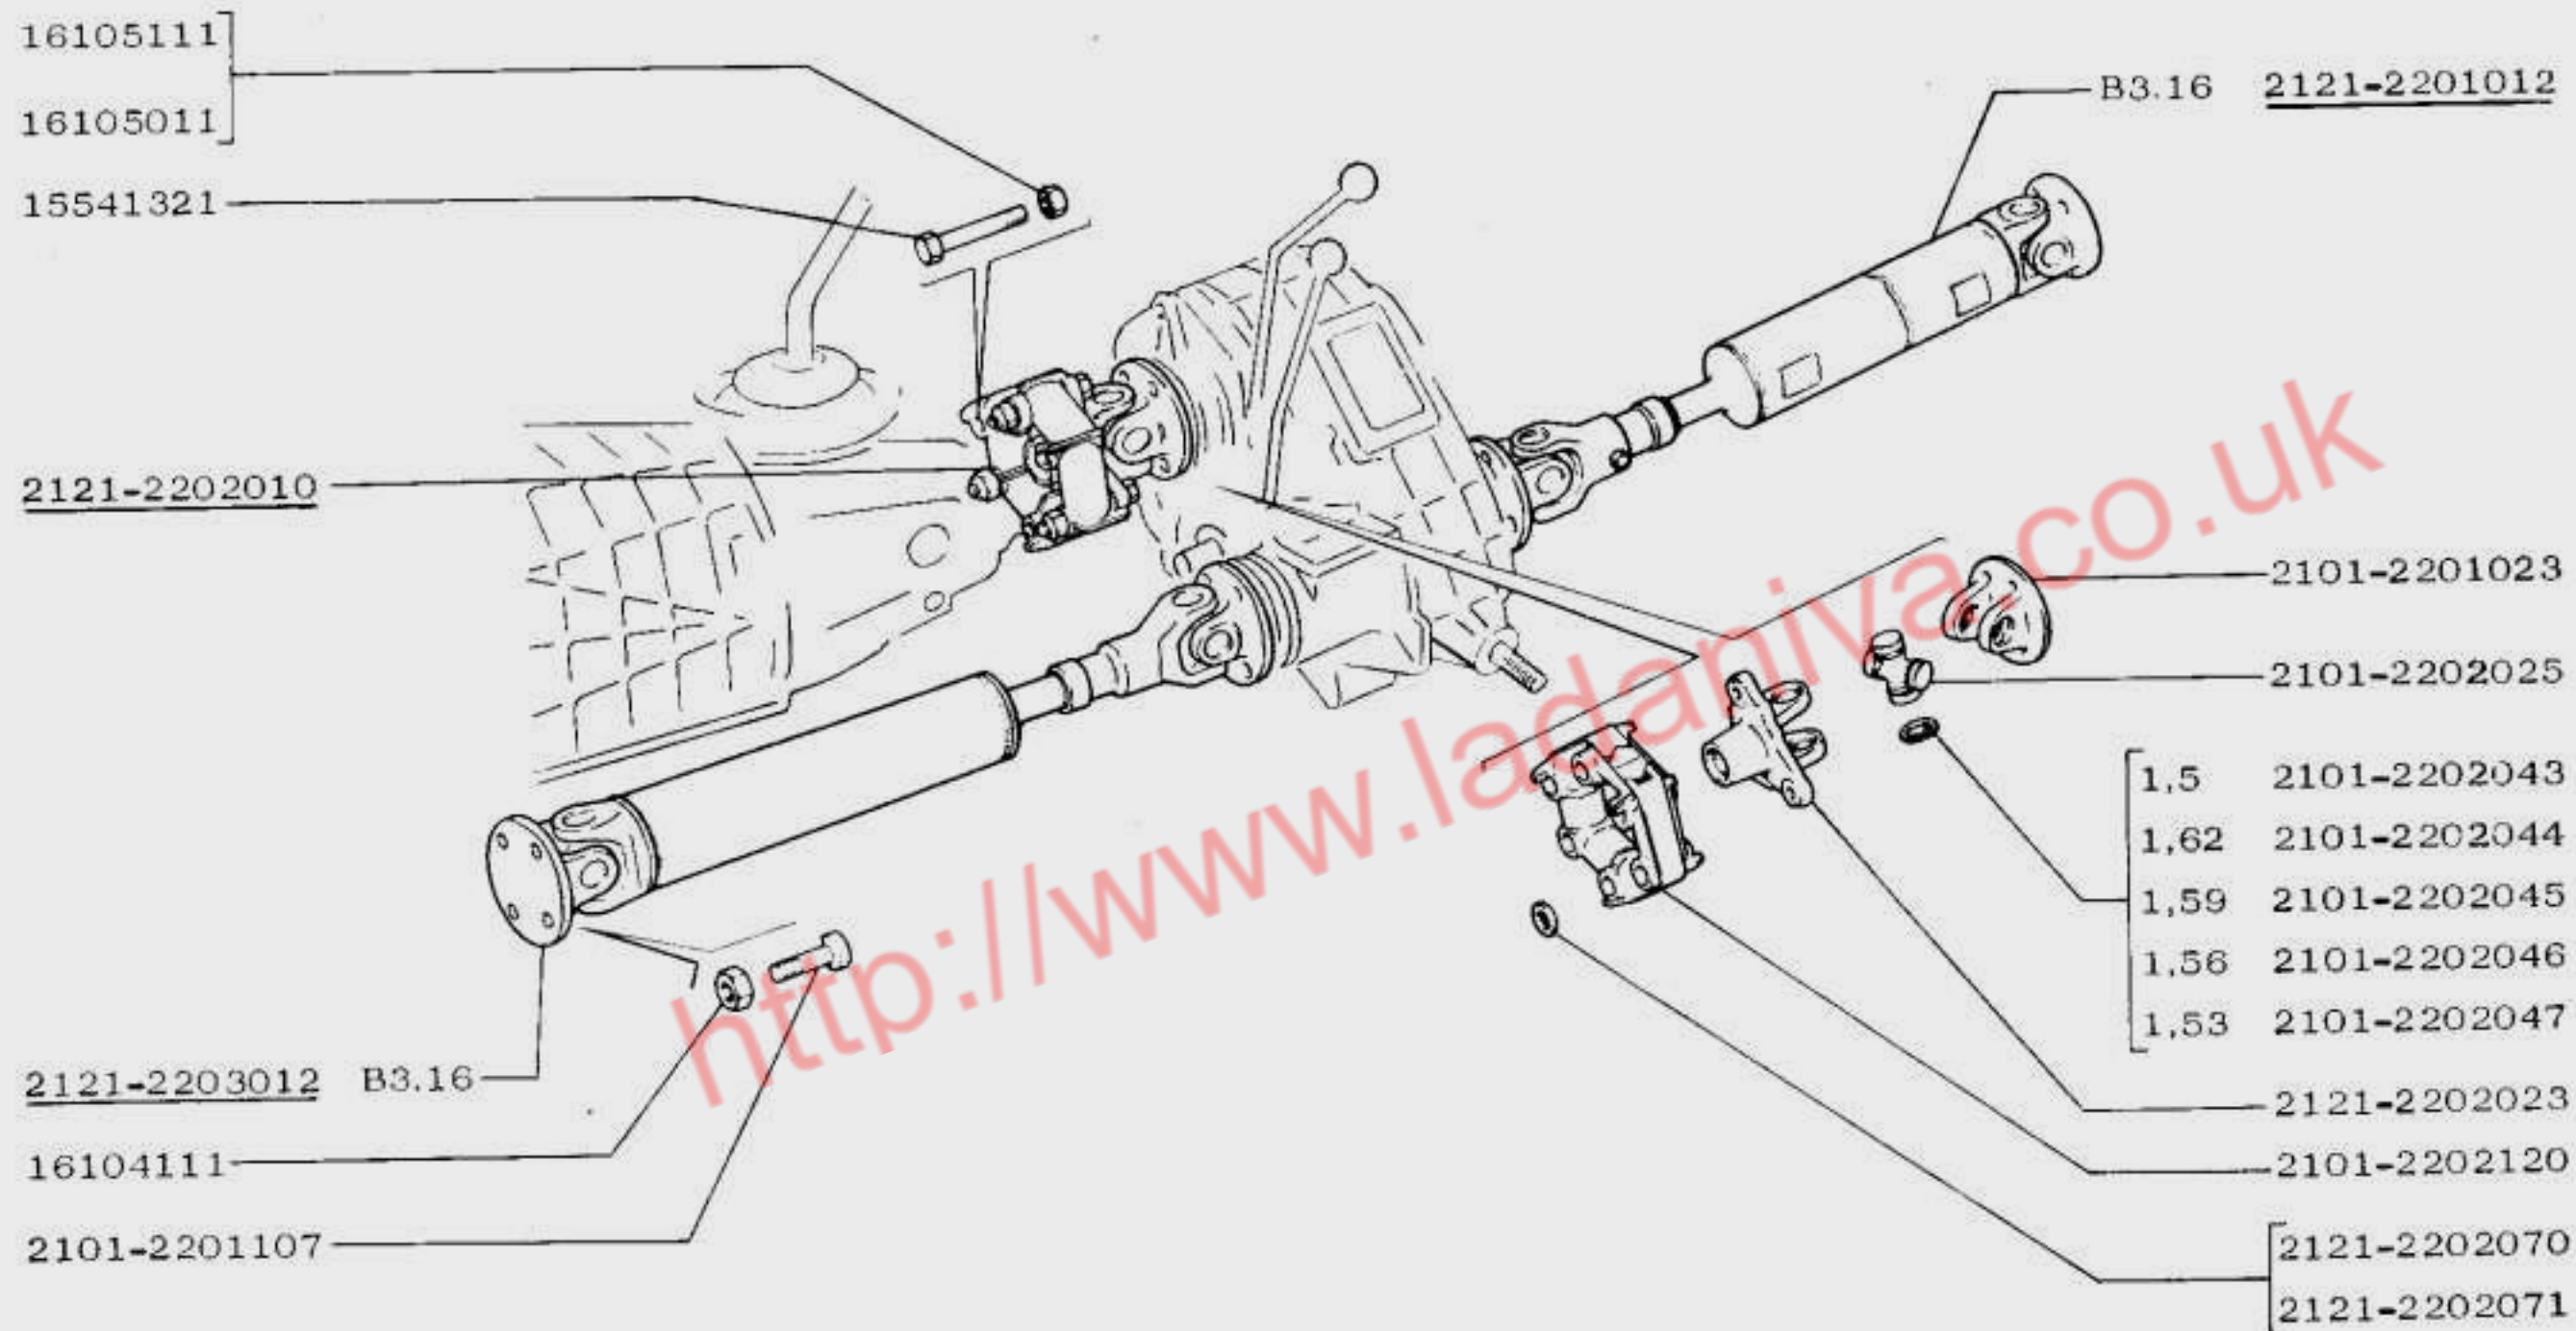

BA3-2121
BA3-21211

Привод раздаточной коробки и мостов
Transfer Case and Axle Drive
Entraînement de la boîte de transfert et des ponts
Verteilergetriebe- und Achsantrieb
Mando de la caja de reenvío y de los puentes


B3.01

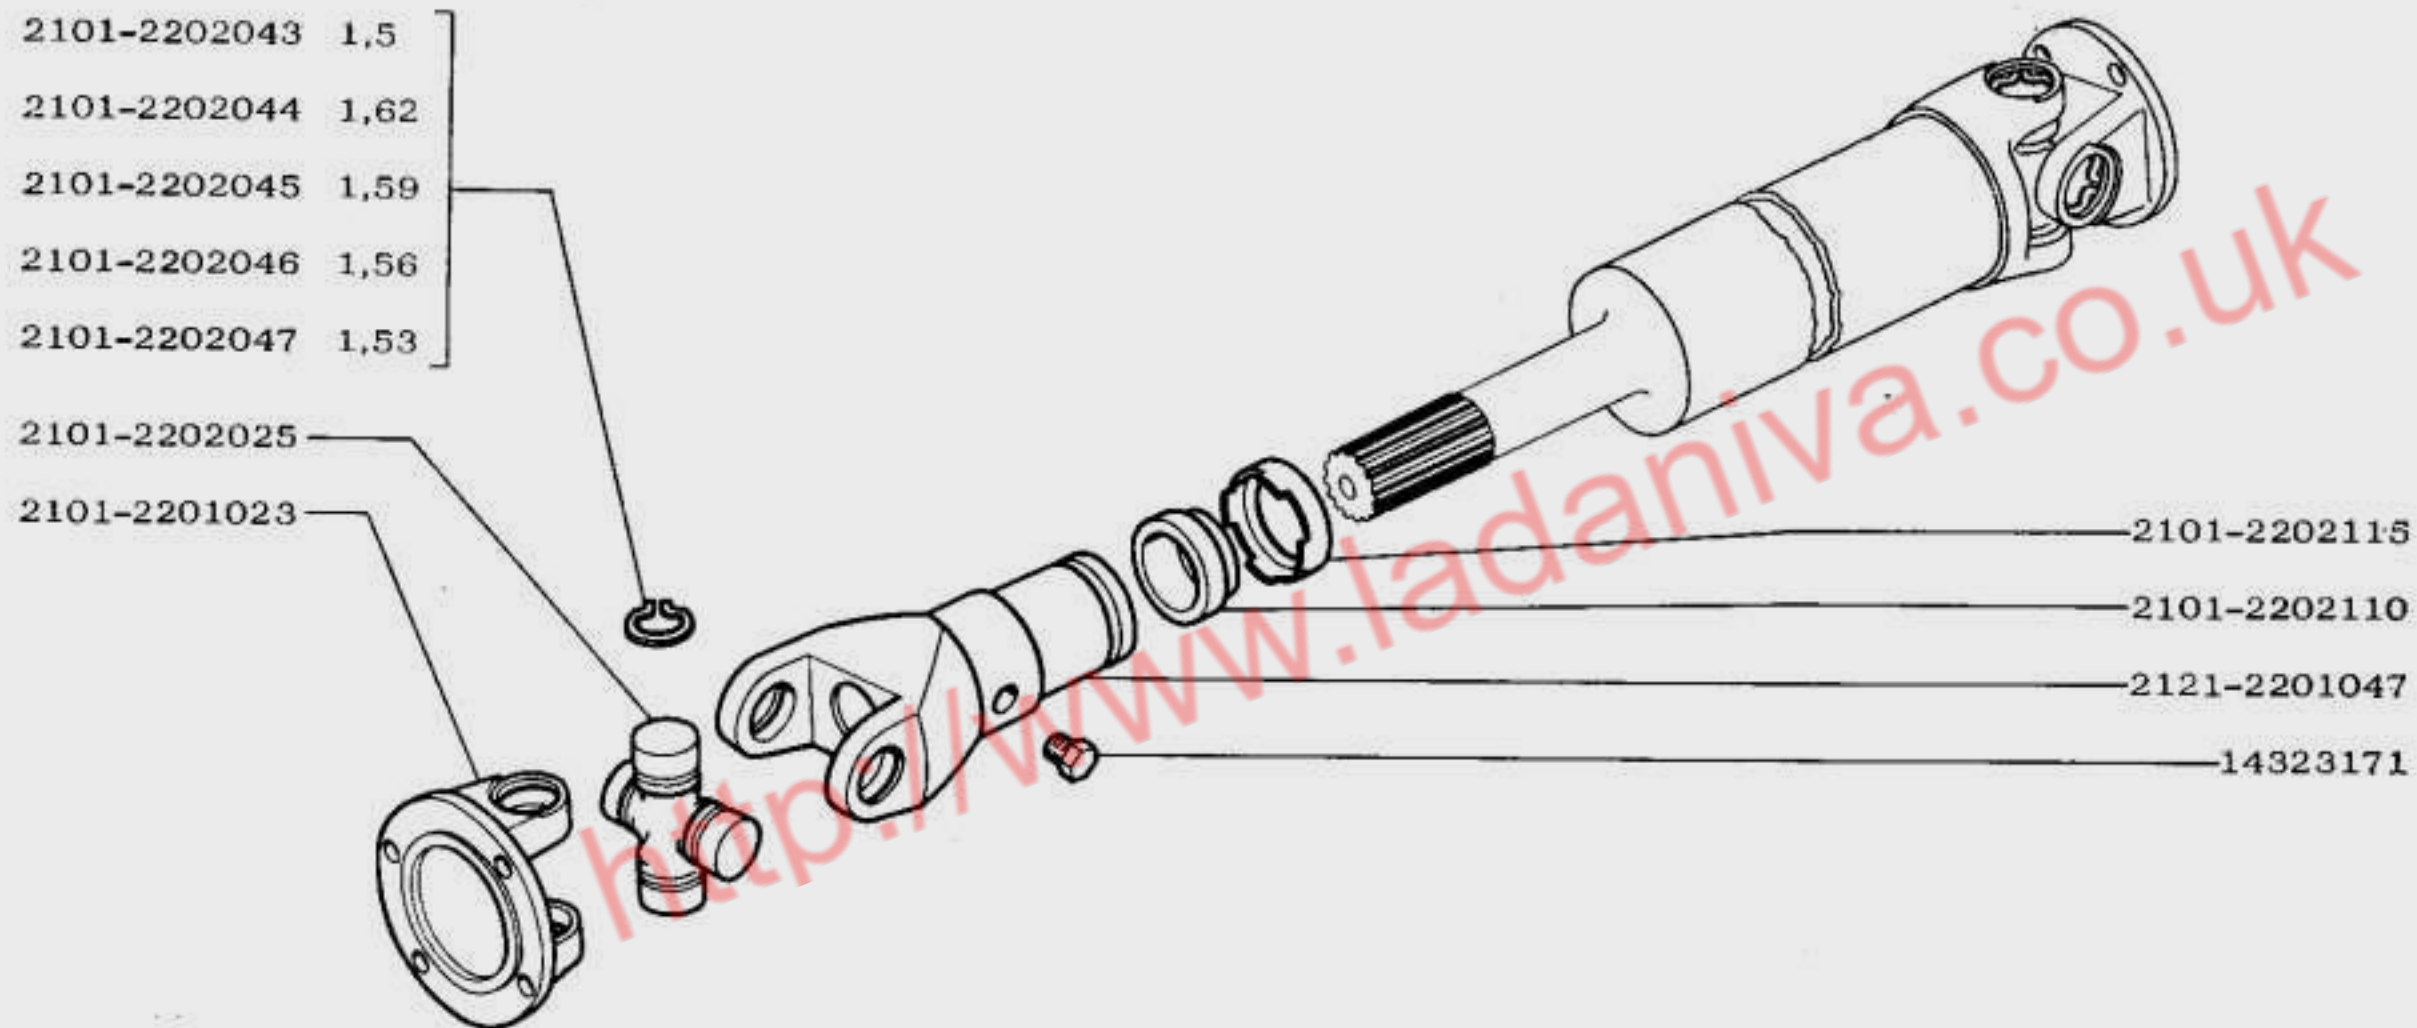

BA3-2121
BA3-21211

Валы карданные
Propeller Shafts
Arbres de transmission
Gelenkwellen
Arboles cardánicos


B3.16

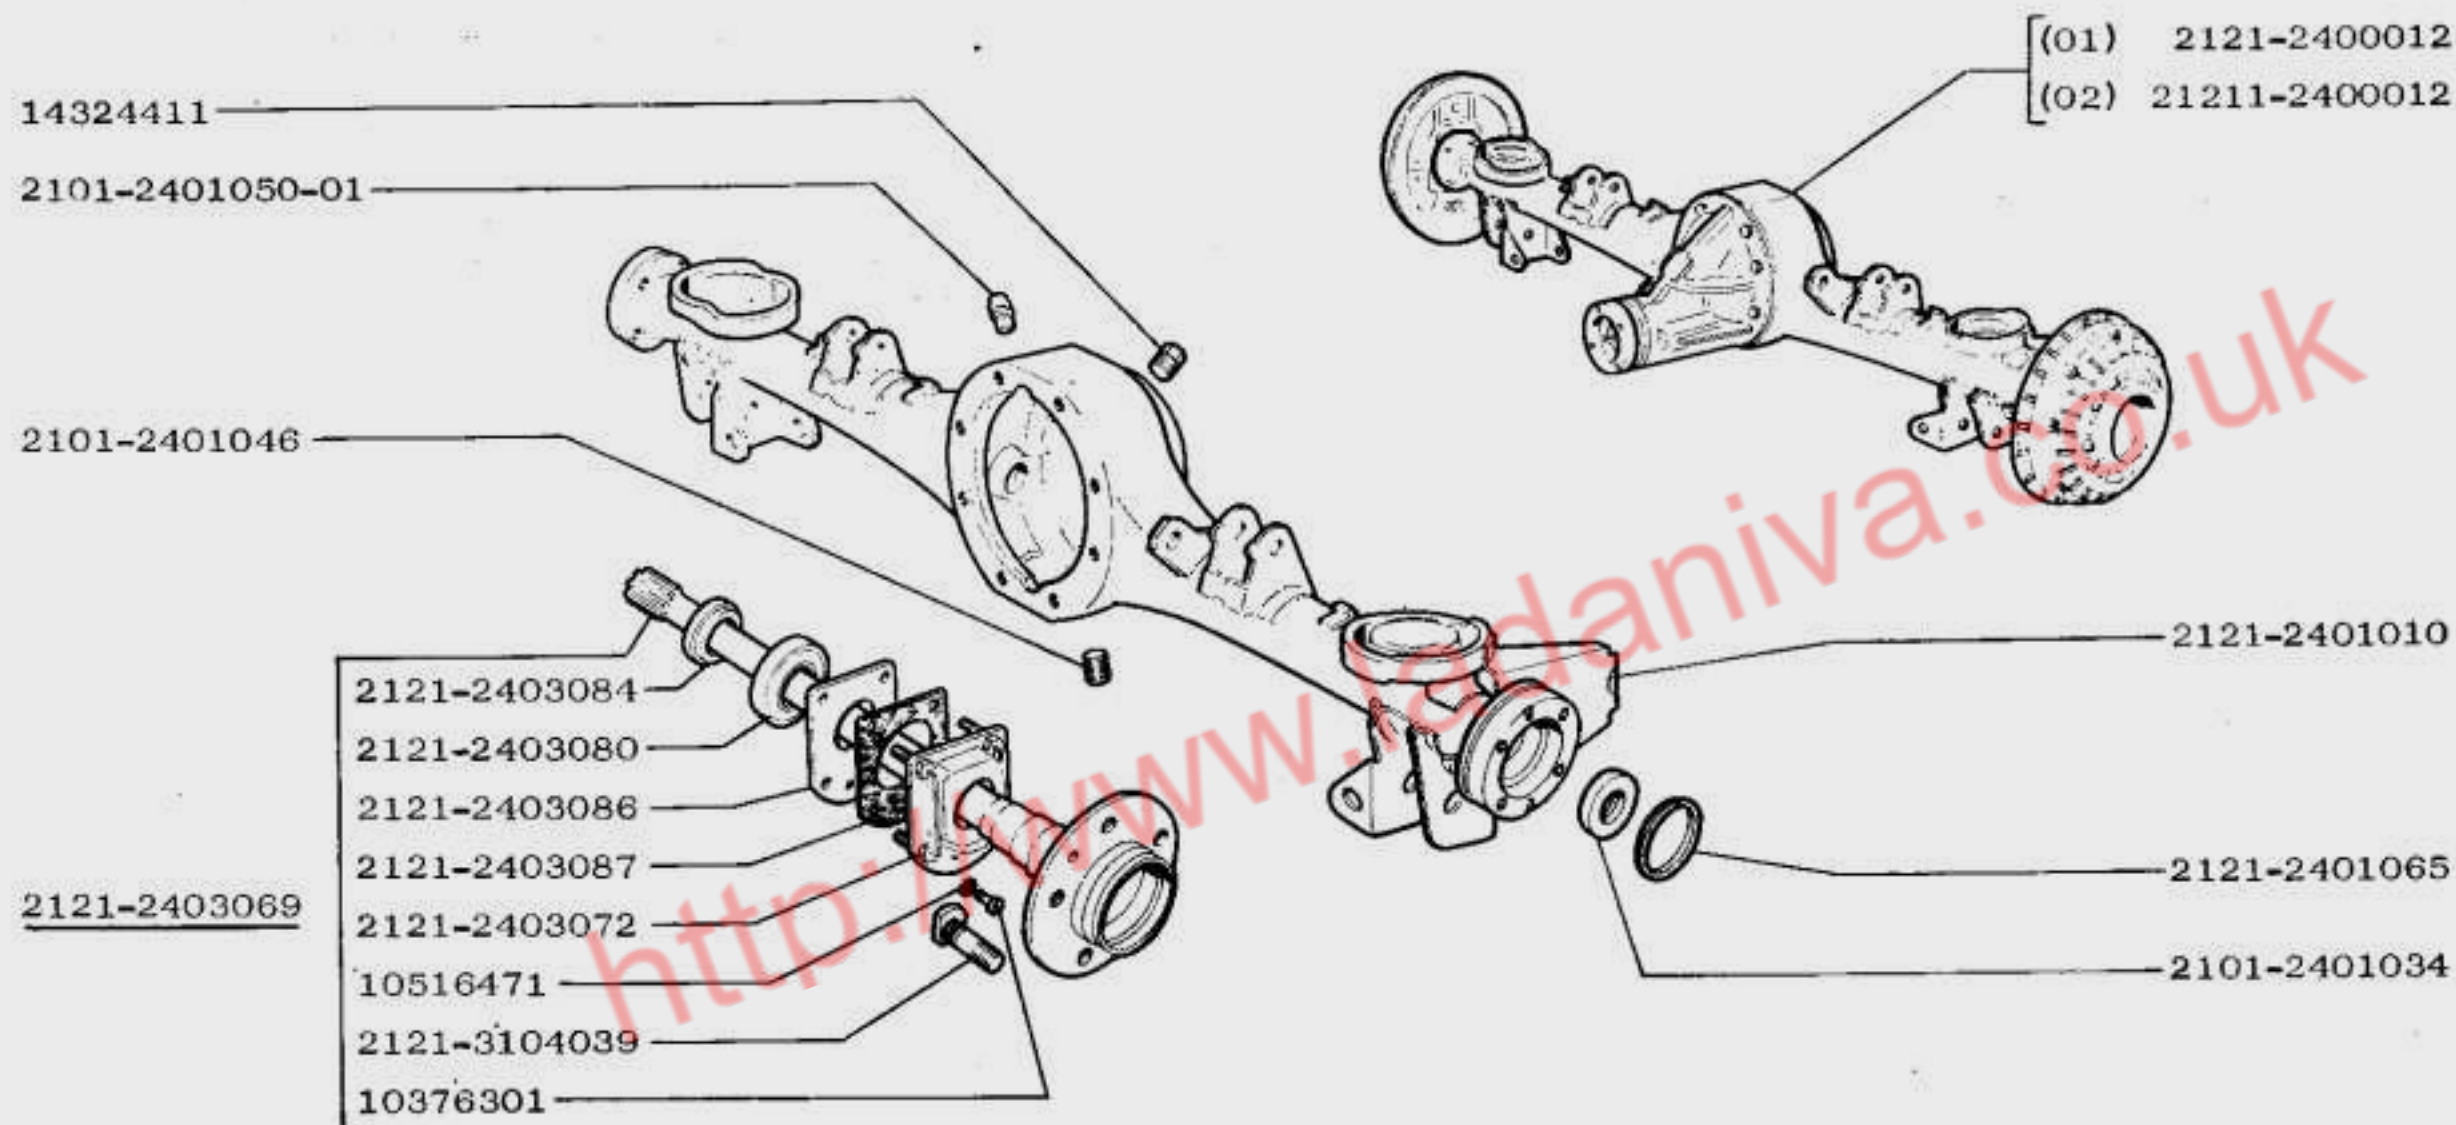

BA3-2121 (01)
BA3-21211 (02)

Мост задний и полуоси
Rear Axle and Axle Shafts
Pont arrière et arbres de roues
Hinterachse und Hinterachswellen
Puente trasero y semiejes


B4.01

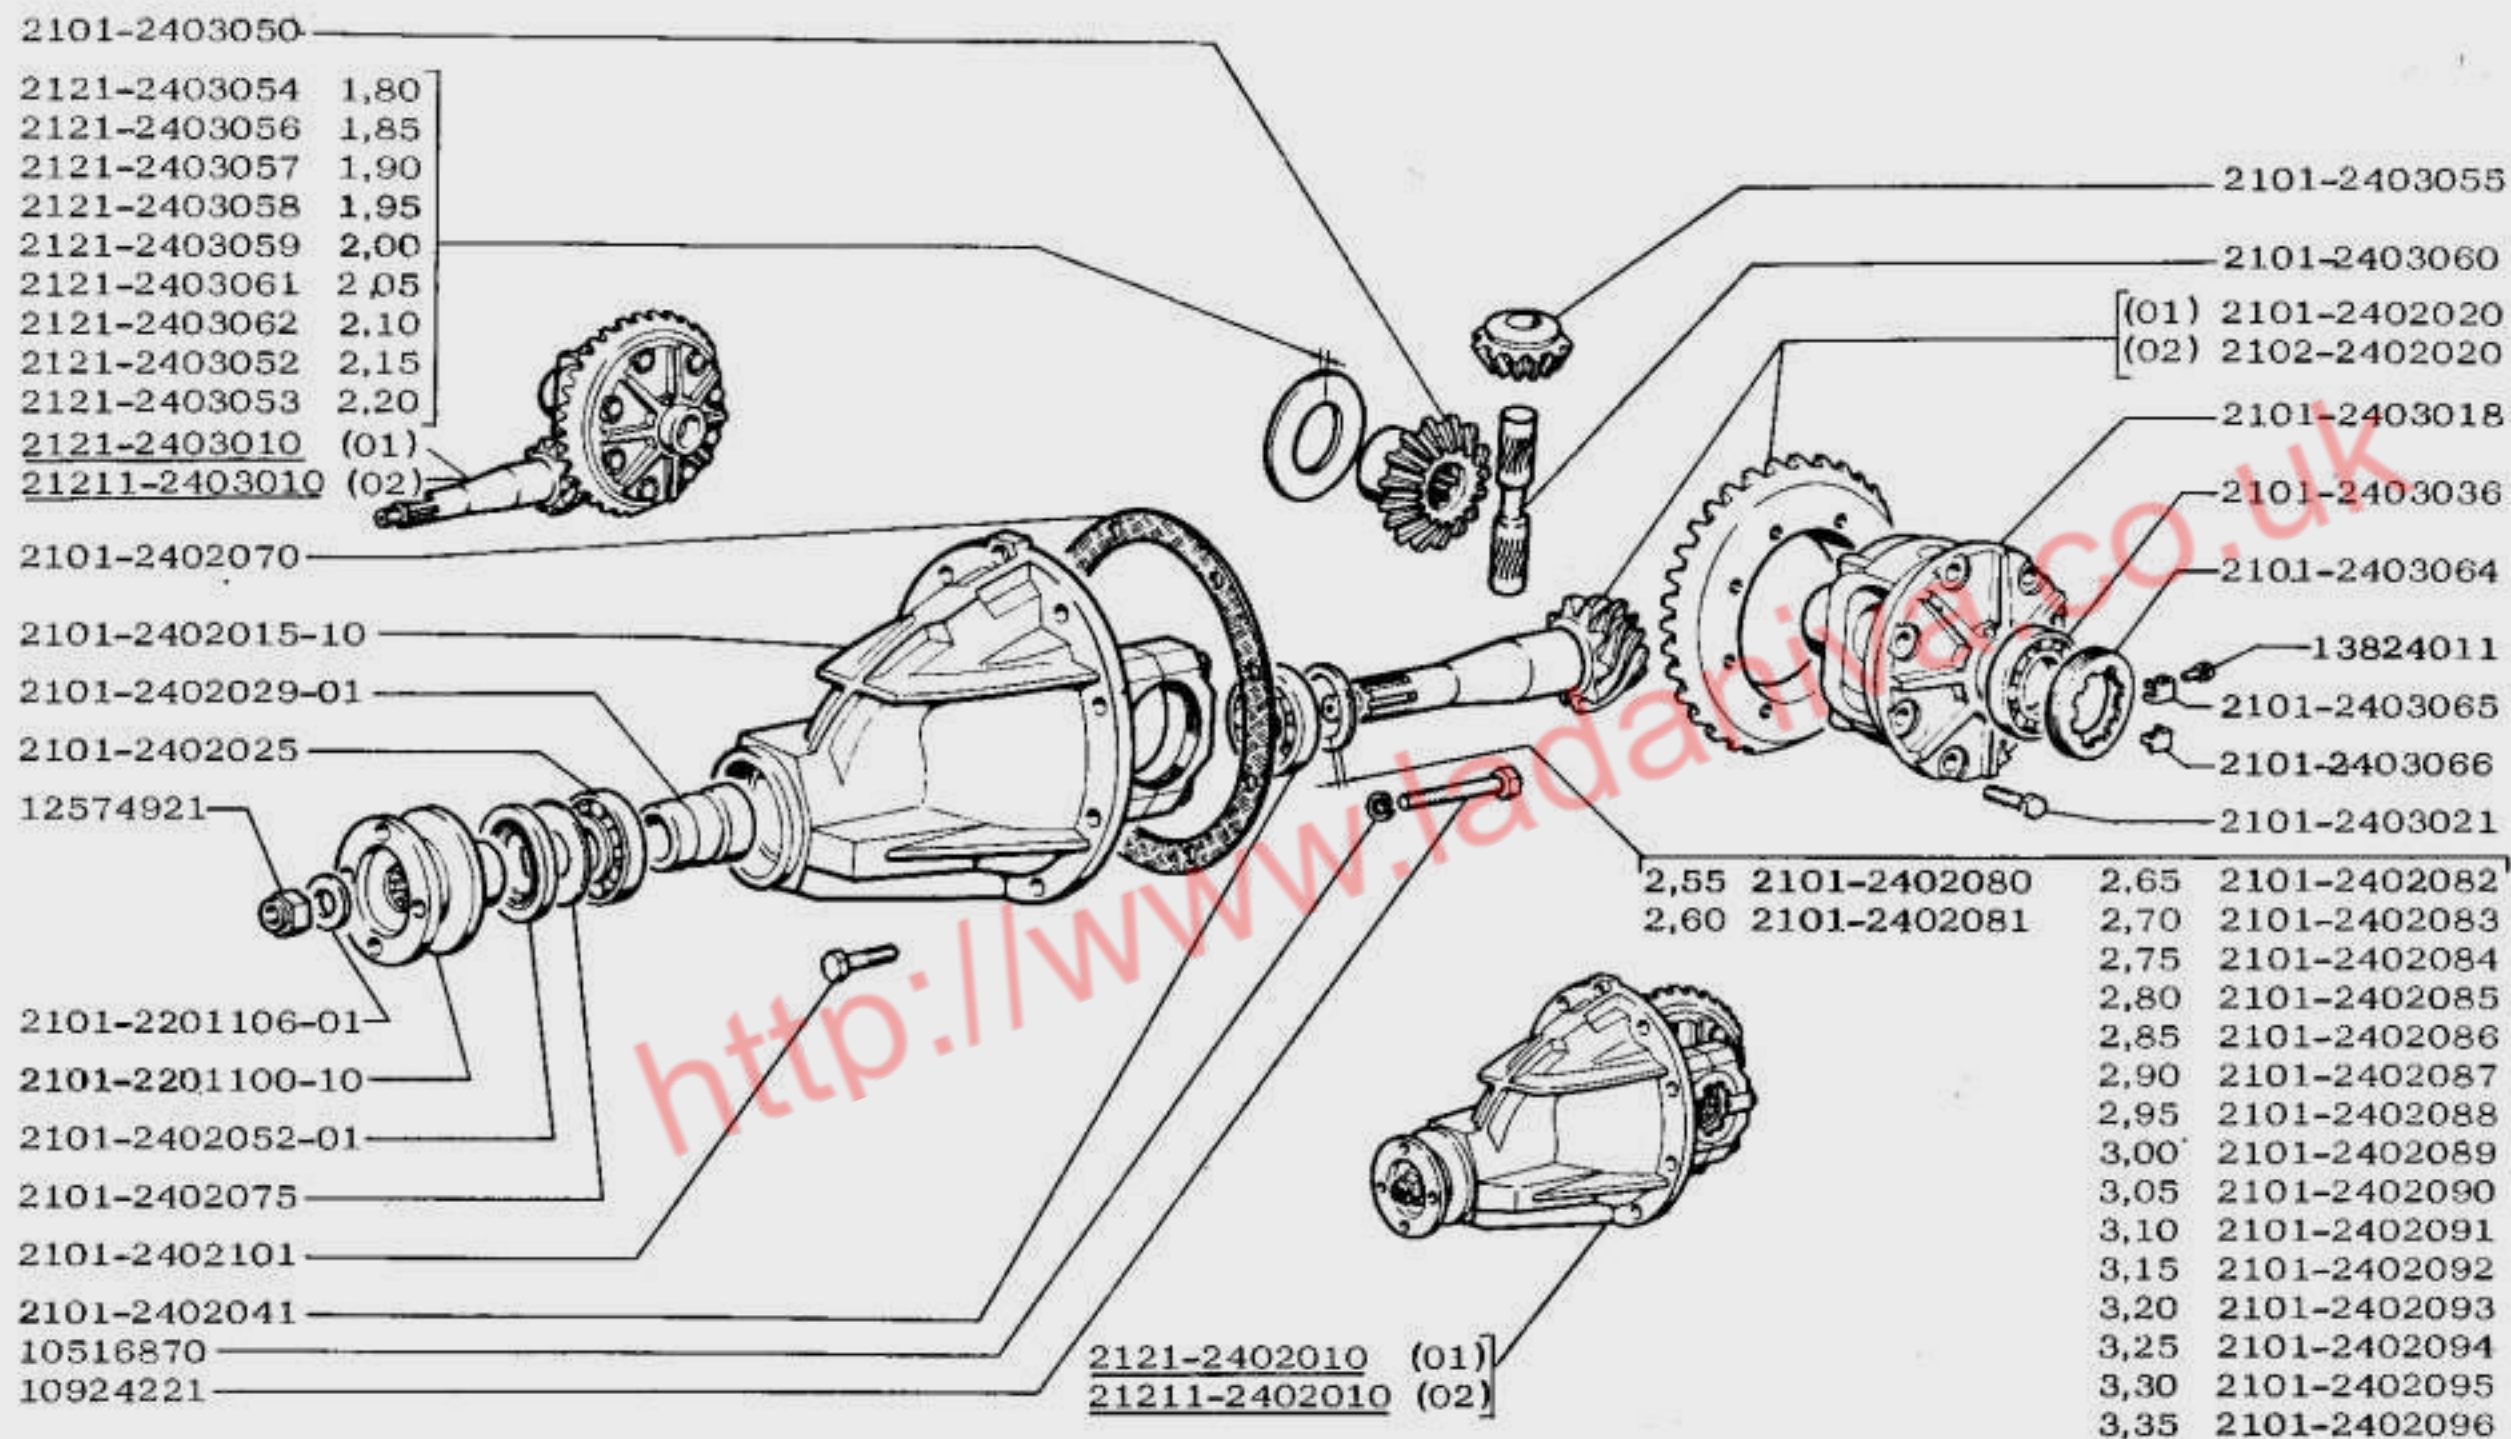

BA3-2121 (01)
BA3-21211 (02)

Редуктор и дифференциал заднего моста
Rear Axle Final Drive and Differential
Nez de pont arrière et différentiel
Achsgetriebe und Ausgleichgetriebe der Hinterachse
Reductor y diferencial del puente trasero


B4.04

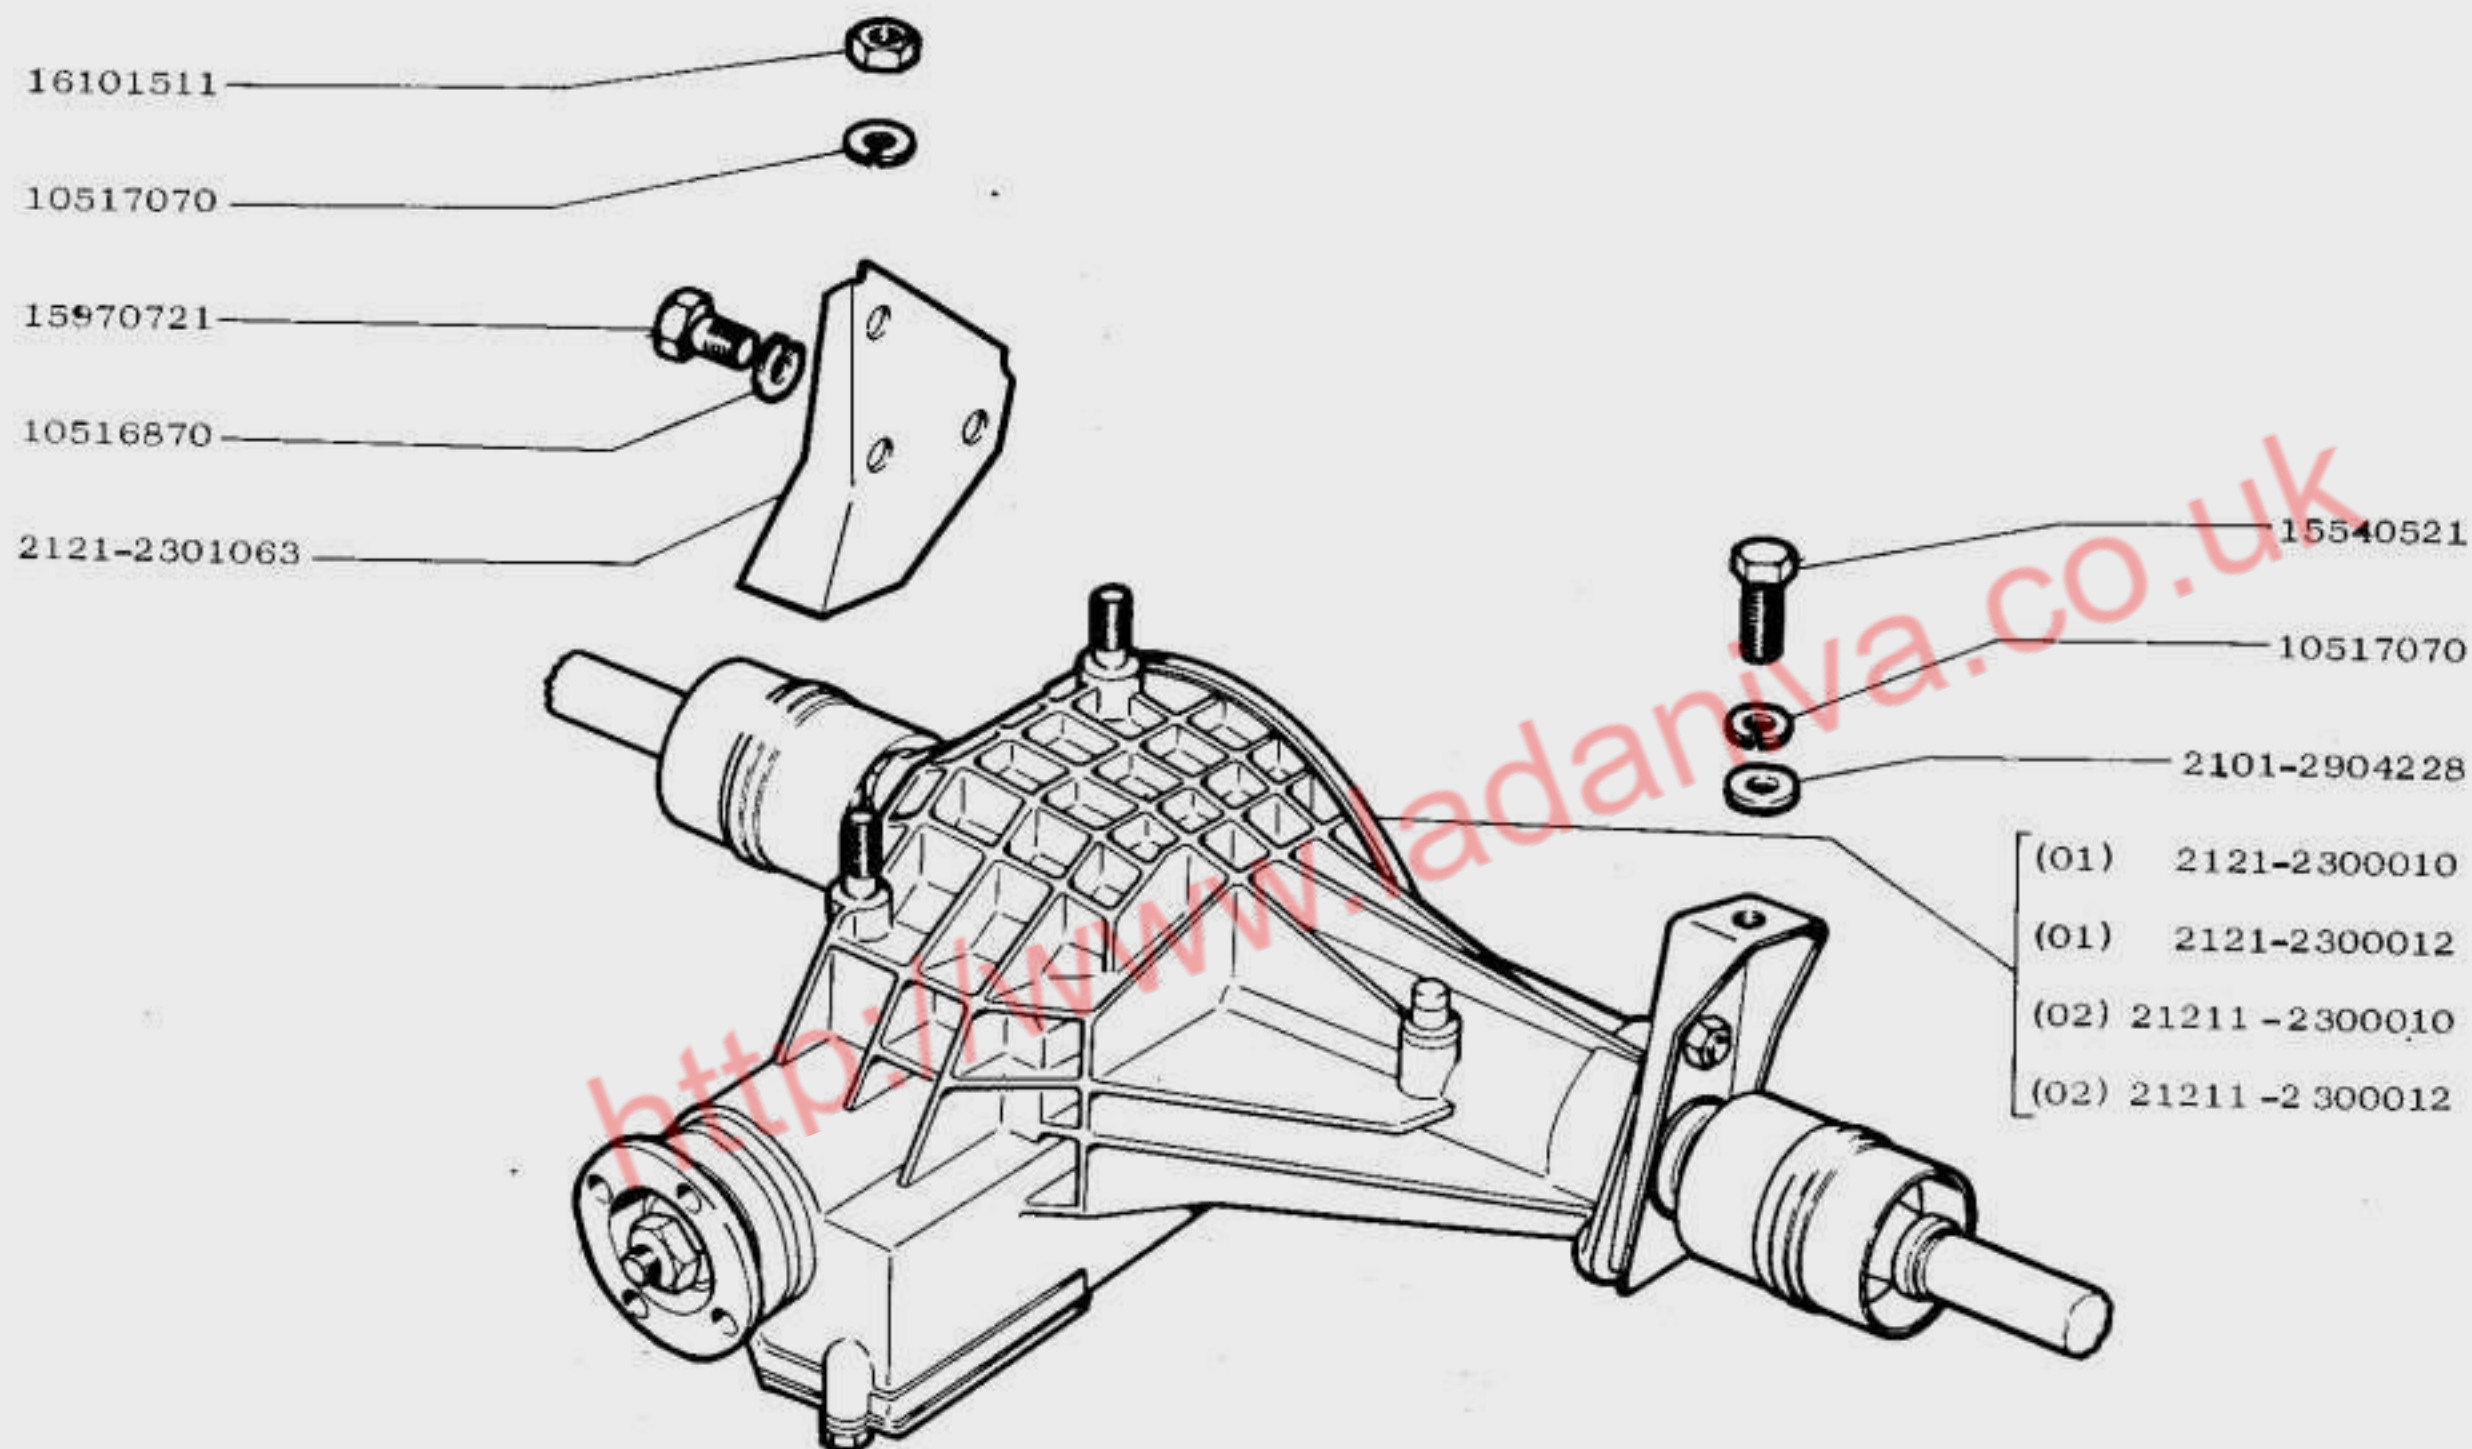

BA3-2121 (01)
BA3-21211 (02)

Мост передний
Front Axle
Pont avant
Vorderachse
Puente delantero


B4.10

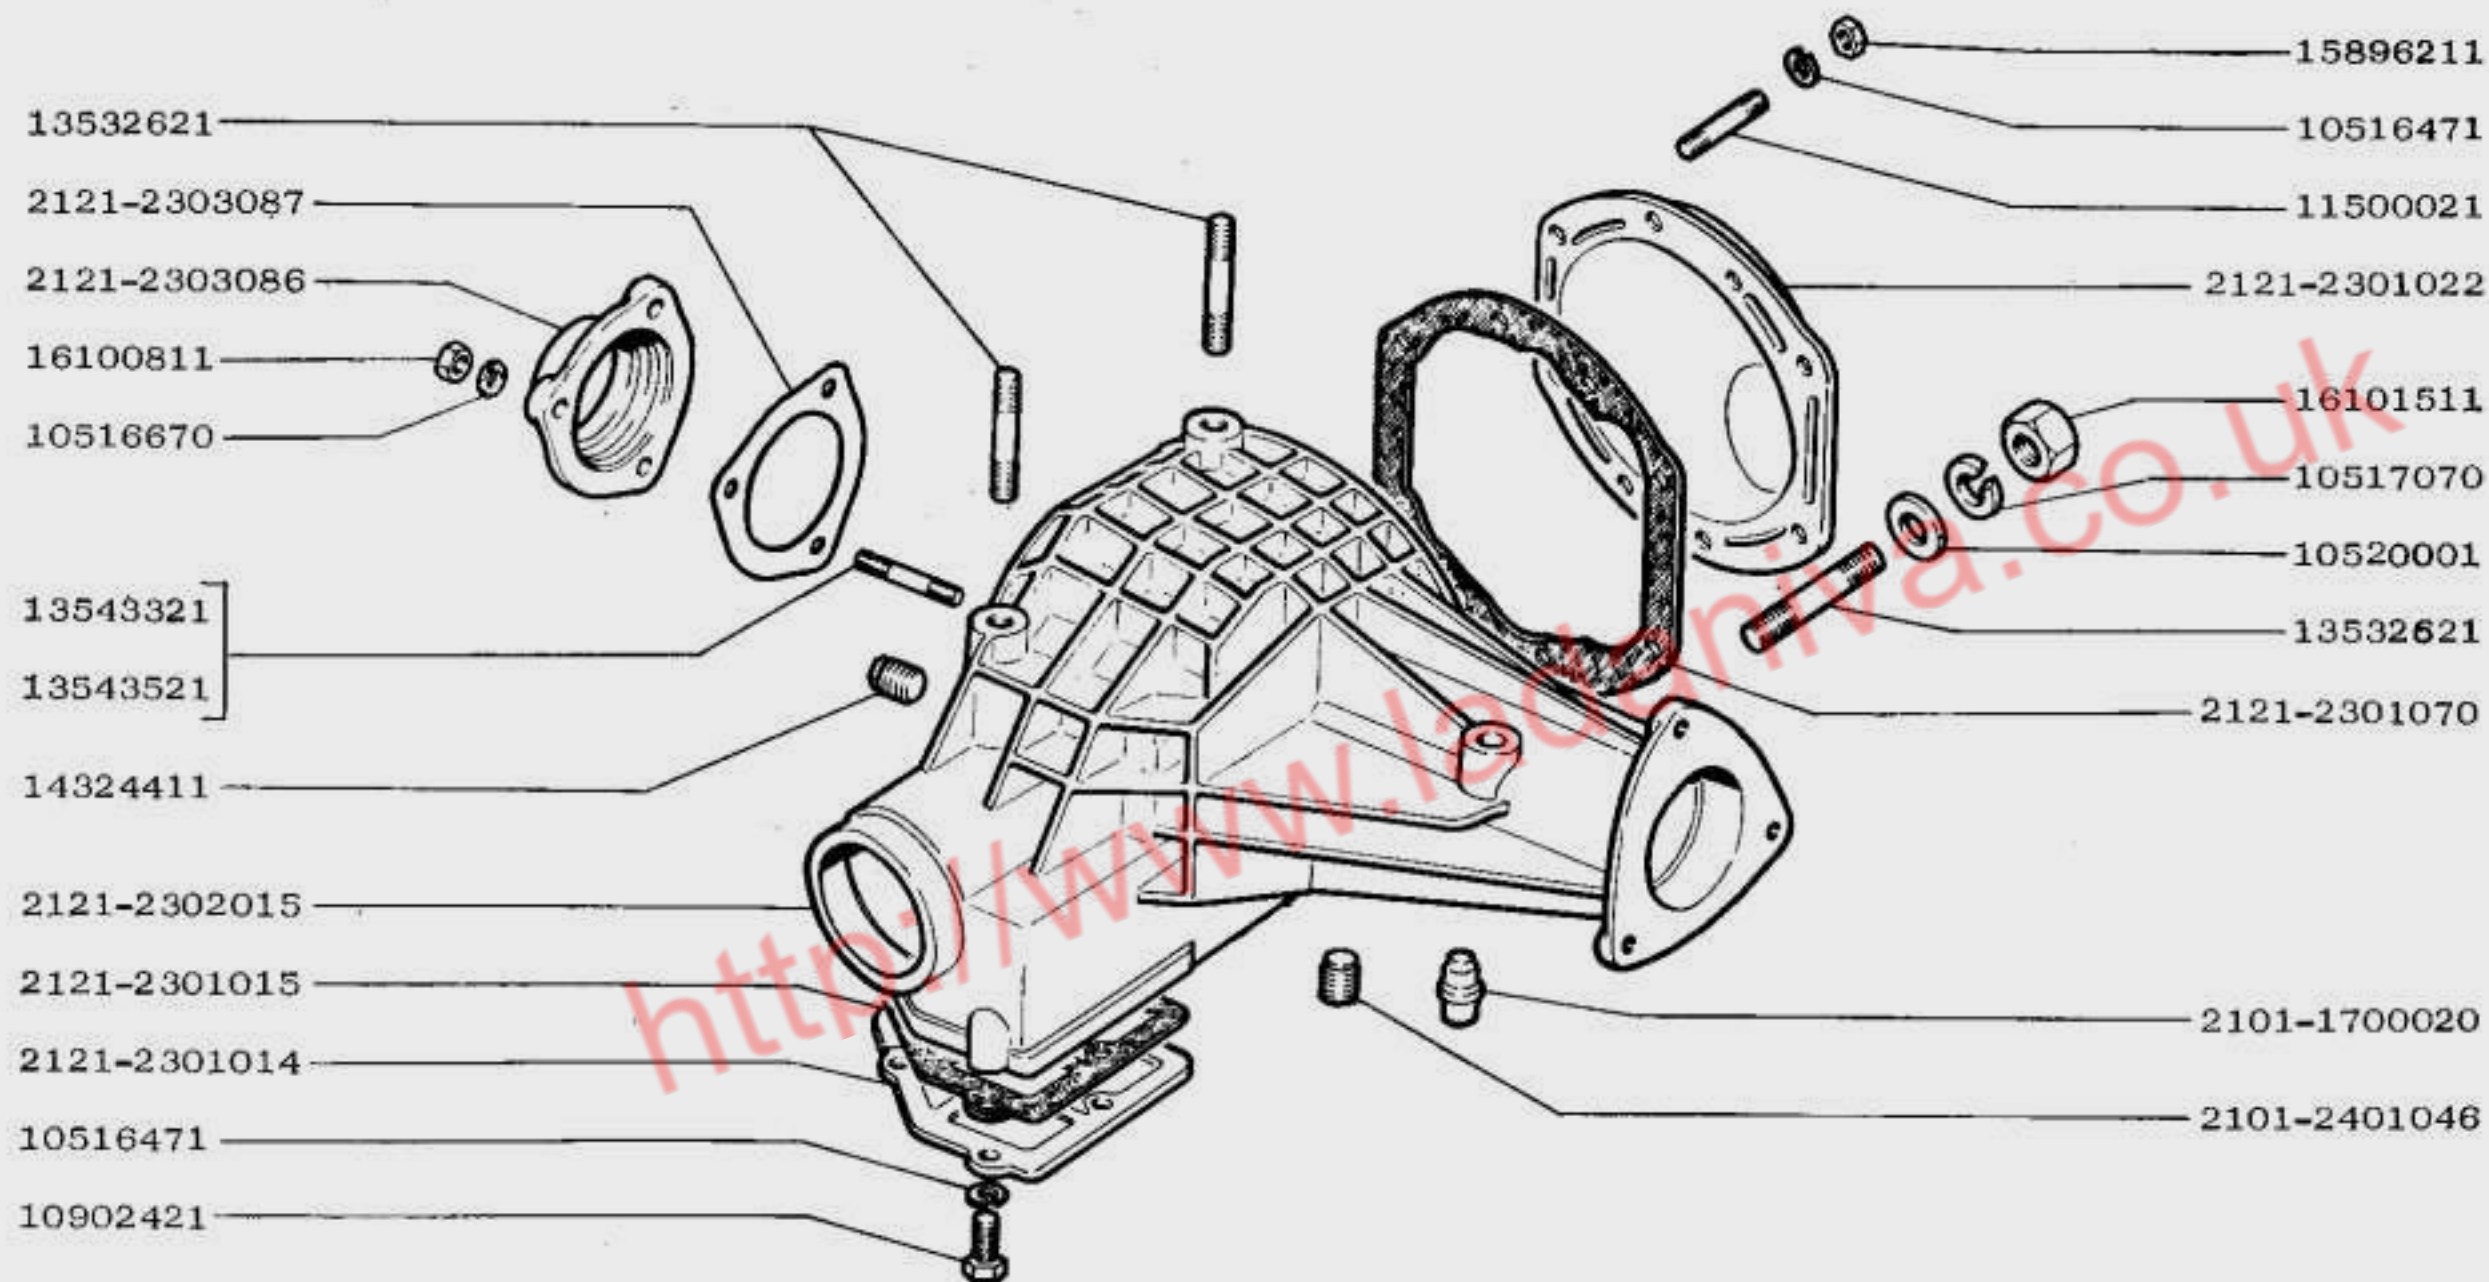

BA3-2121
BA3-21211

Корпус и крышки редуктора
Final Drive Housing and Covers
Carter et couvercles de nez de pont
Gehäuse und Deckel des Achsgetriebes
Cuerpo y tapas del reductor


B4.11

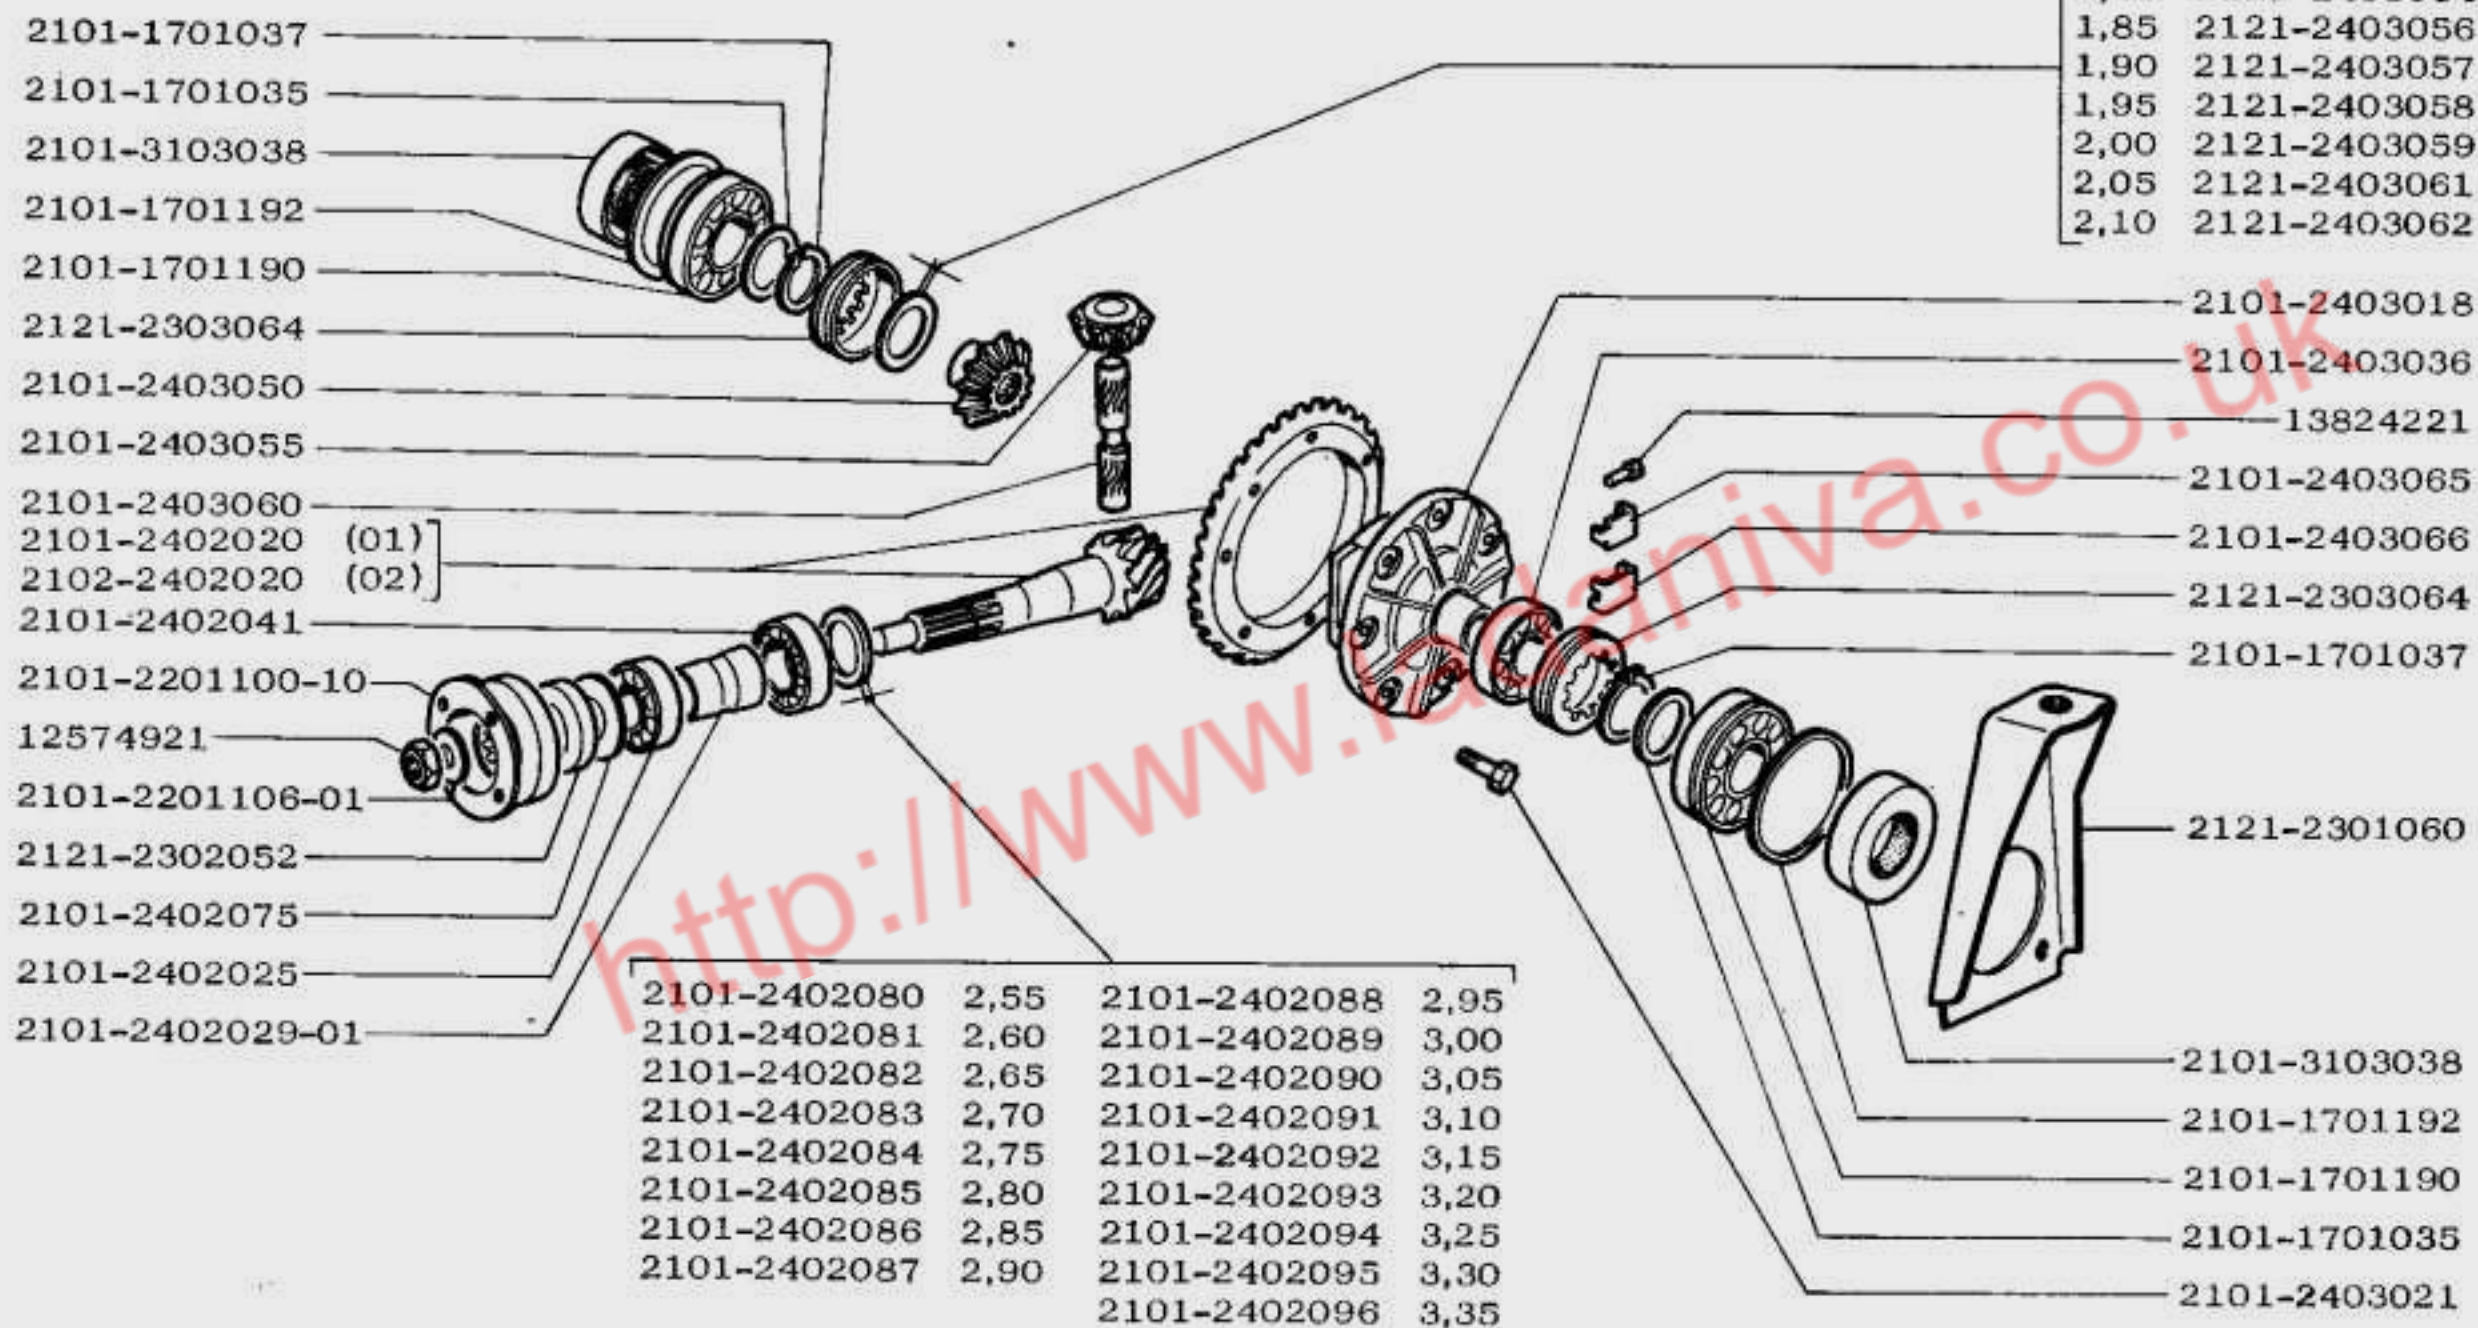

BA3-2121 (01)
BA3-21211 (02)

Редуктор и дифференциал переднего моста
Front Axle Final Drive and Differential
Nez de pont avant et différentiel
Achsgetriebe und Ausgleichgetriebe der Vorderachse
Reductor y diferencial del puente delantero


B4.15

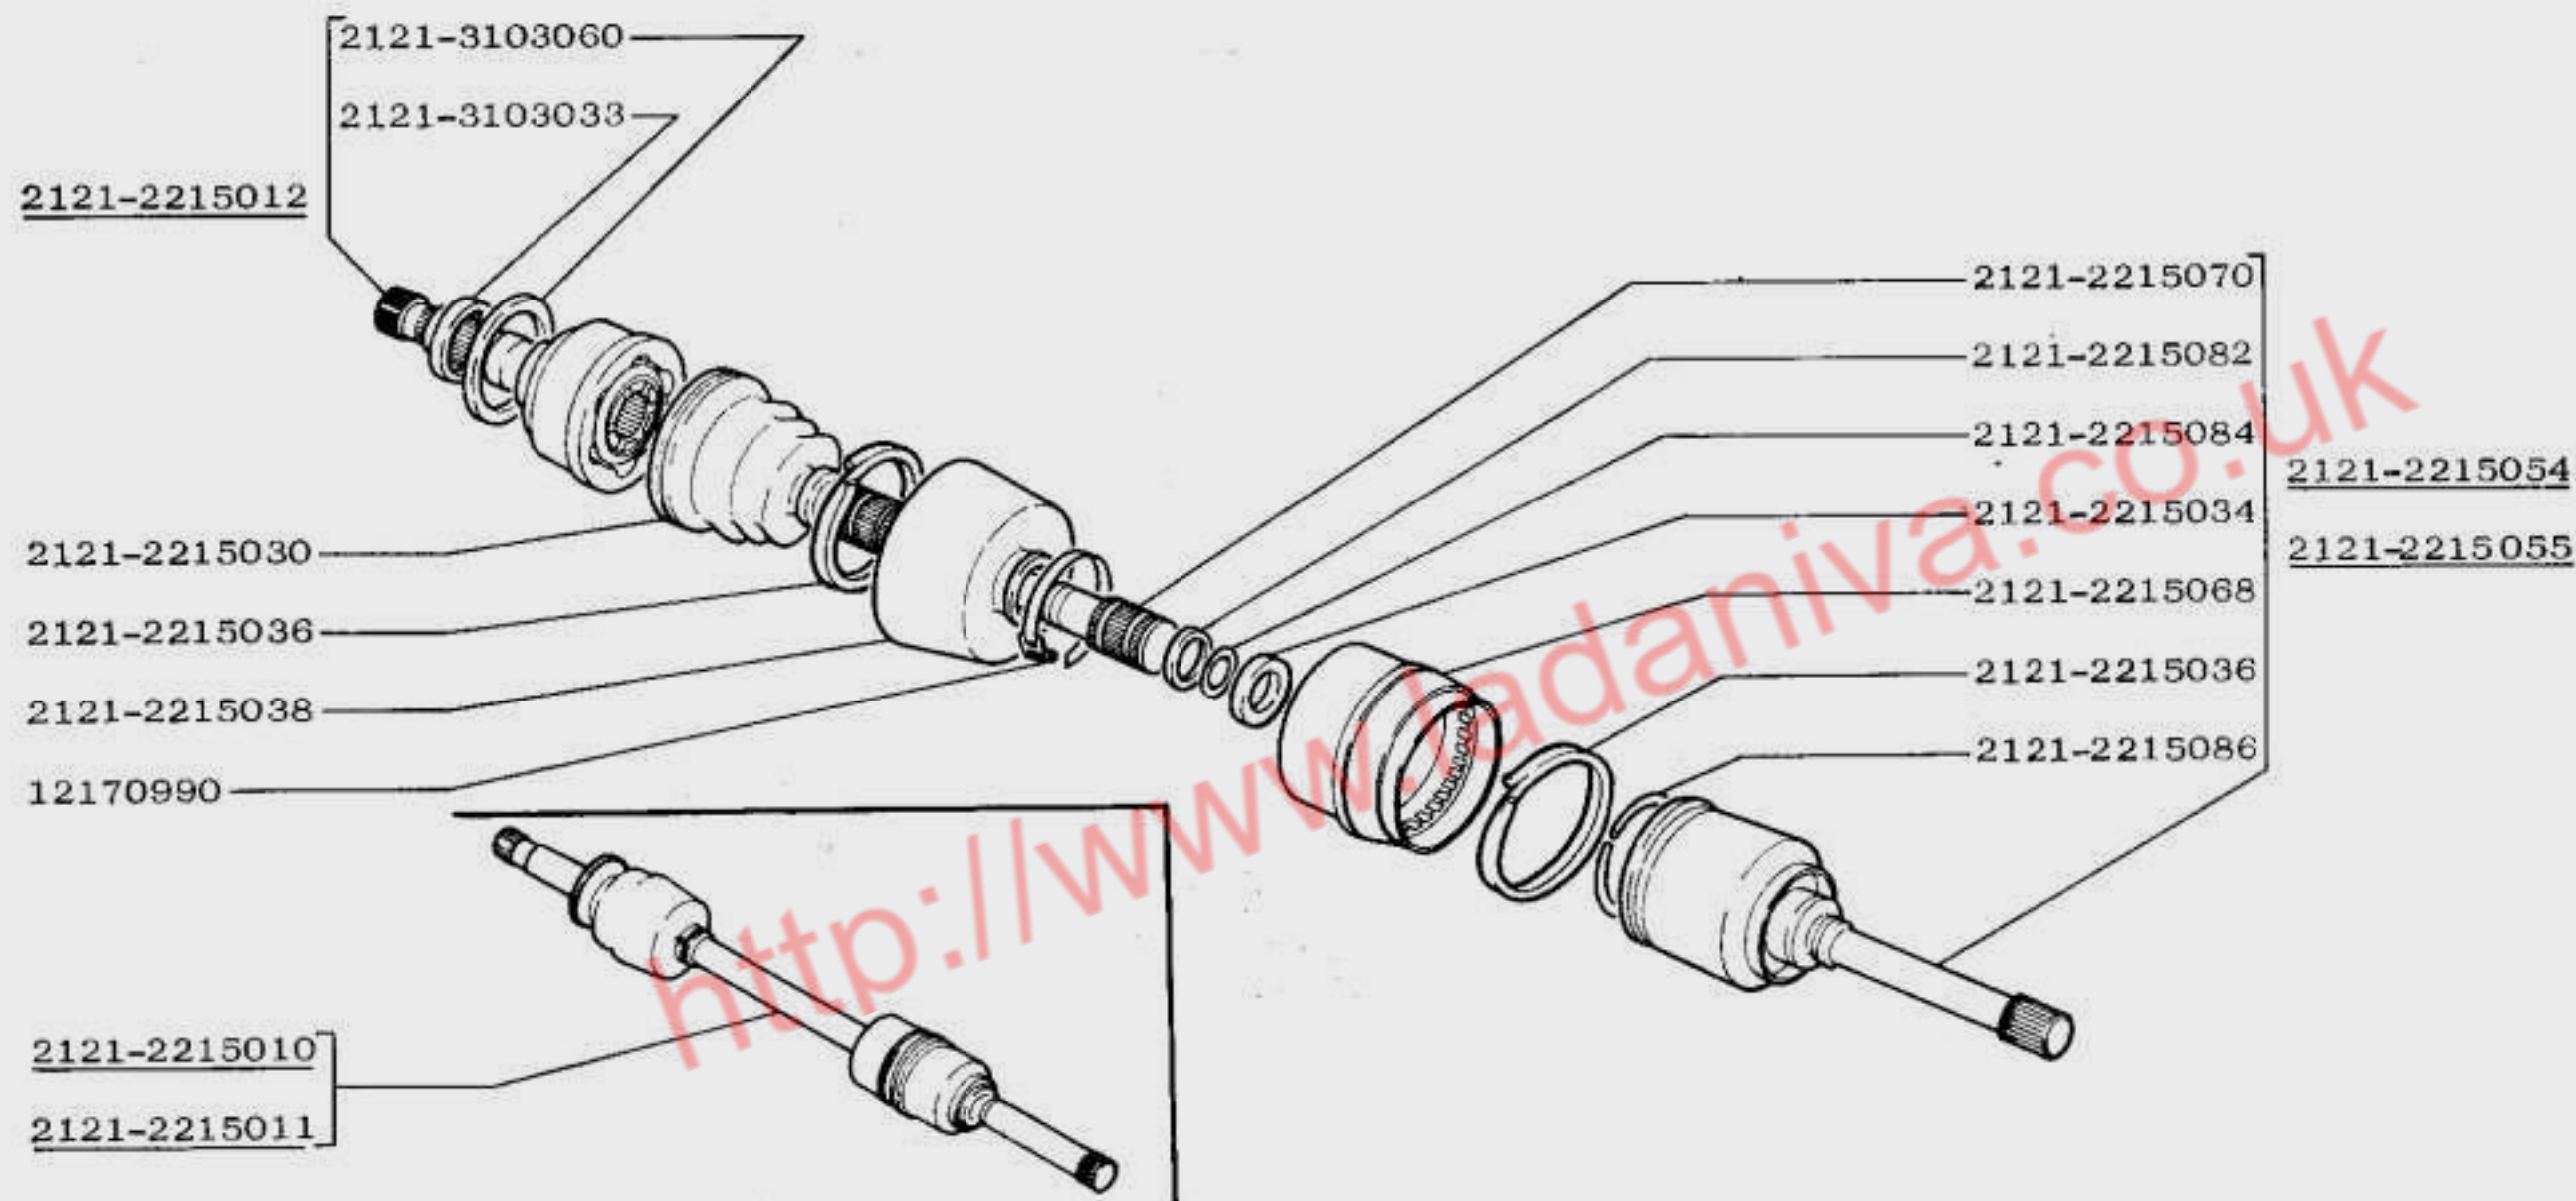

BA3-2121
BA3-21211

Привод передних колес
Front Wheel Drive
Entraînement des roues avant
Vorderradantrieb
Mando de las ruedas delanteras


B4.24

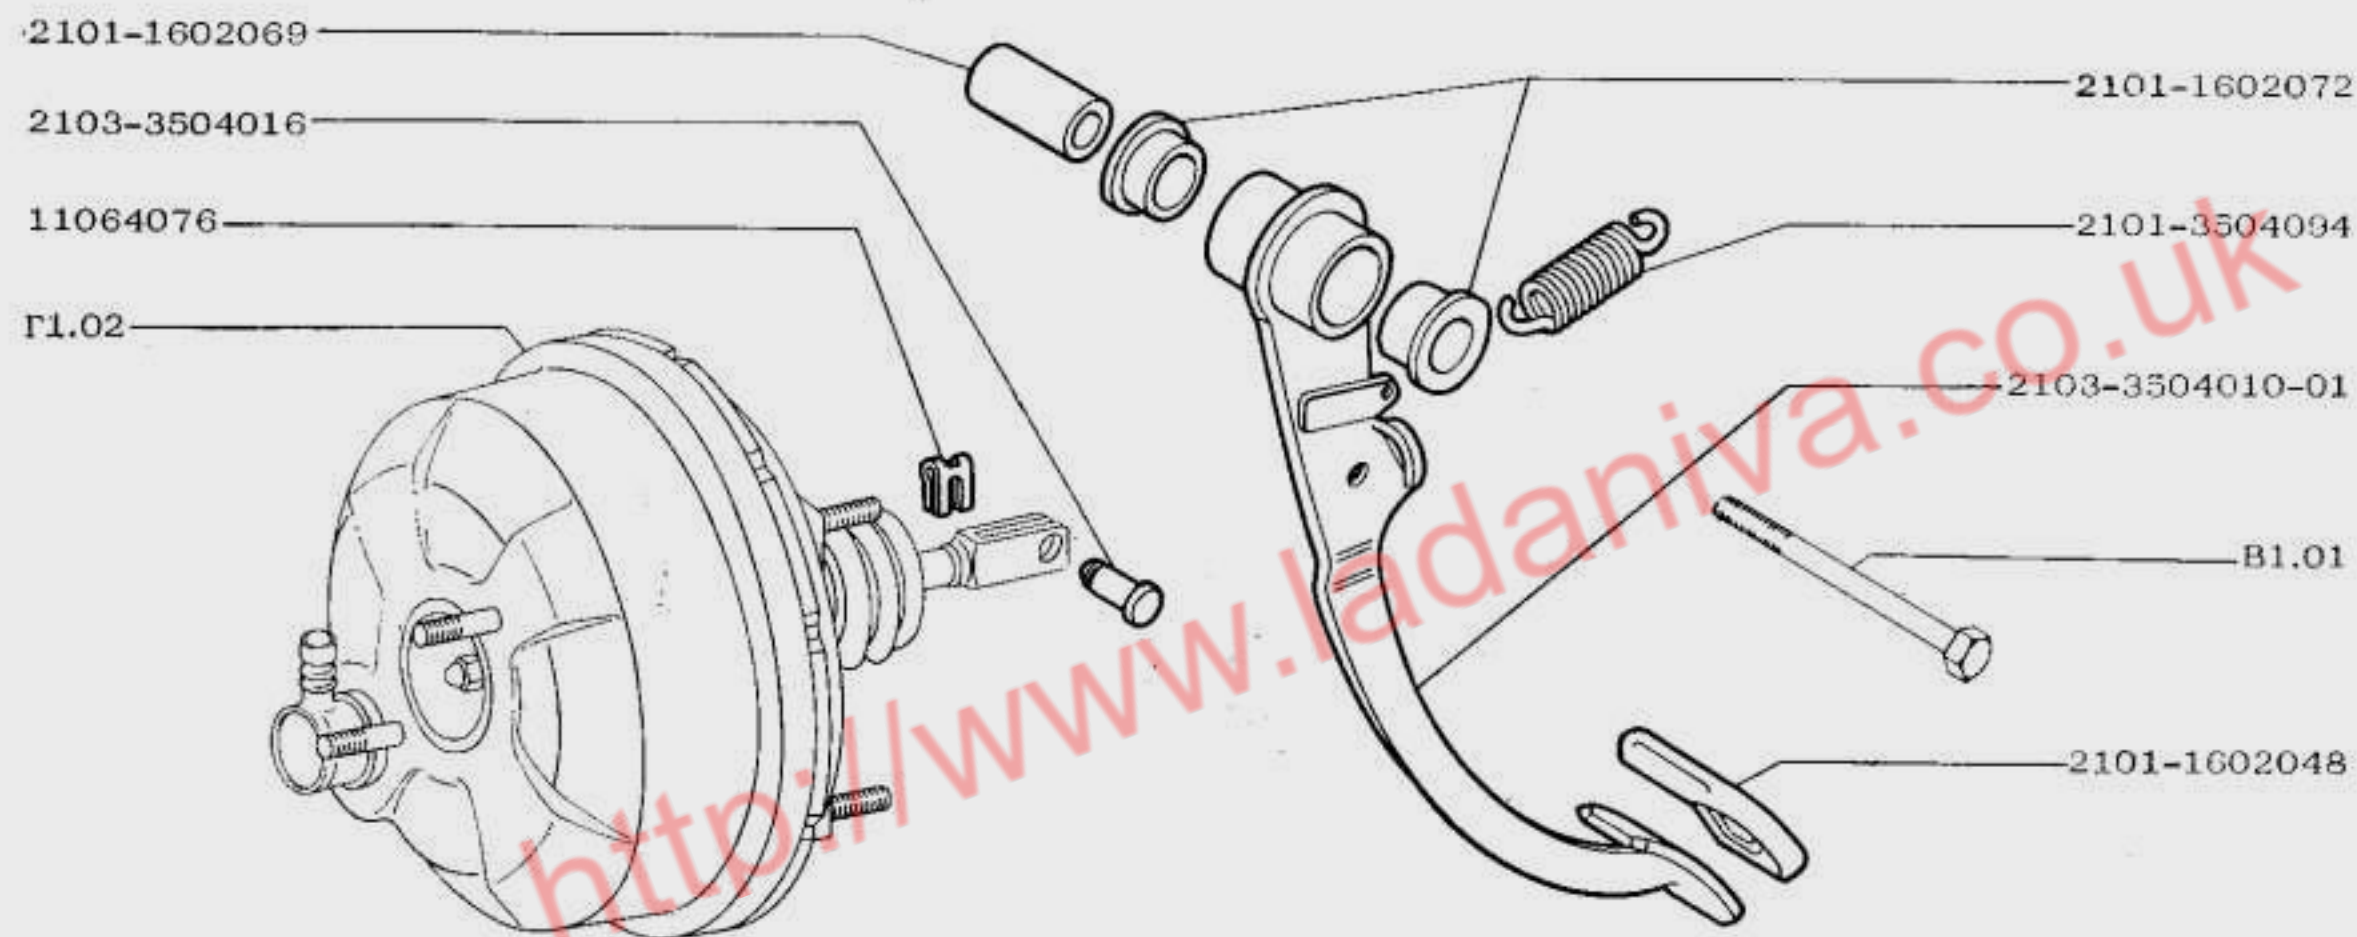

BA3-2121
BA3-21211

Педаля тормозная и привод
Brake Pedal and Linkage
Pédale de frein et commande
Bremspedal und Gestänge
Pedal del freno y mando


Г1.01

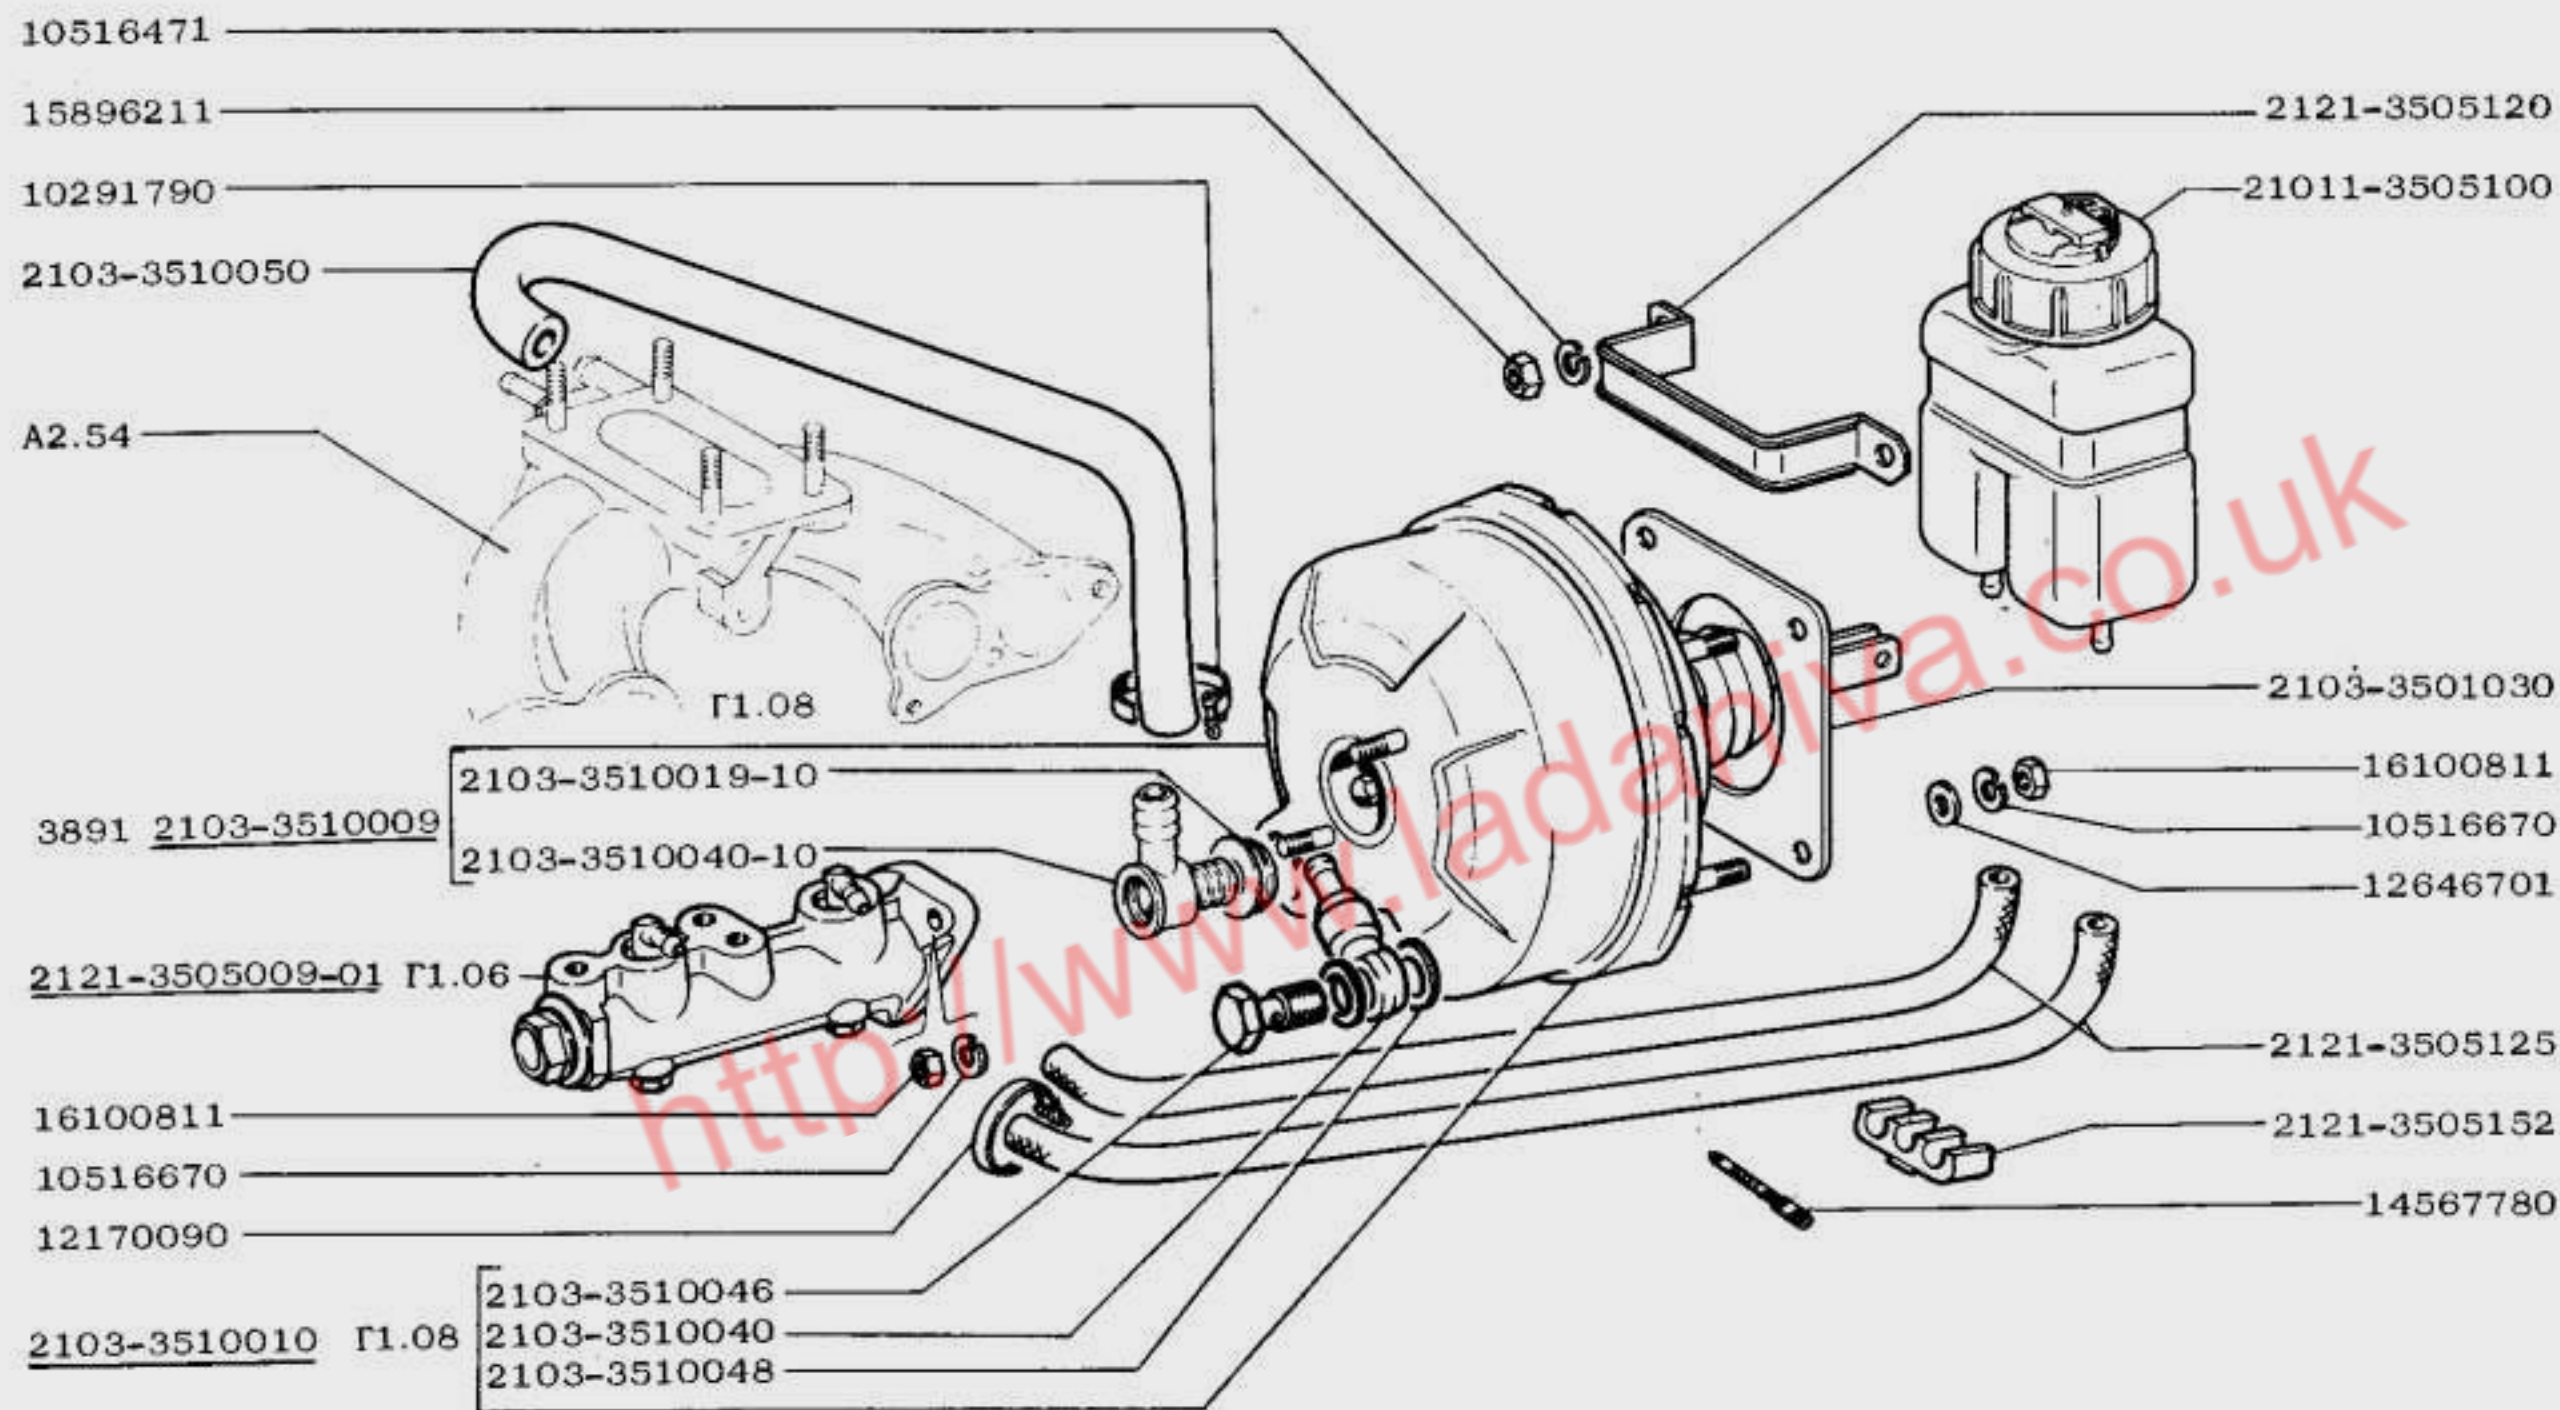

BA3-2121
BA3-21211

Механизм управления тормозами
Brake Control Mechanism
Mécanisme de commande des freins
Bremsbetätigung
Mecanismo de mando de los frenos


Г1.02

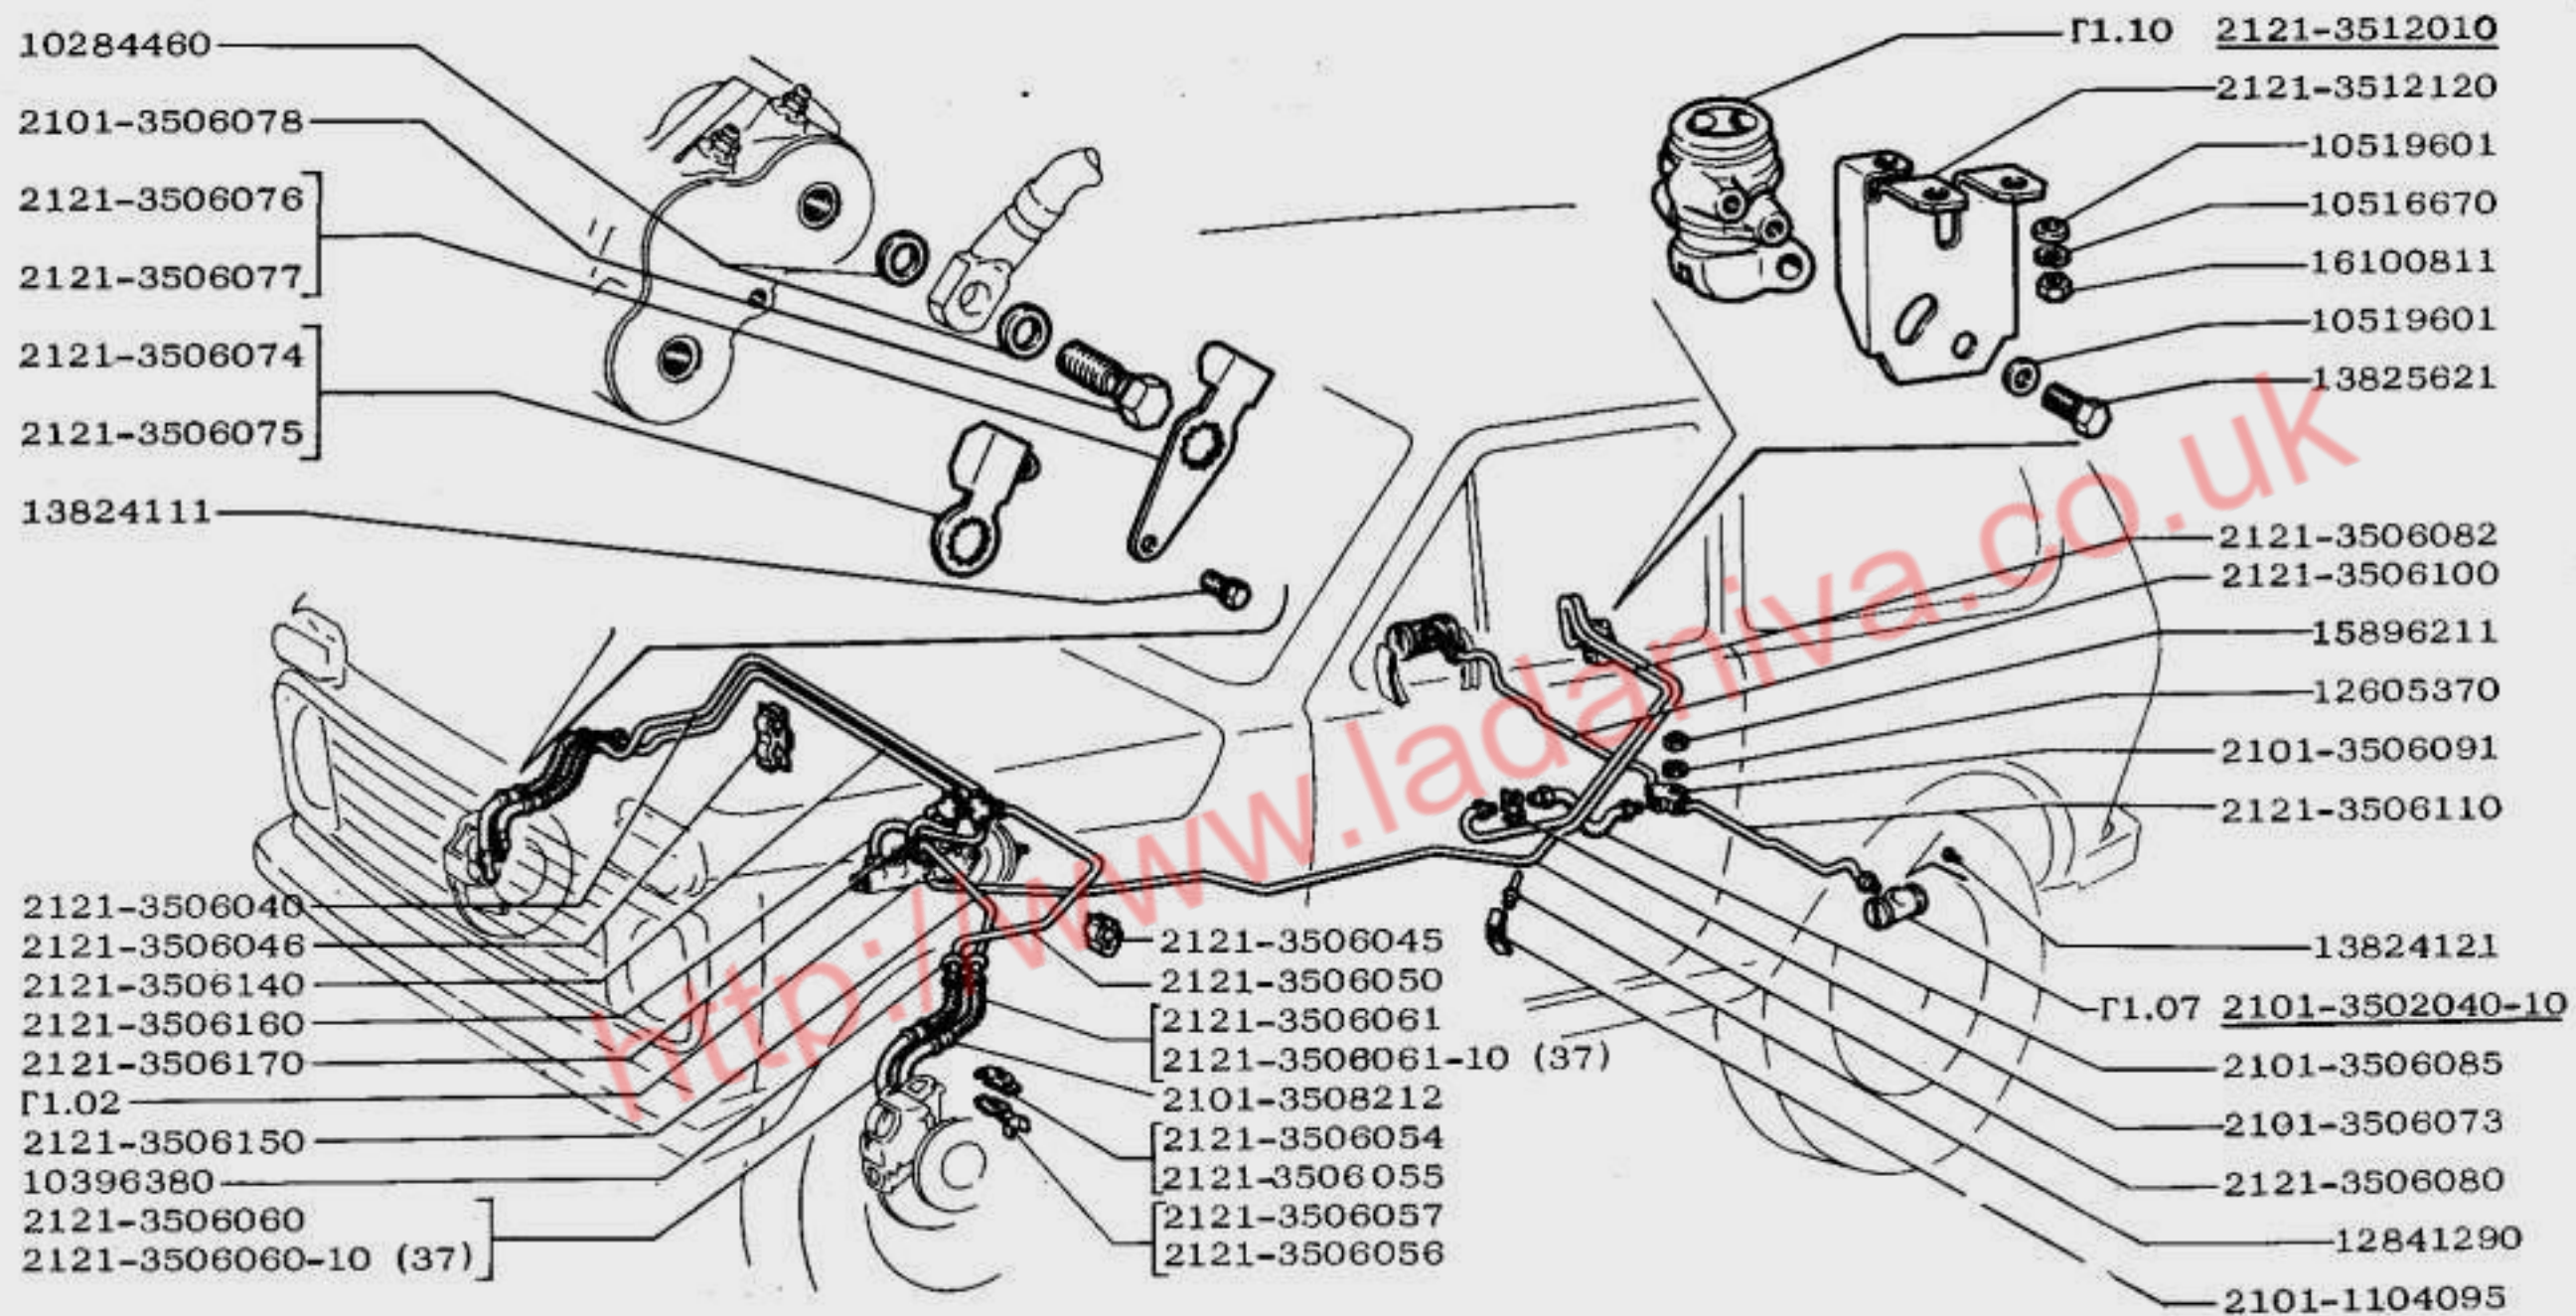

BA3-2121
BA3-21211

Система гидротормозов
Hydraulic Brake System
Système des freins hydrauliques
Hydraulische Bremse
Sistema de los frenos hidráulicos


Г1.03

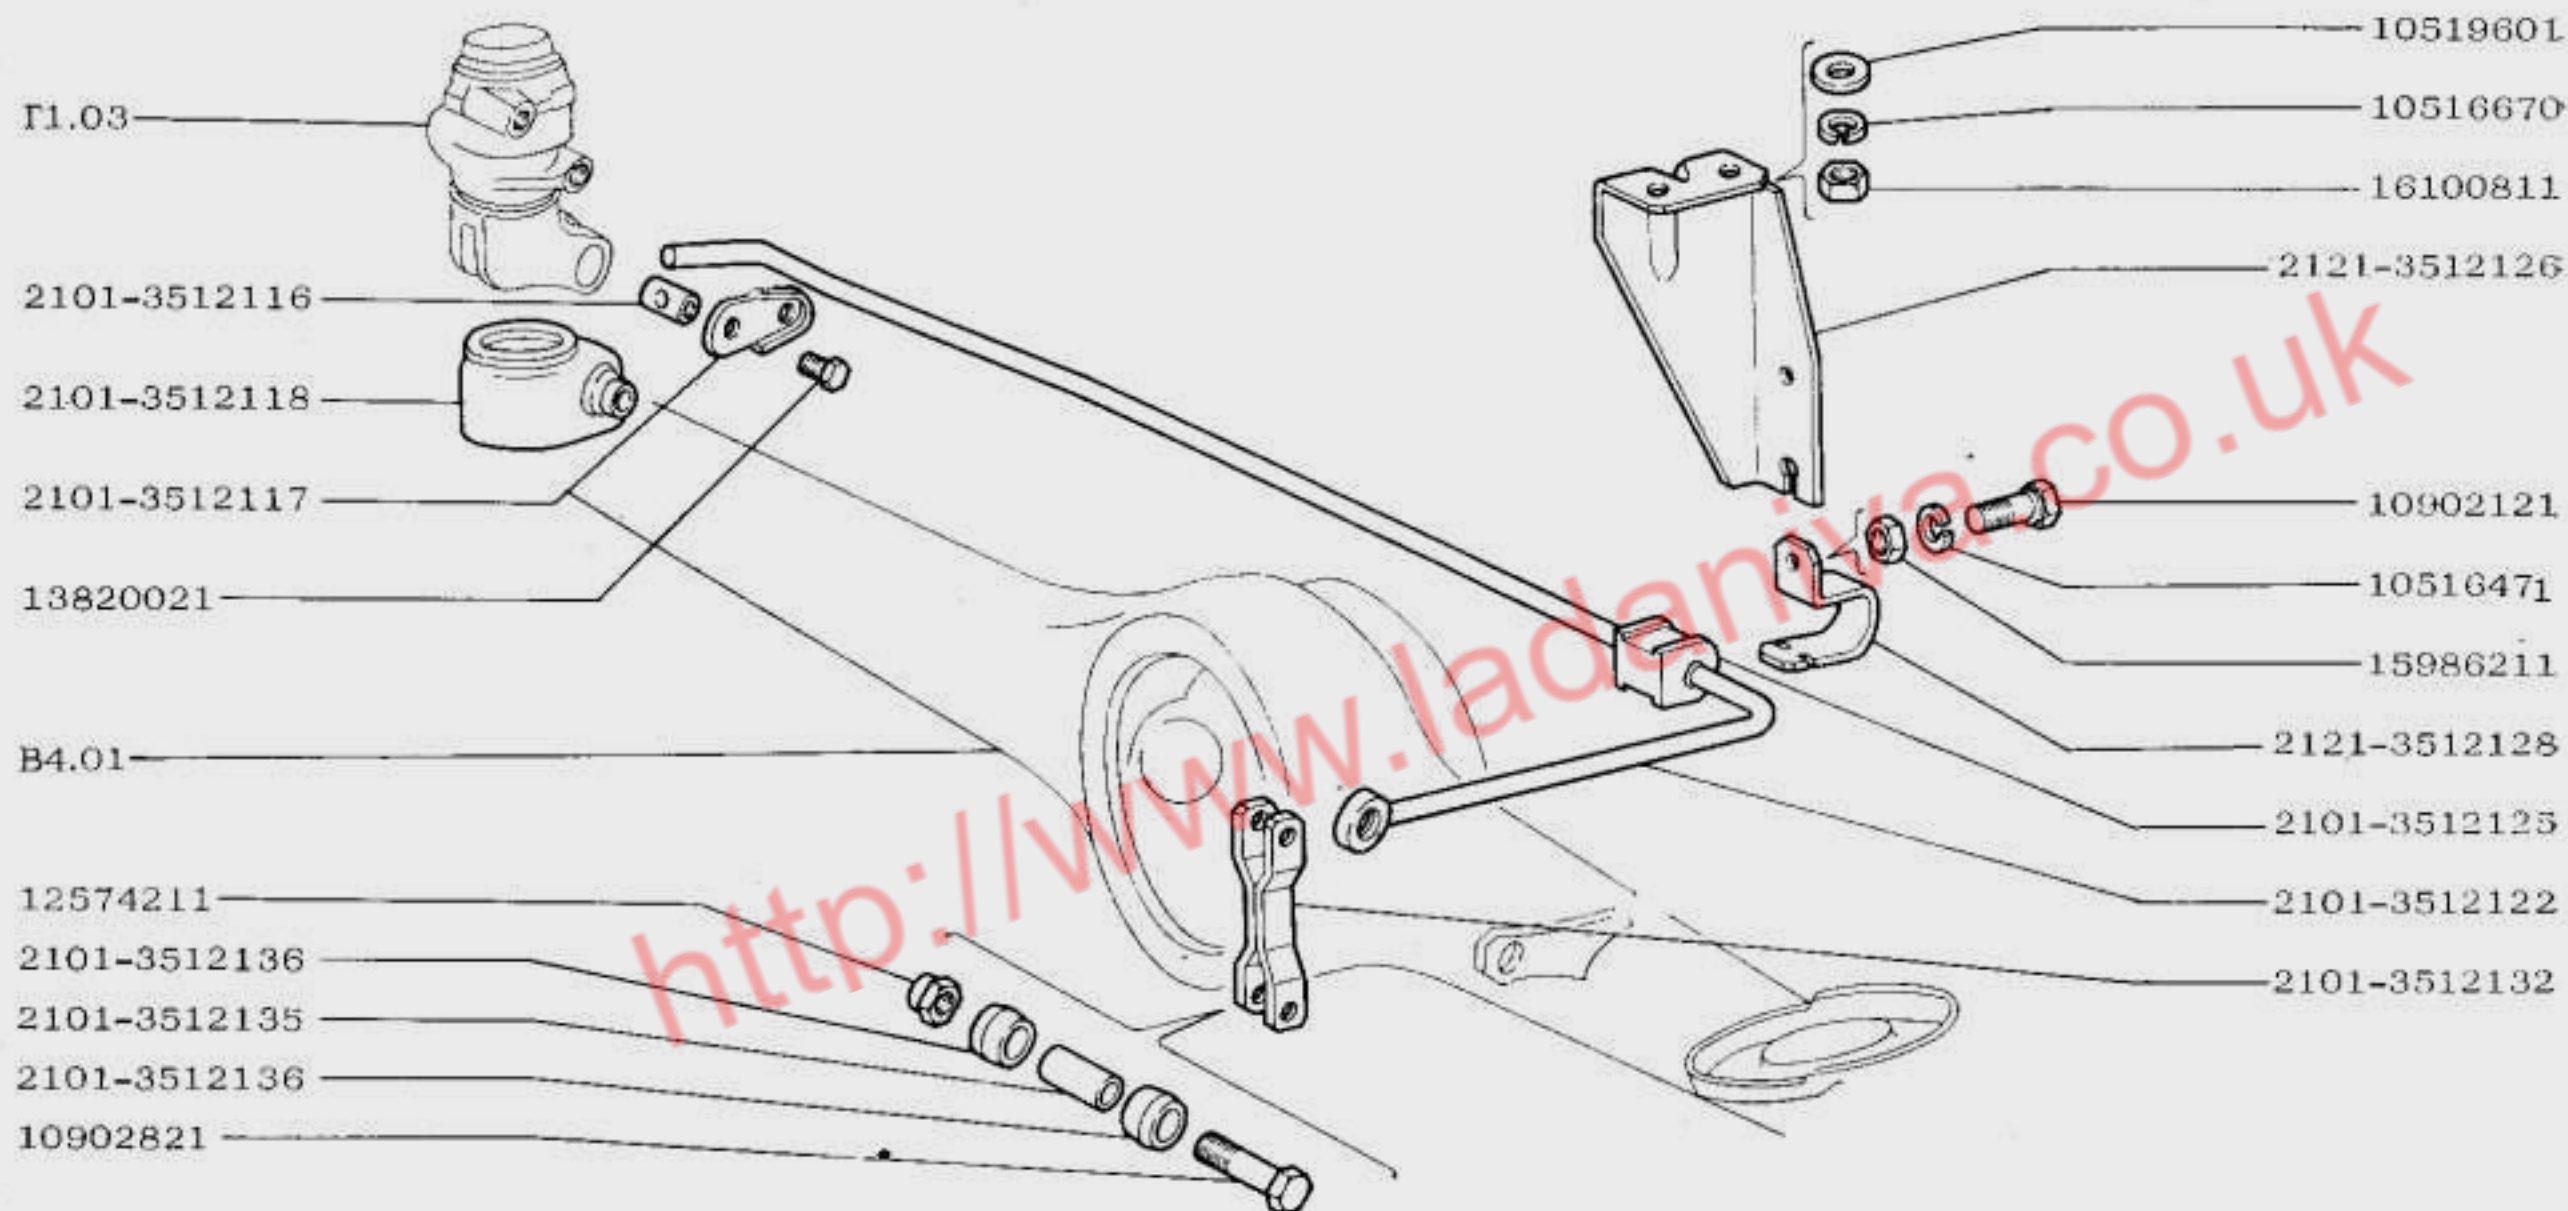

BA3-2121
BA3-21211

Привод регулятора давления
Pressure Regulator Linkage
Commande du répartiteur de freinage
Druckreglerantrieb
Mando del regulador de la presión


Г1.04

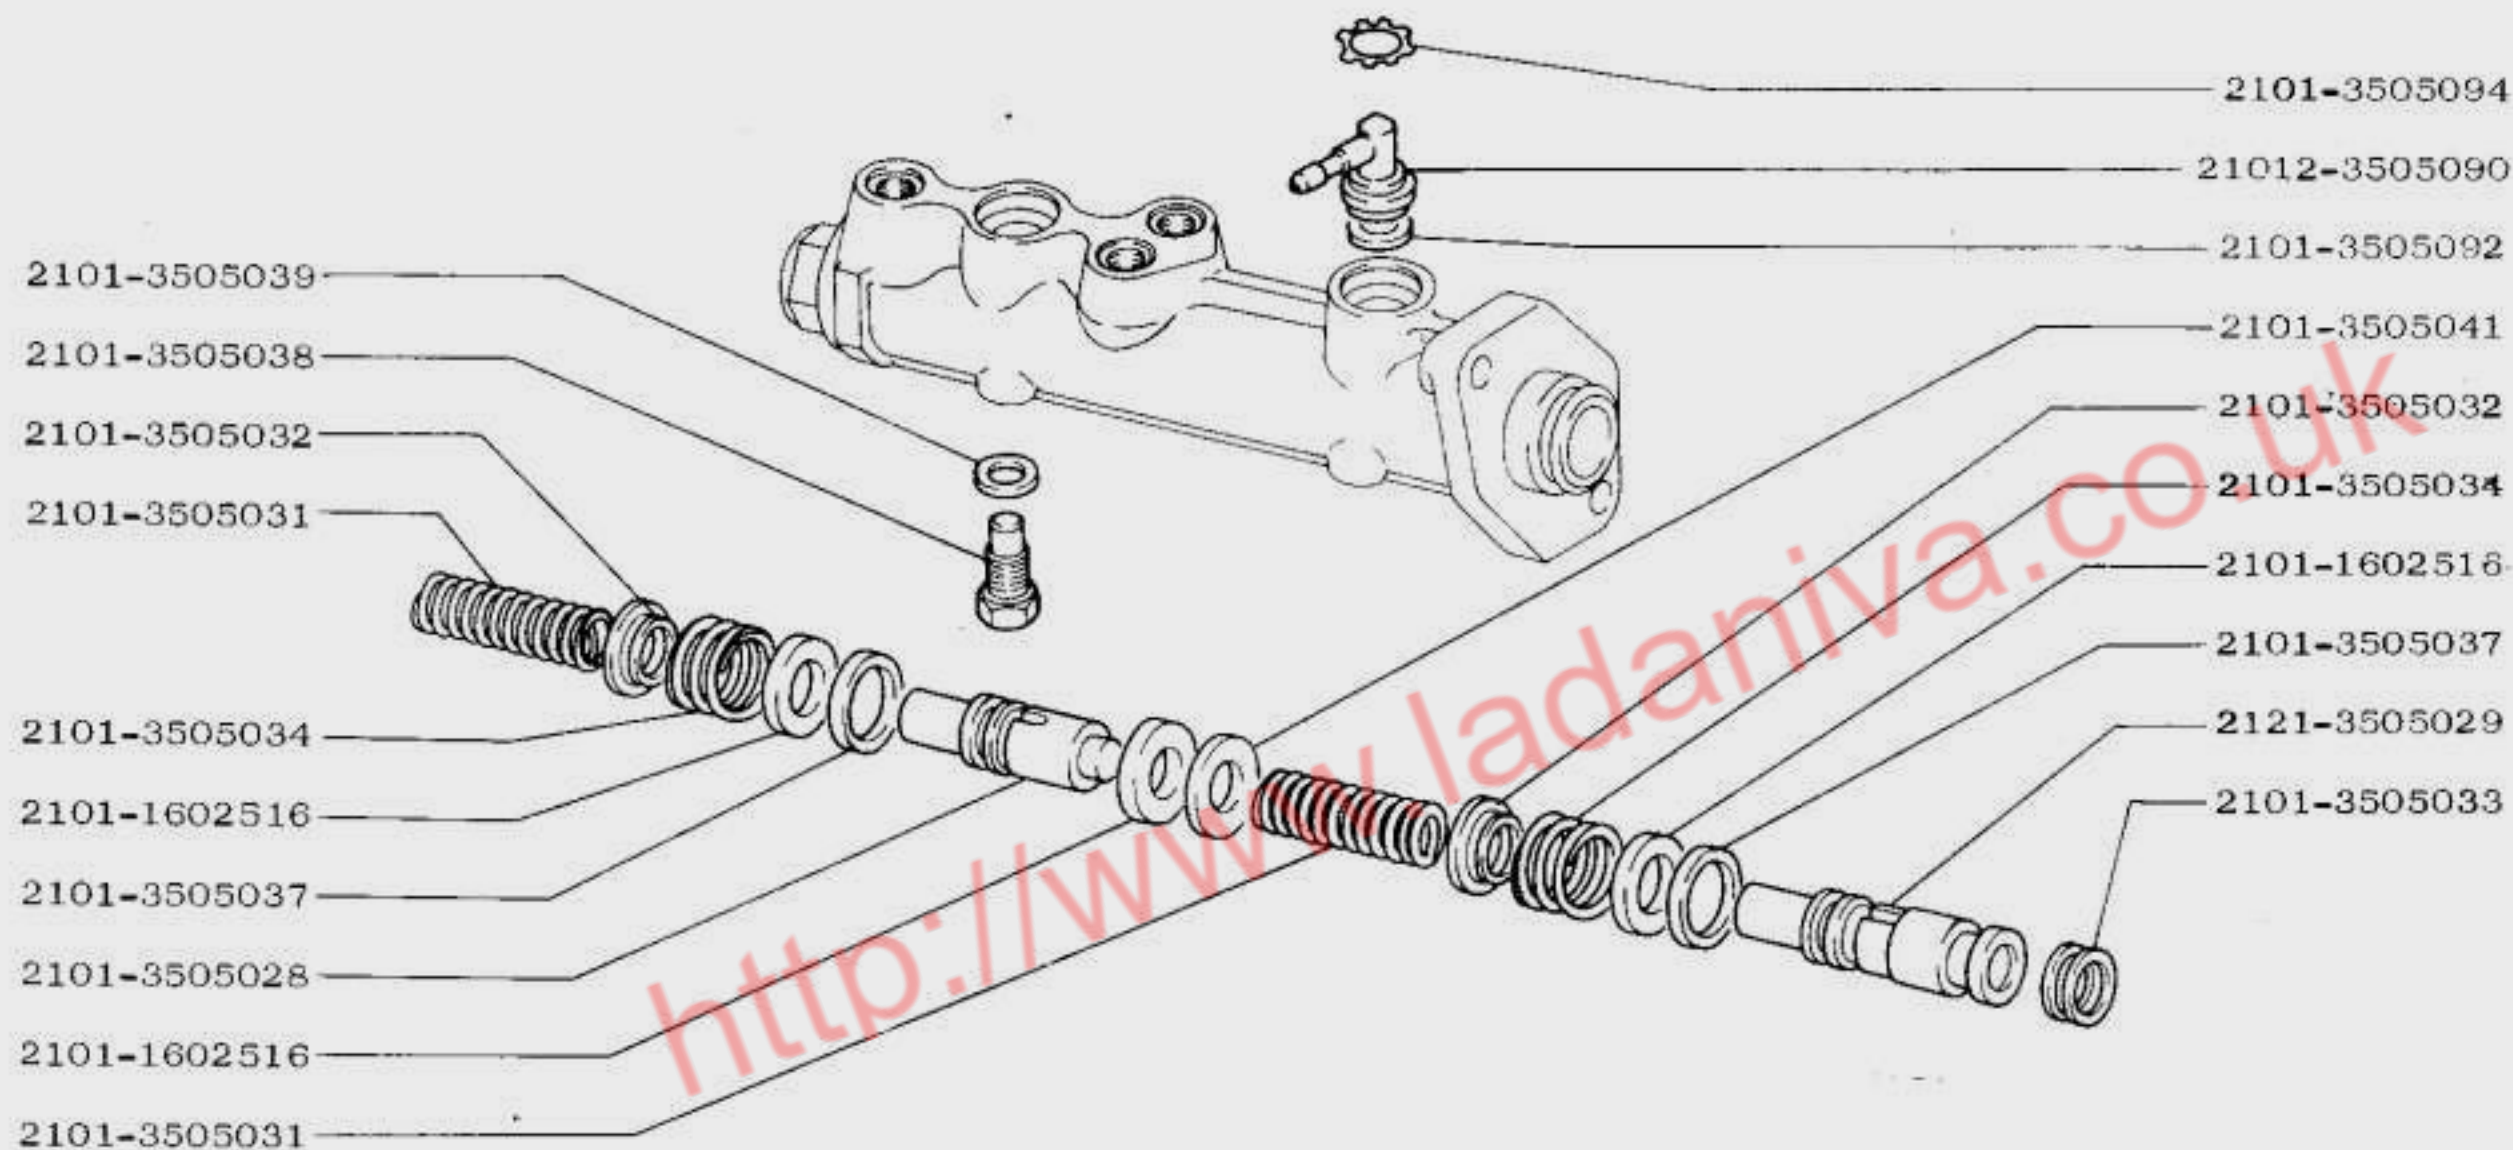

BA3-2121
BA3-21211

Цилиндр главный гидротормозов
Brake Master Cylinder
Maître-cylindre de commande des freins hydrauliques
Hauptbremszylinder
Cilindro principal de los frenos hidráulicos


Г1.06

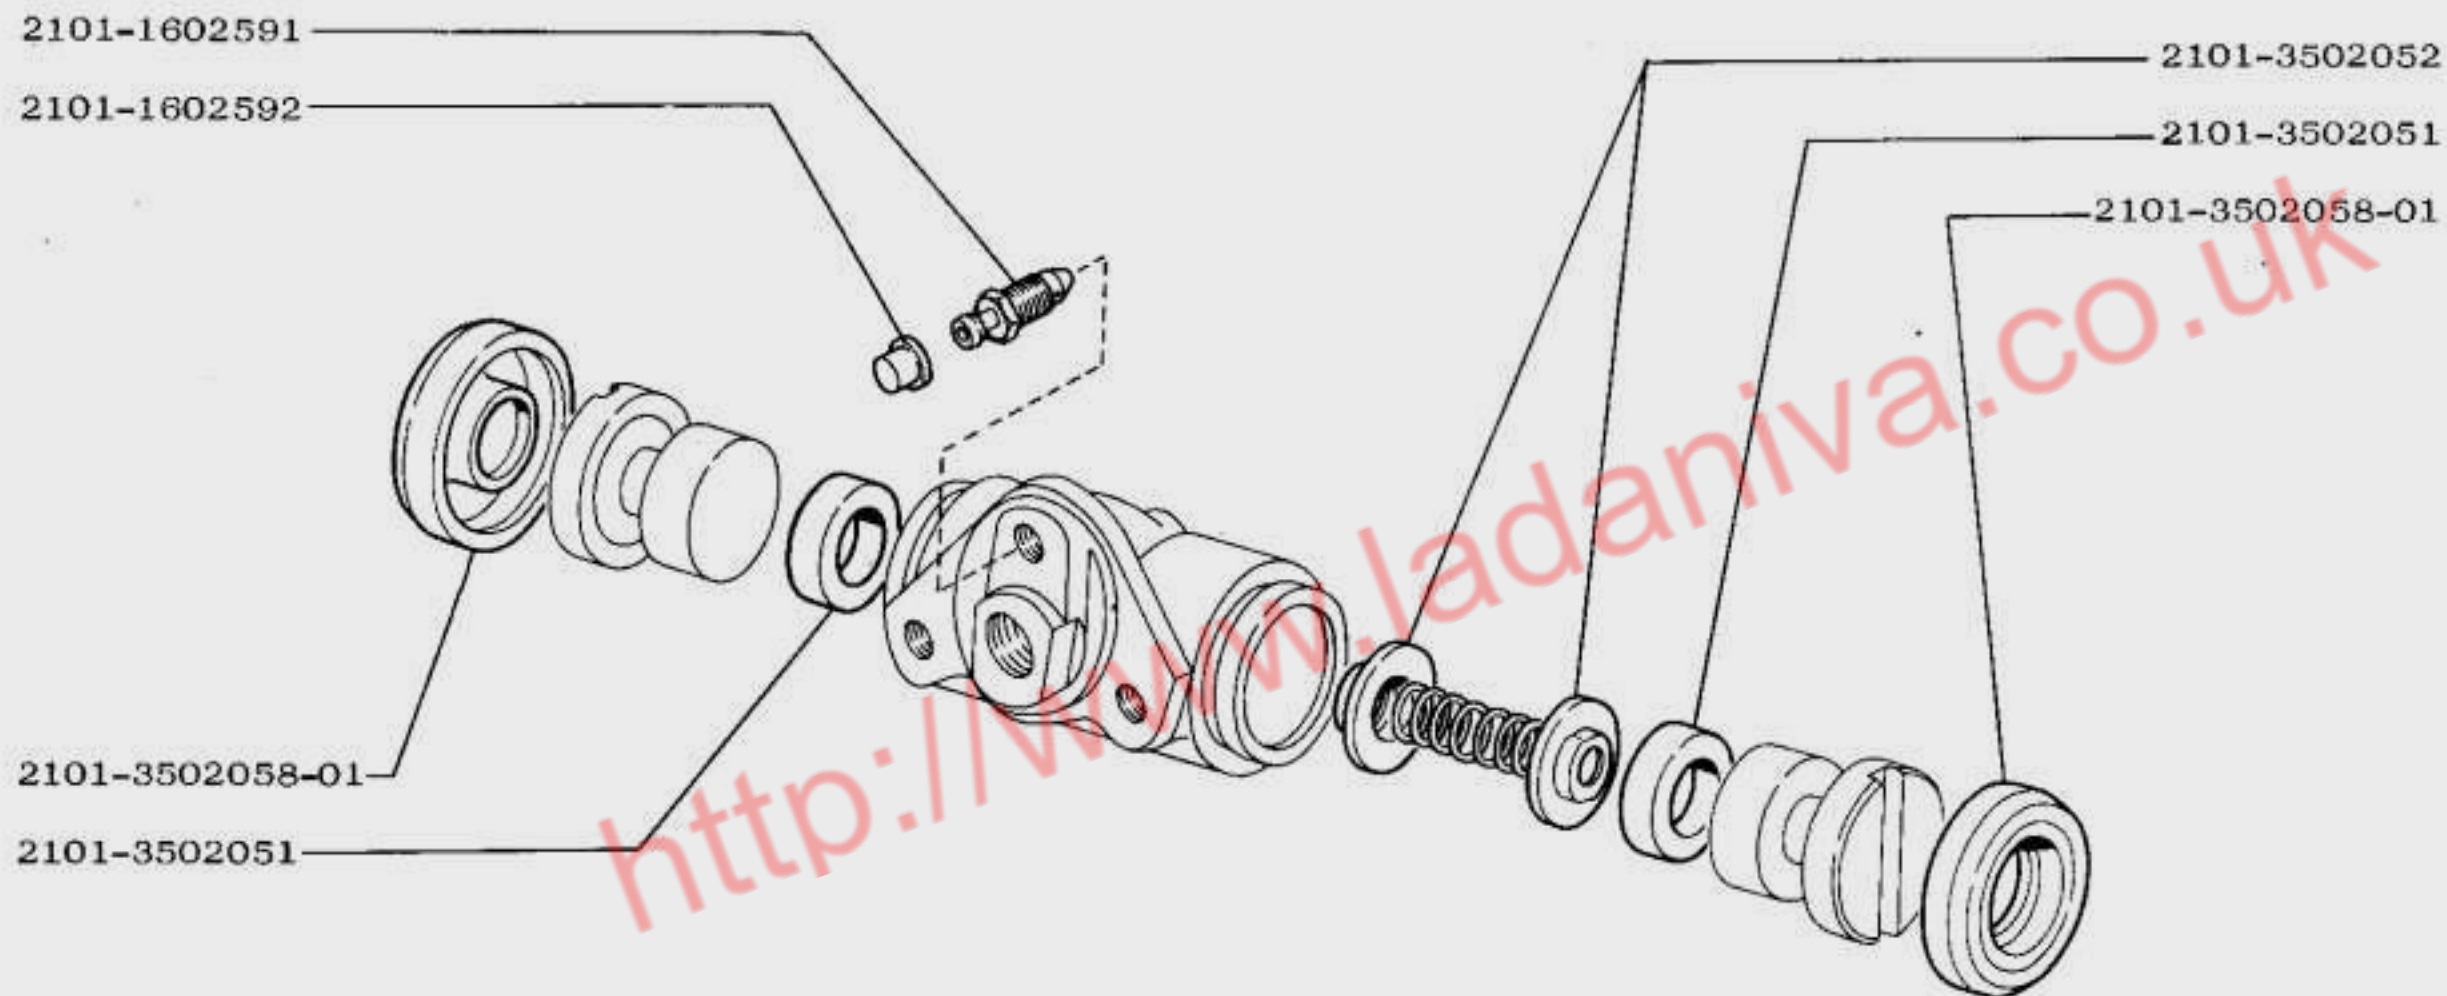

BA3-2121
BA3-21211

Цилиндр колесного заднего тормоза
Rear Wheel Brake Cylinder
Cylindre récepteur du frein de roue arrière
Hinterradbremsszylinder
Cilindro de freno de la rueda trasera


Г1.07

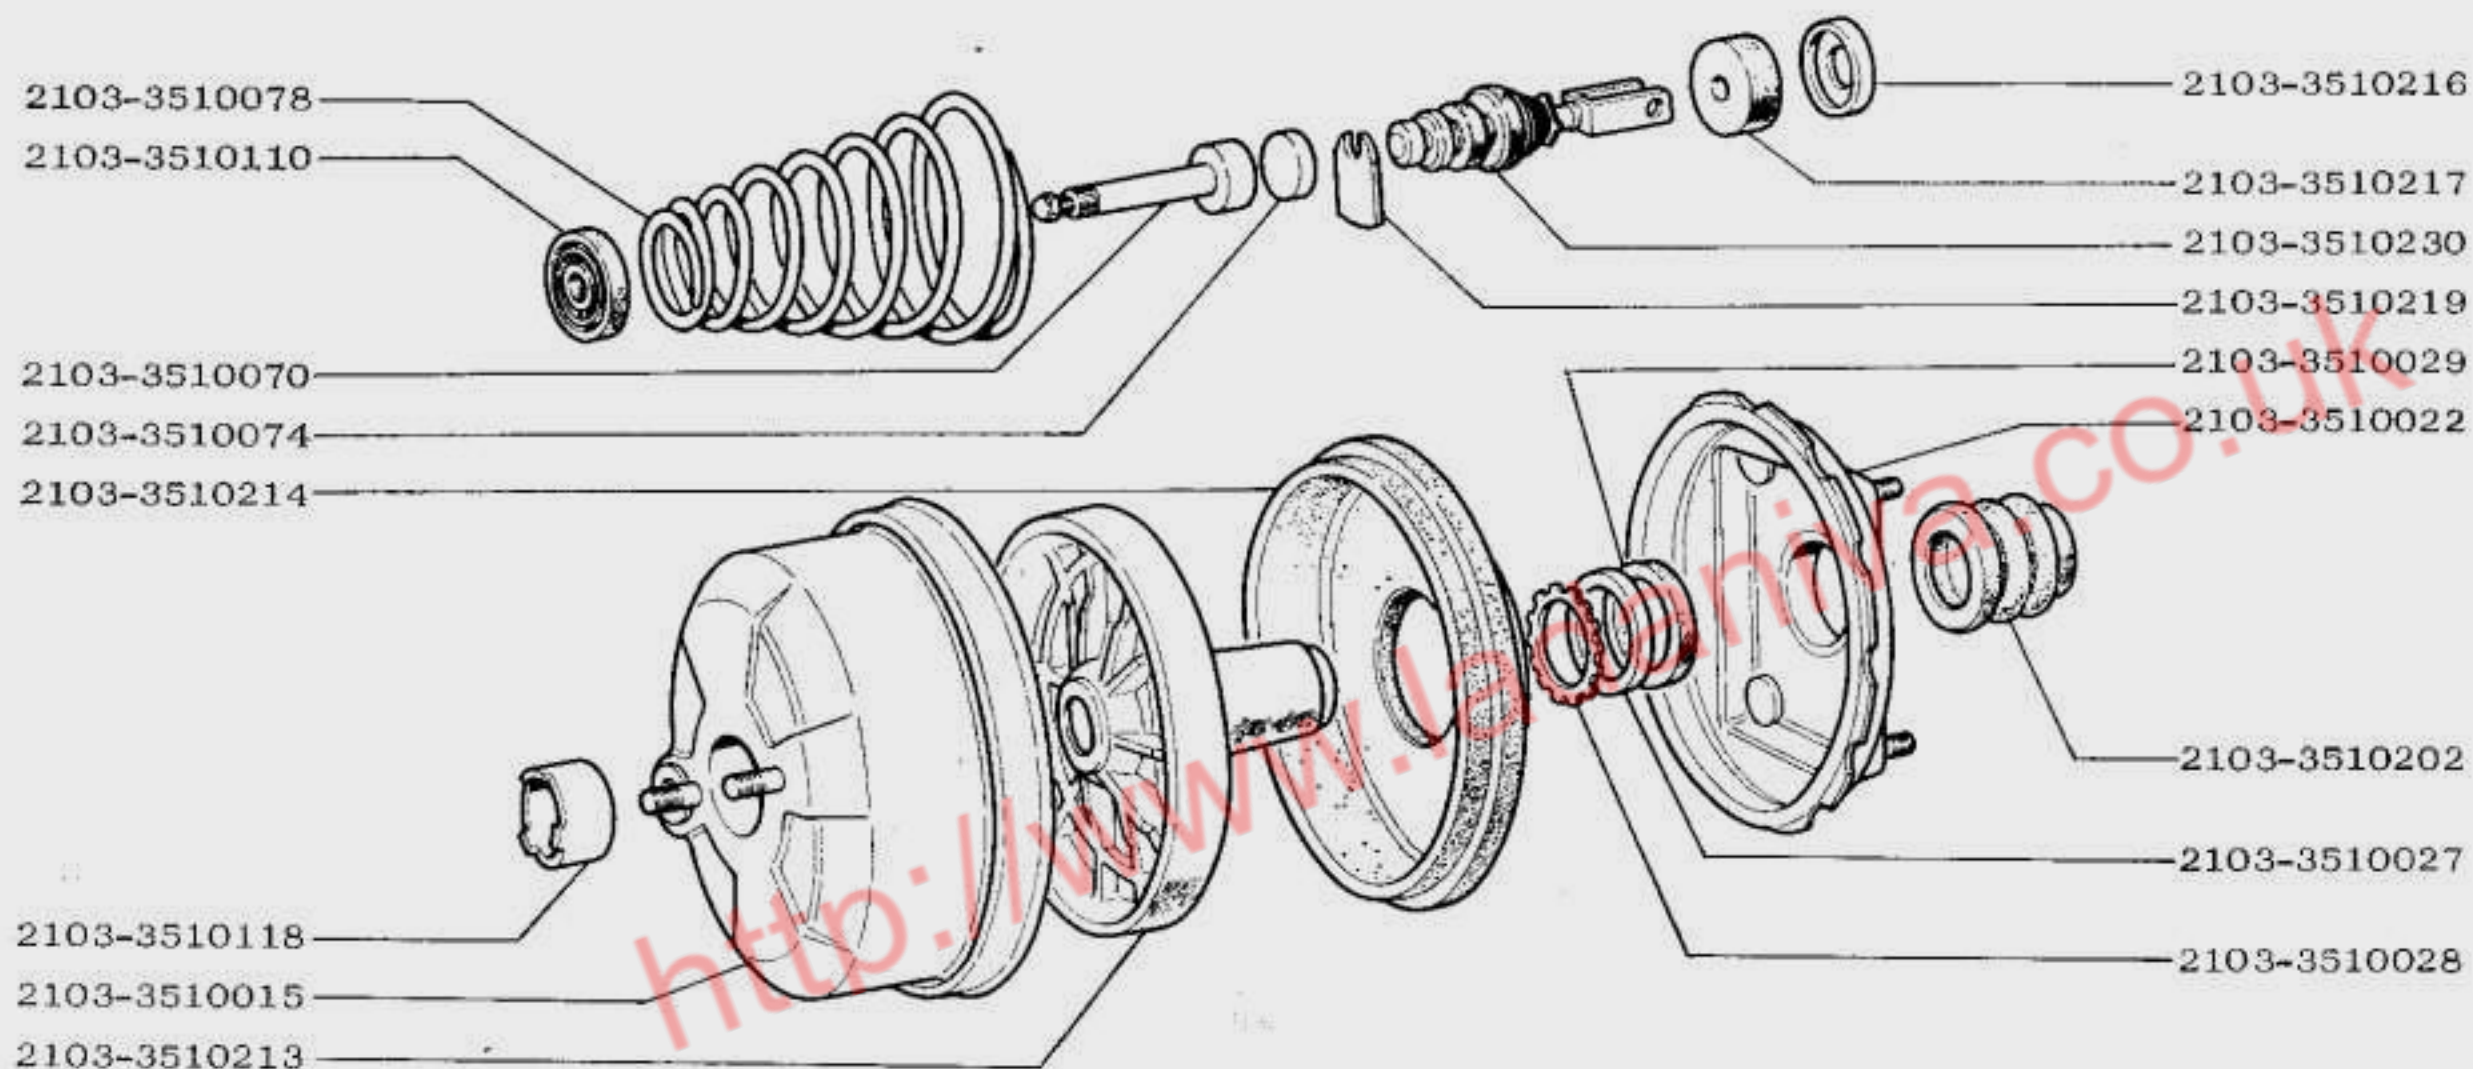

BA3-2121
BA3-21211

Усилитель вакуумный тормозов
Brake Vacuum Booster
Servo-frein à dépression
Unterdruckbremshilfe
Servo a vacío de los frenos


Г1.08

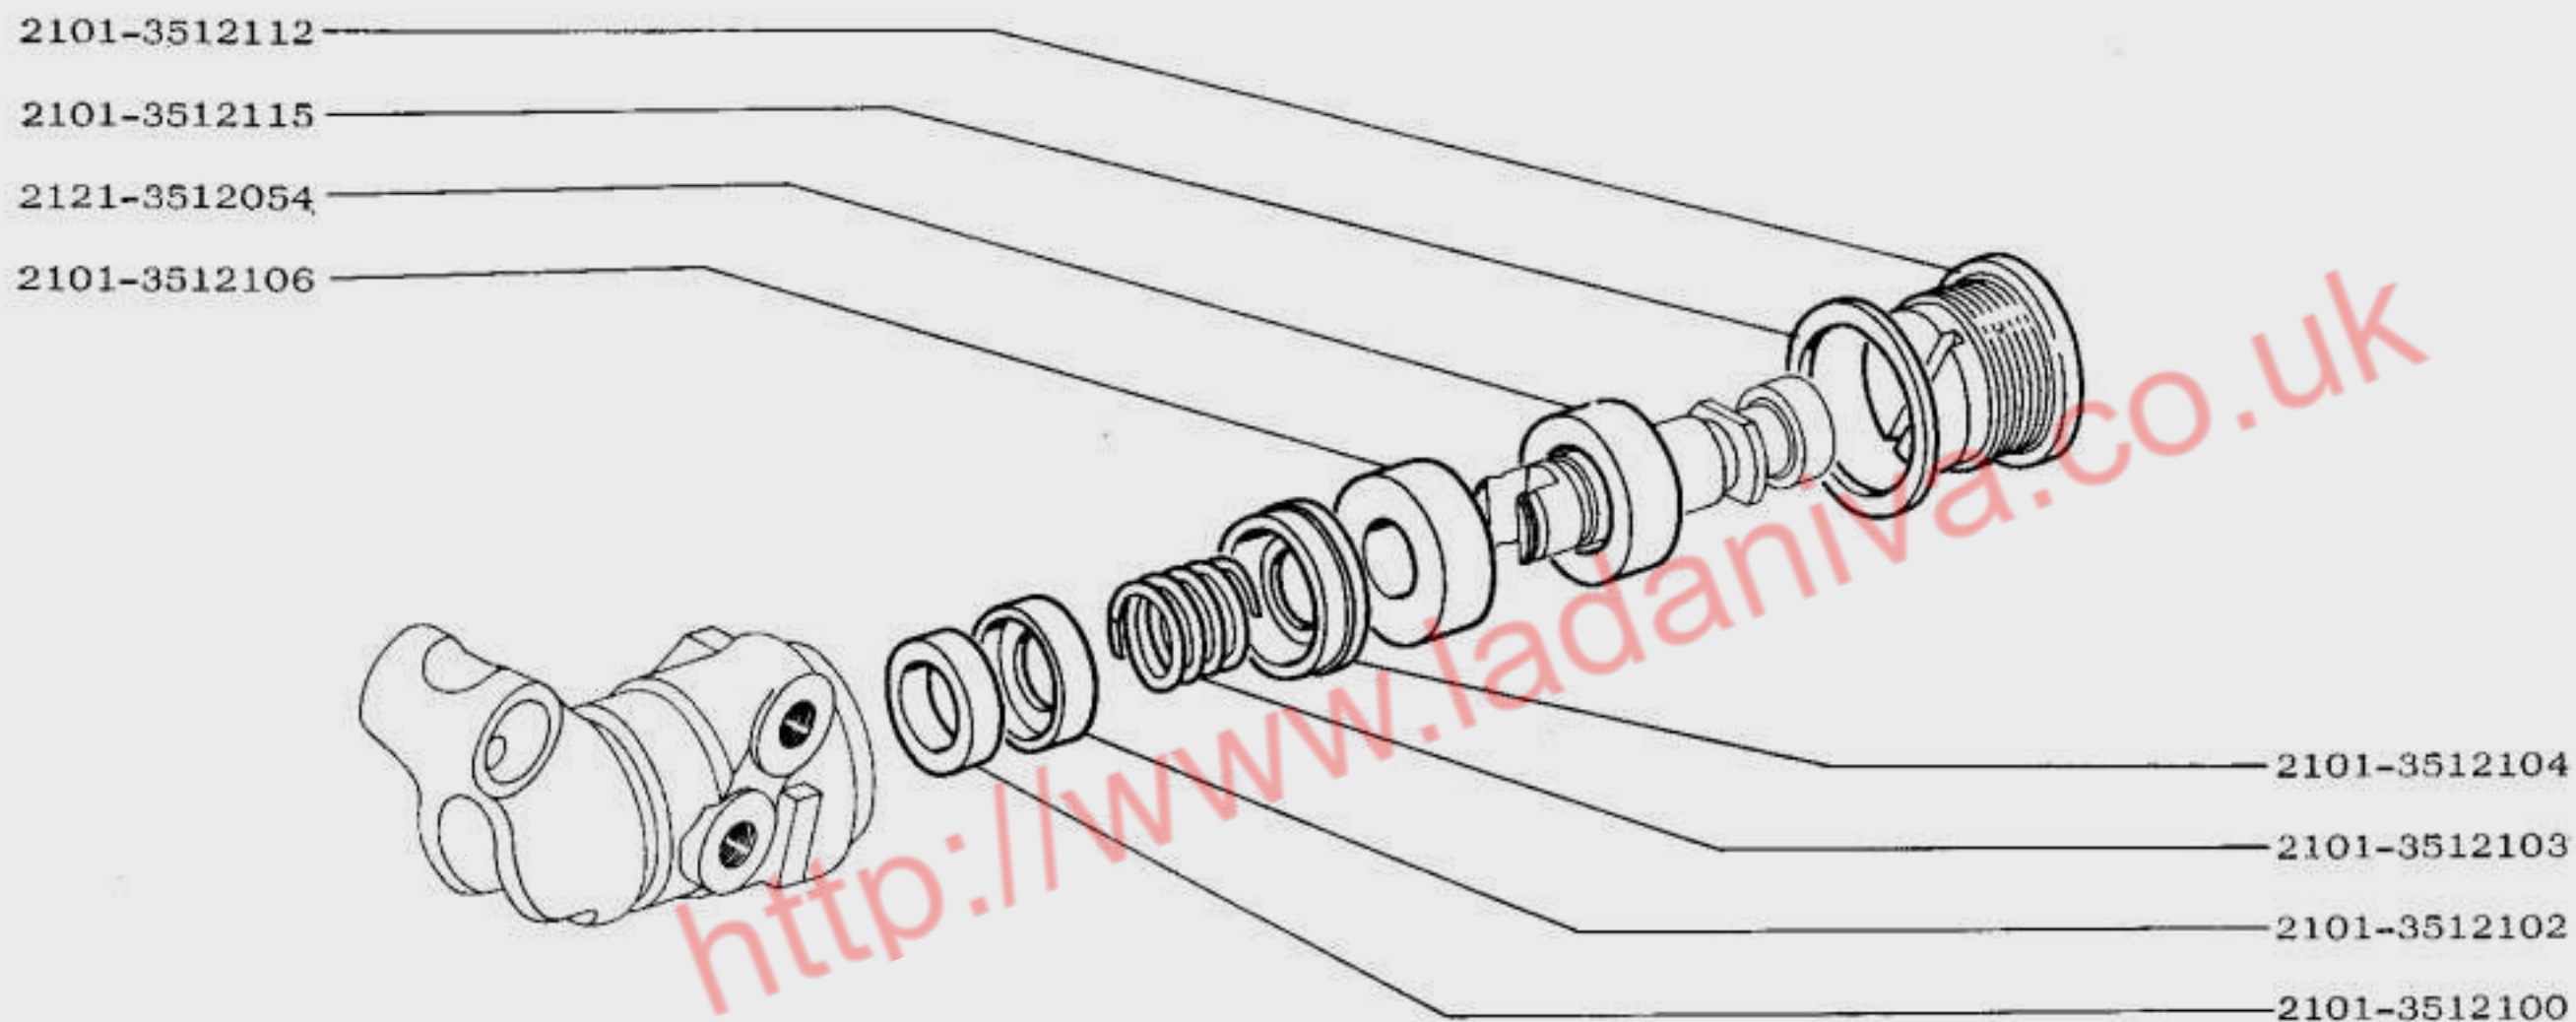

BA3-2121
BA3-21211

Регулятор давления тормозов
 Brake Pressure Regulator
 Répartiteur de freinage
 Bremsdruckregler
 Regulador de presión de los frenos


Г1.10

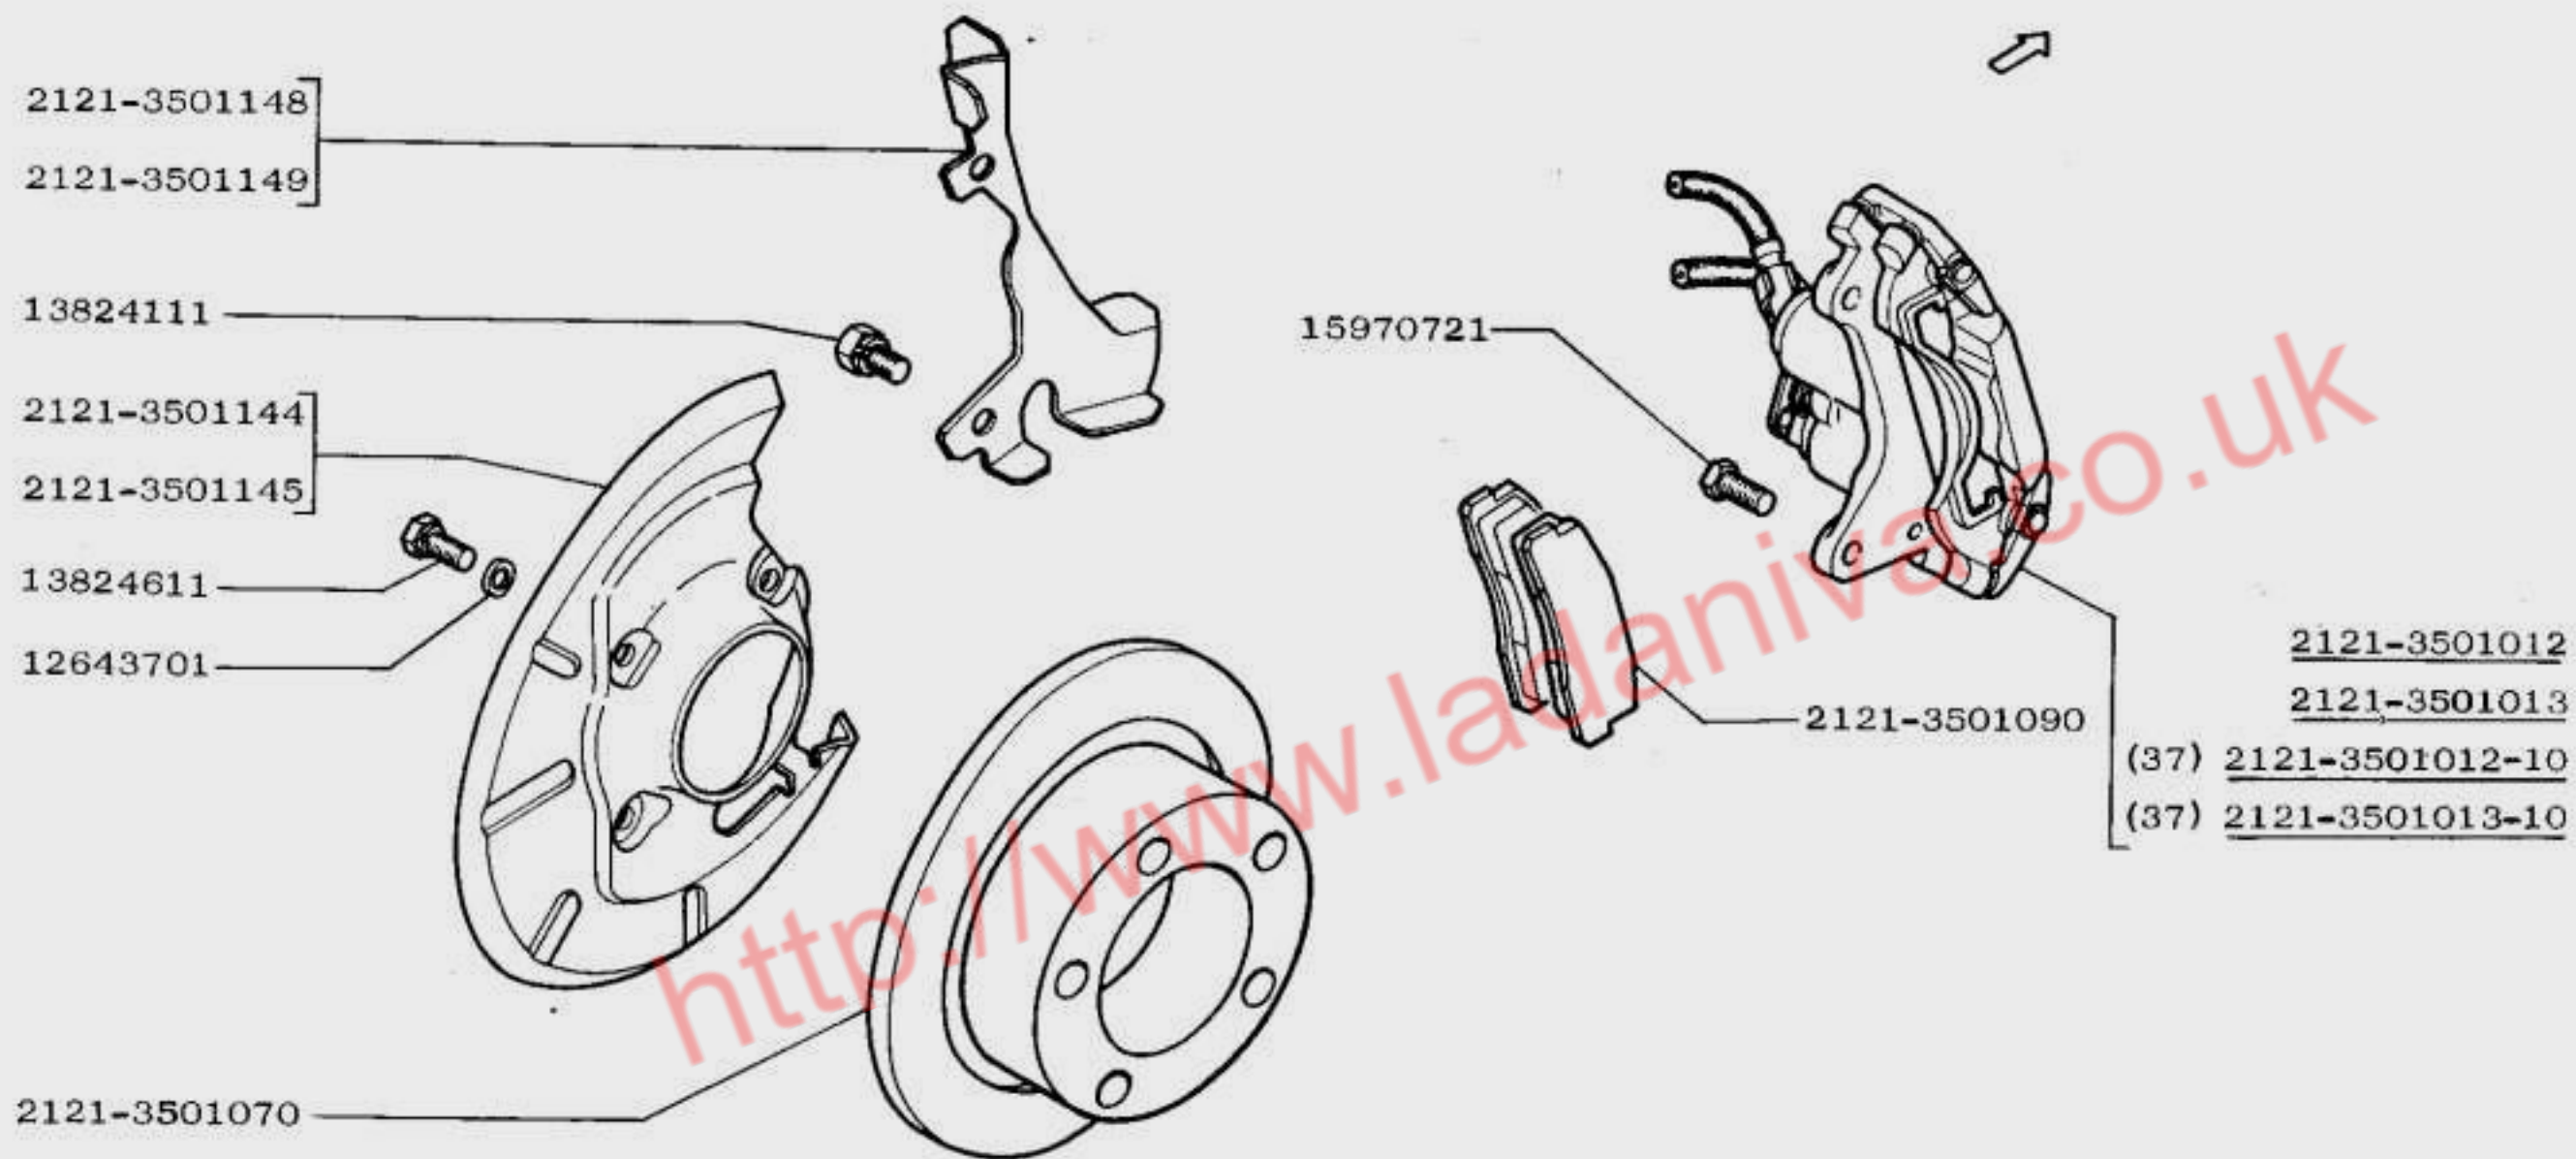

BA3-2121
BA3-21211

Тормоза передние
Front Brakes
Freins avant
Vorderradbremsen
Frenos delanteros


Г1.30

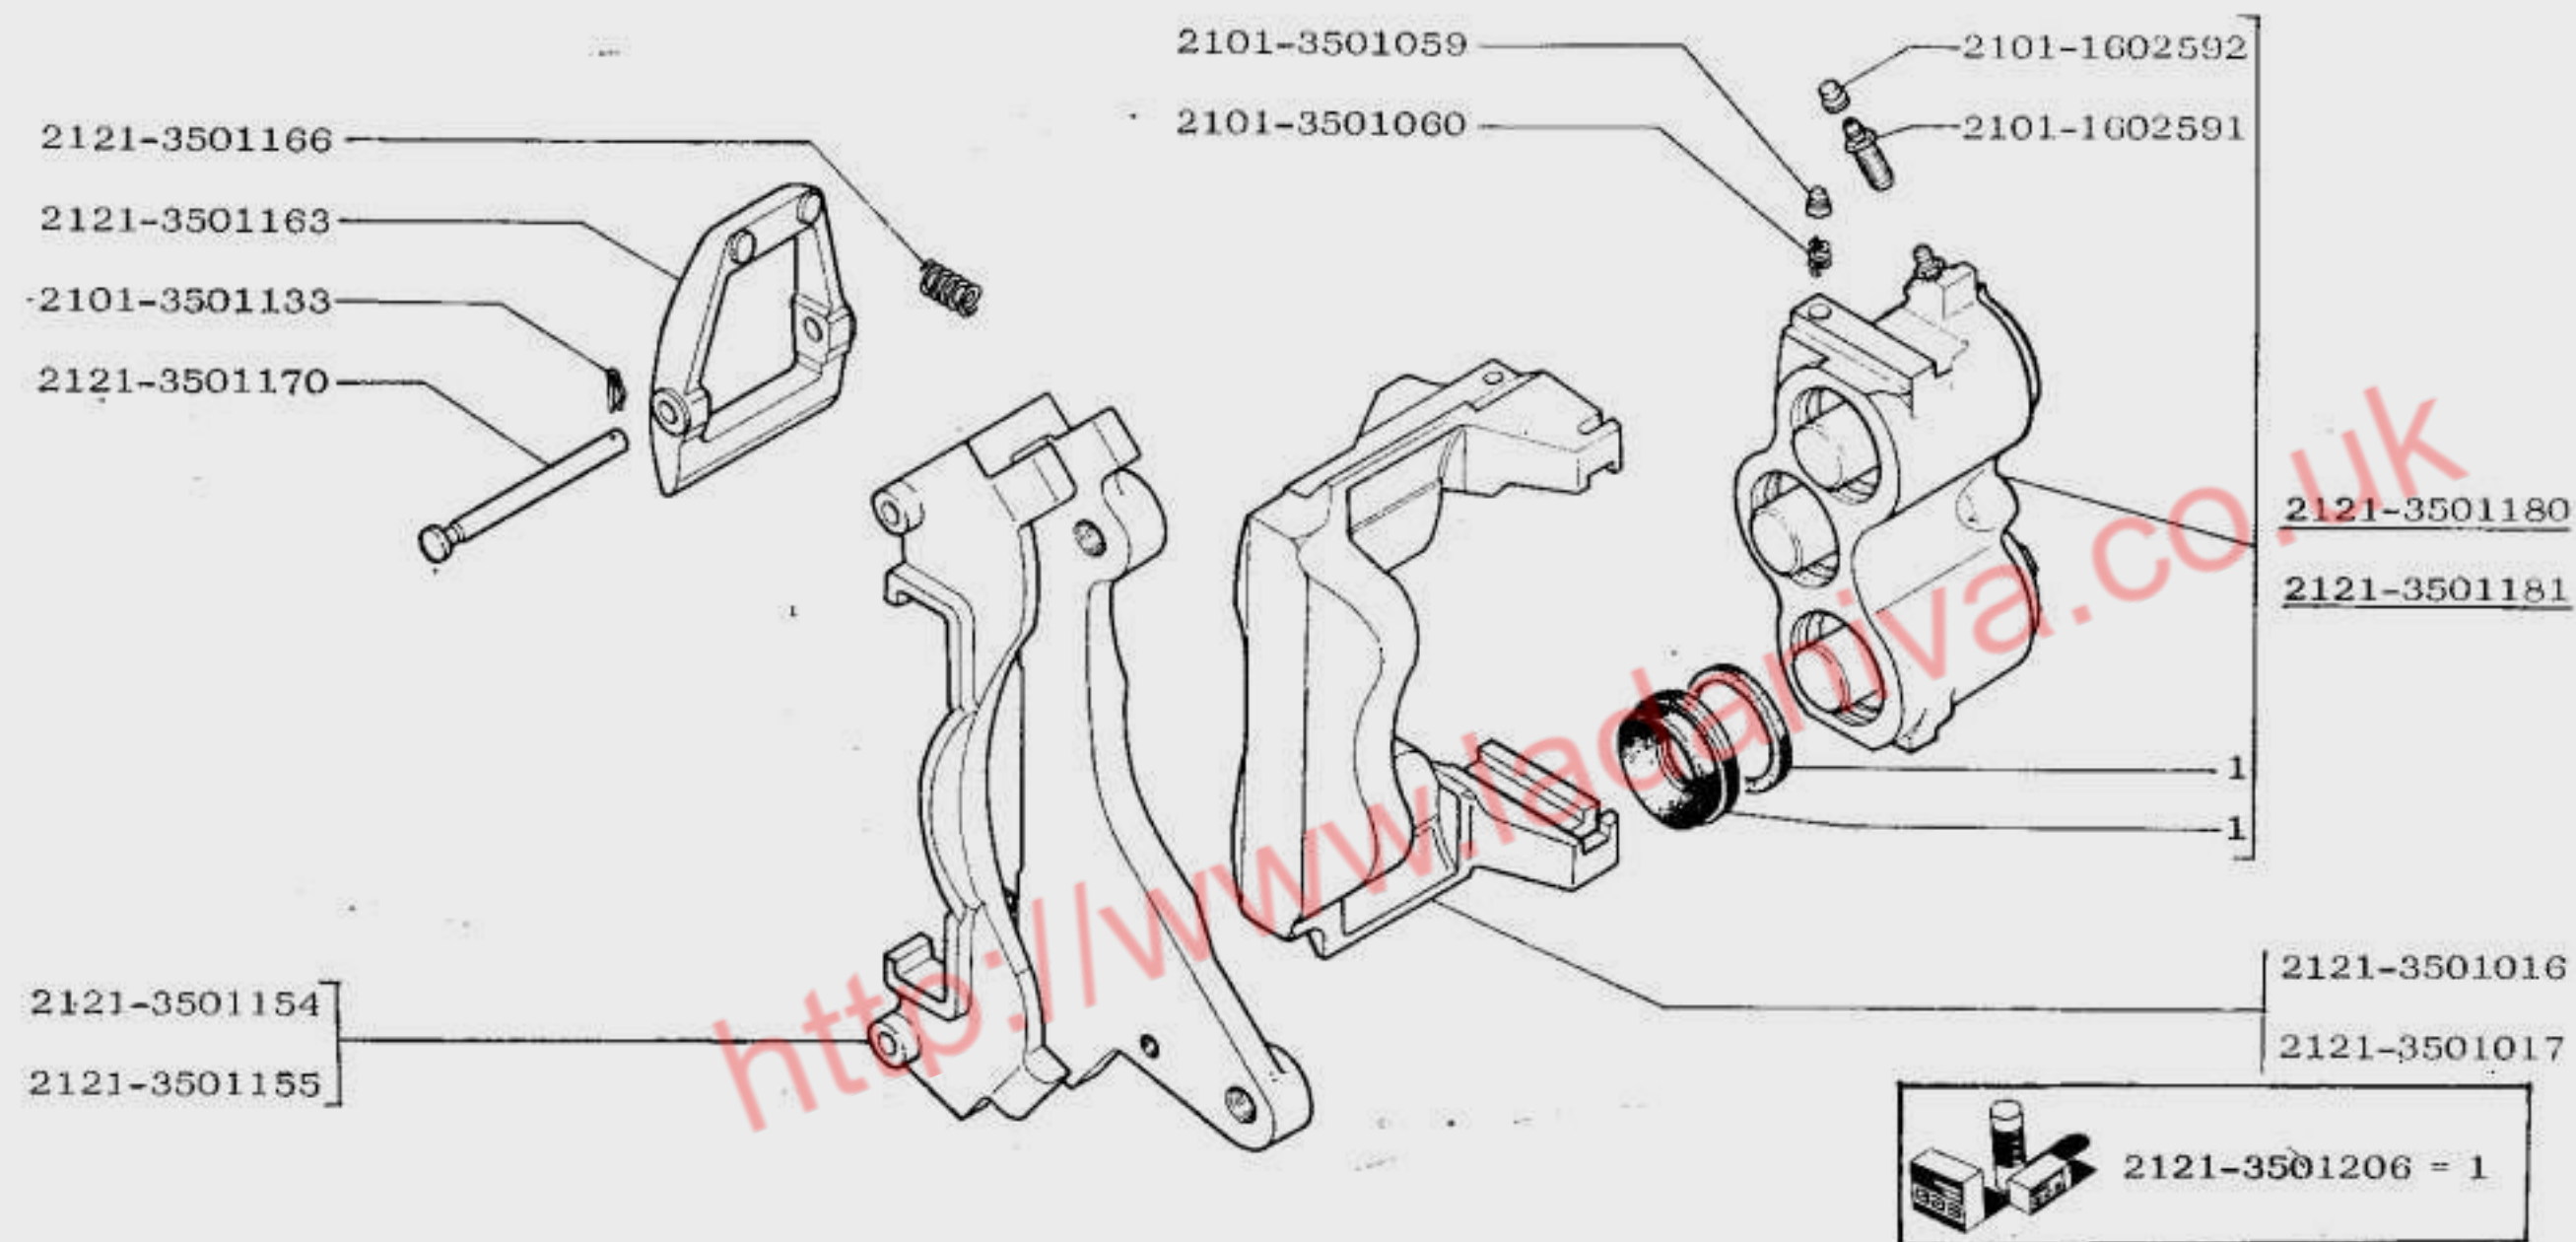

BA3-2121
BA3-21211

Суппорт переднего тормоза
Front Brake Caliper
Etrier de frein avant
Vorderradbremsträger
Soporte del freno delantero


Г1.31

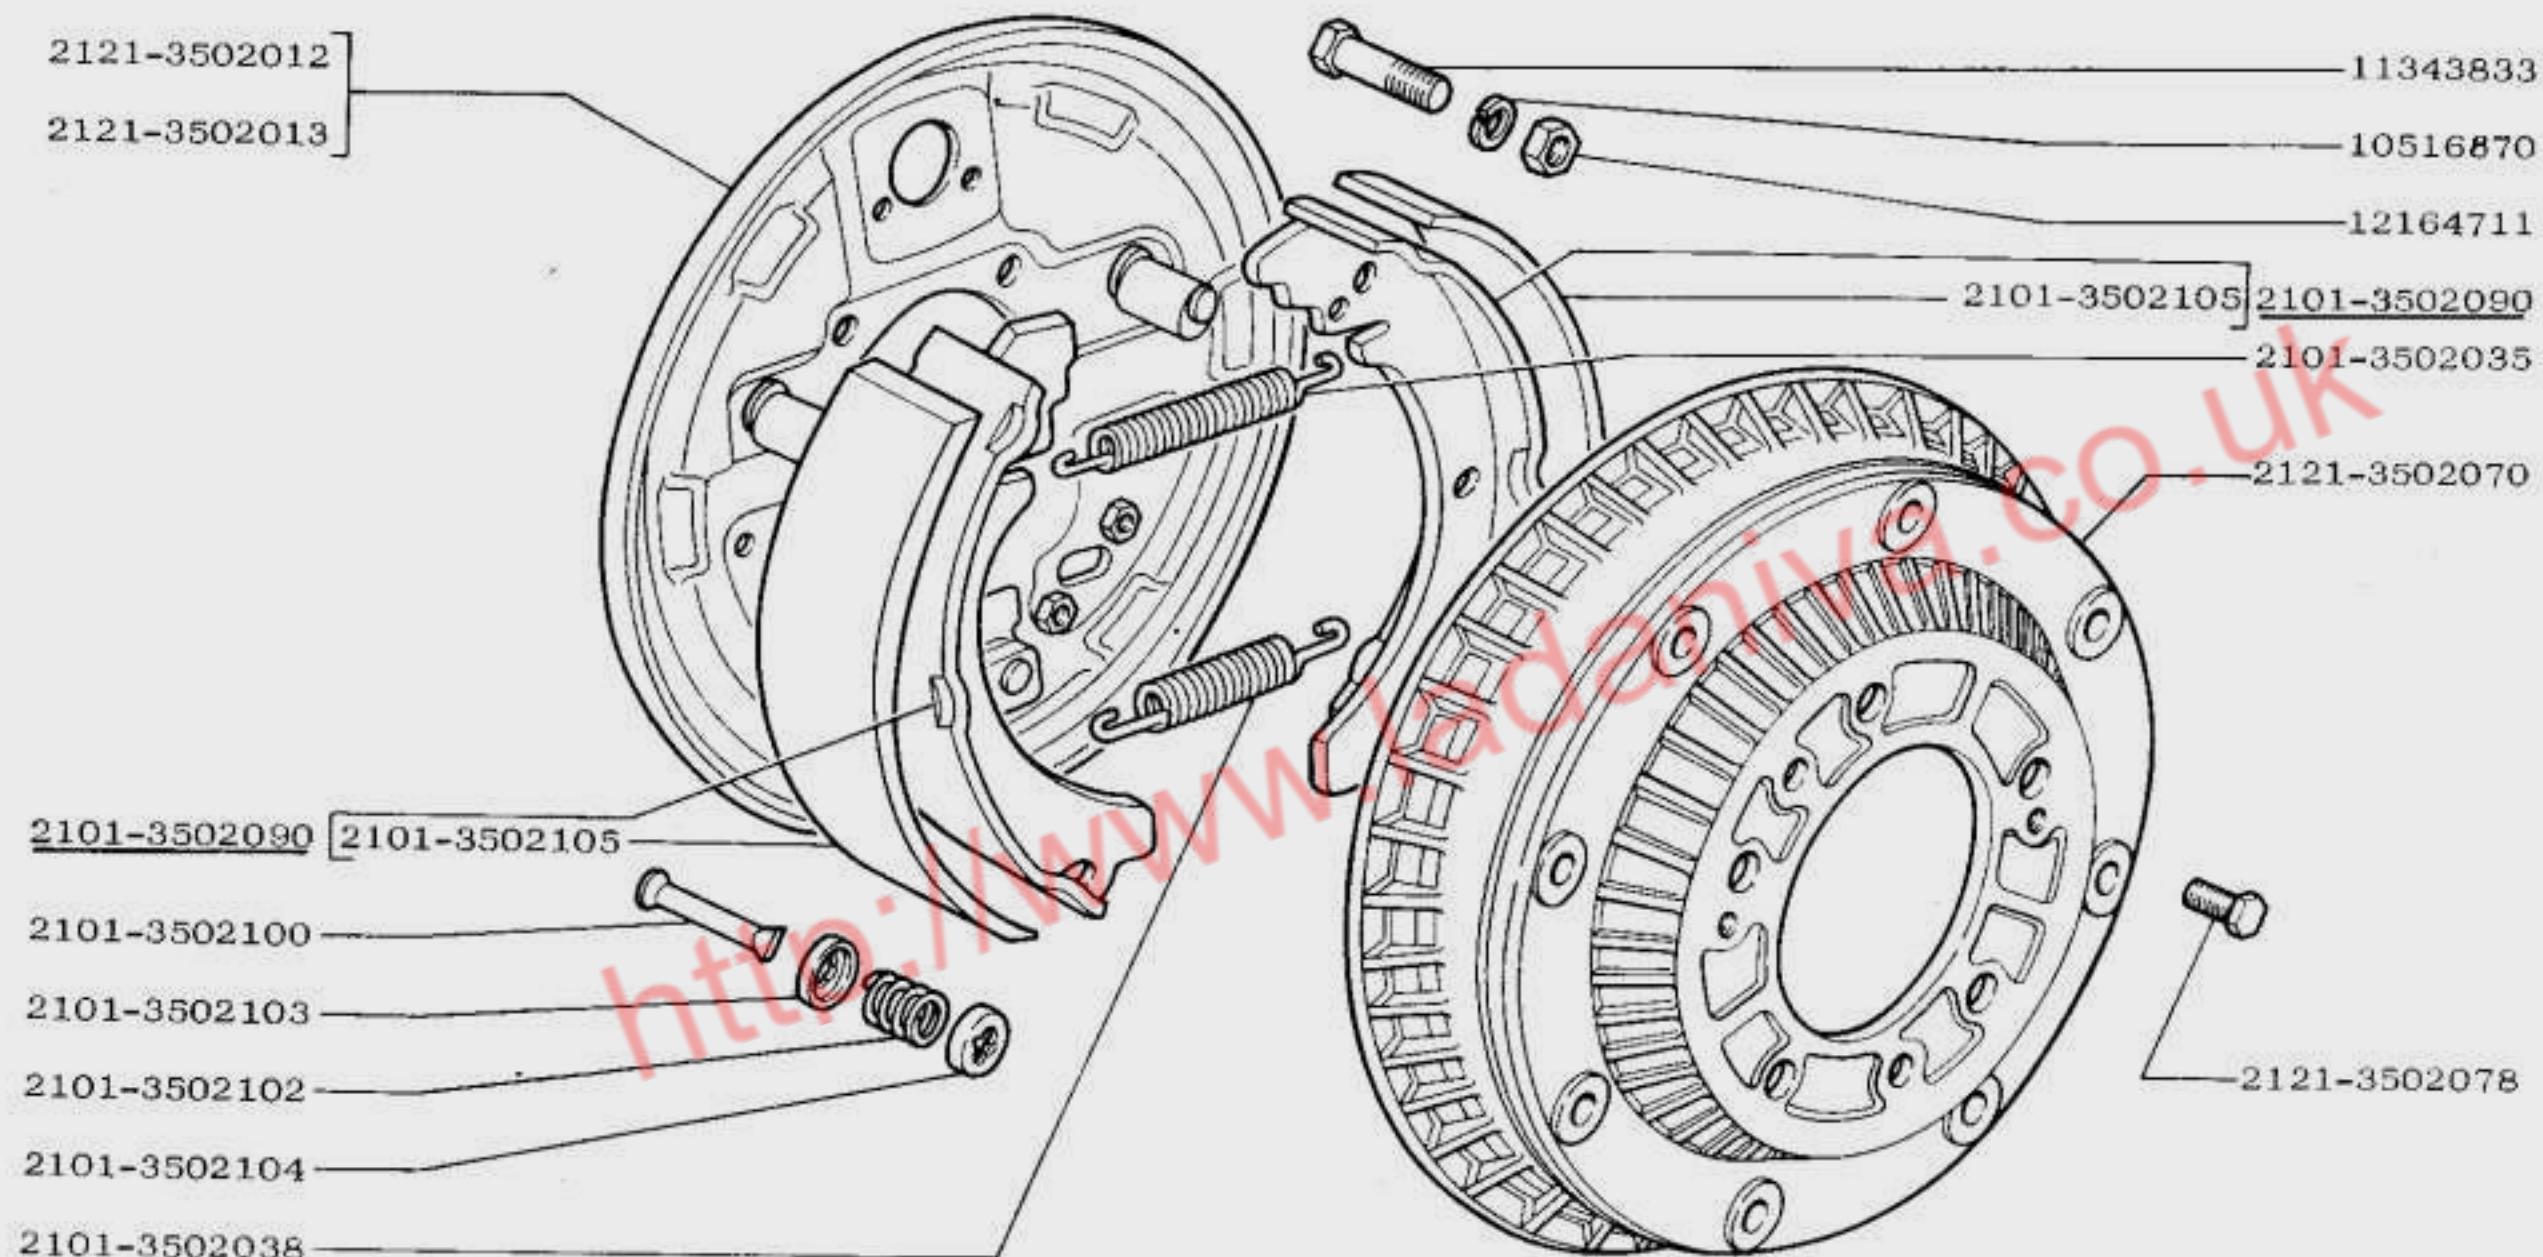

BA3-2121
BA3-21211

Тормоза задние
Rear Brakes
Freins arrière
Hinterradbremsen
Frenos traseros


Г1.32

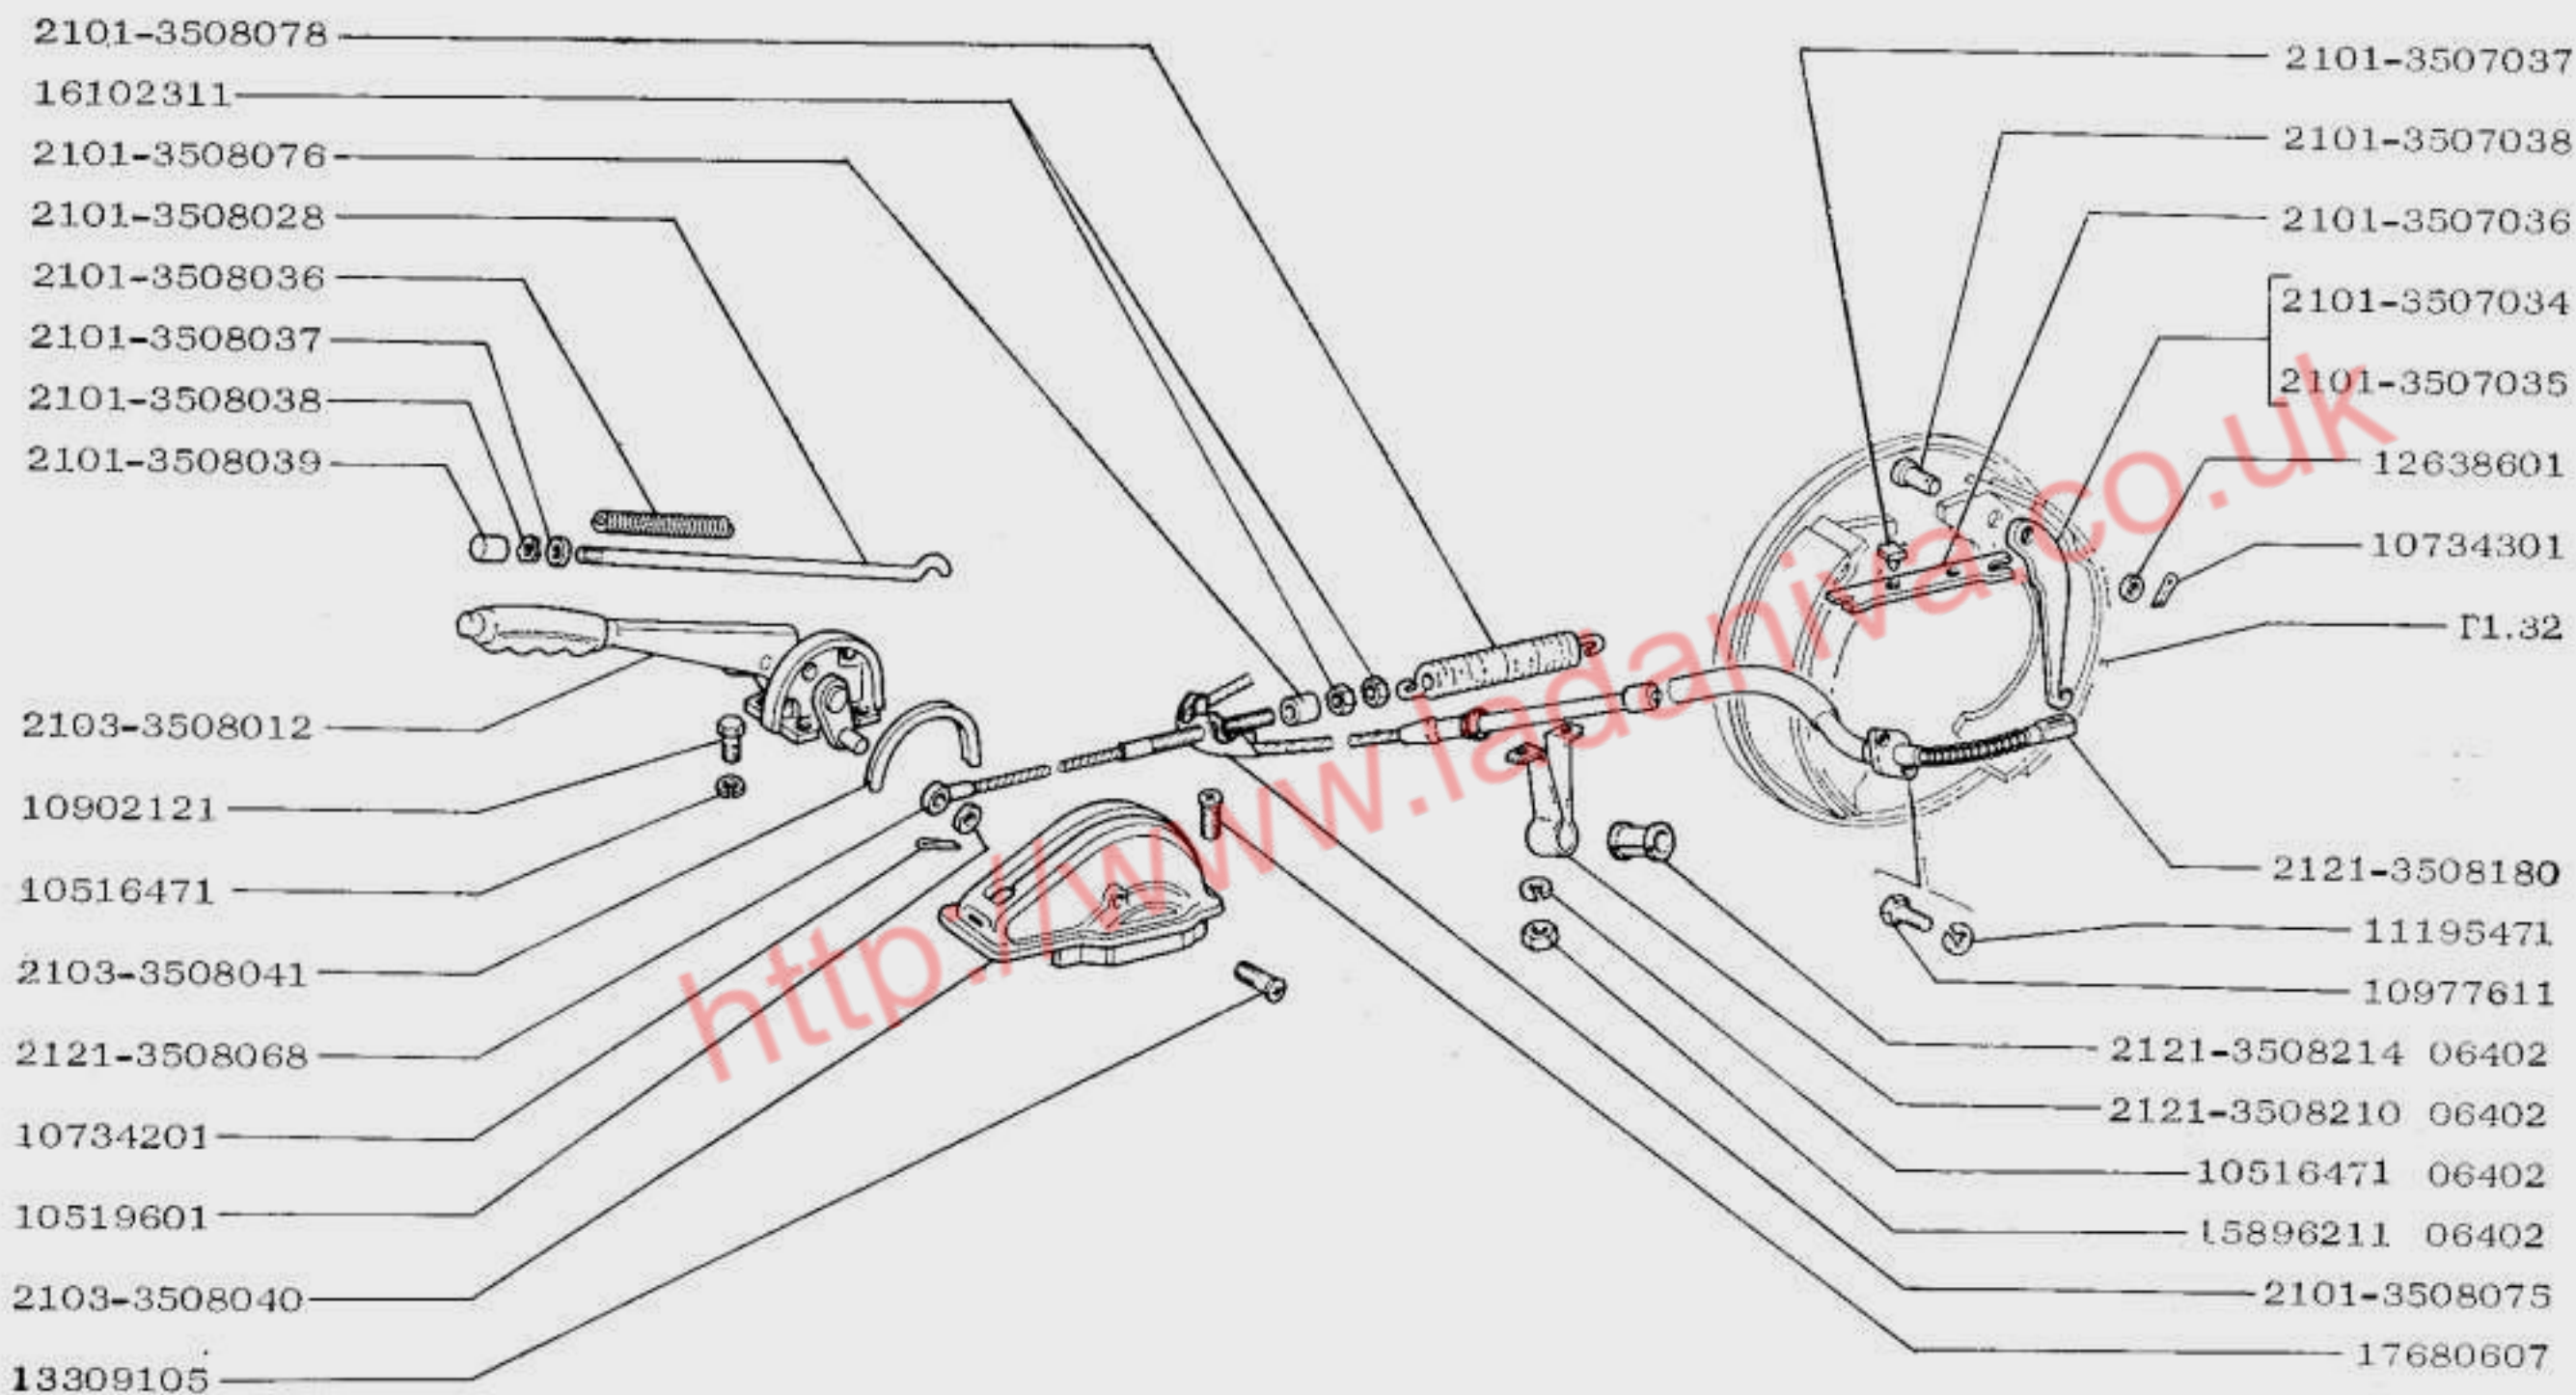

BA3-2121
BA3-21211

Привод ручного тормоза
 Hand Brake Control Linkage
 Commande du frein à main
 Hinterradbremsbetätigung
 Mando del freno de mano


Г1.35

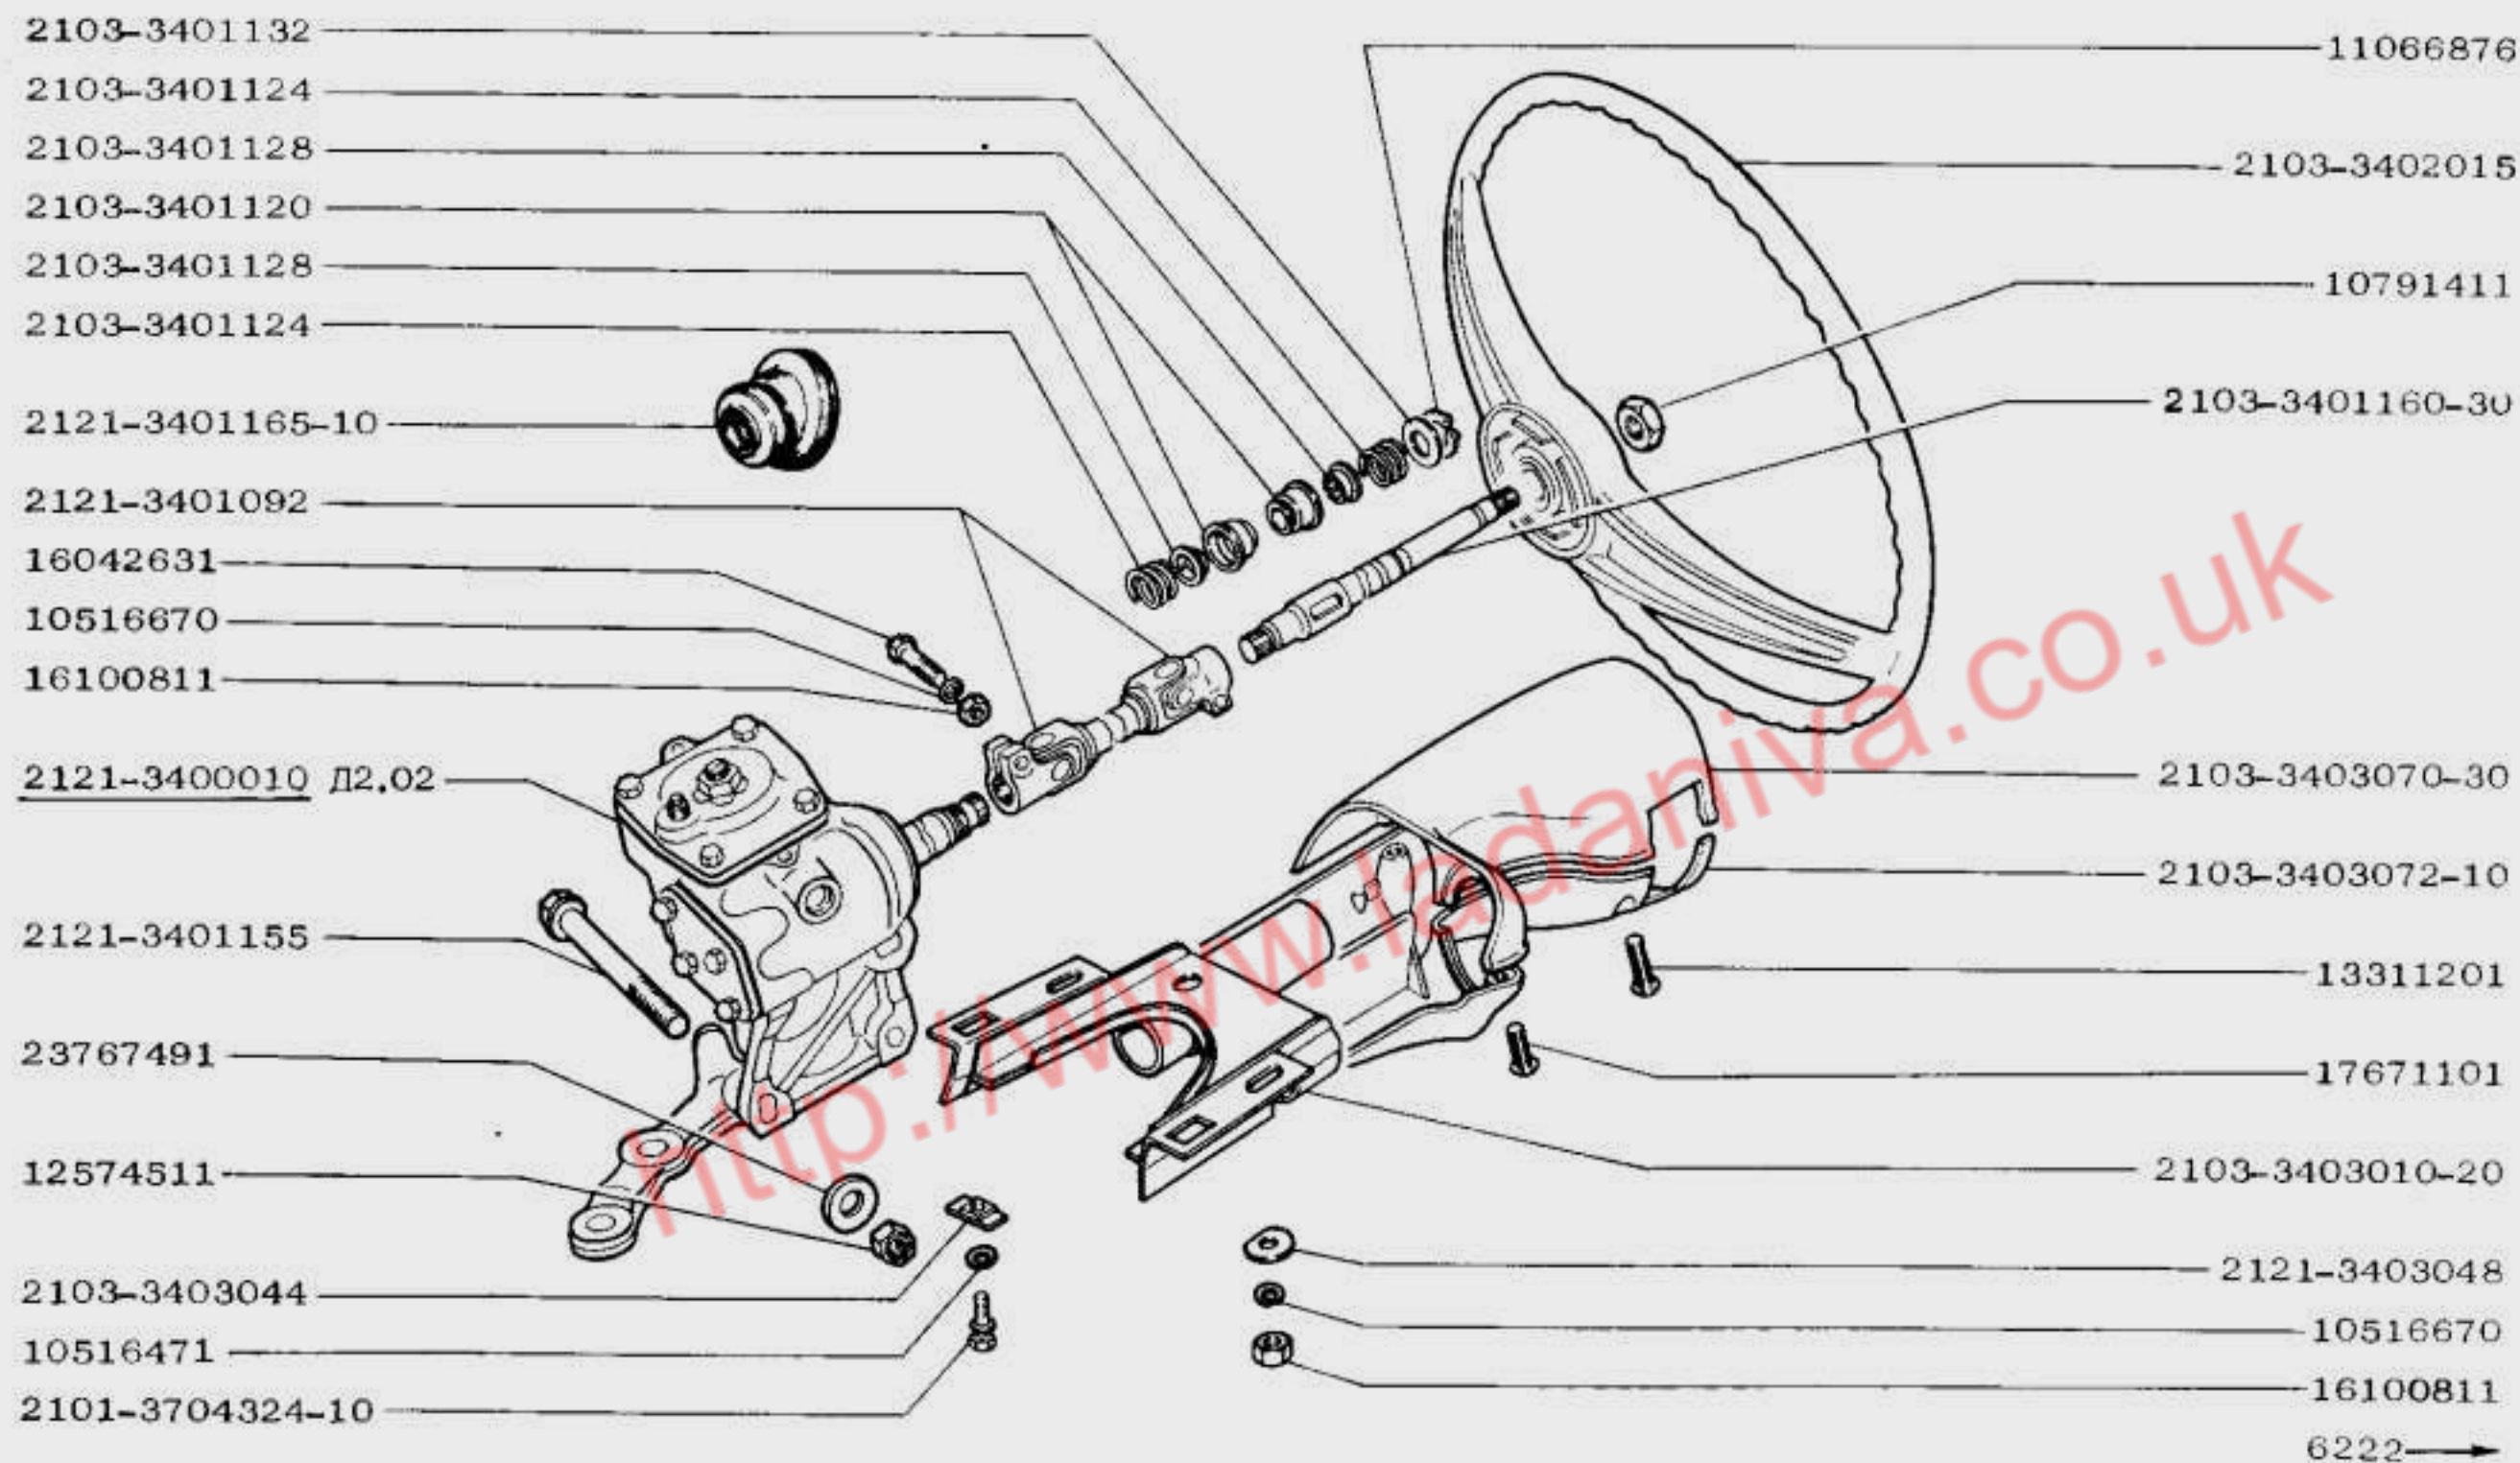

BA3-2121
BA3-21211

Механизм рулевой
Steering Gear
Colonne et boîtier de direction
Lenkwerk
Mecanismo de dirección


Д2.01

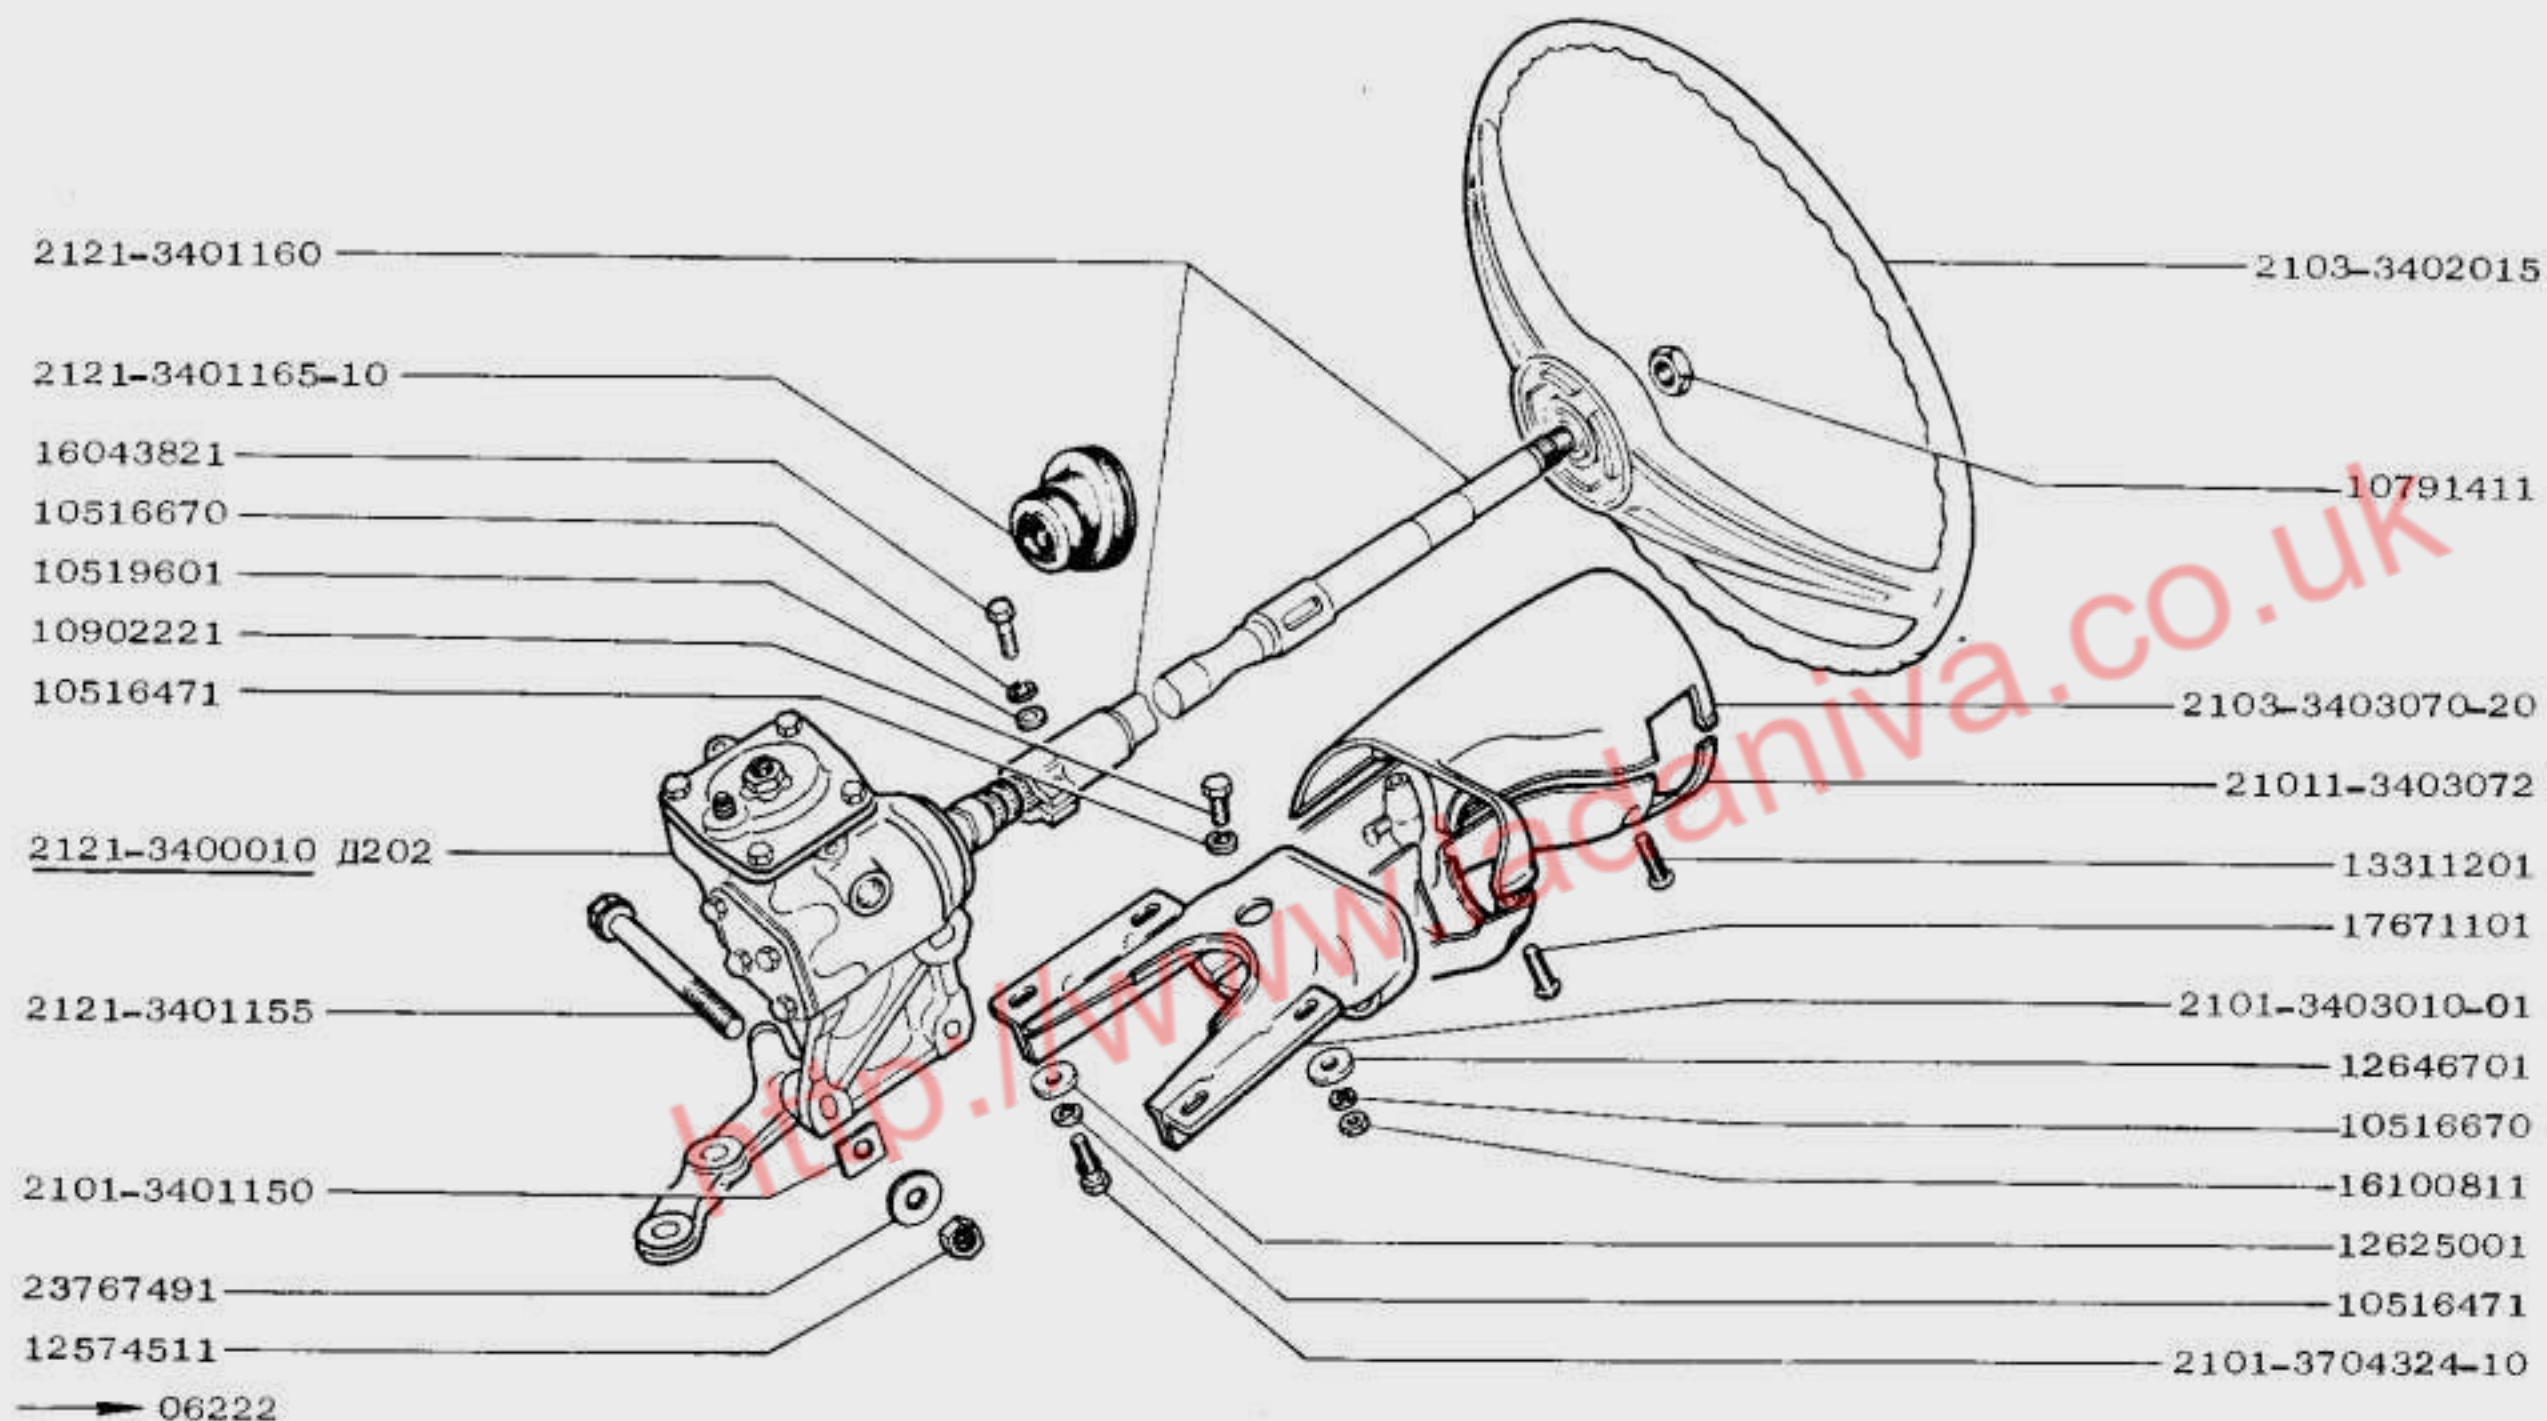

BA3-2121

Механизм рулевой
Steering Gear
Colonne et boîtier de direction
Lenkwerk
Mecanismo de dirección


Д2.02

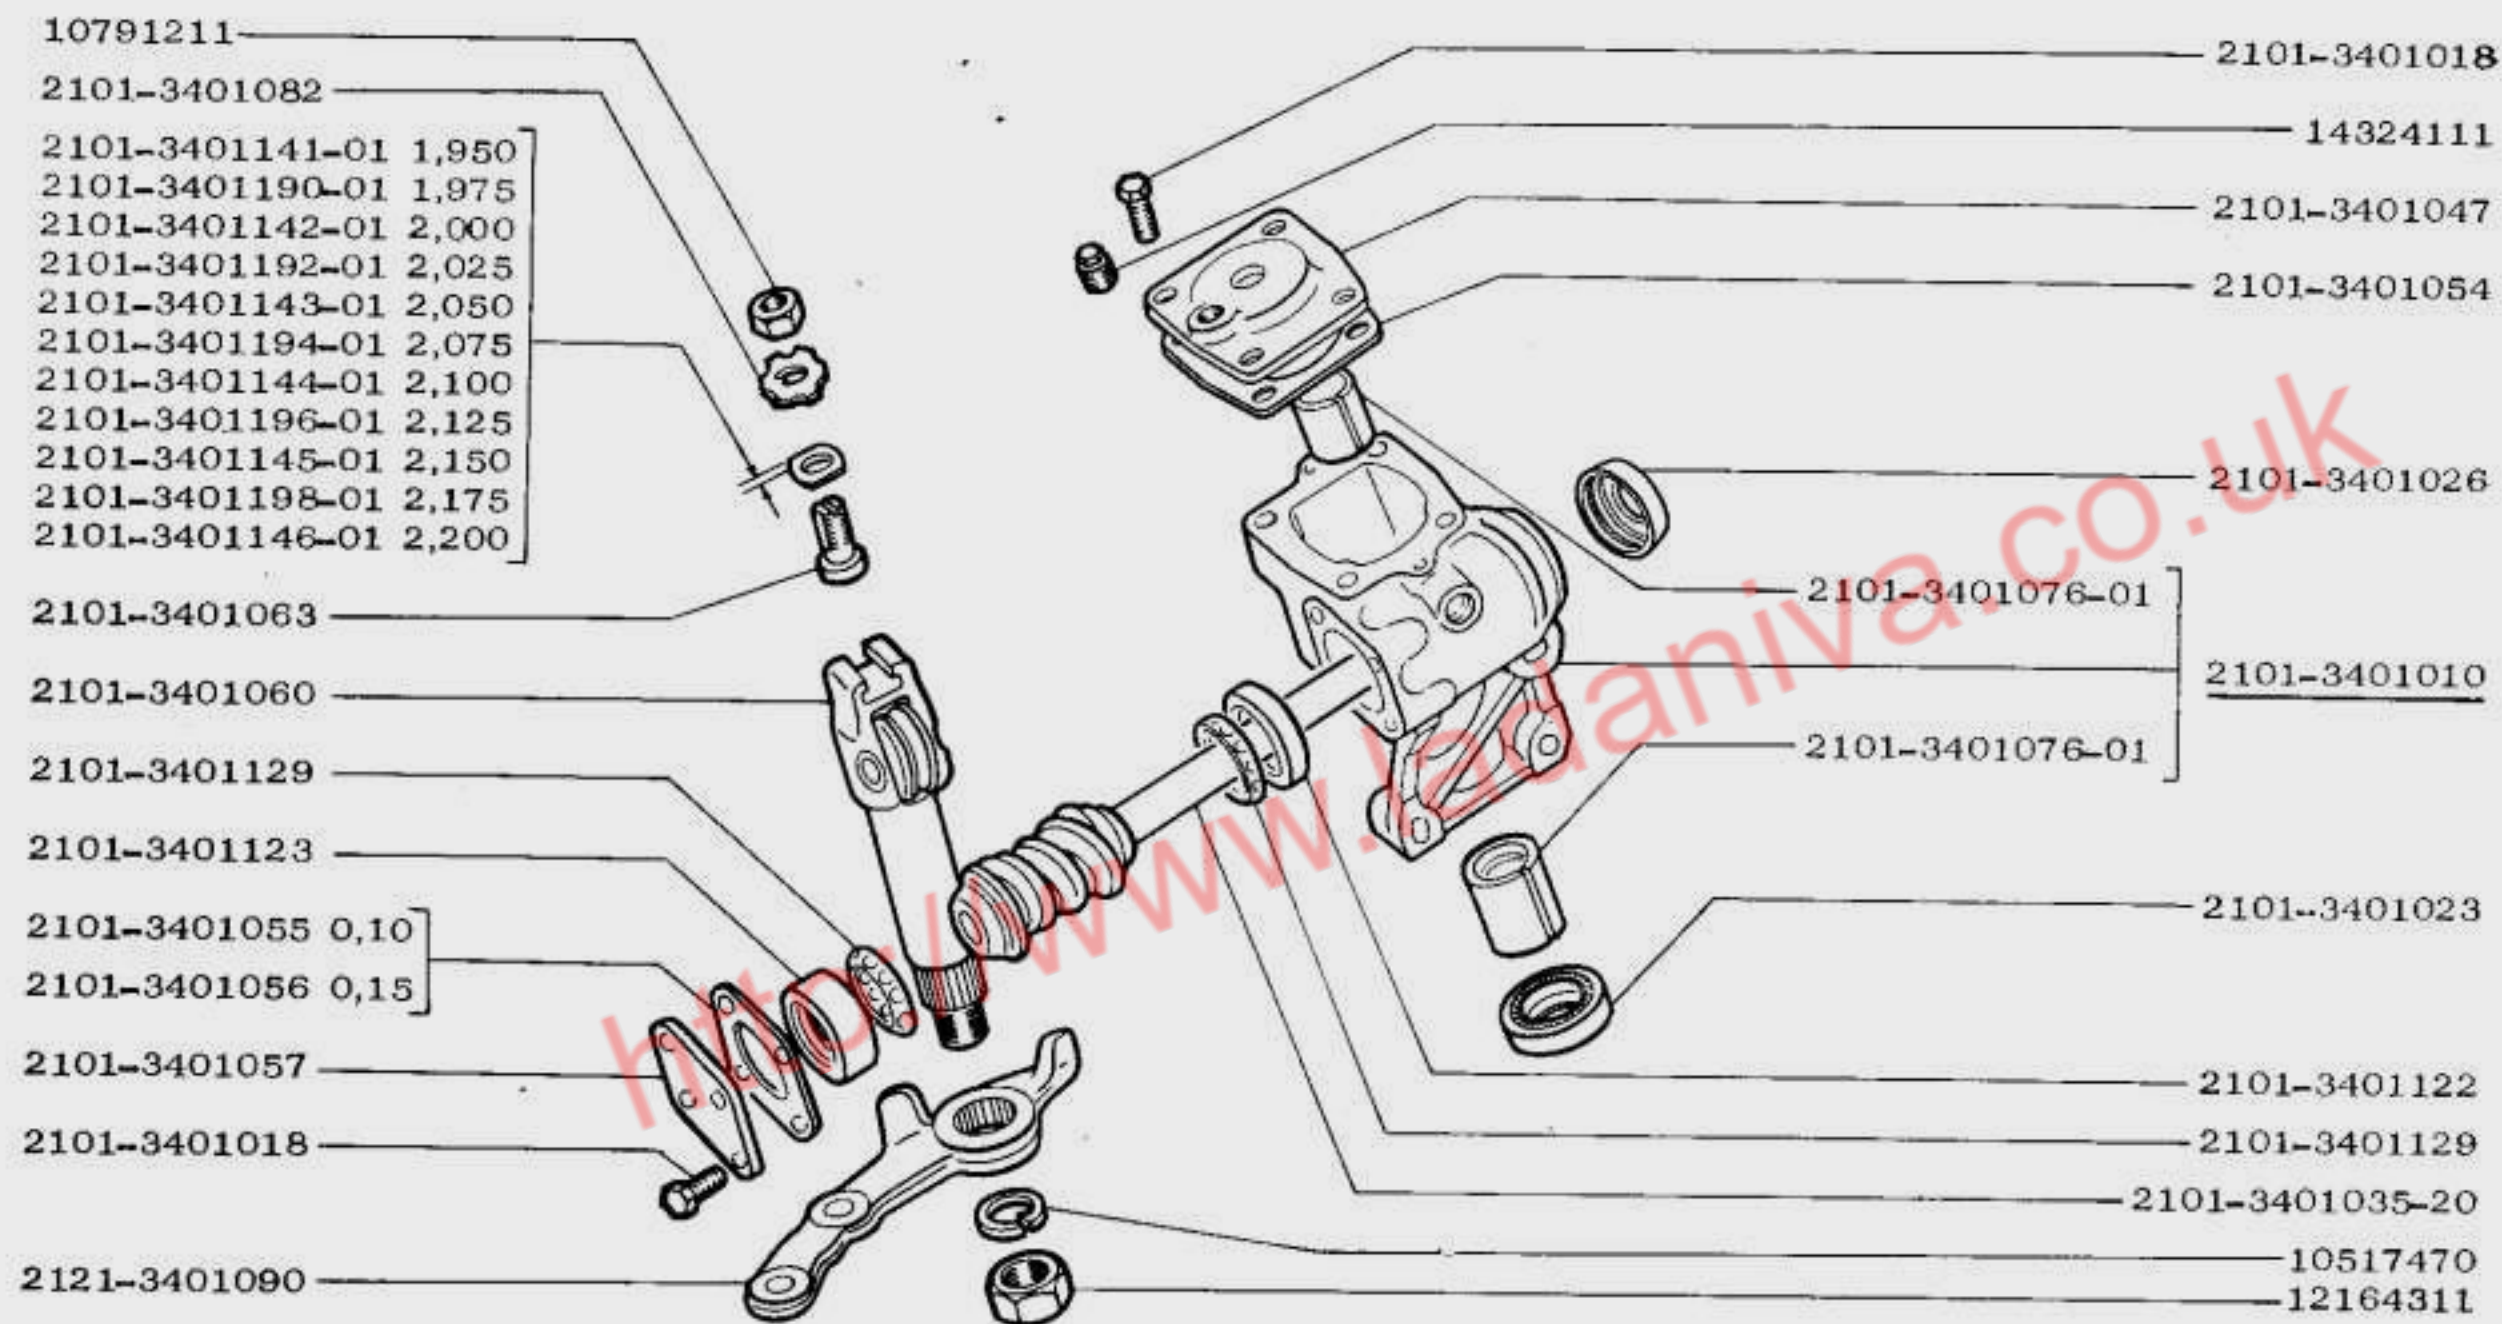

BA3-2121
BA3-21211

Редуктор рулевого управления
Steering Gear Reduction Unit
Boîtier de direction
Lenkgetriebe
Reductor de la dirección


Д2.03

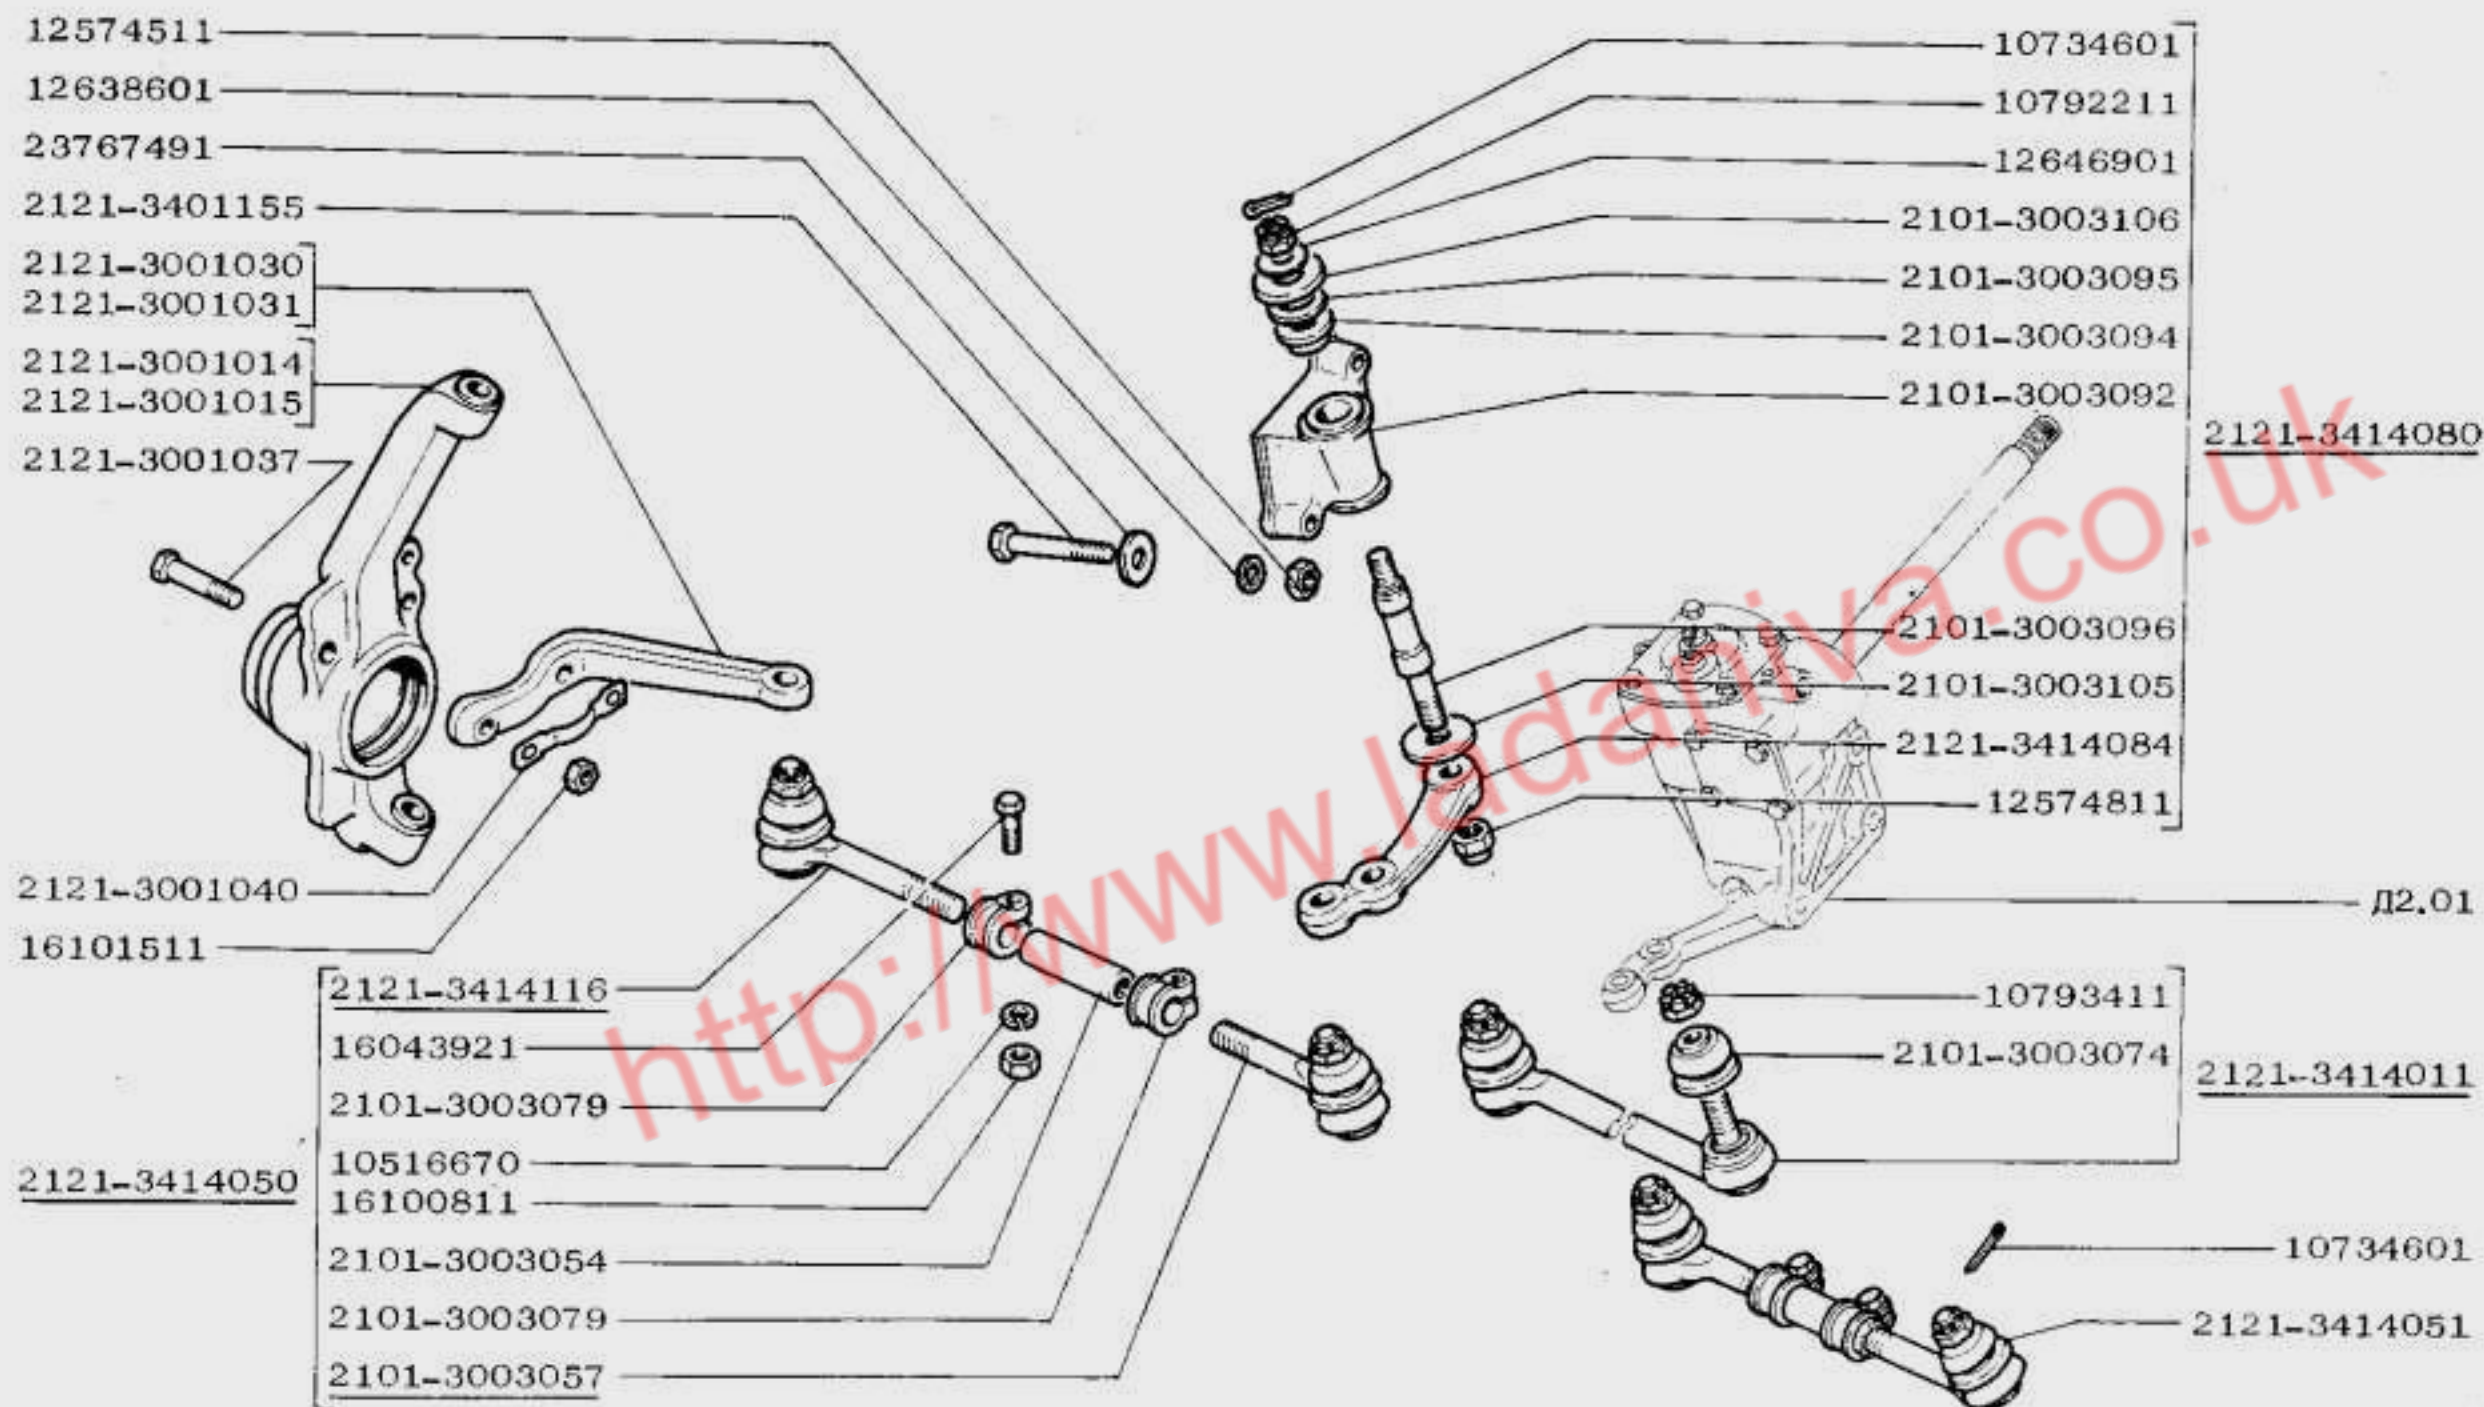

BA3-2121
BA3-21211

Привод рулевой
Steering Linkage
Timonerie de direction
Lenkgestänge
Mando de la dirección


Д2.10

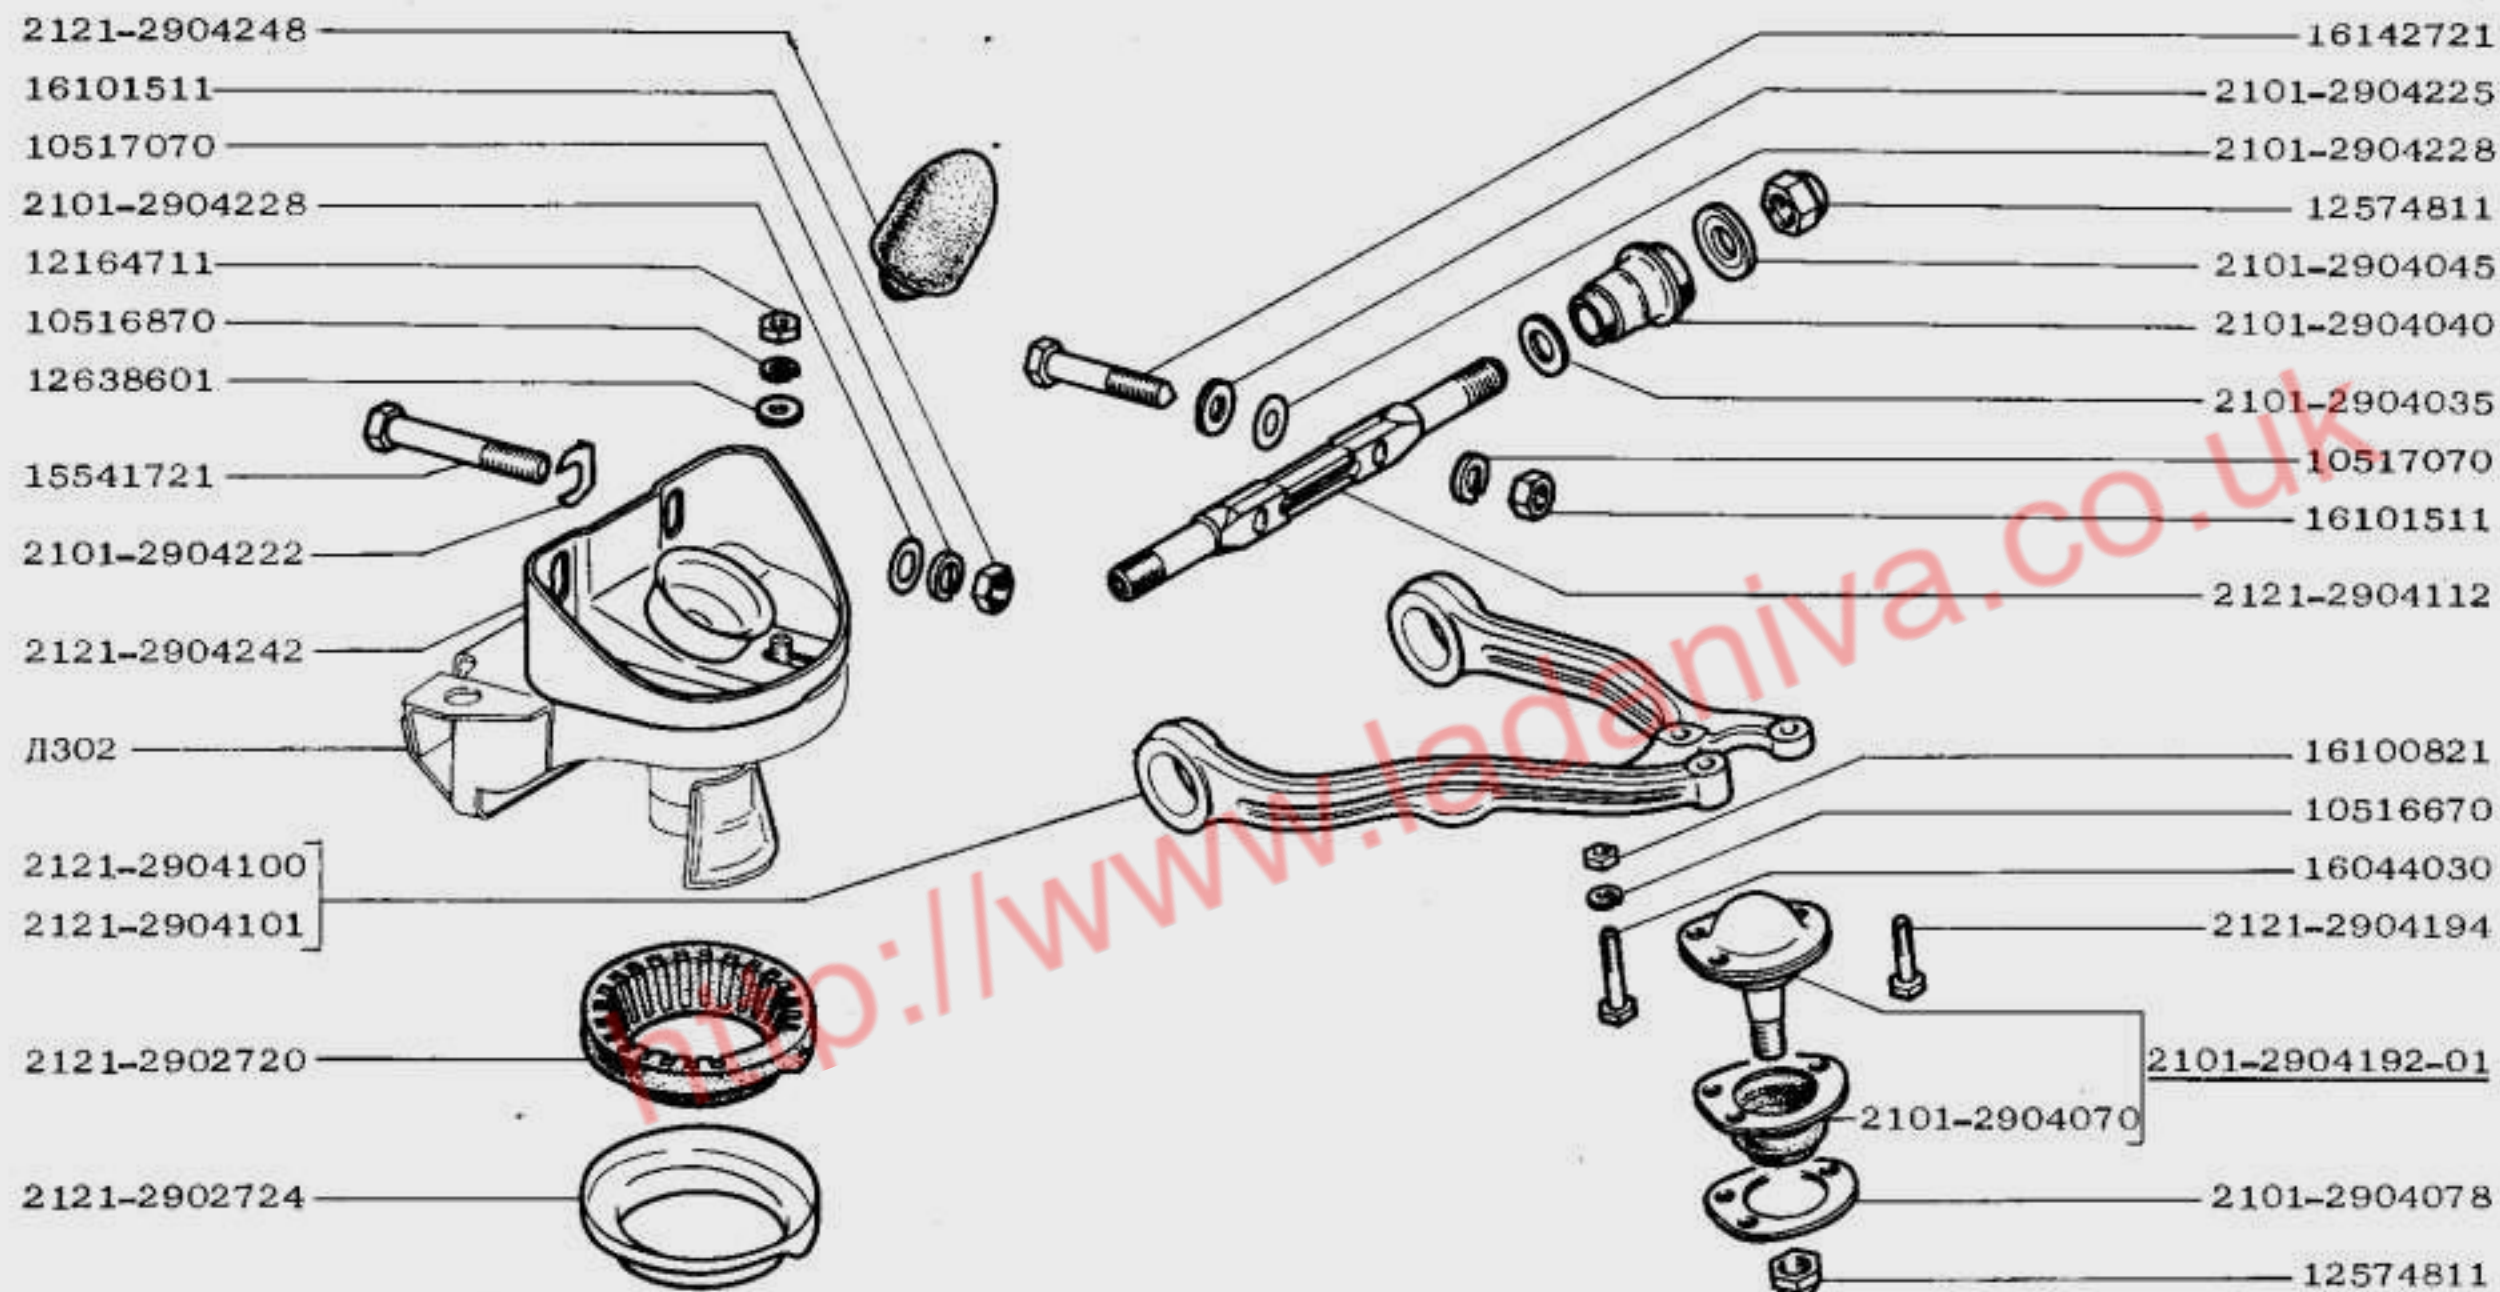

BA3-2121
BA3-21211

Рычаги верхние
Upper Wishbones
Bras supérieurs
Obere Querlenker
Palancas superiores


Д3.01

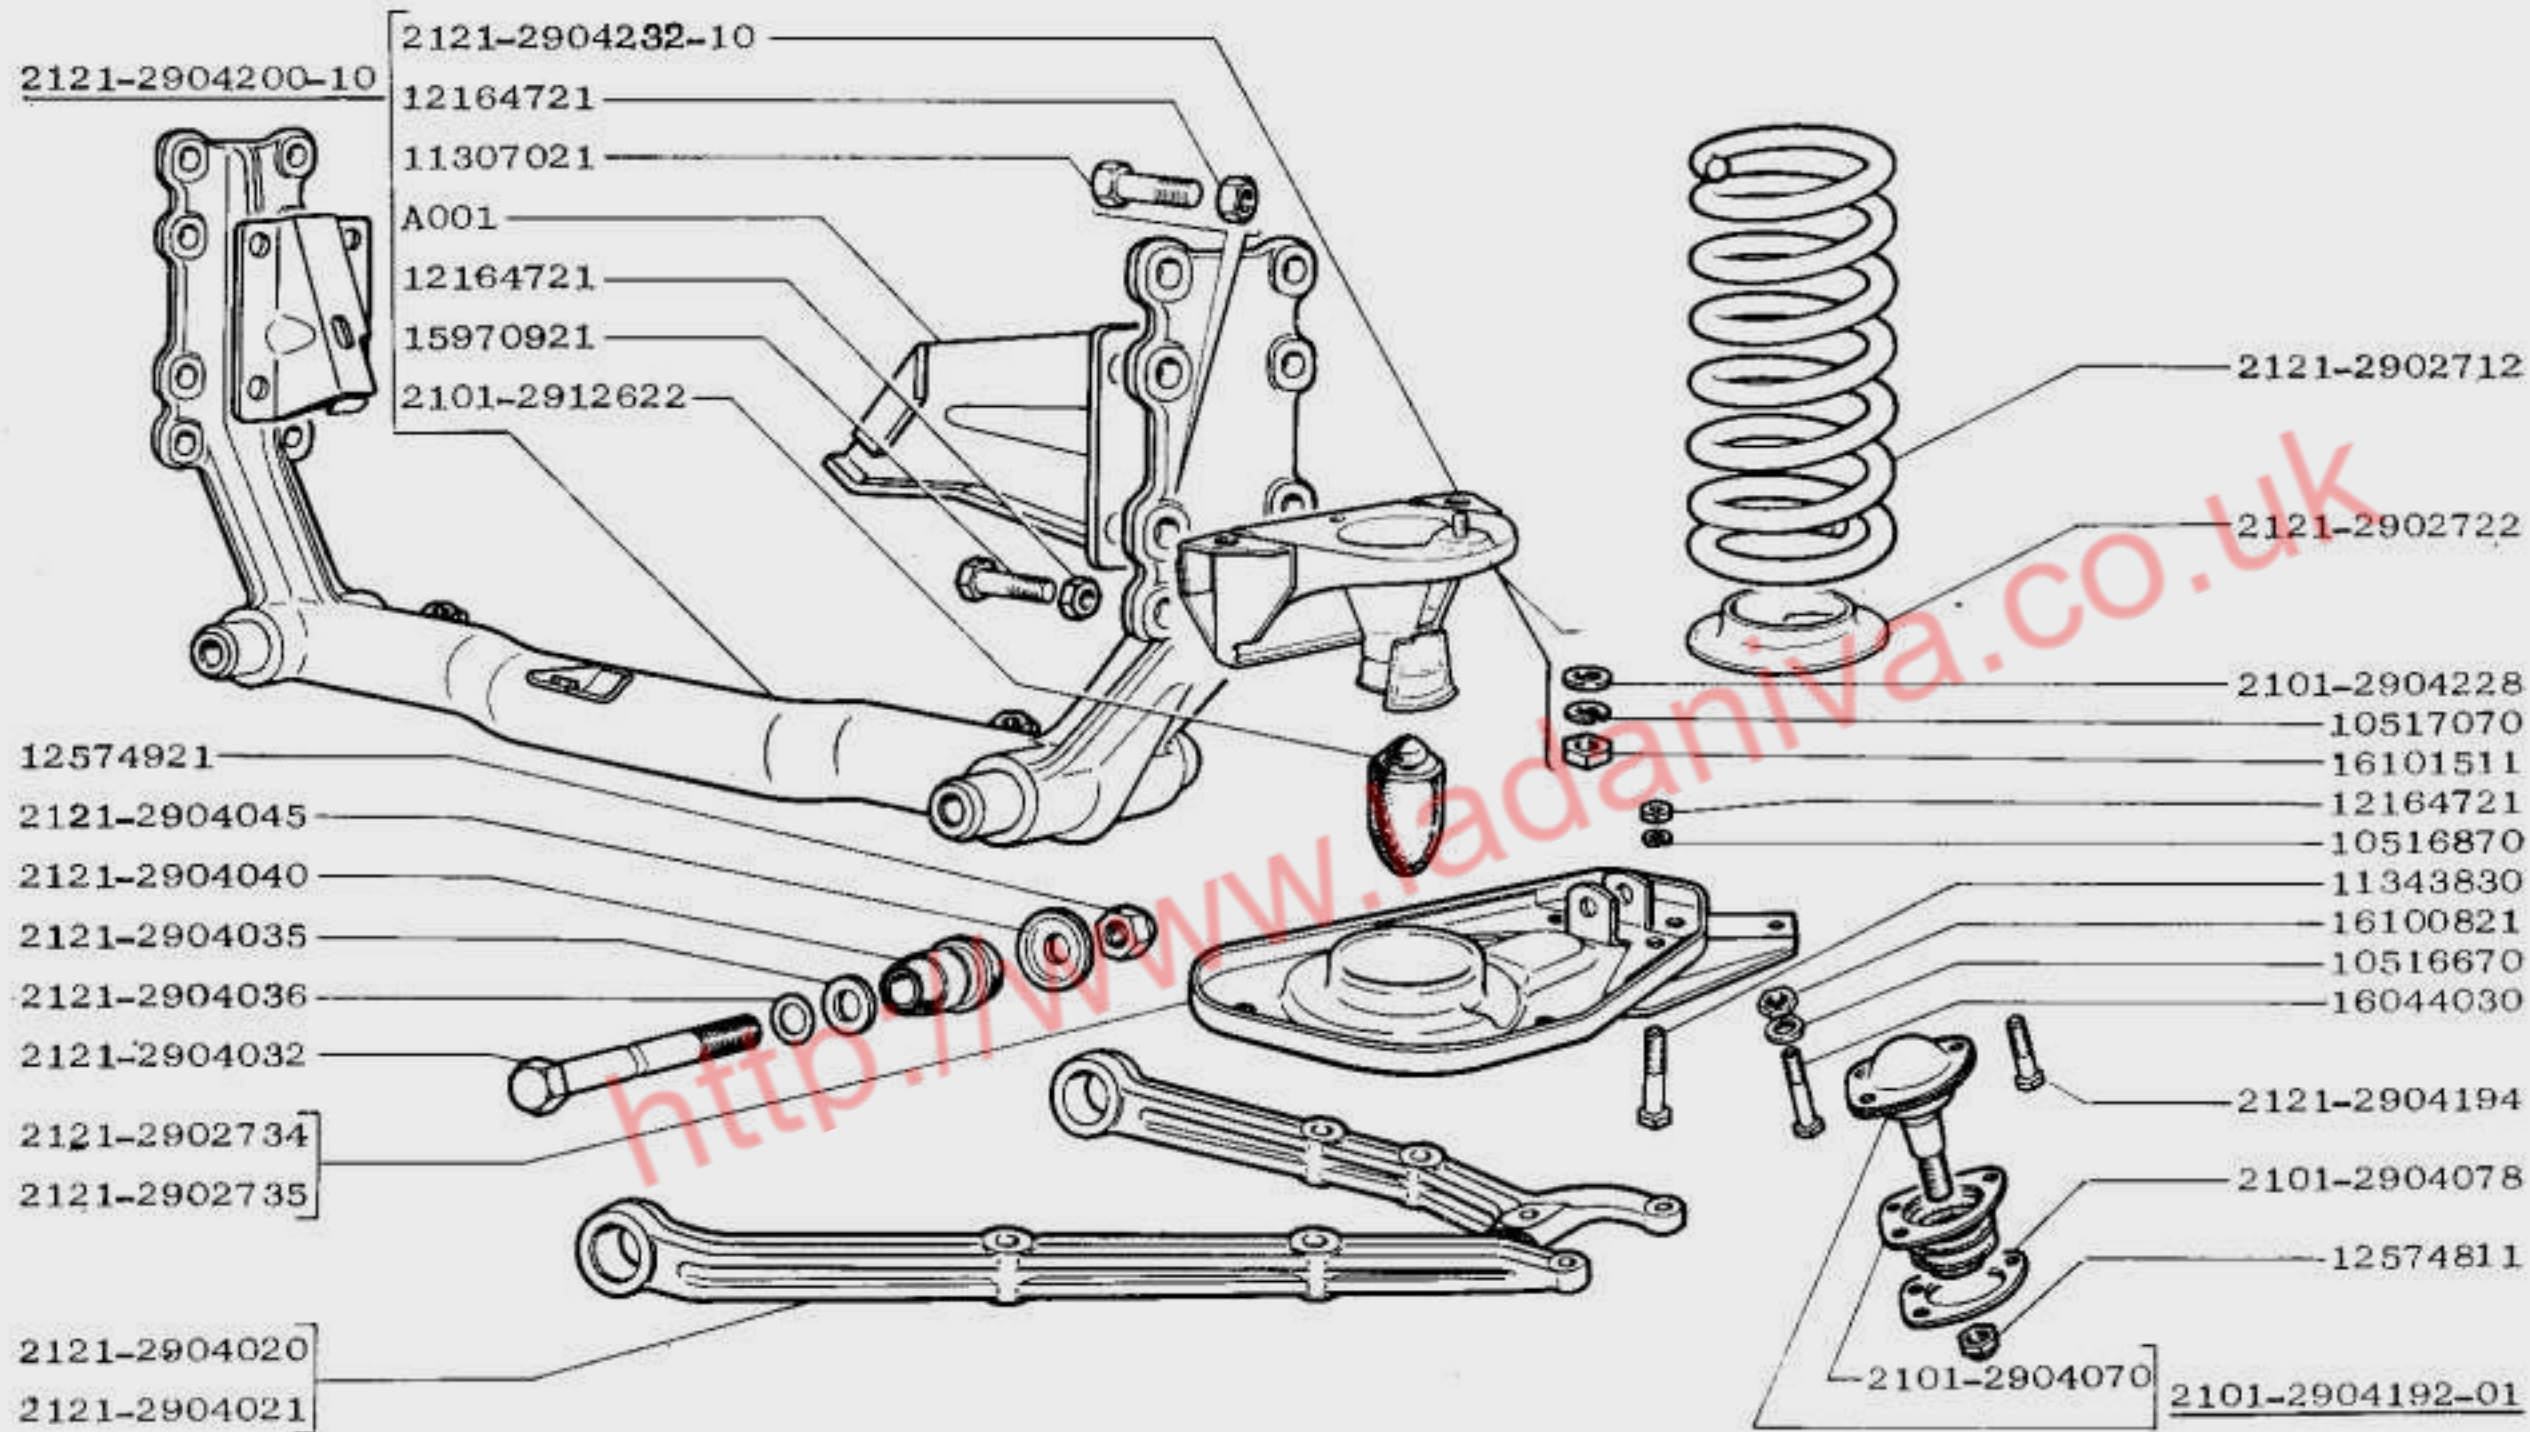

BA3-2121
BA3-21211

Рычаги нижние
Lower Wishbones
Bras inférieurs
Untere Querlenker
Palancas interiores


Д3.02

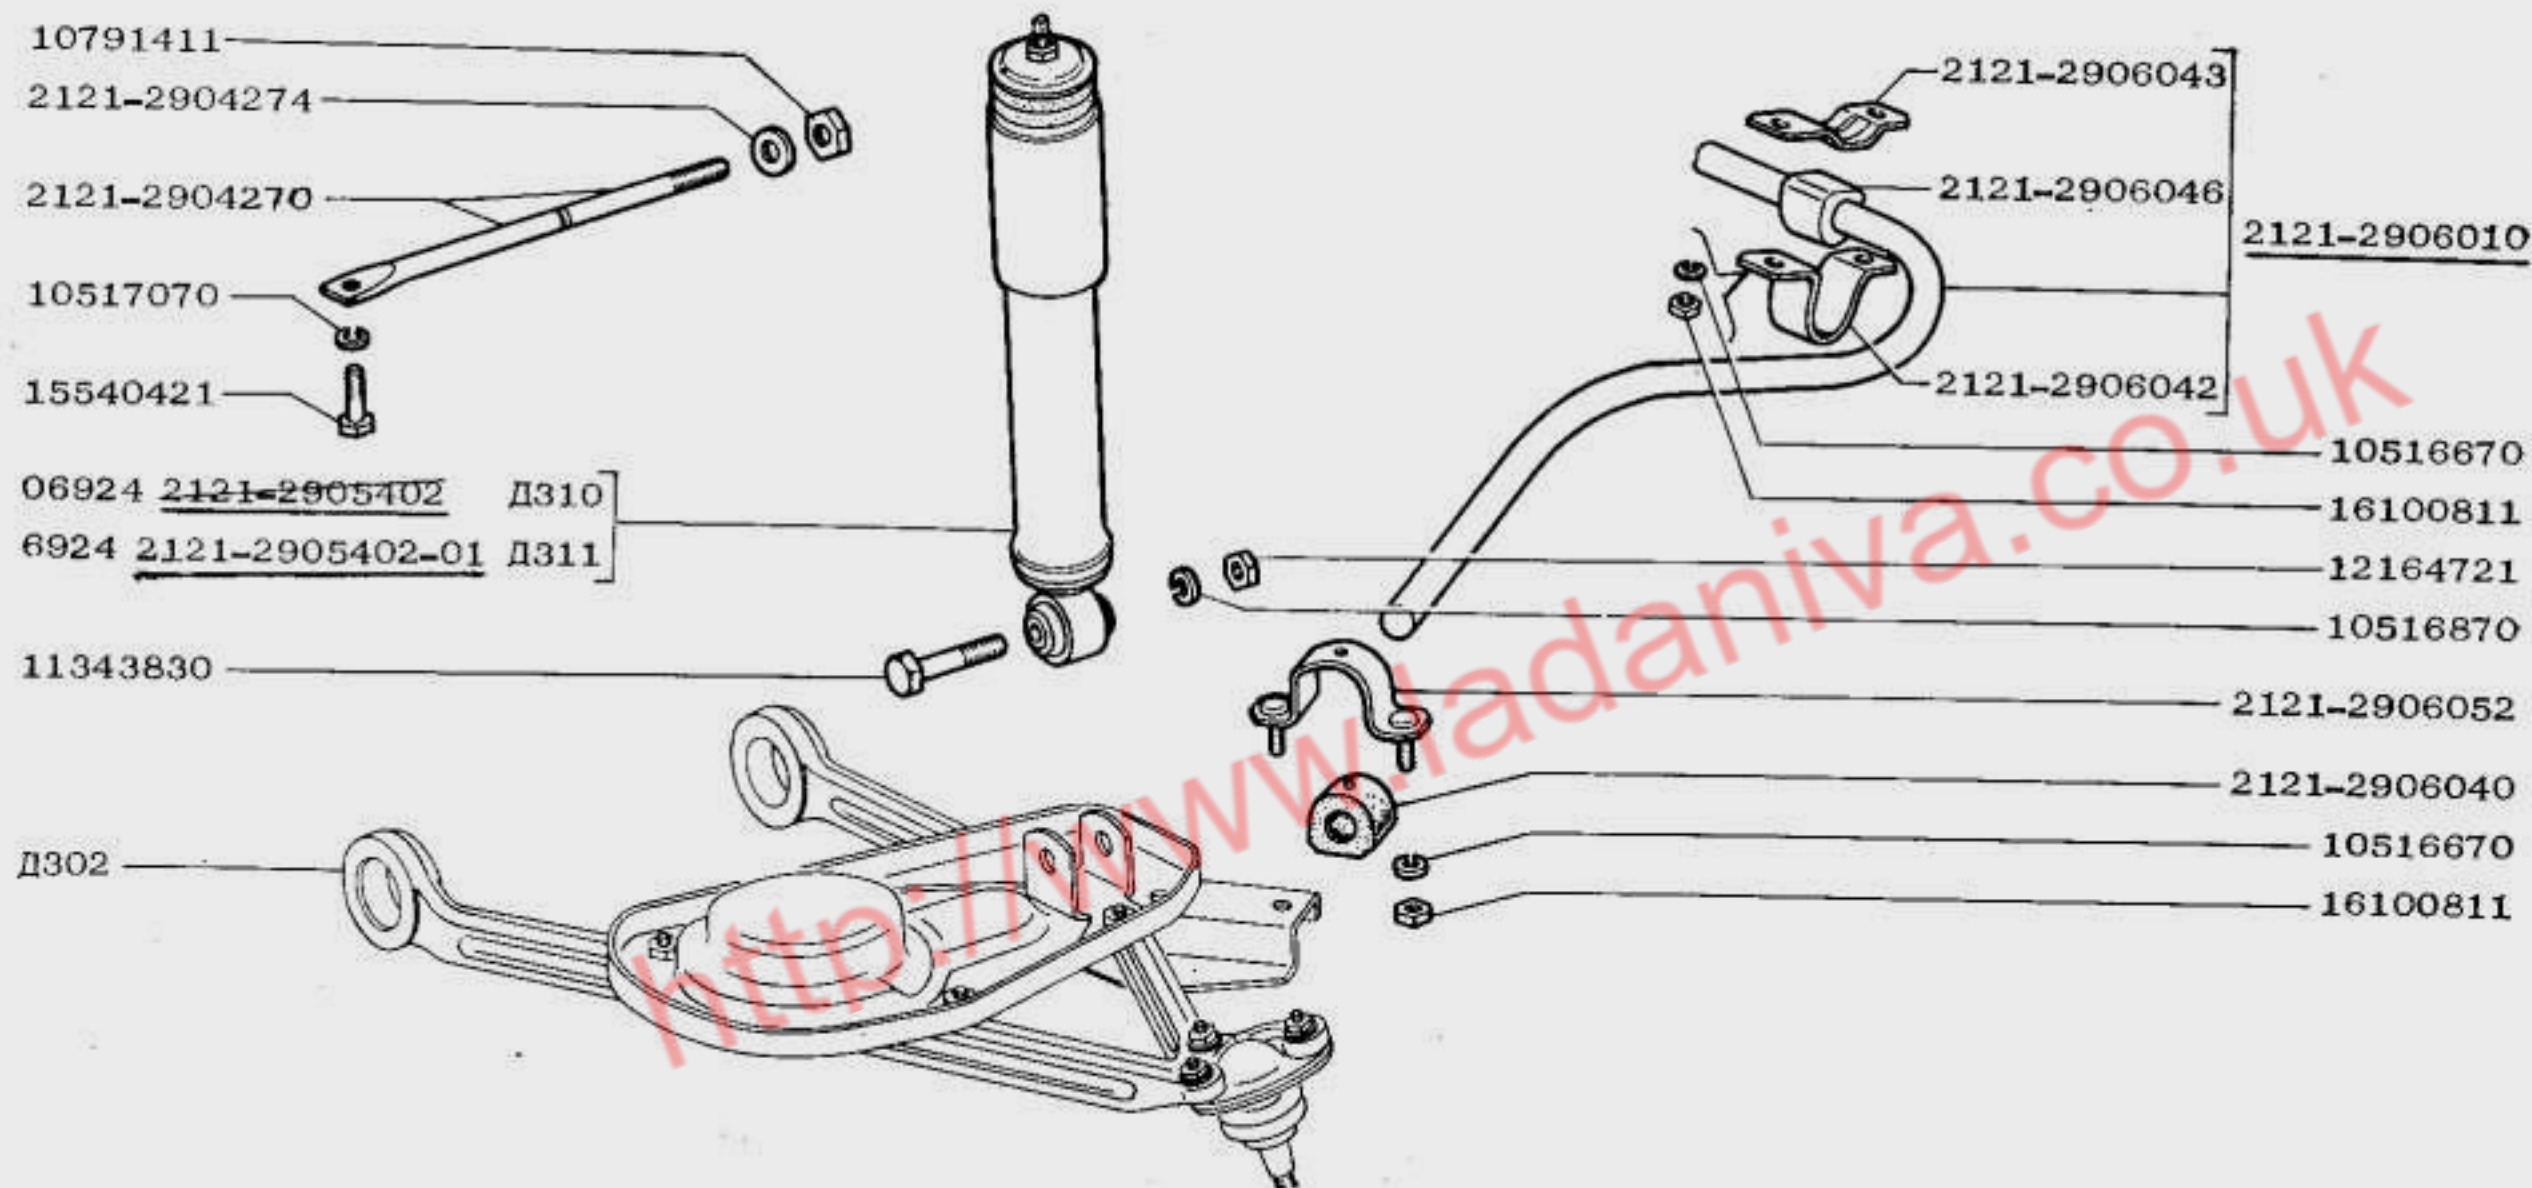

BA3-2121
BA3-21211

Амортизаторы и стабилизатор поперечной устойчивости
Shock Absorbers and Sway Eliminator
Amortisseurs et barre stabilisatrice
Stoßdämpfer und Querstabilisator
Amortiguadores y estabilizador de la estabilidad transversal



Д3.03

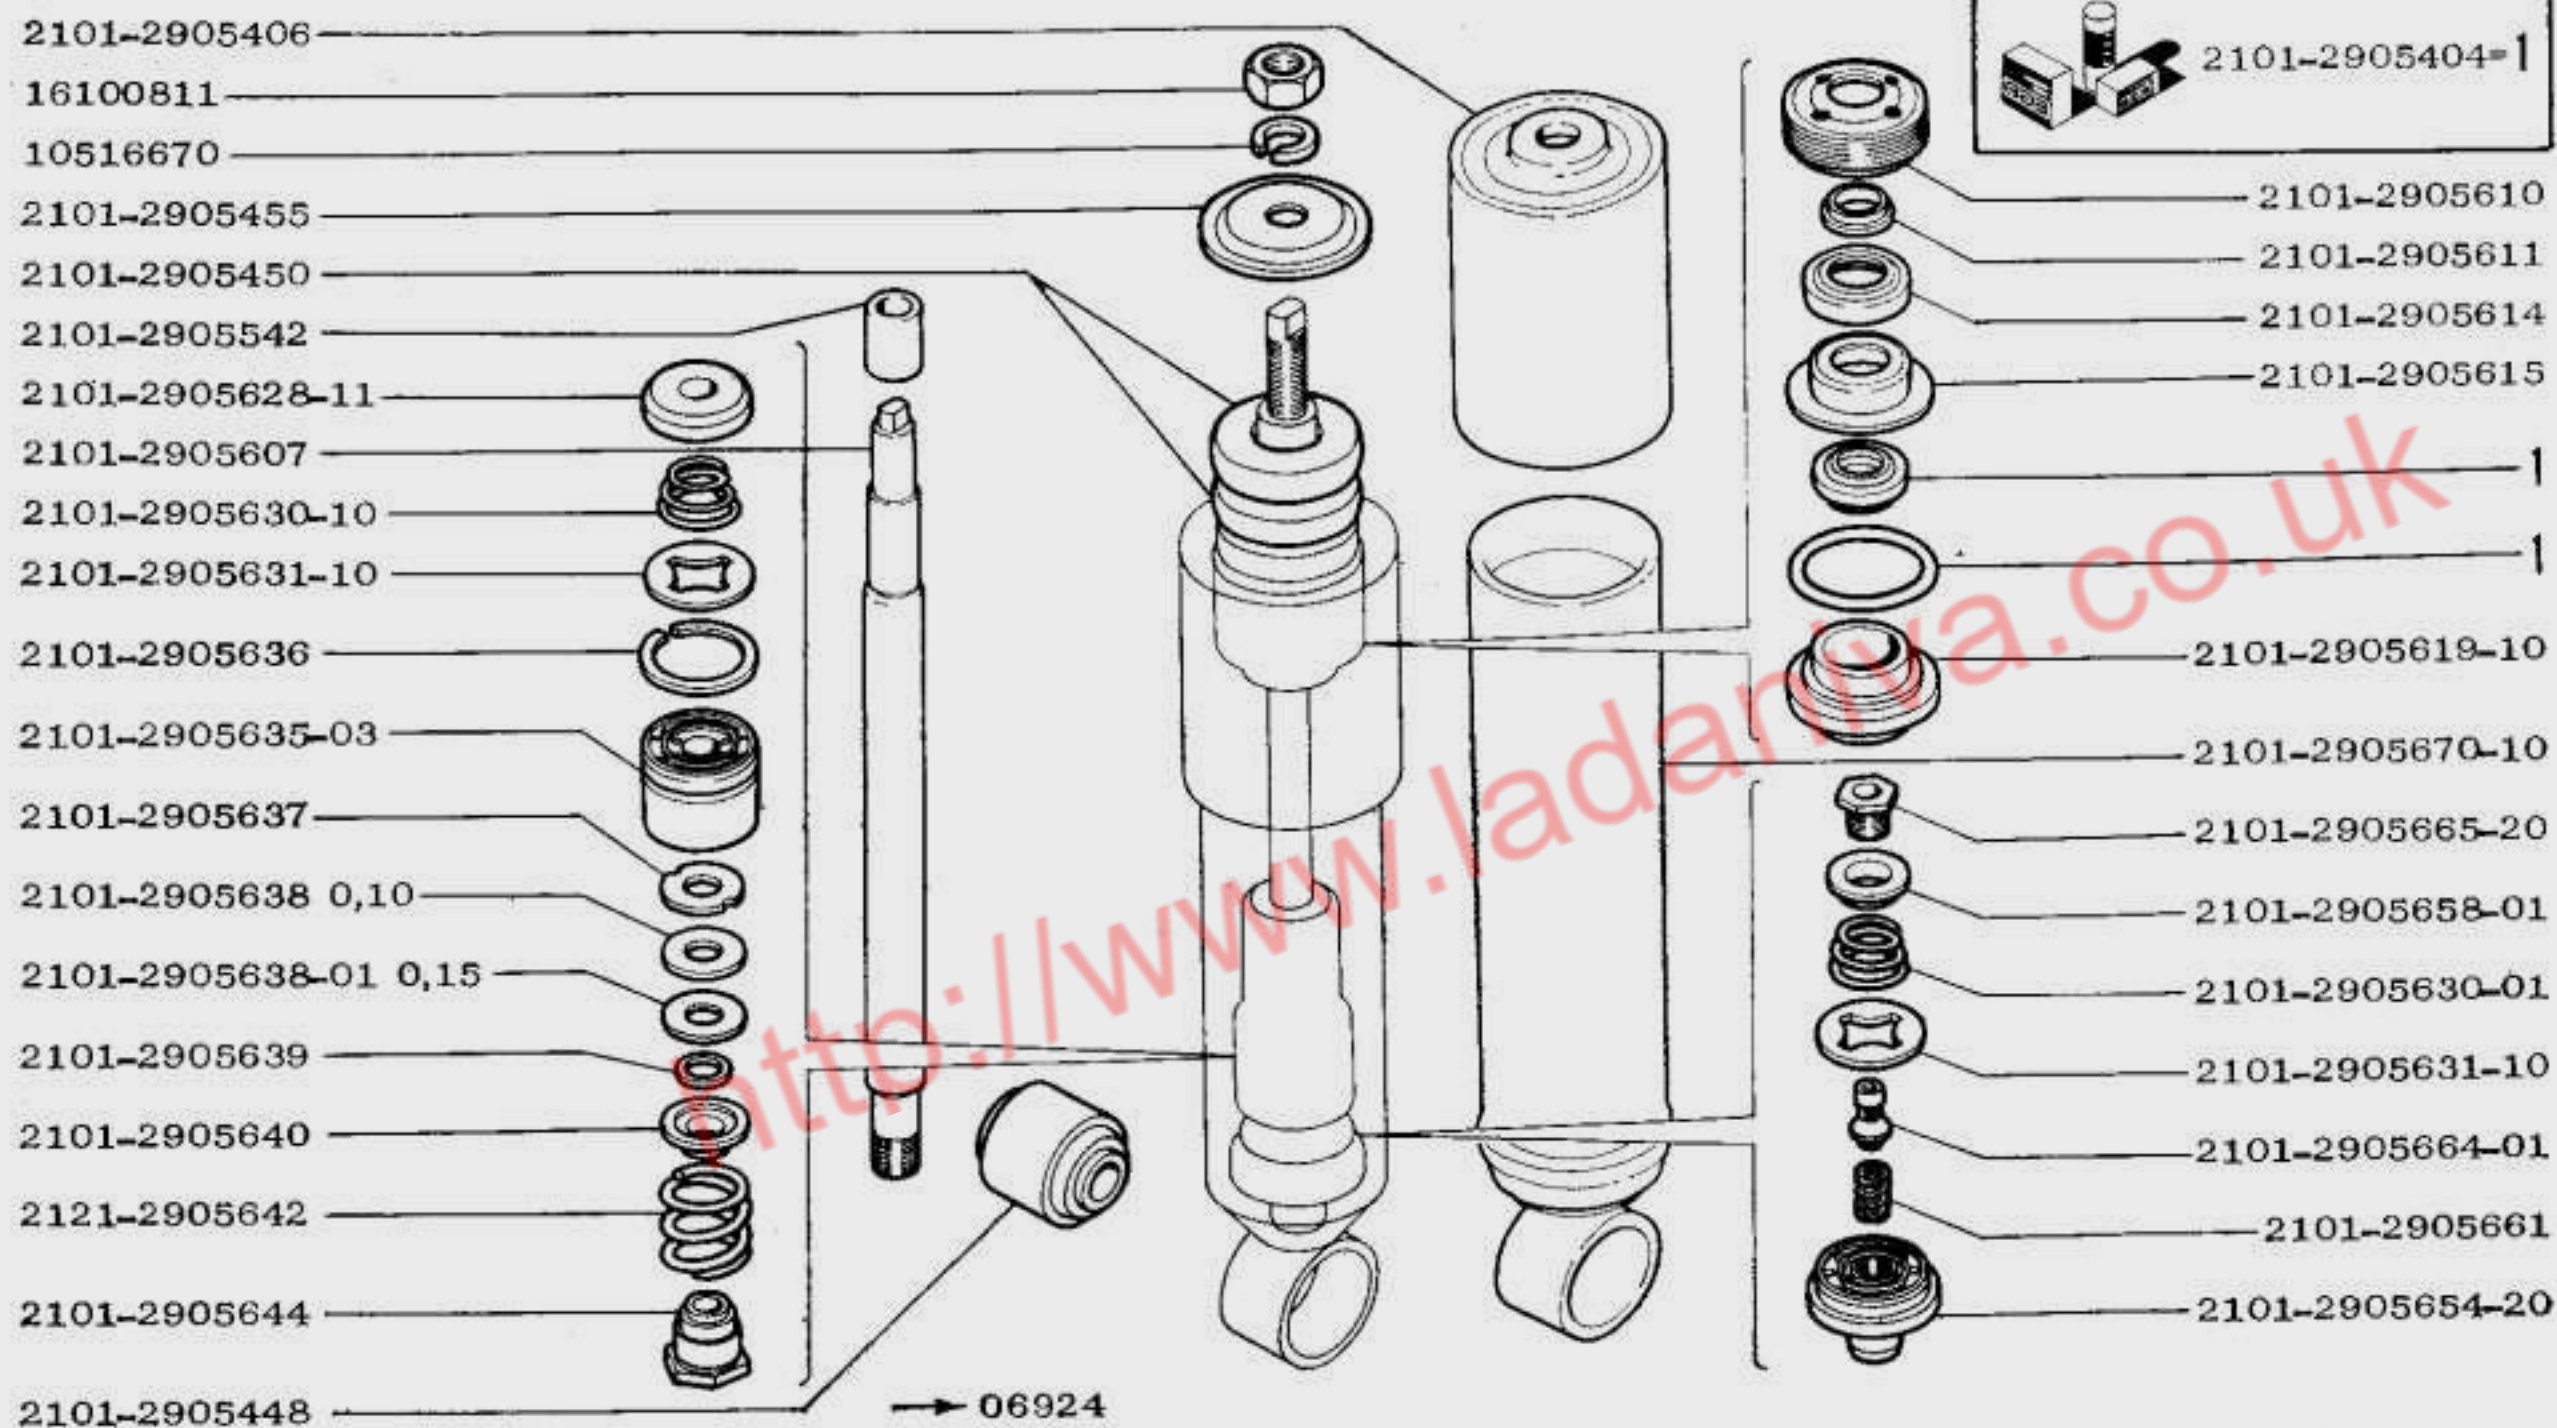

BA3-2121

Амортизатор передней подвески
 Front Shock Absorber
 Amortisseur avant
 Vorderer Stoßdämpfer
 Amortiguador de la suspensión delantera


Д3.10

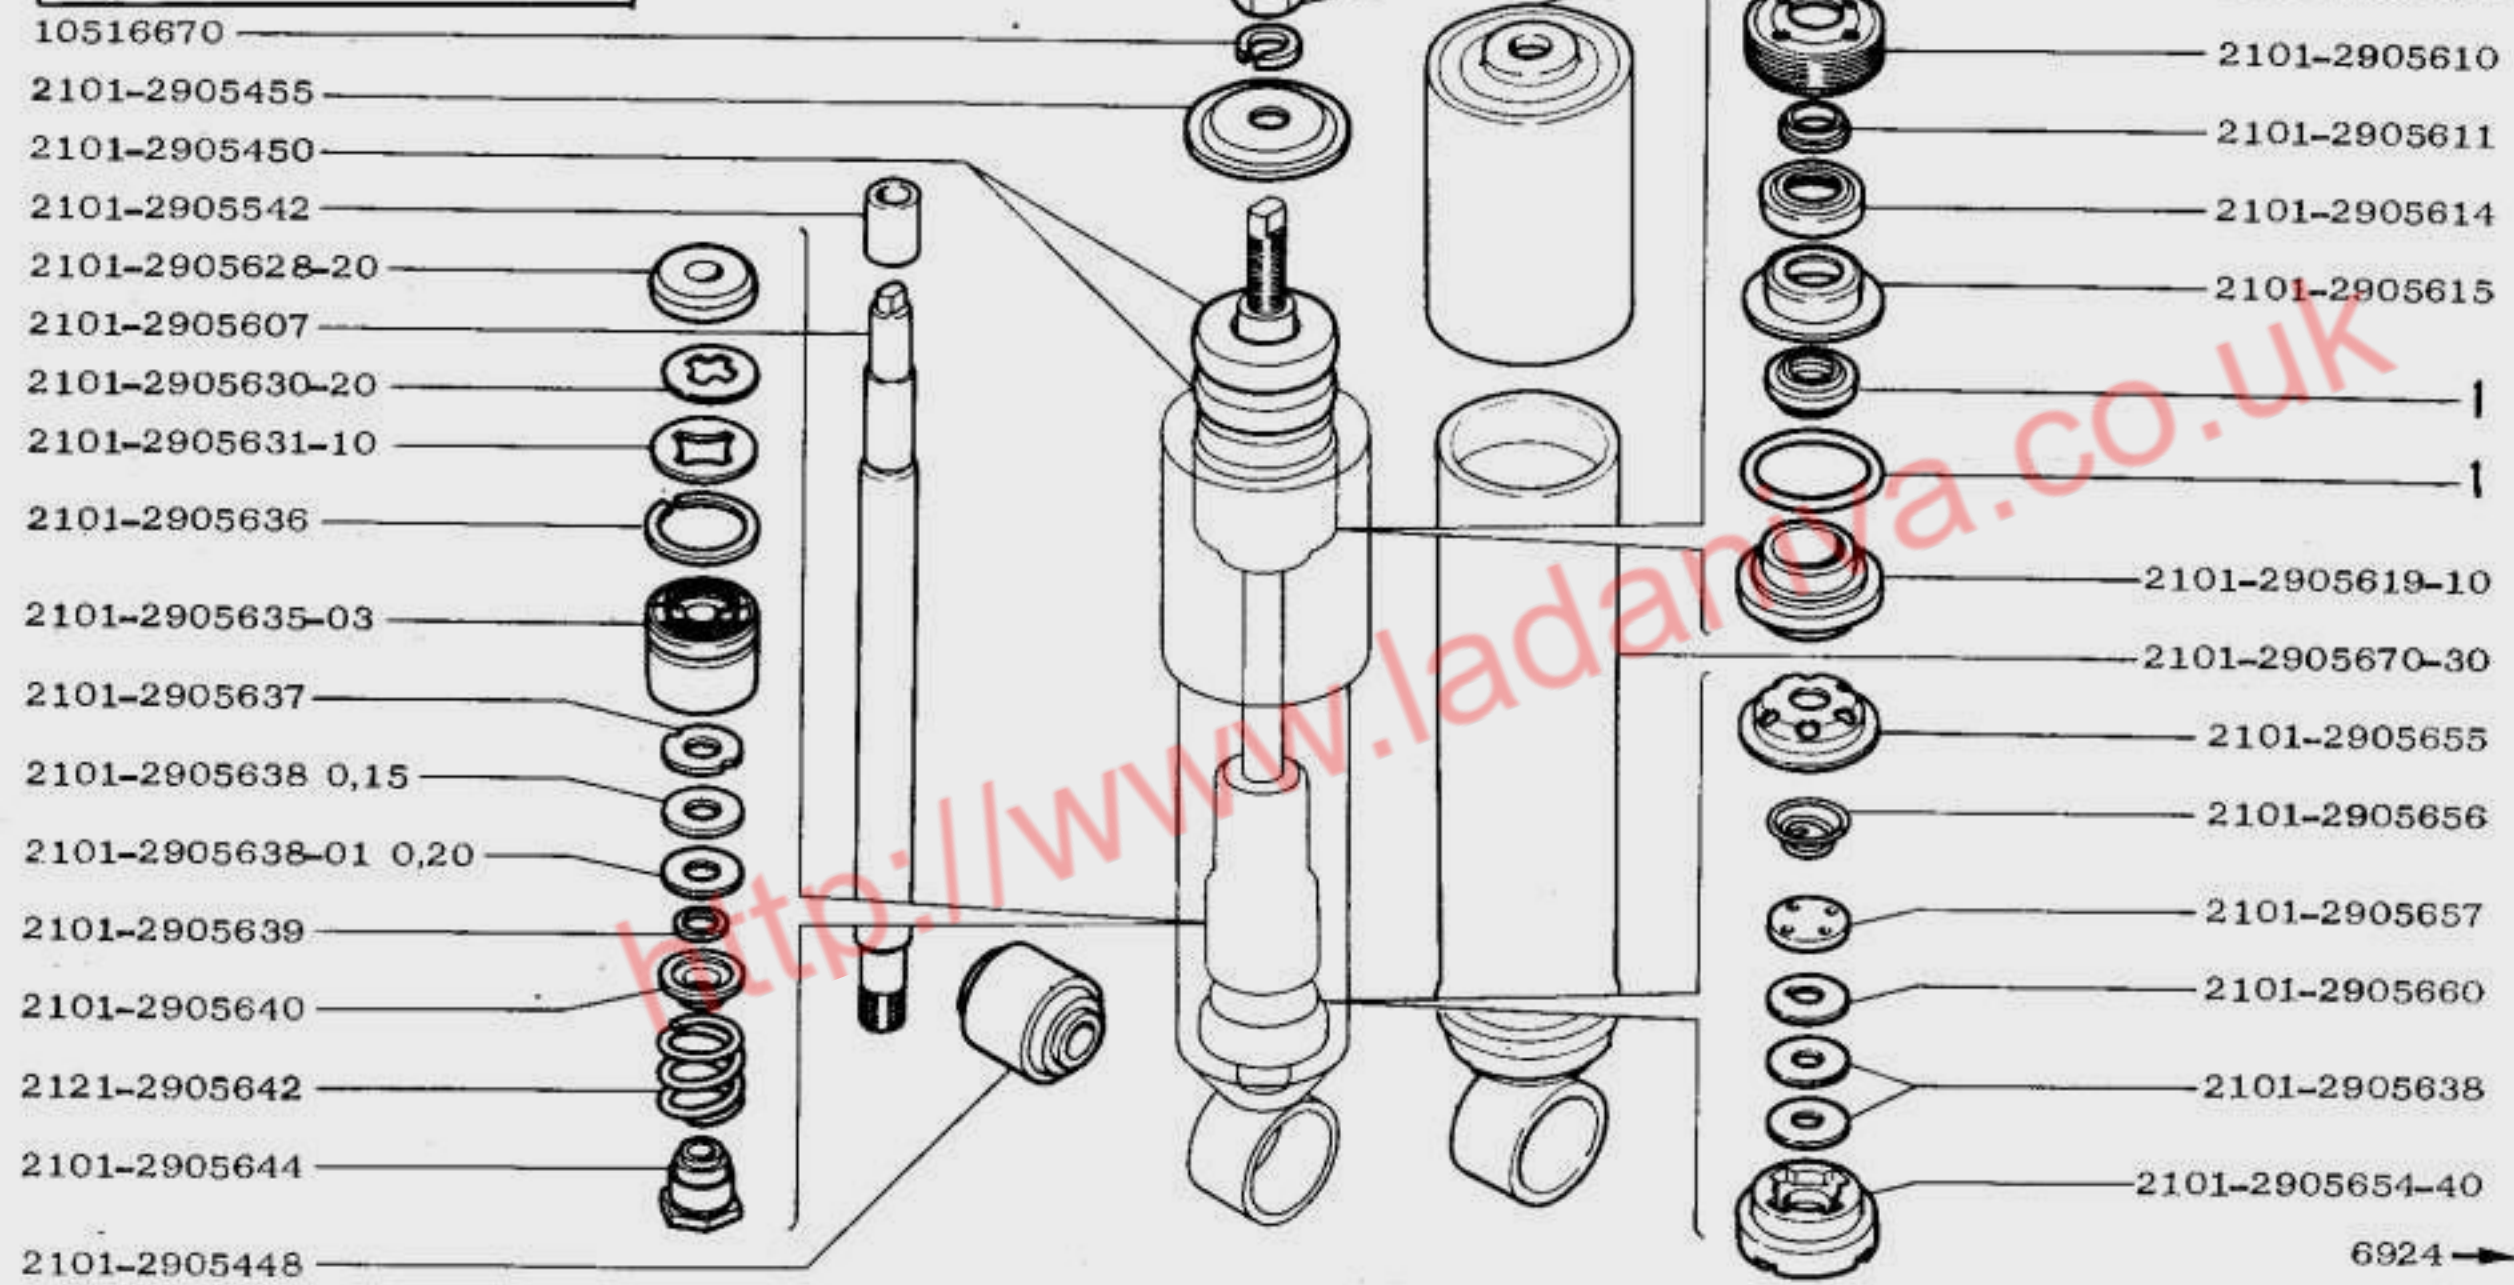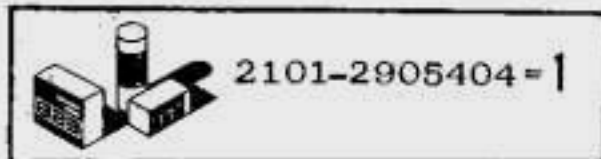

BA3-2121
BA3-21211

Амортизатор передней подвески
Front Shock Absorber
Amortisseur avant
Vorderer Stoßdämpfer
Amortiguador de la suspensión delantera


Д3.11

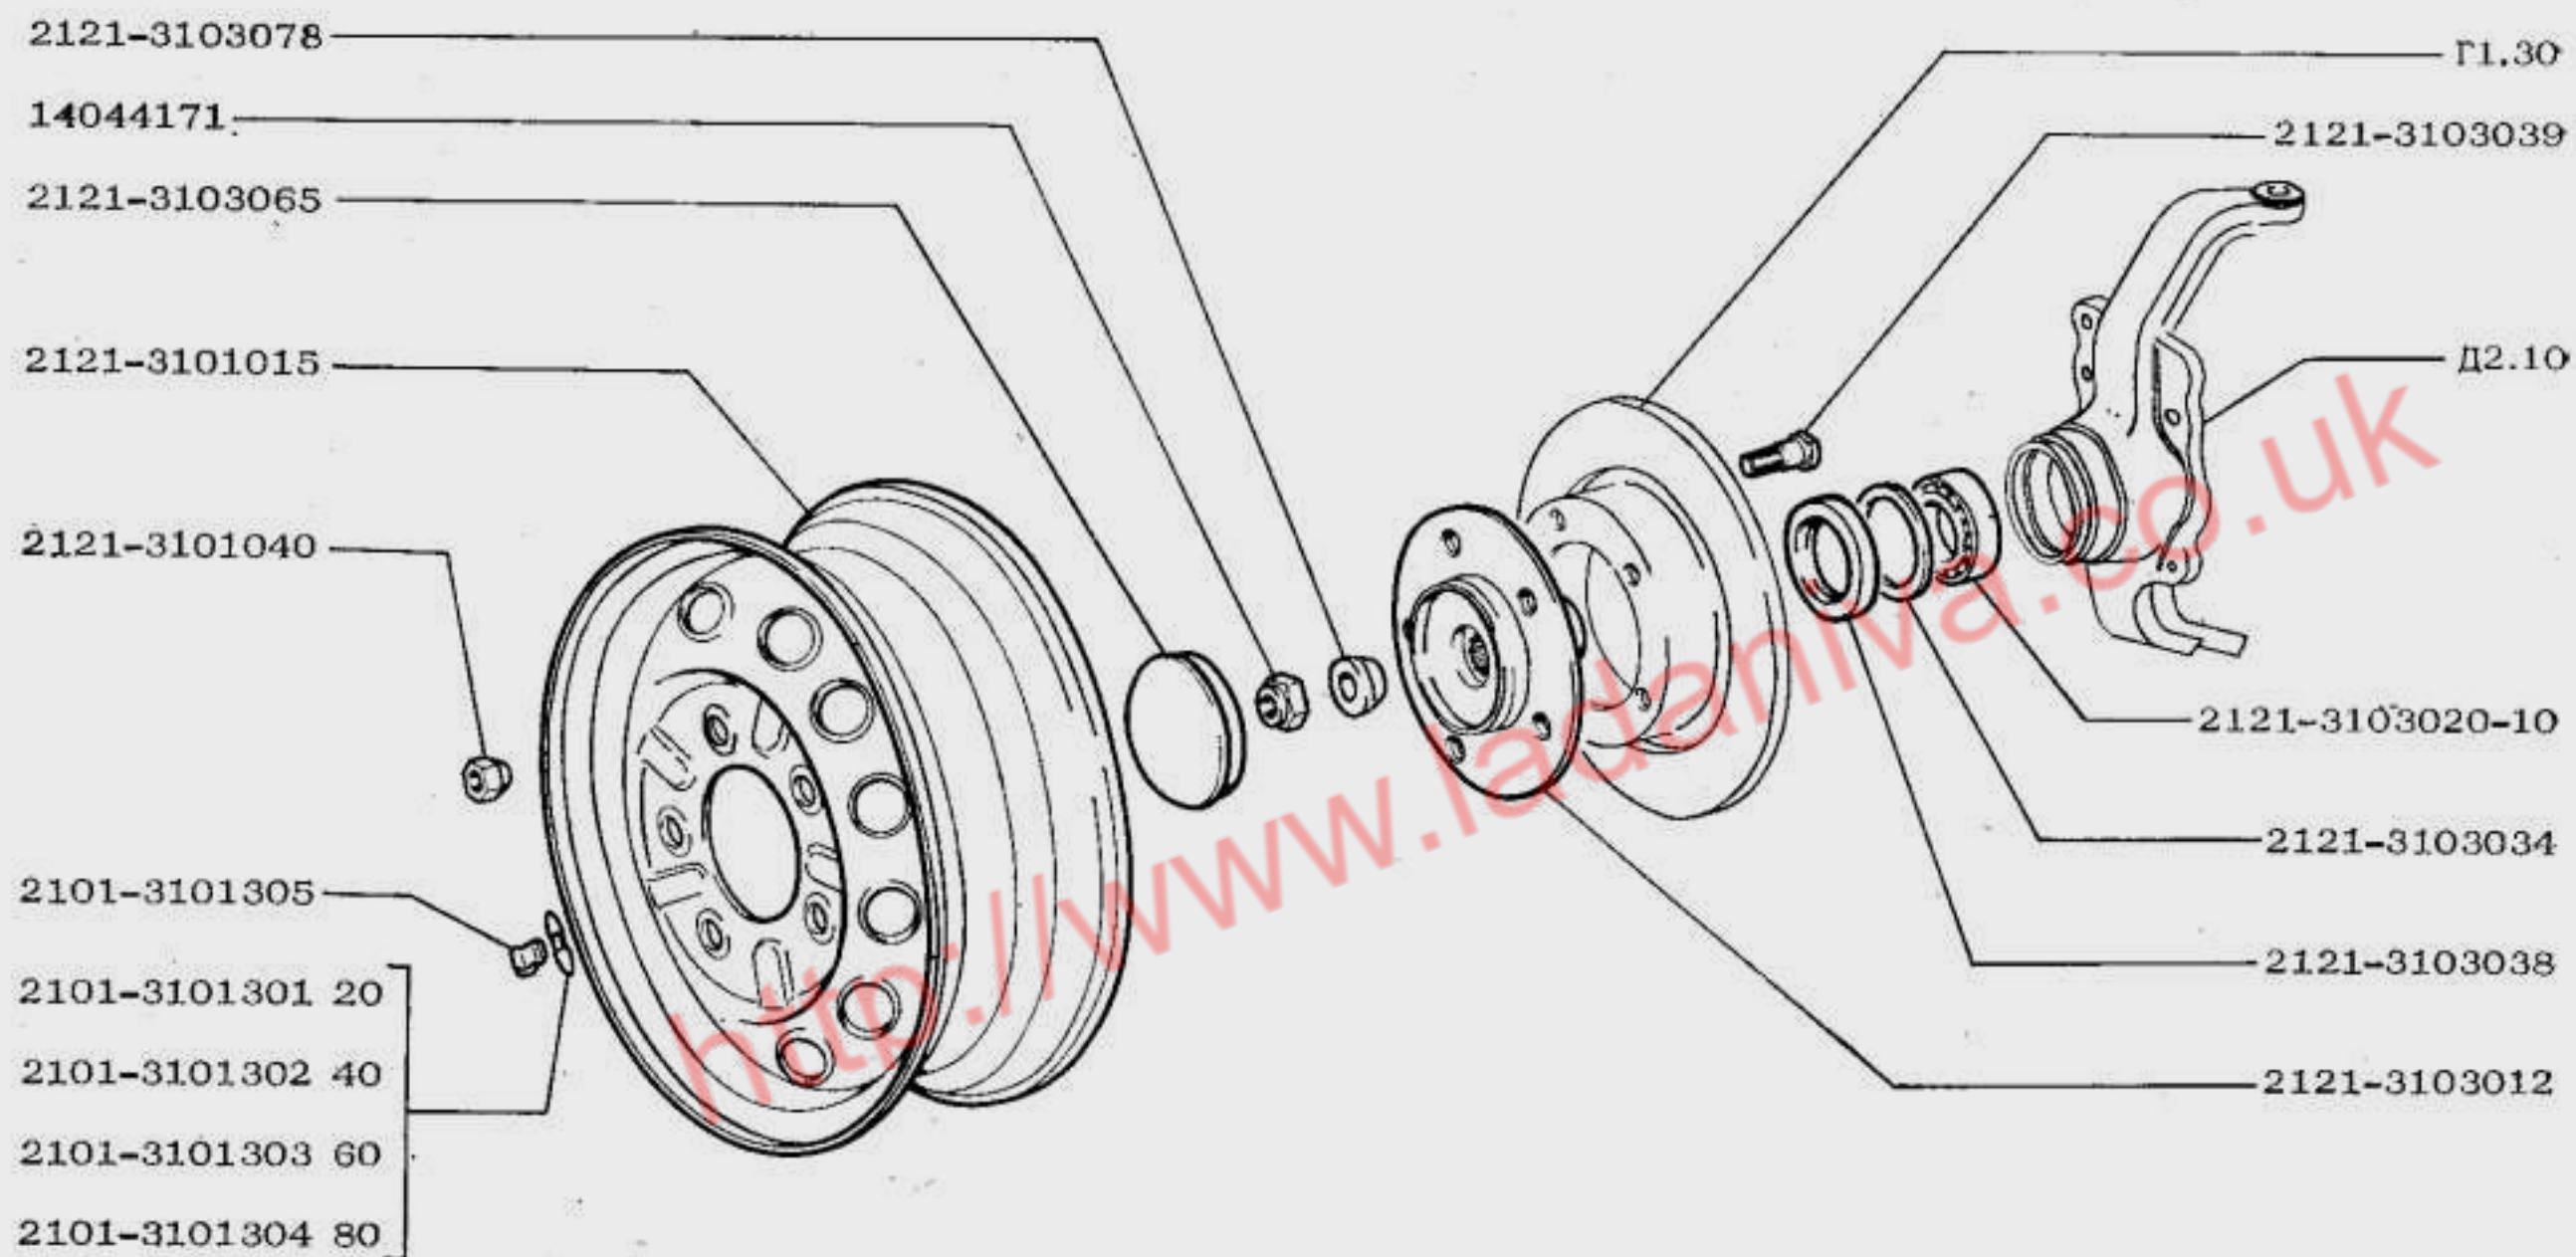

BA3-2121
BA3-21211

Колеса
Wheels
Roues
Räder
Ruedas


Д3.16

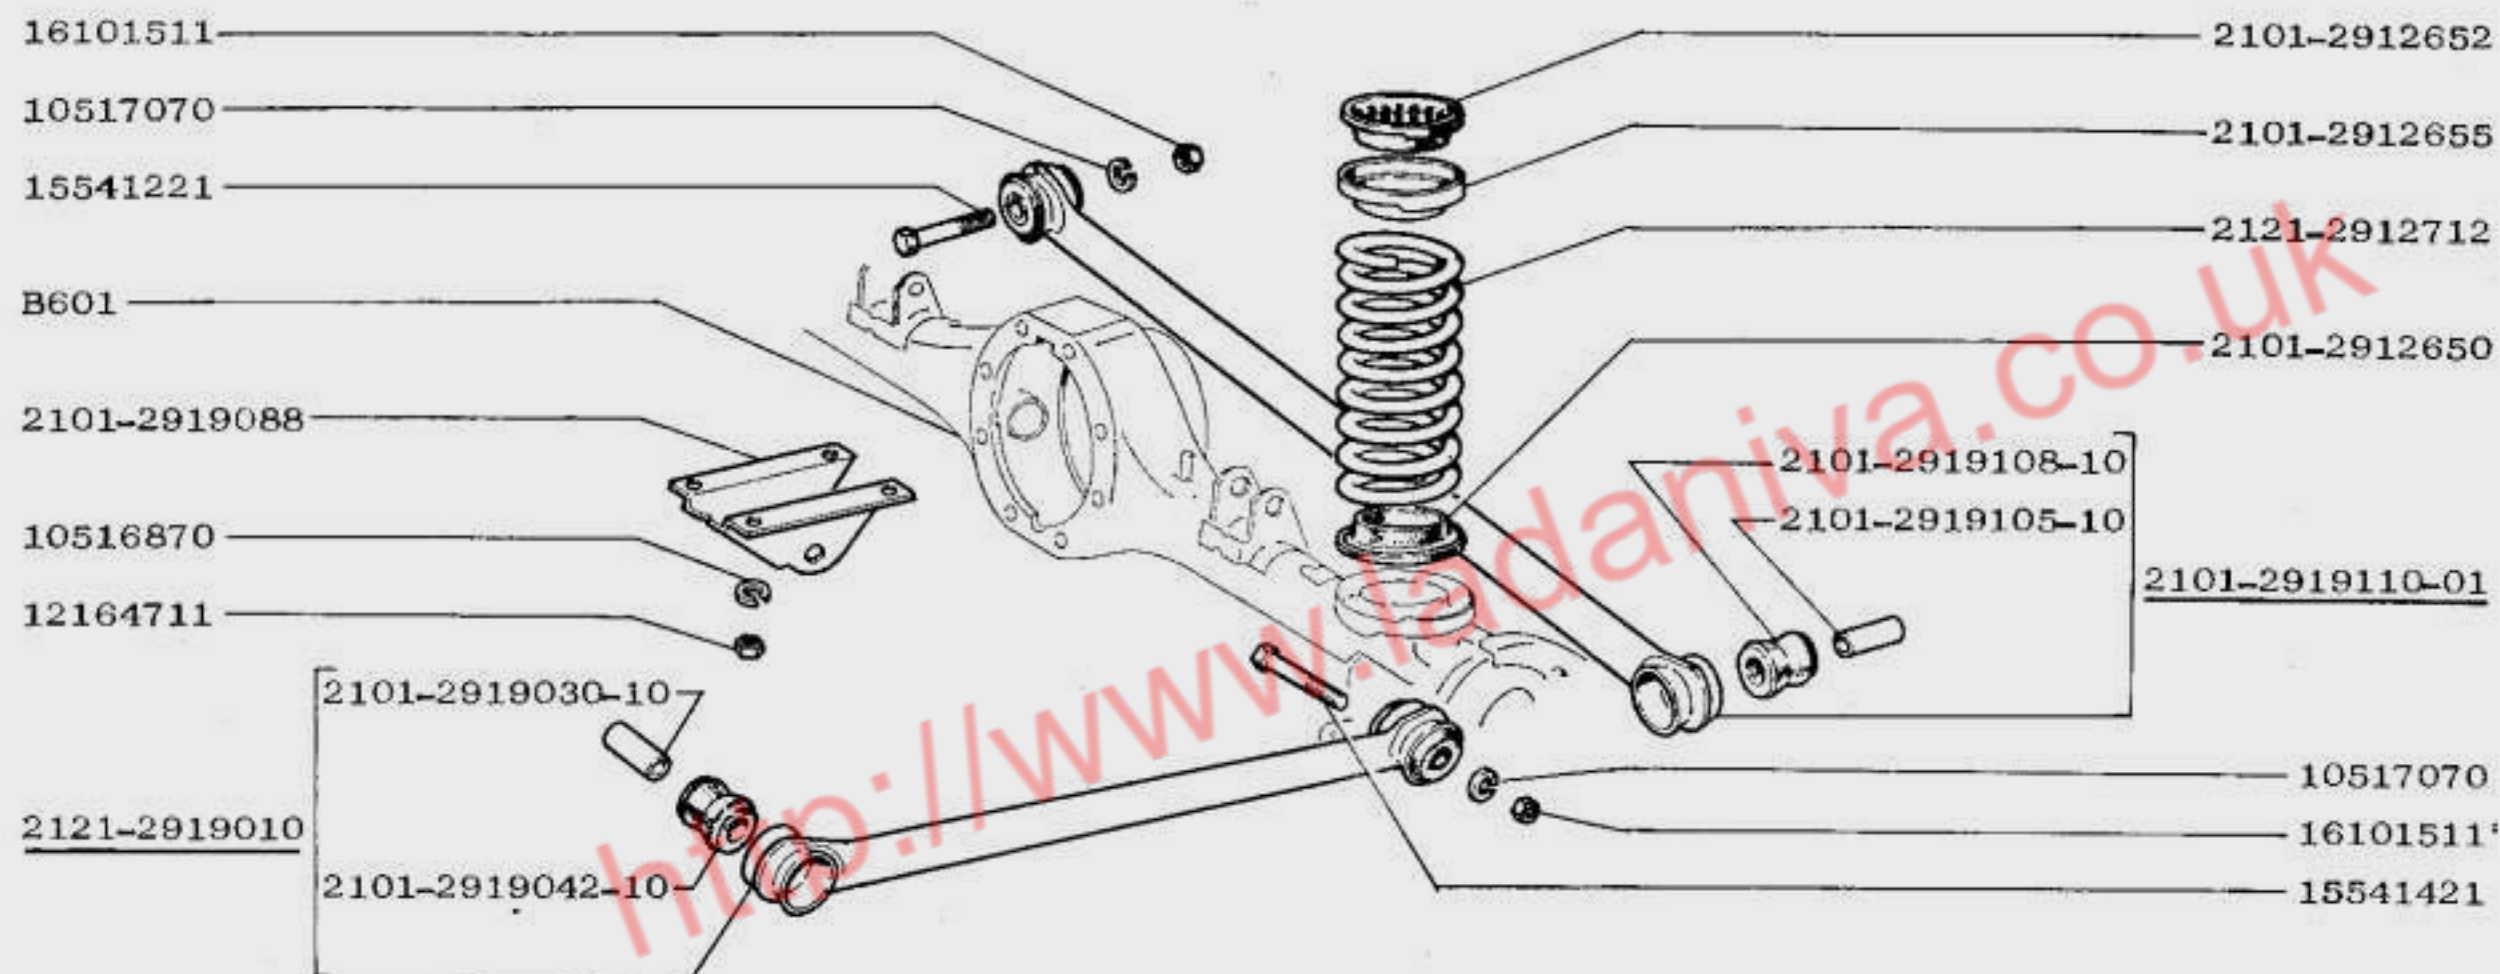

BA3-2121
BA3-21211

Подвеска задняя
Rear Suspension
Suspension arrière
Hinterradaufhängung
Suspensión trasera


Д4.05

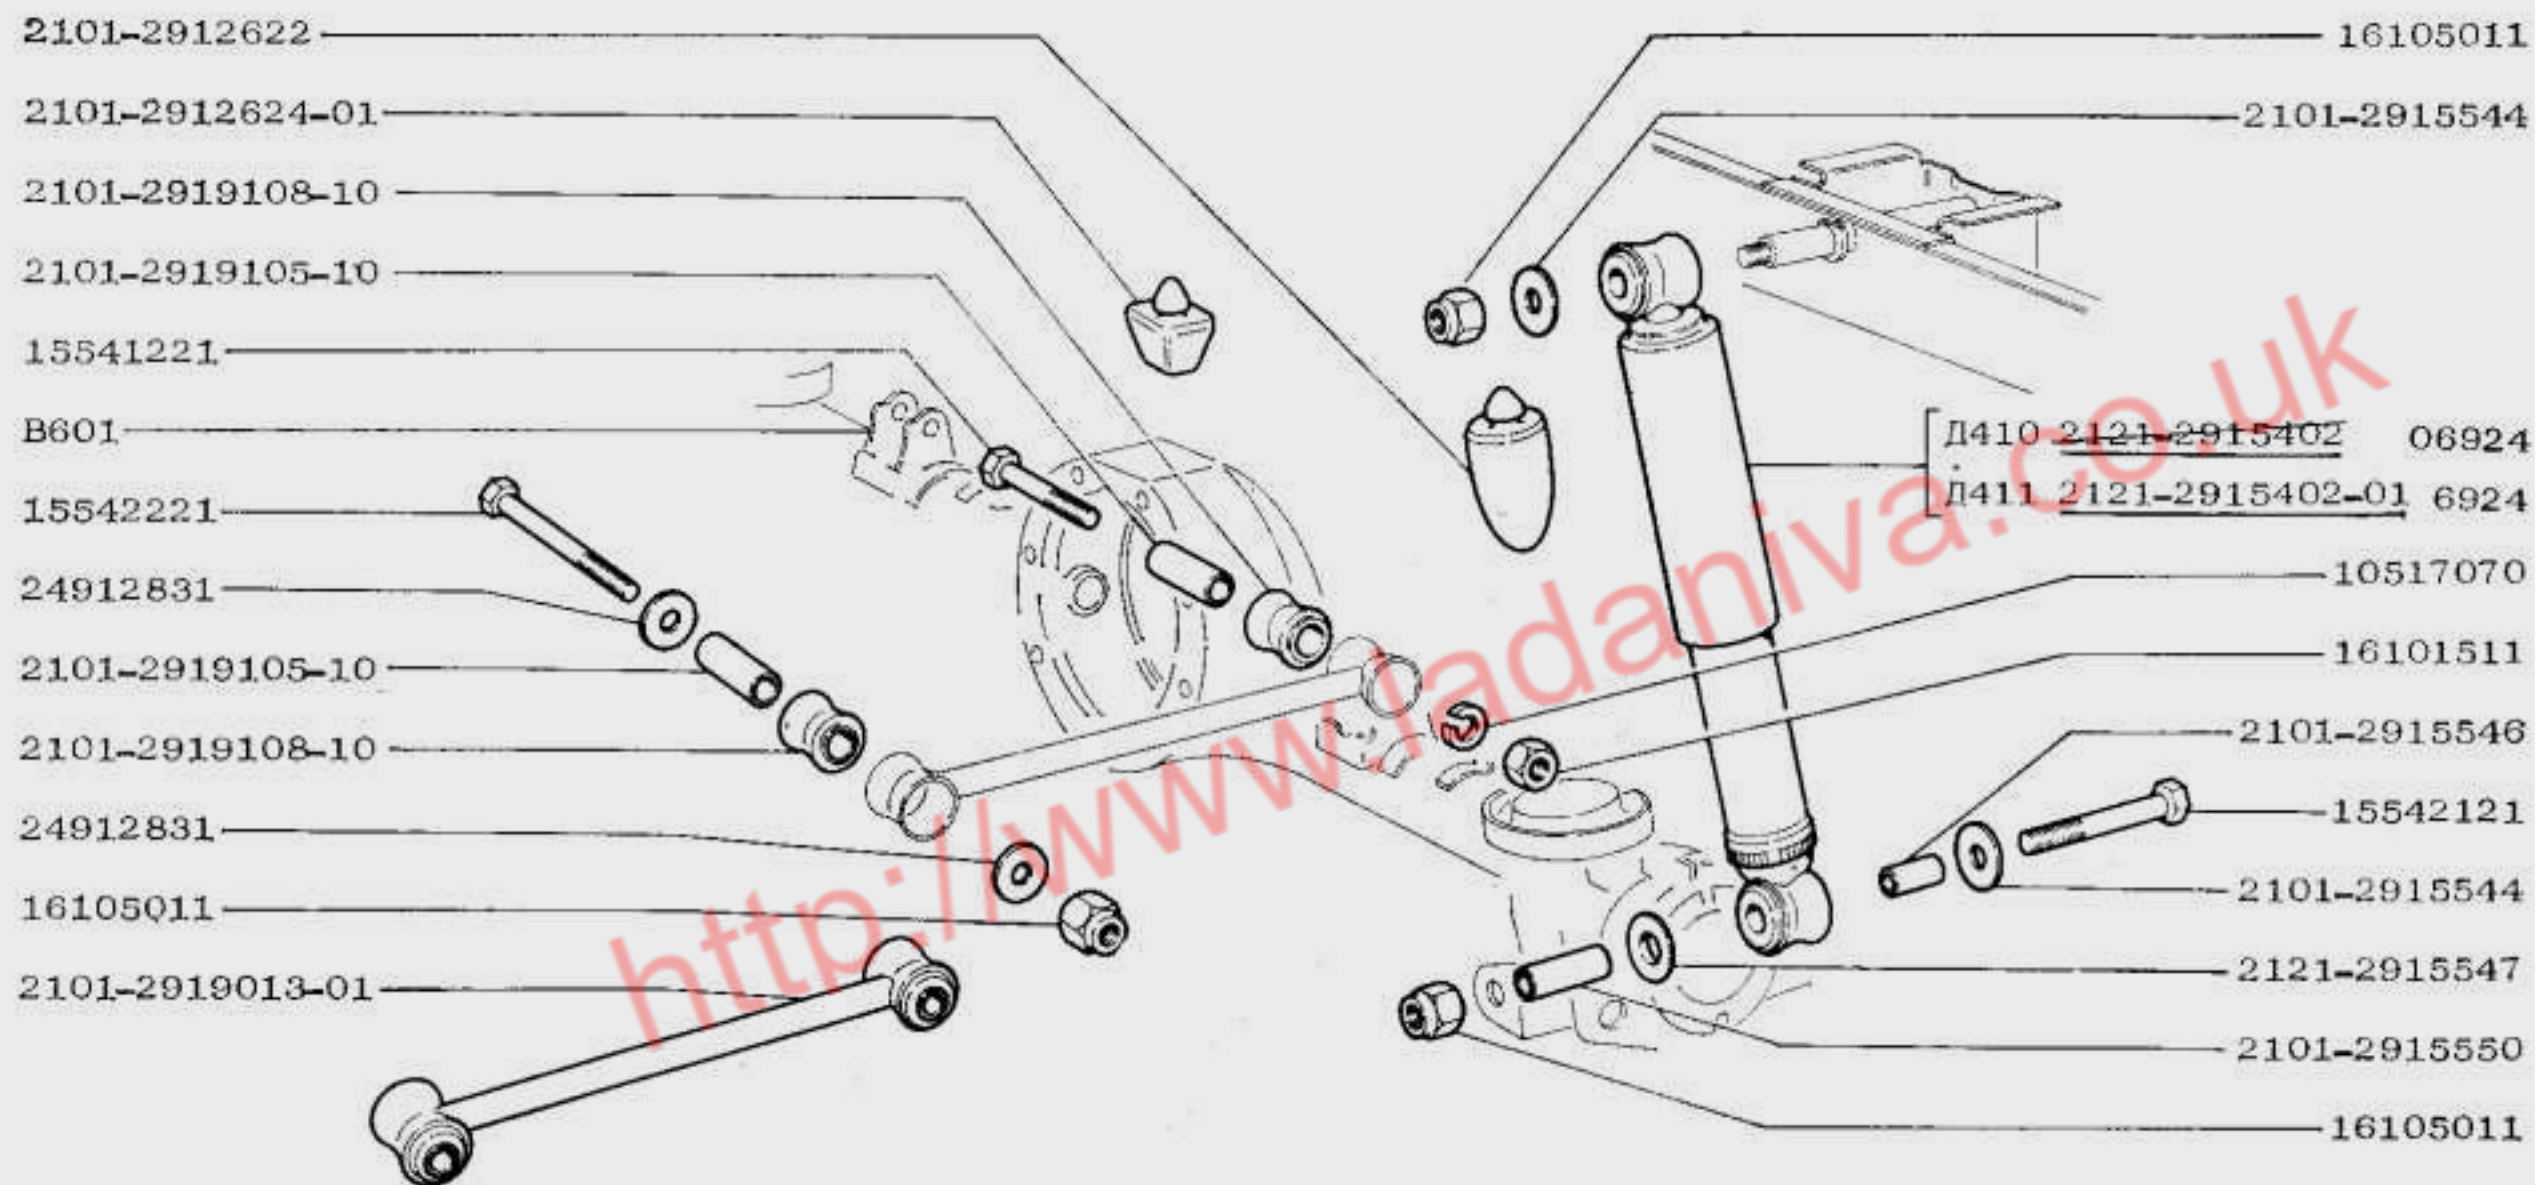

BA3-2121
BA3-21211


Подвеска задняя
Rear Suspension
Suspension arrière
Hinterradaufhängung
Suspensión trasera

Д4.06

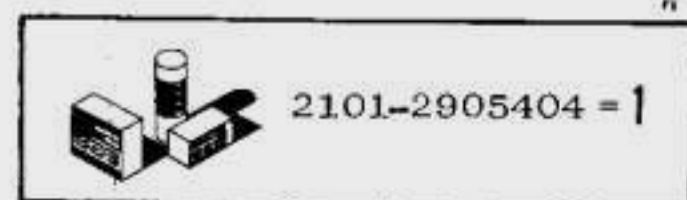

- 2101-2905628-11
- 2101-2905630-10
- 2101-2905631-10
- 2101-2905636
- 2101-2905635-03
- 2101-2905637-10
- 2101-2905638 0,10
- 2101-2905638-01 0,15
- 2101-2905639
- 2101-2905640
- 2101-2905642
- 2101-2905644
- 2101-2915408-10


→ 06924

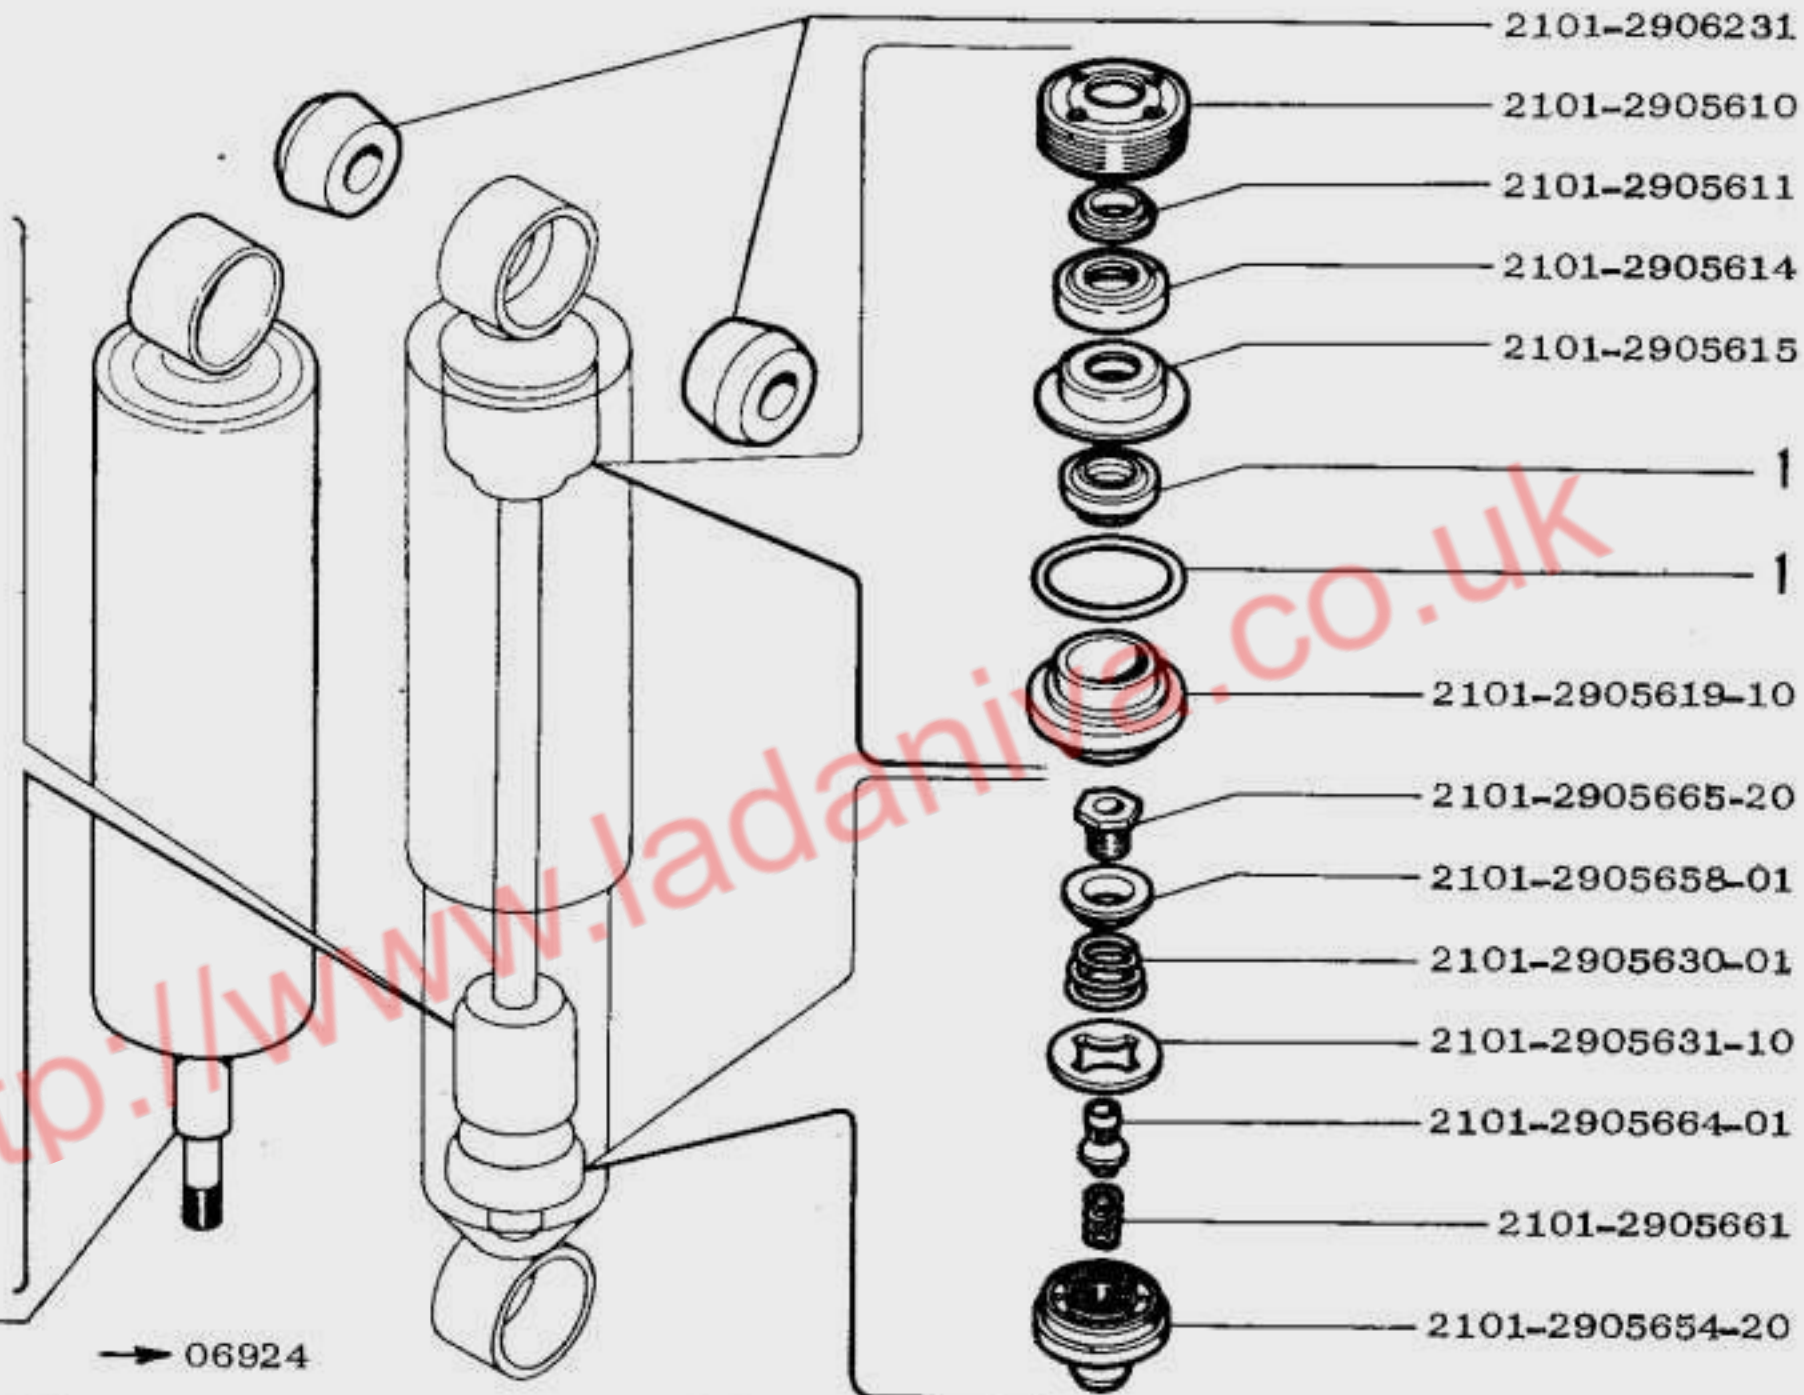


BA3-2121

Амортизатор задней подвески
Rear Shock Absorber
Amortisseur arrière
Hinterer Stoßdämpfer
Amortiguador de la suspensión trasera

Д4.10

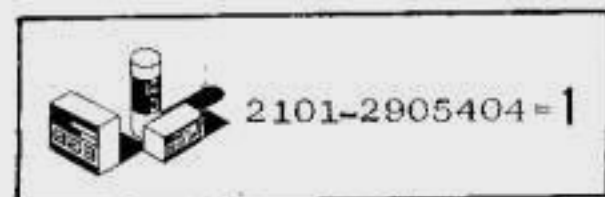


- 2101-2905628-20
- 2101-2905630-20
- 2101-2905631-10
- 2101-2905636
- 2101-2905635-03
- 2101-2905637-10
- 2101-2905638 0,10
- 2101-2905638-01 0,15
- 2101-2905639
- 2101-2905640
- 2101-2905642
- 2101-2905644
- 2101-2915408-10

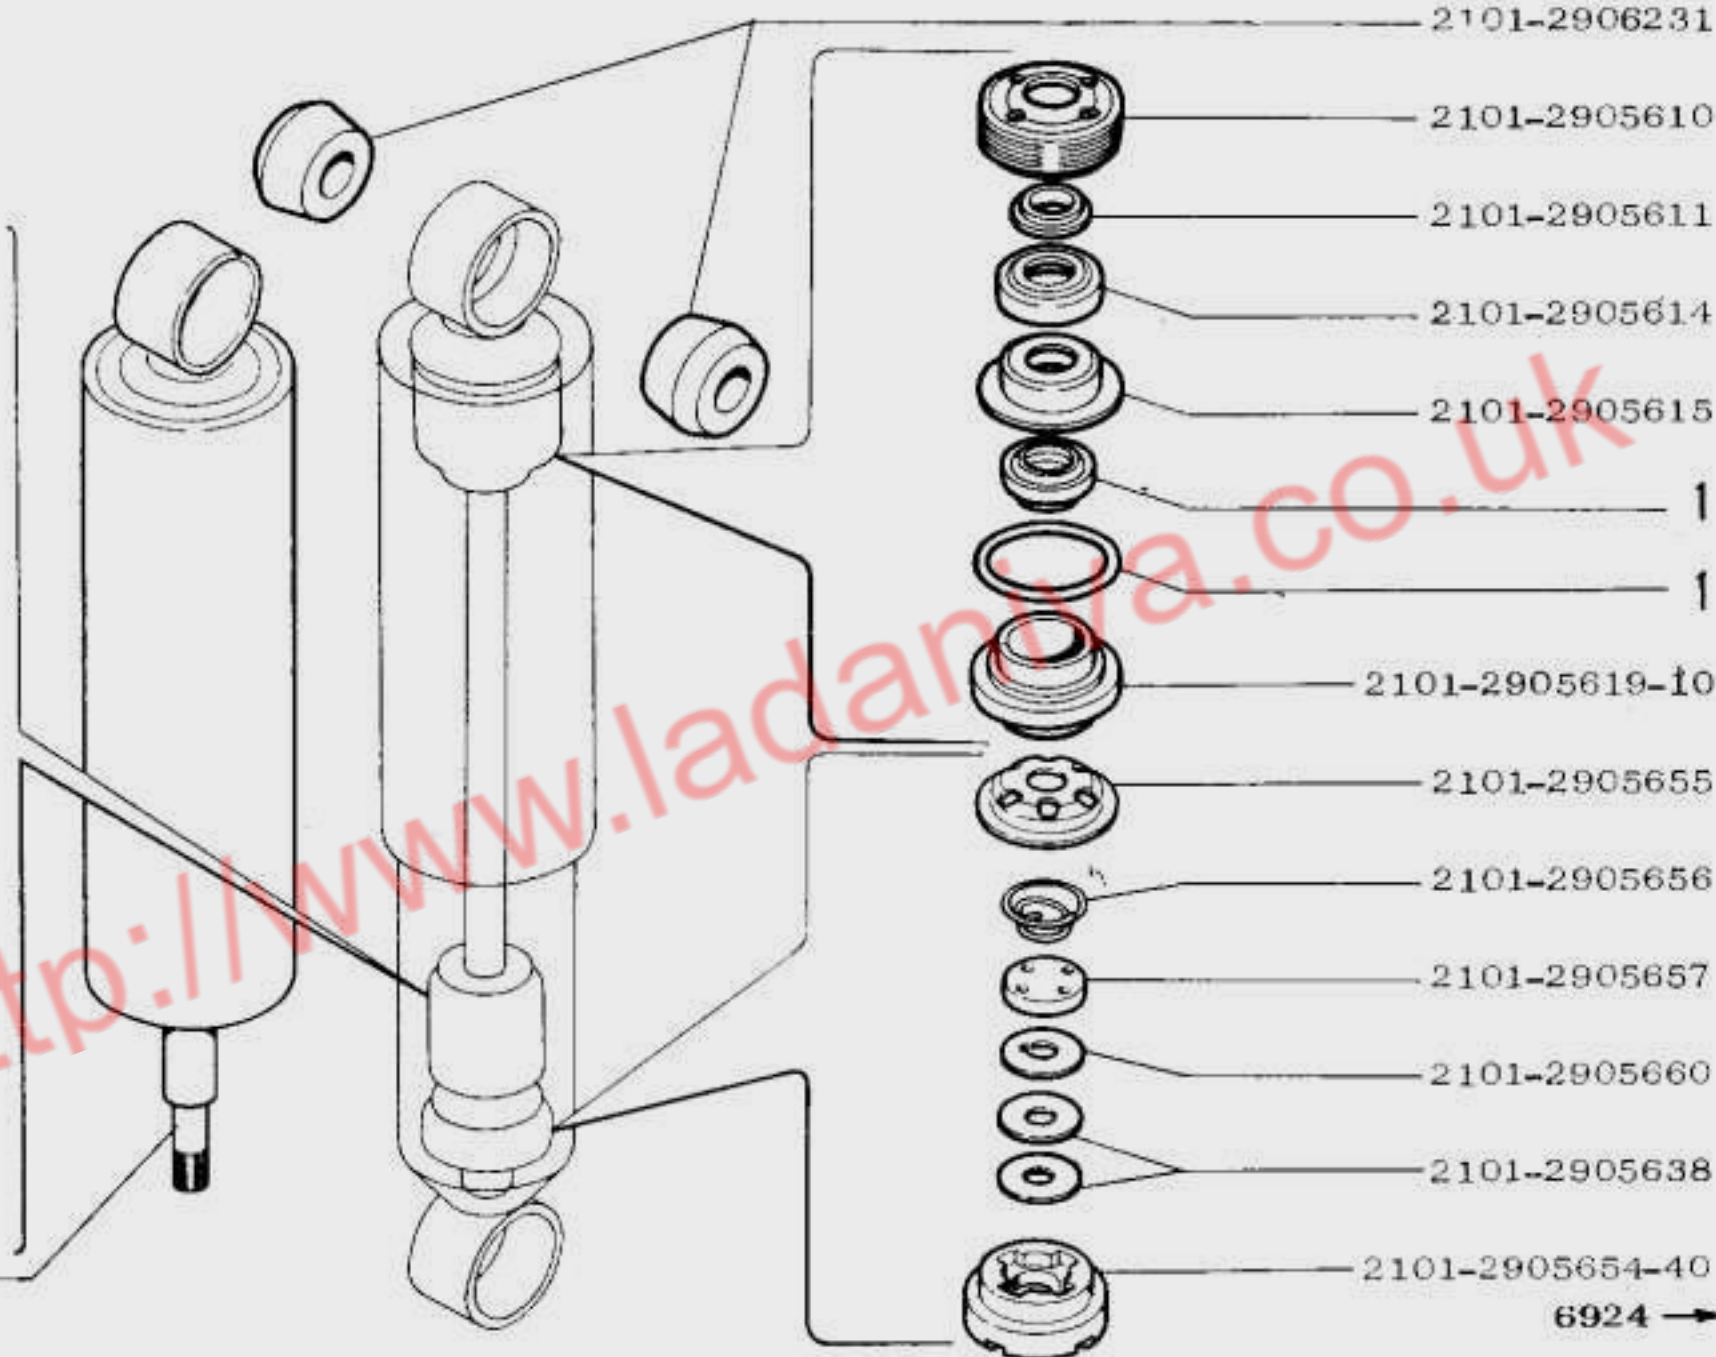

BA3-2121
BA3-21211

Амортизатор задней подвески
Rear Shock Absorber
Amortisseur arrière
Hinterer Stoßdämpfer
Amortiguador de la suspensión trasera


Д4.11

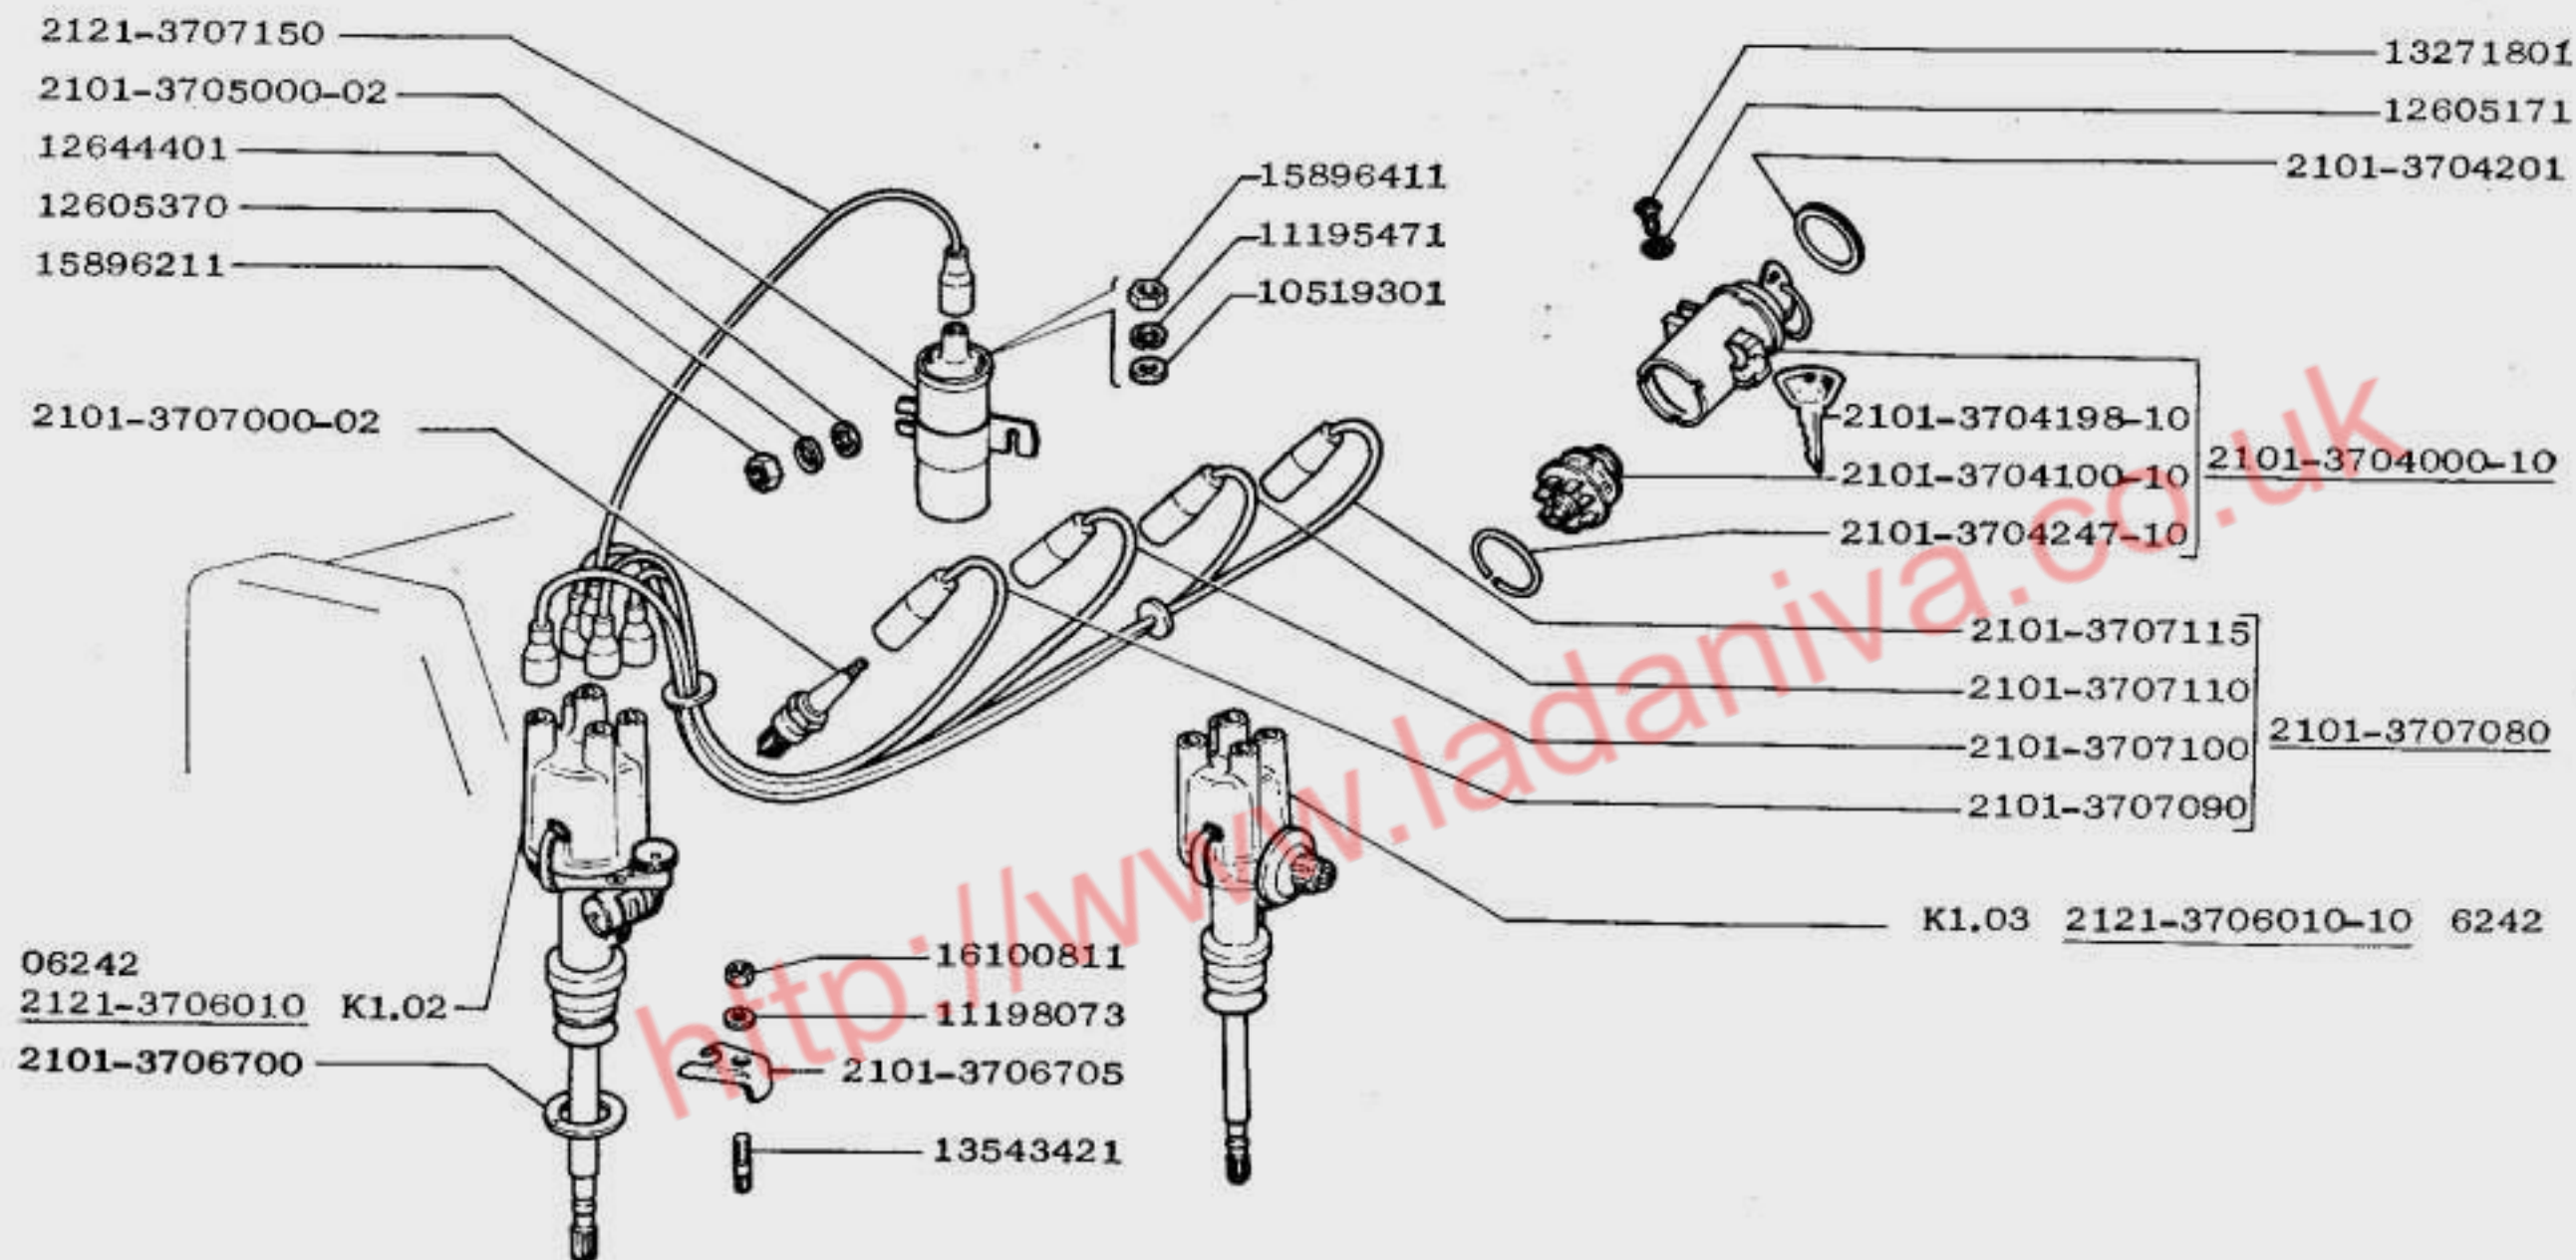

BA3-2121
BA3-21211

Система зажигания
Ignition System
Système d'allumage
Zündeinrichtung
Sistema del encendido


K1.01

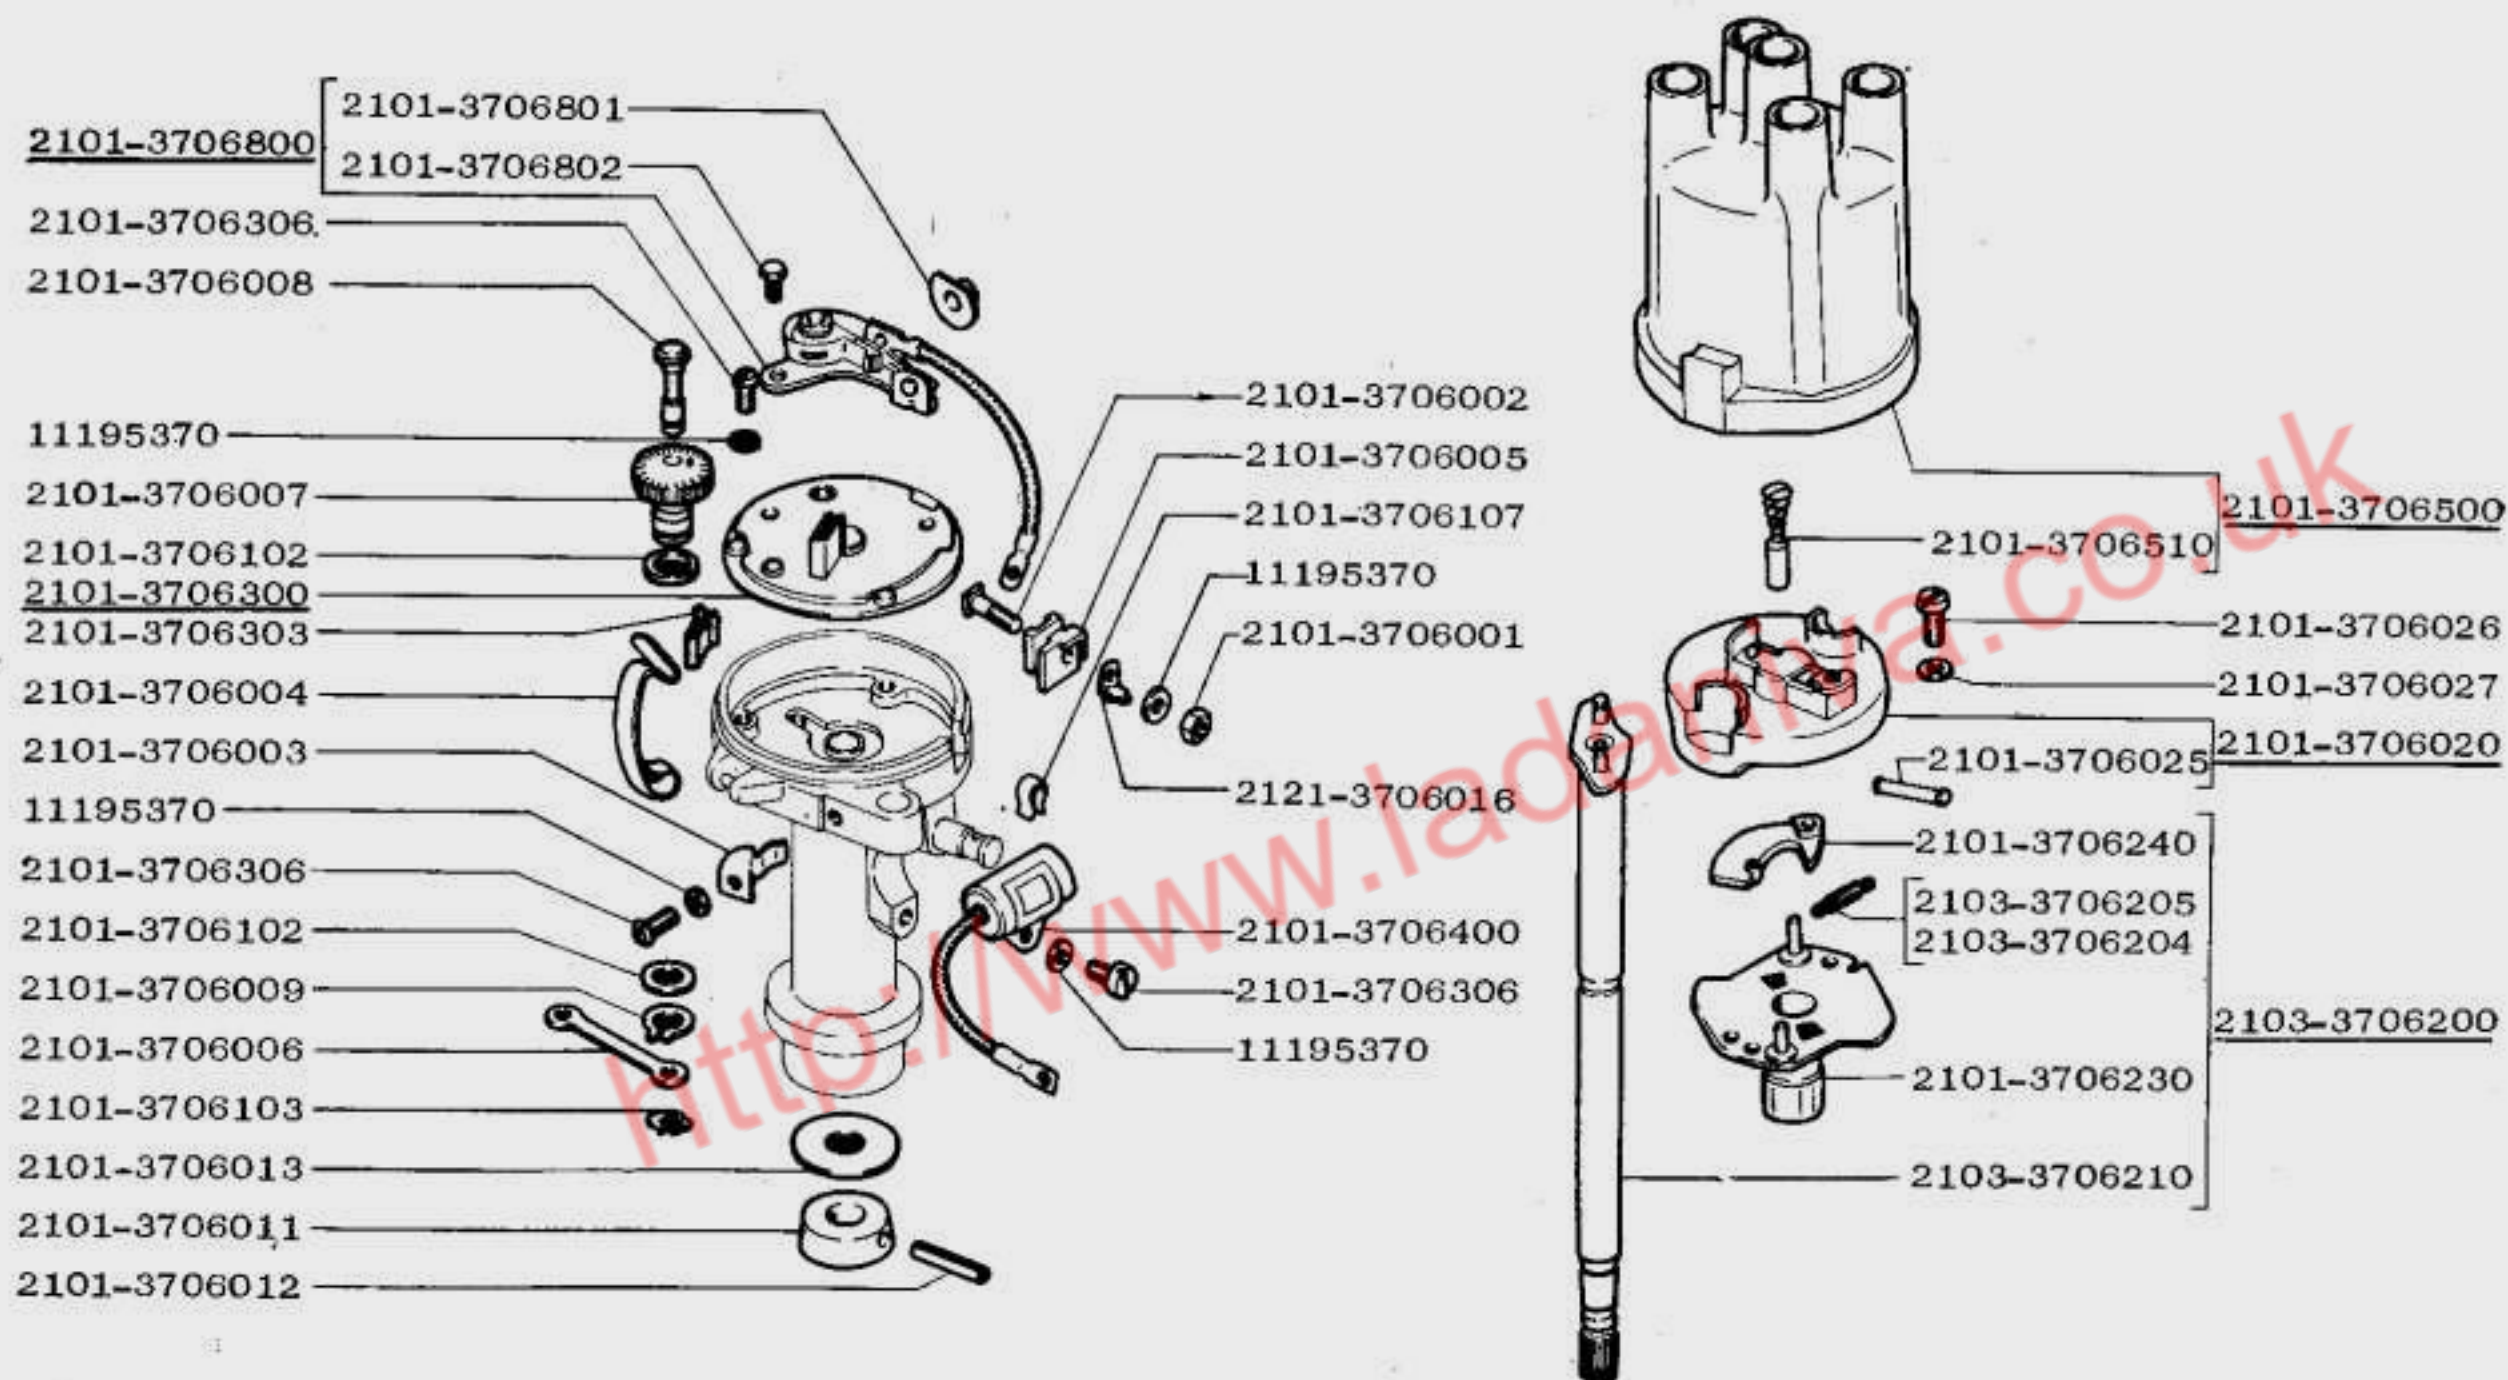

BA3-2121
BA3-21211

Распределитель зажигания
Ignition Distributor
Allumeur
Zündverteiler
Distribuidor del encendido


K1.02

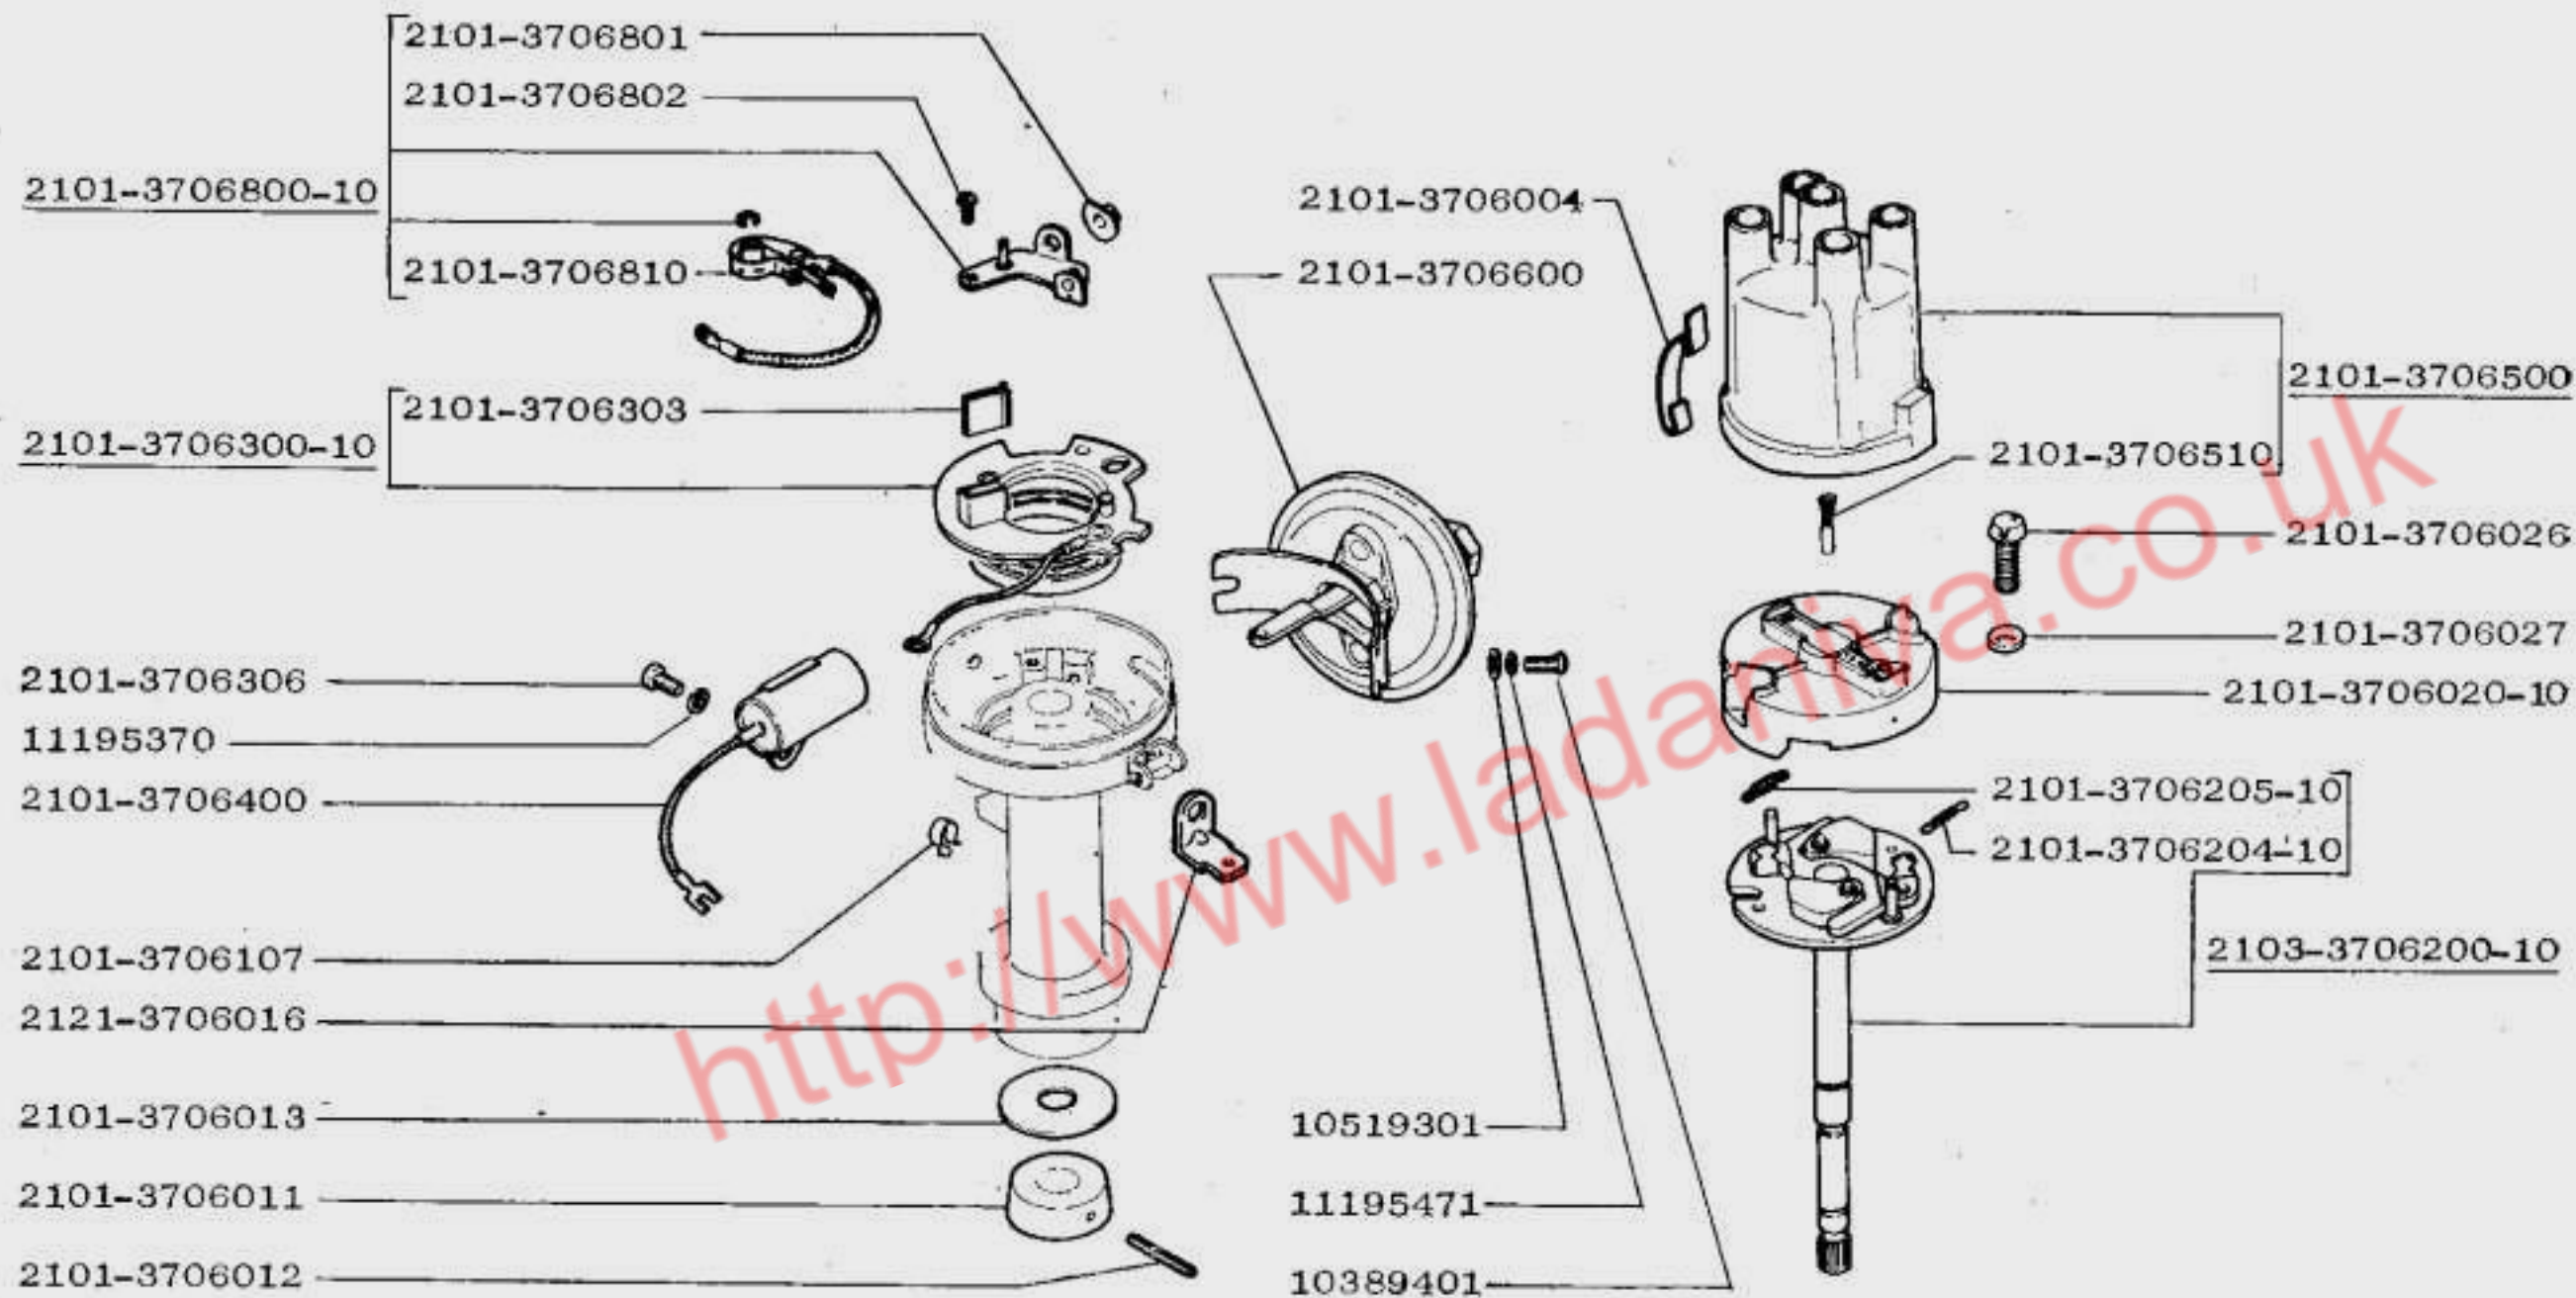

BA3-2121
BA3-21211

Распределитель зажигания
Ignition Distributor
Allumeur
Zündverteiler
Distribuidor del encendido


K1.03

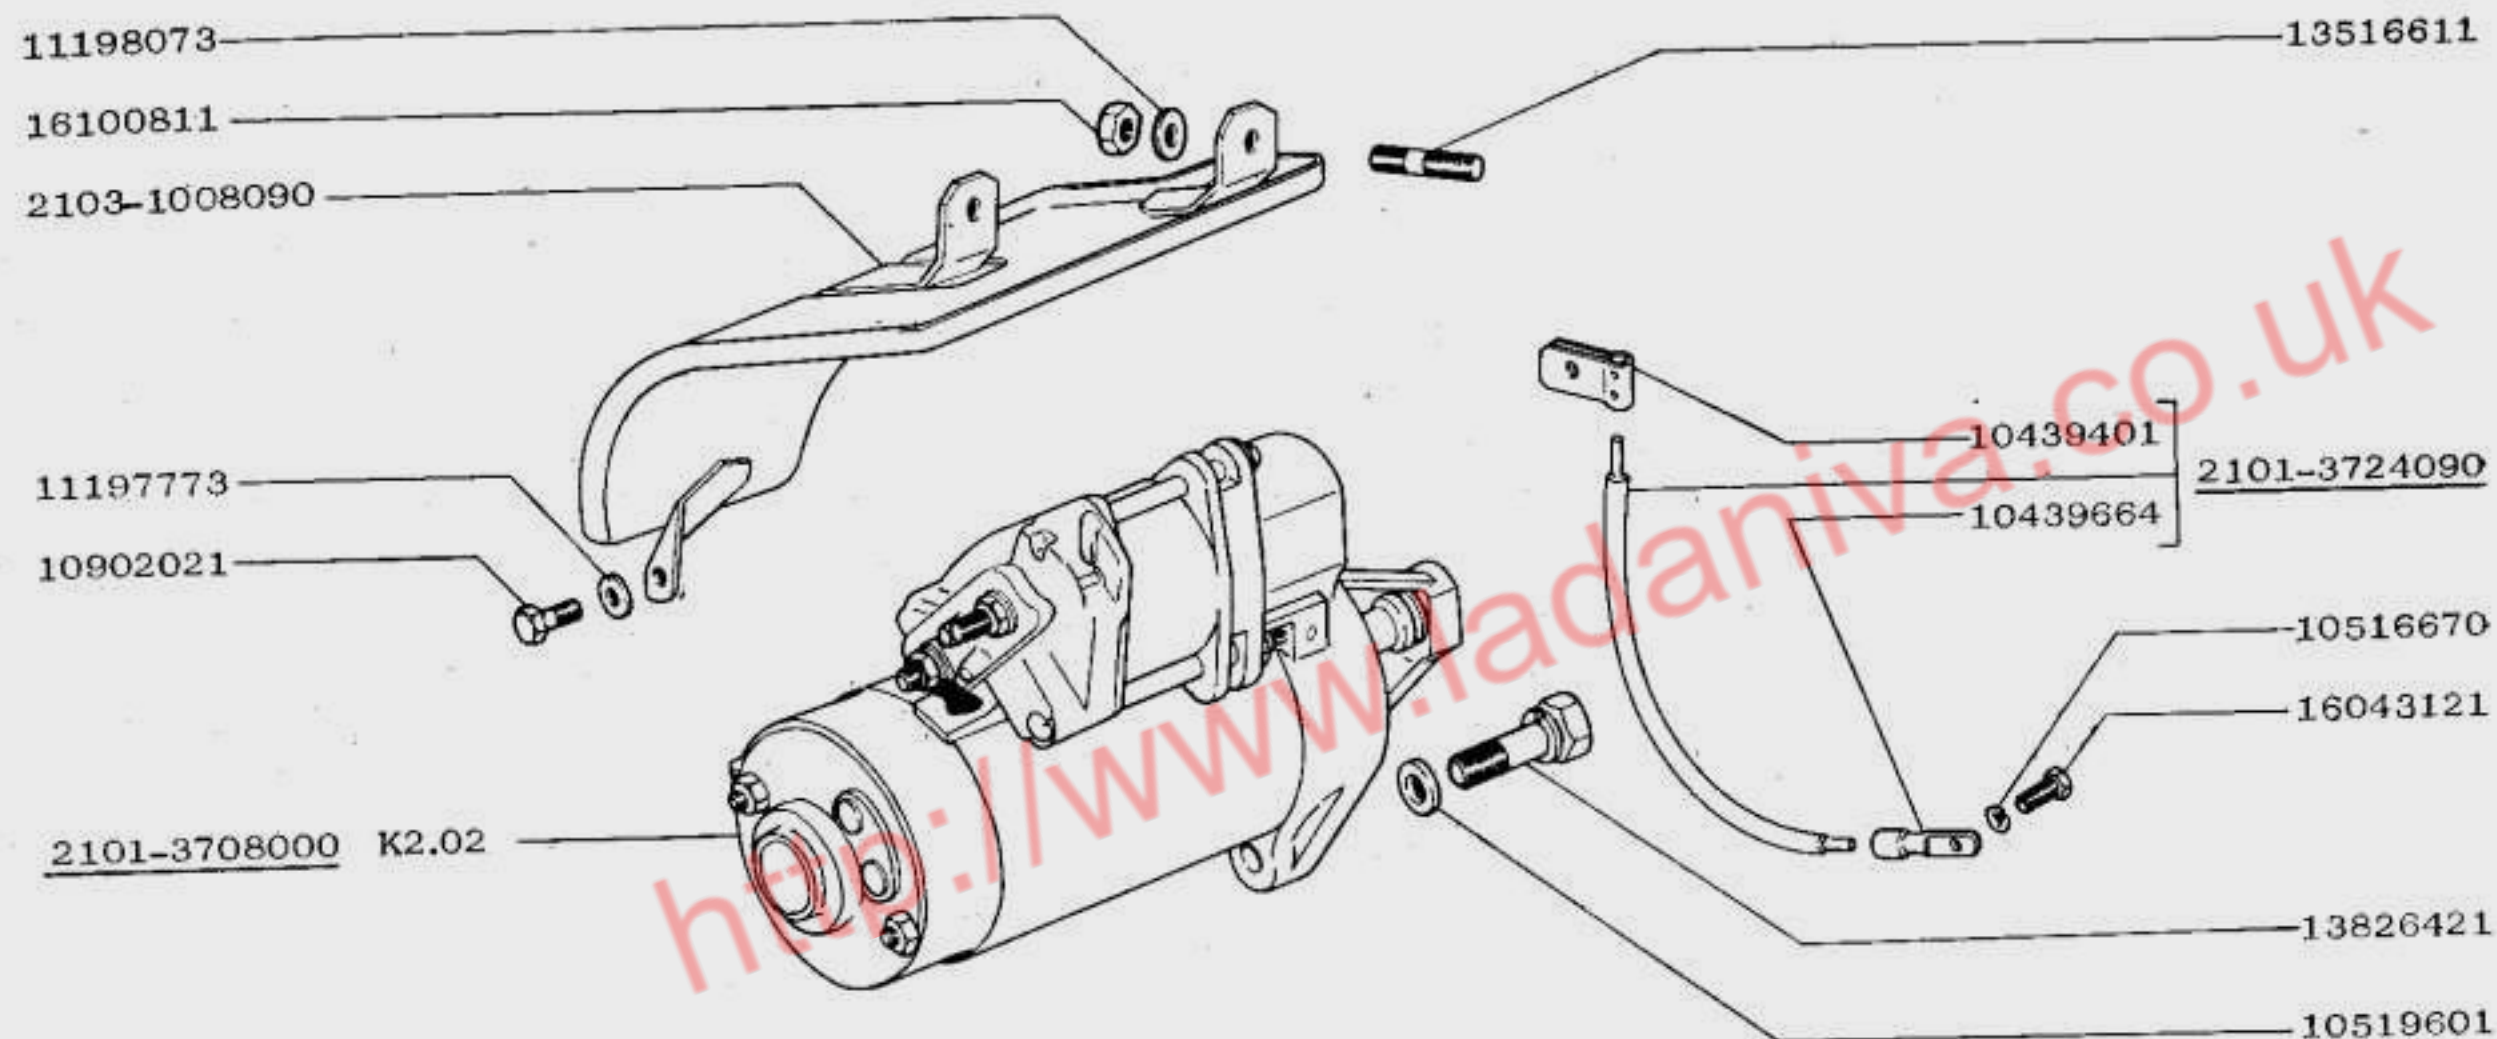

BA3-2121
BA3-21211

Стартер с арматурой
Starter and Fittings
Démarreur avec accessoires
Anlasser mit Armatur
Arrancador con accesorios


K1.10

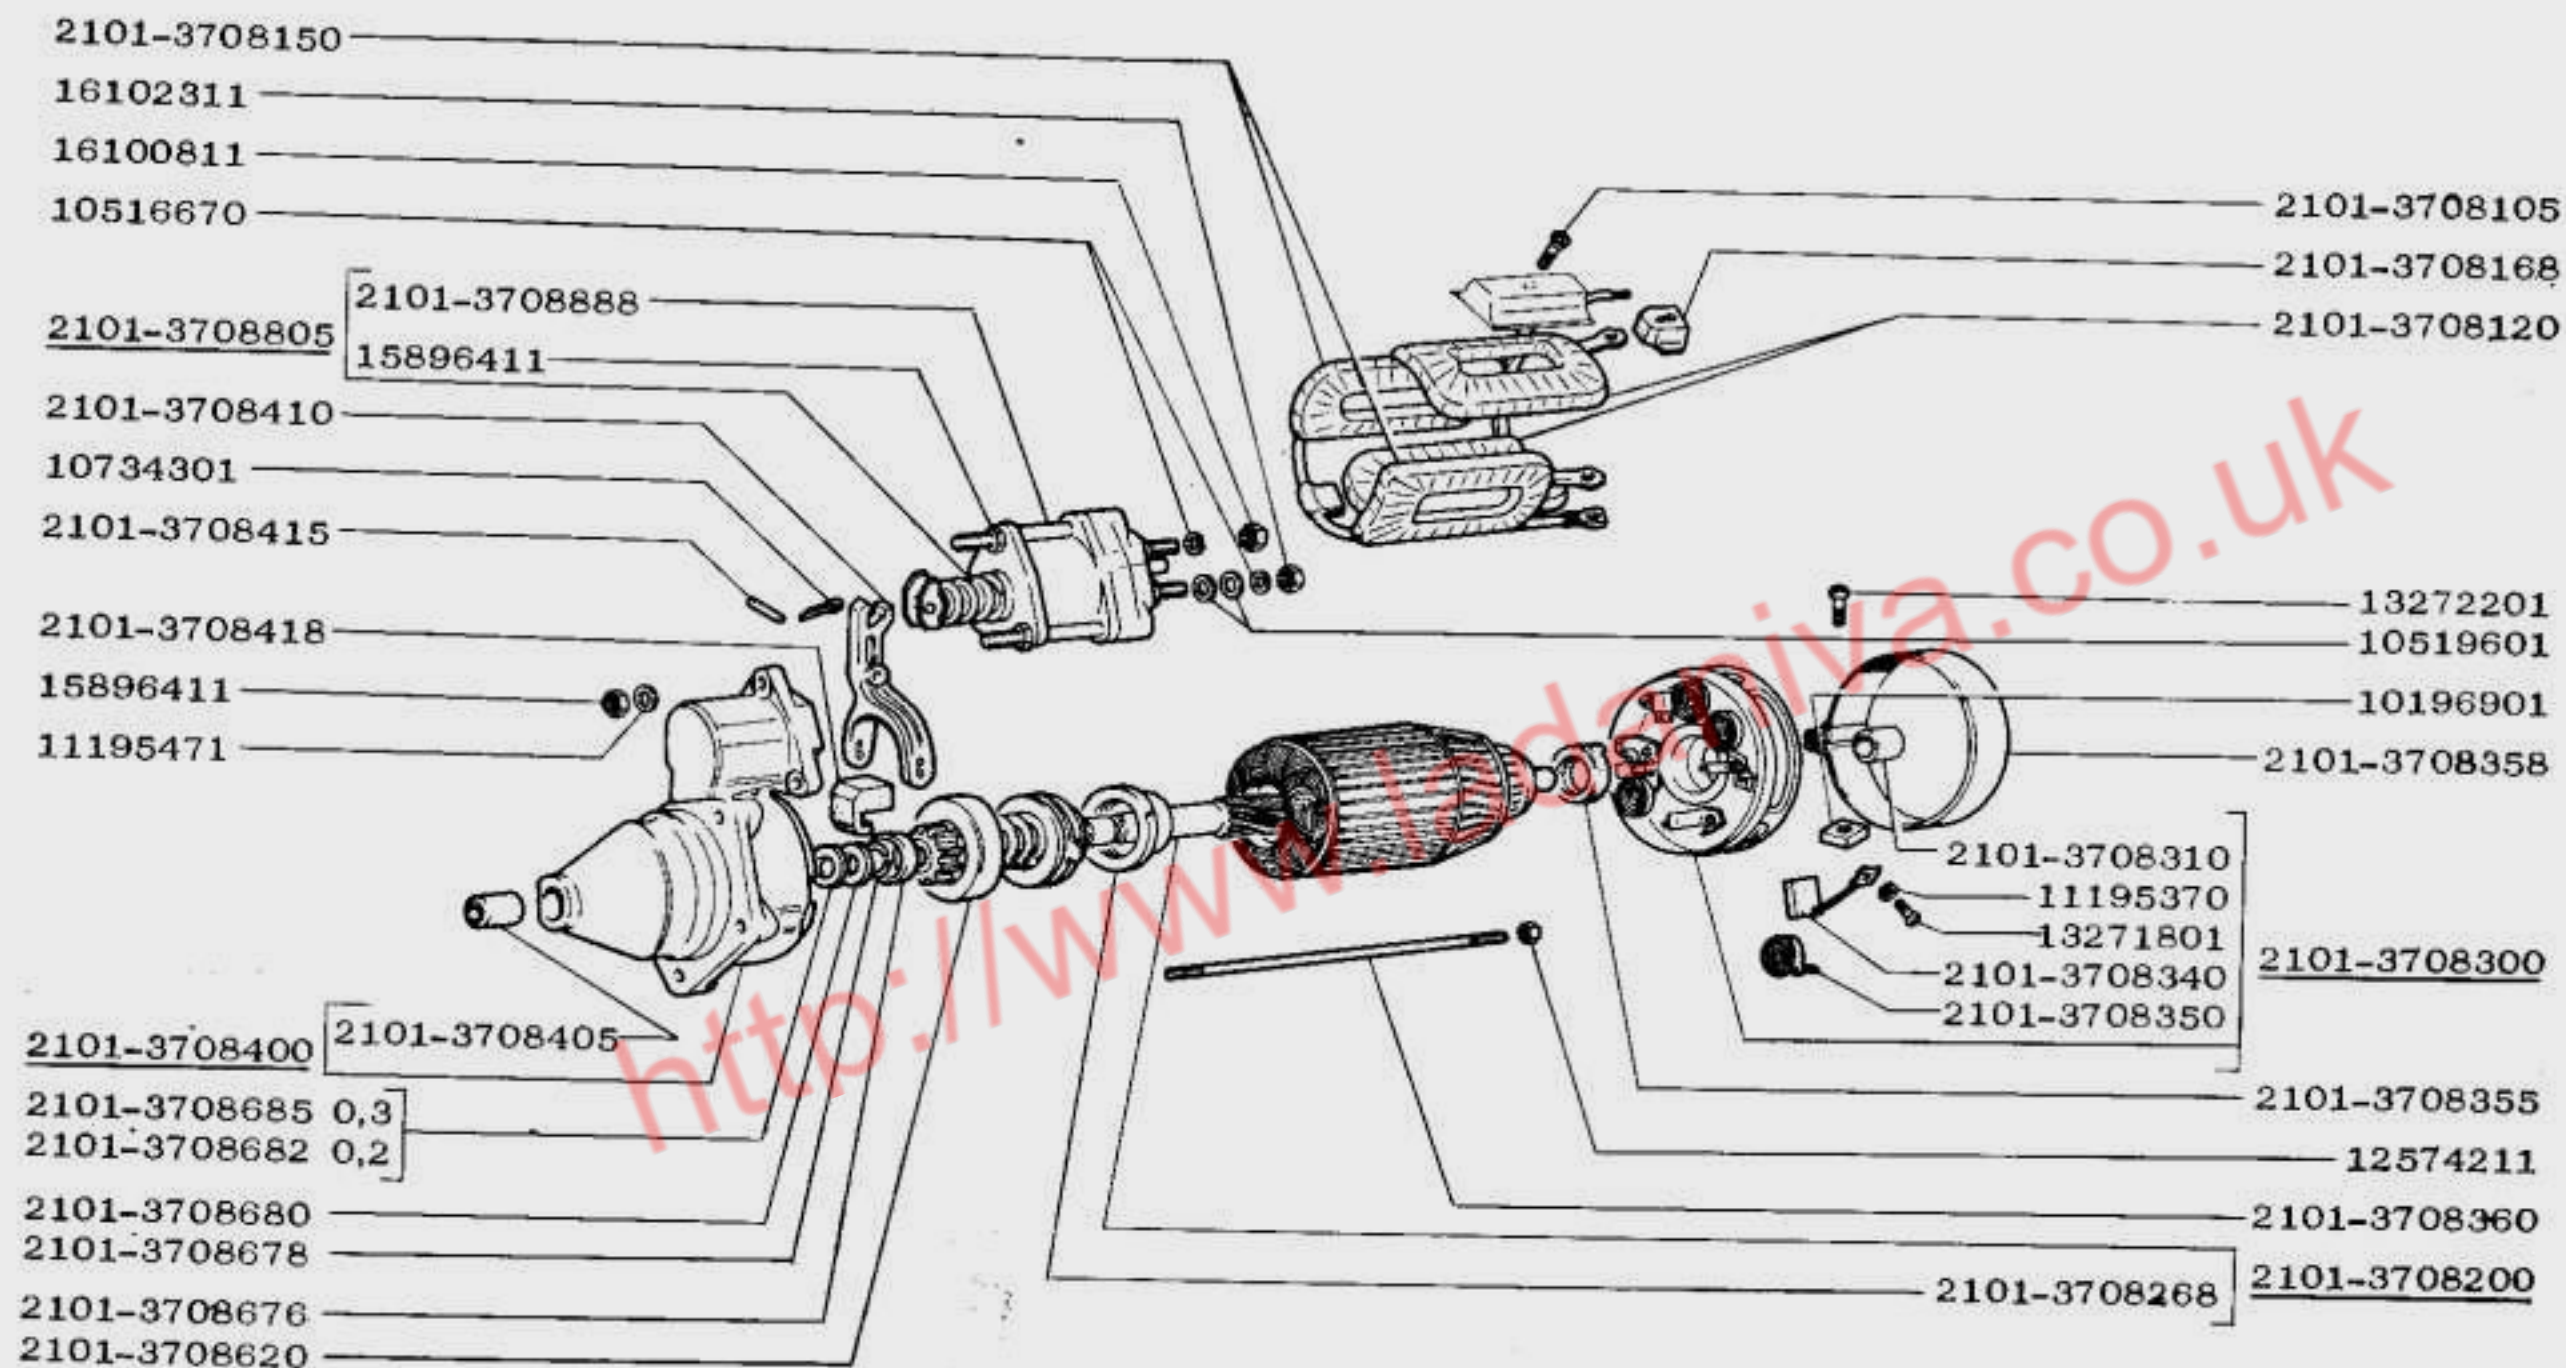

BA3-2121
BA3-21211

Стартер
Starter
Démarreur
Anlasser
Arrancador


K1.11

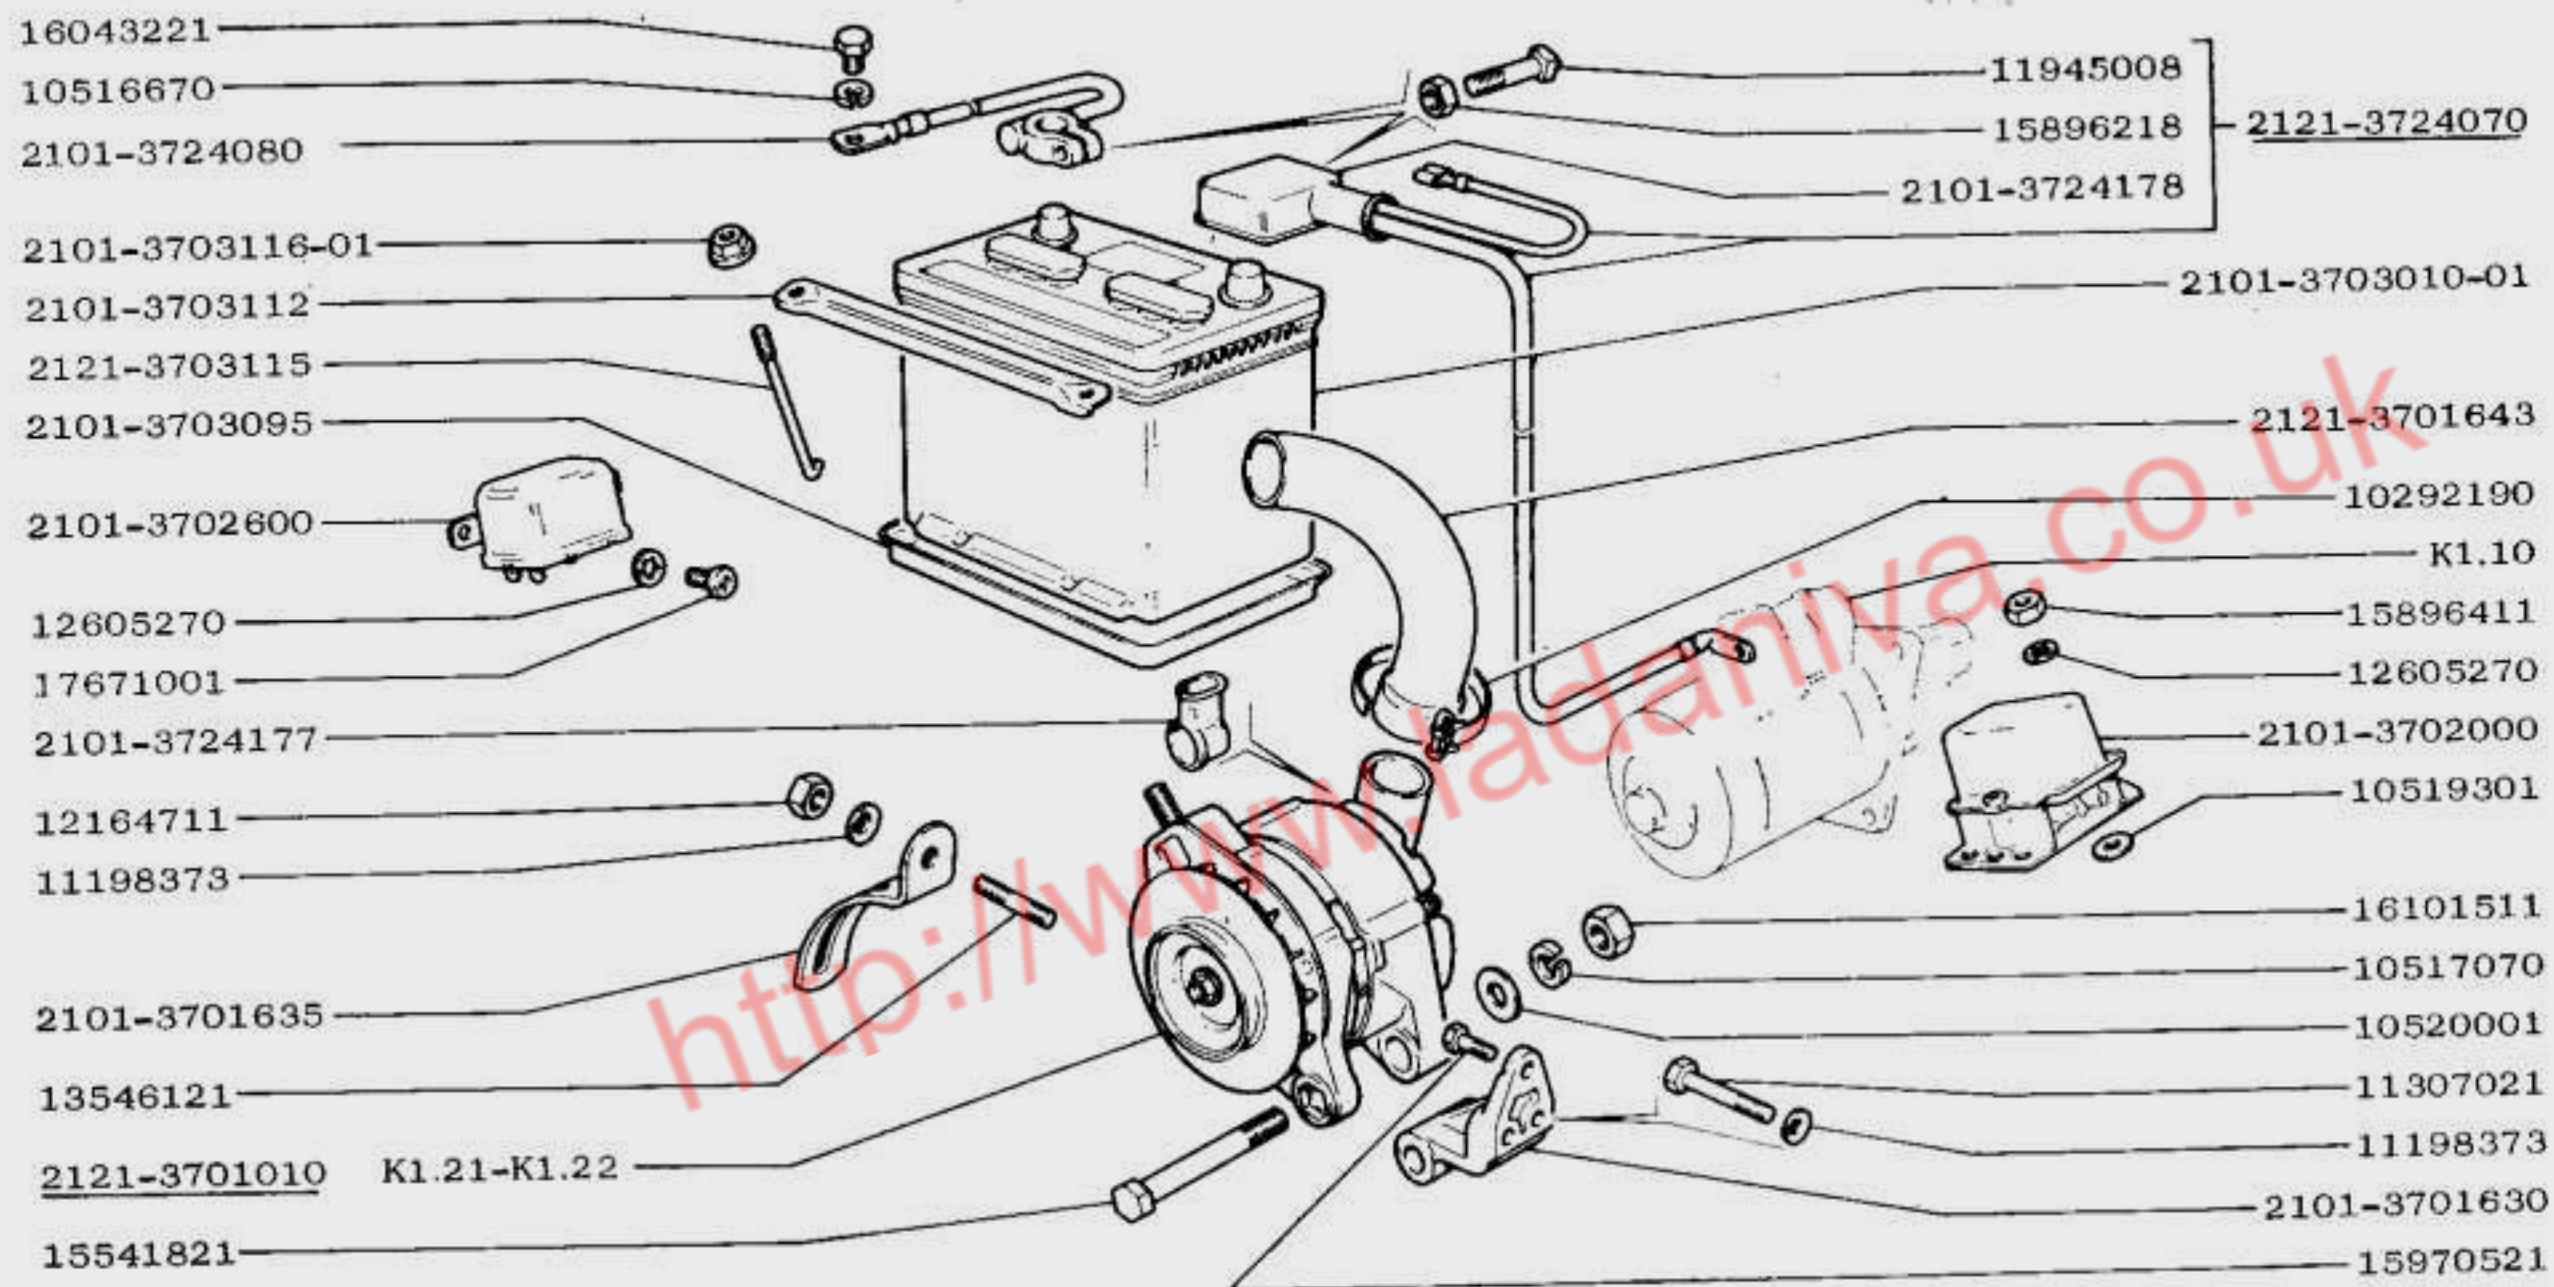

BA3-2121
BA3-21211

Батарея аккумуляторная и генератор
Storage Battery and Generator
Batterie d'accumulateurs et alternateur
Batterie und Lichtmaschine
Bateria de acumuladores y generador


K1.20

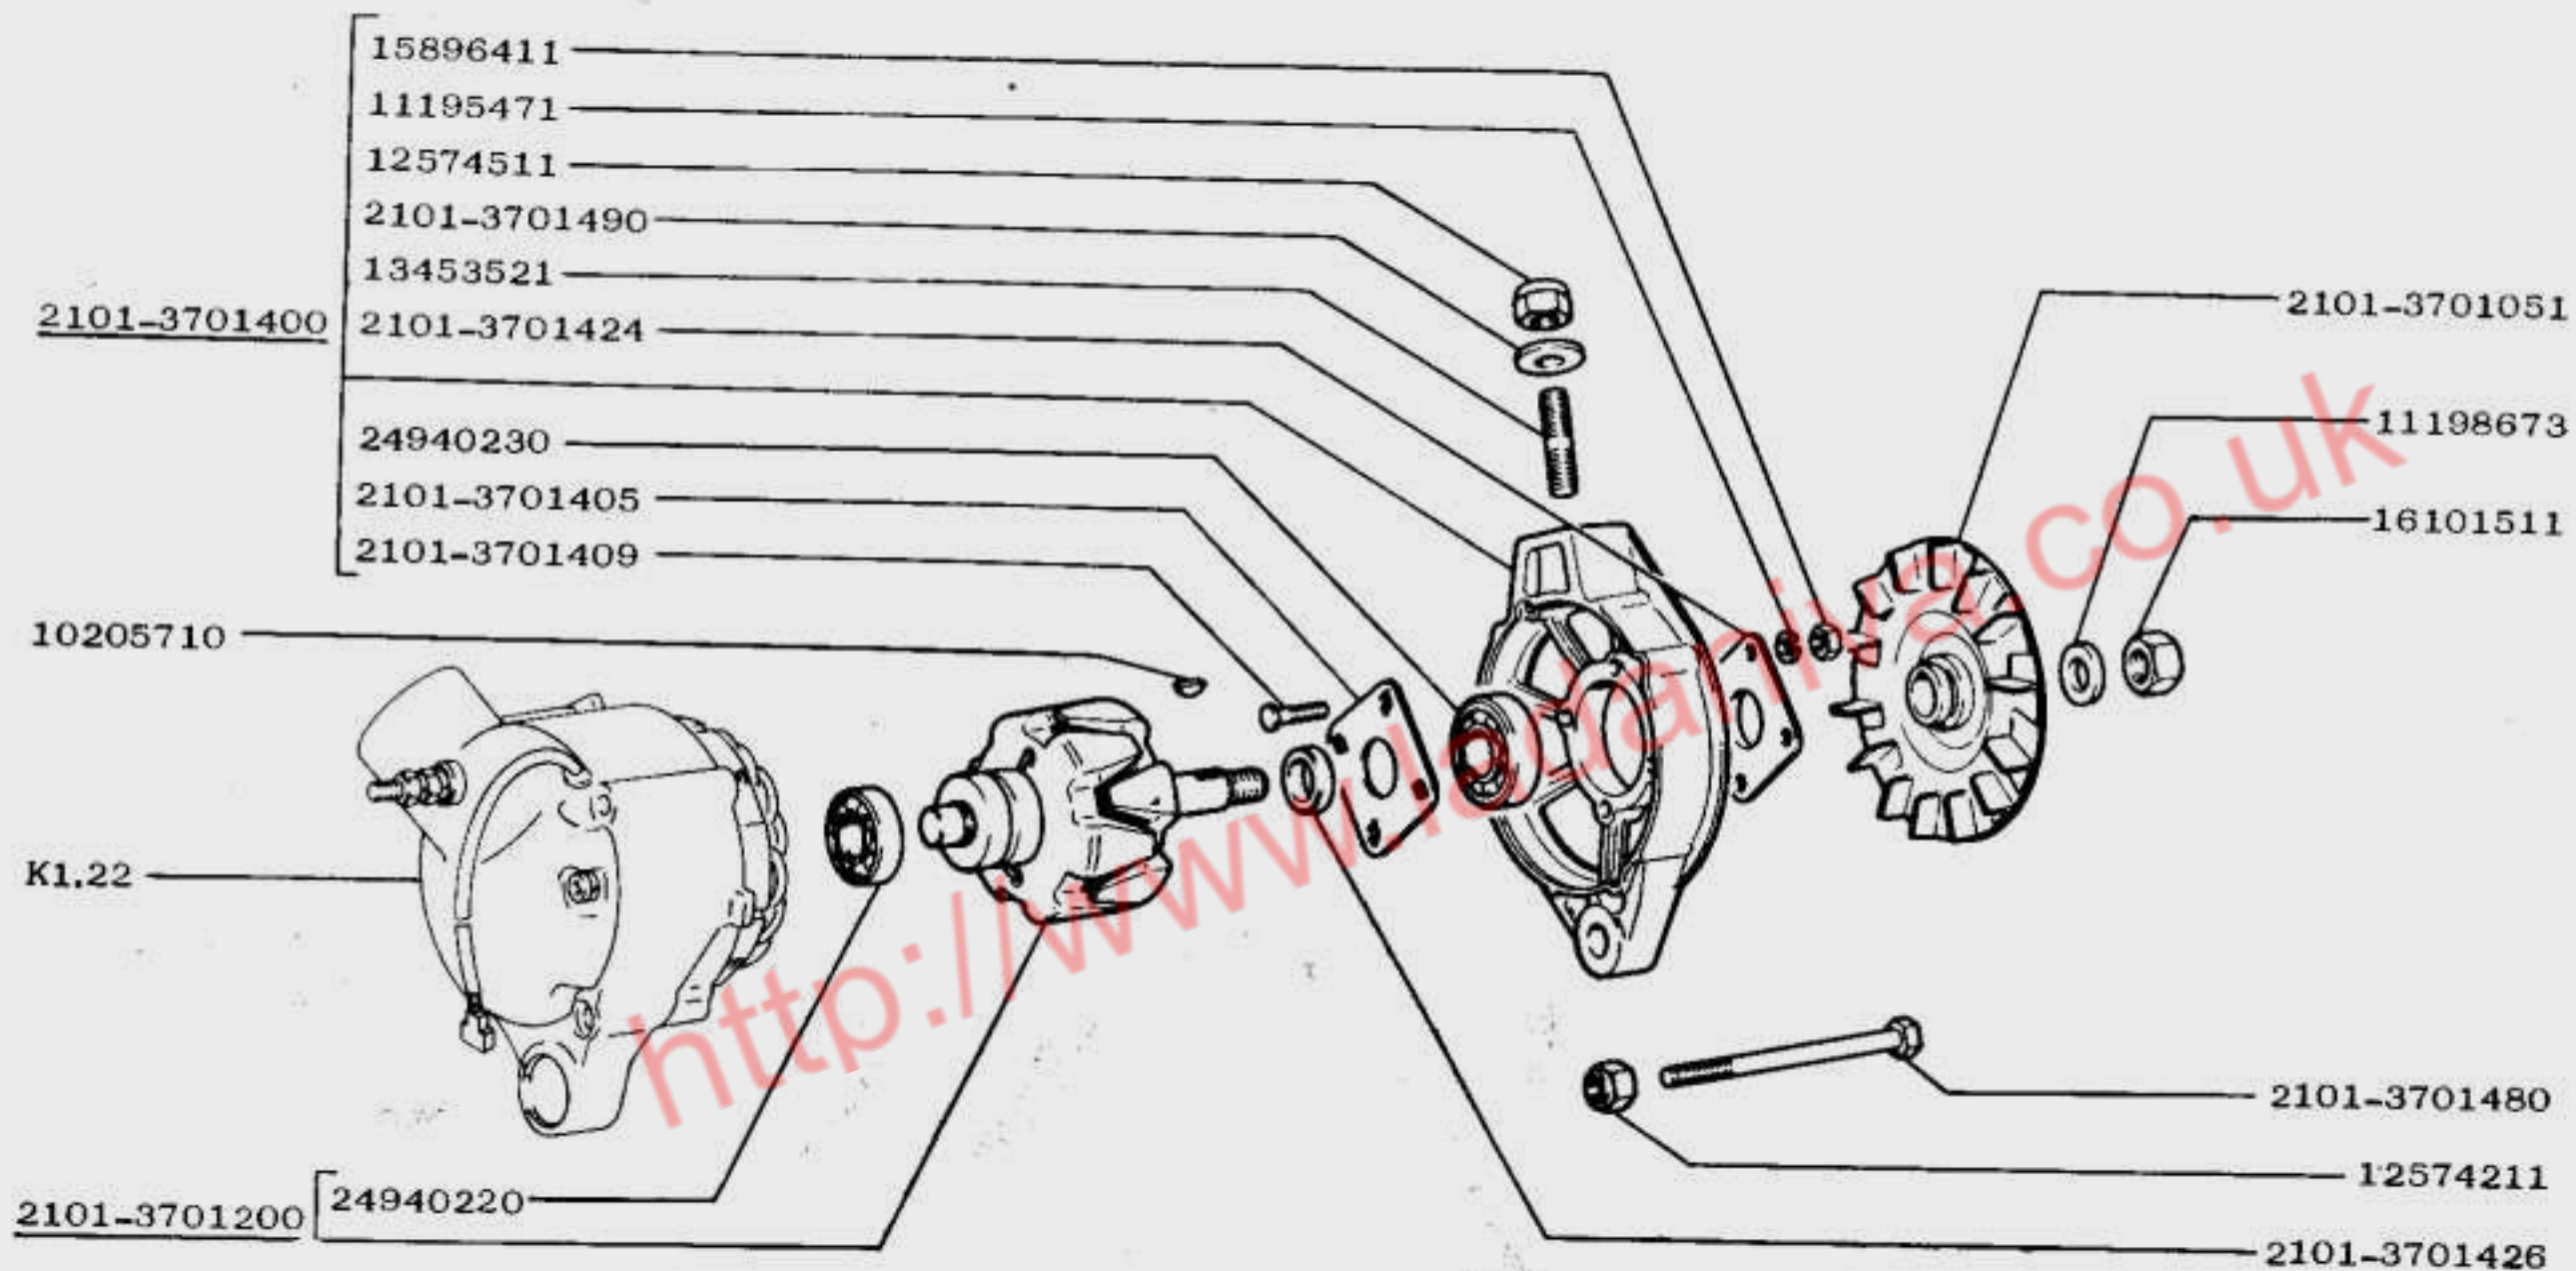

BA3-2121
BA3-21211

Генератор
Generator
Alternateur
Lichtmaschine
Generador


K1.21

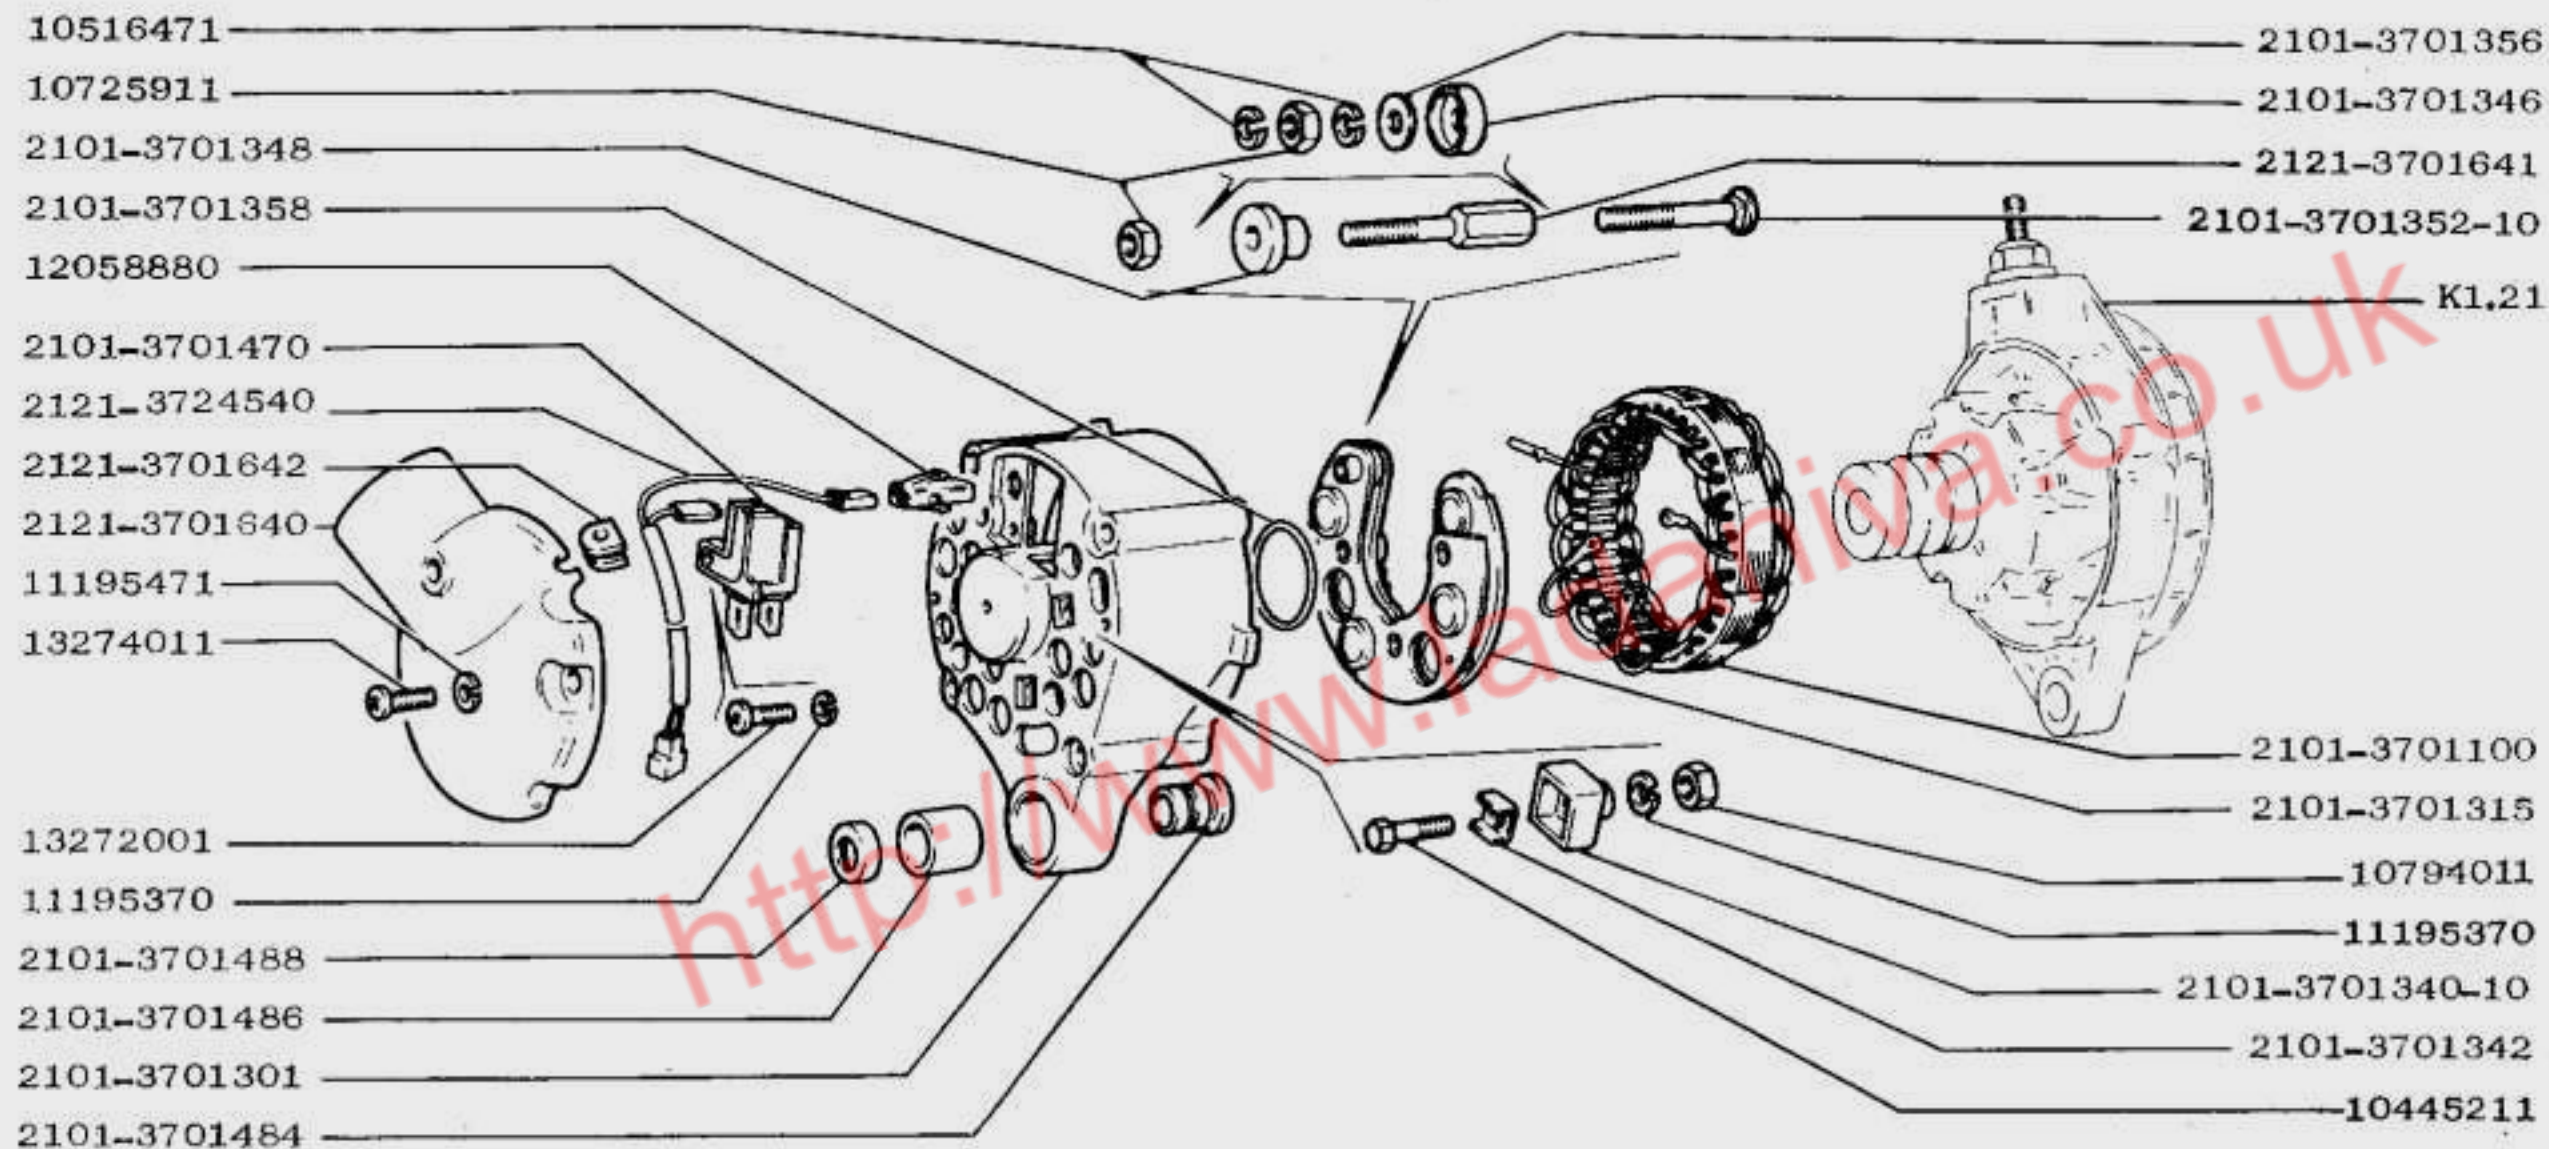

BA3-2121
BA3-21211

Генератор
Generator
Alternateur
Lichtmaschine
Generador


K1.22

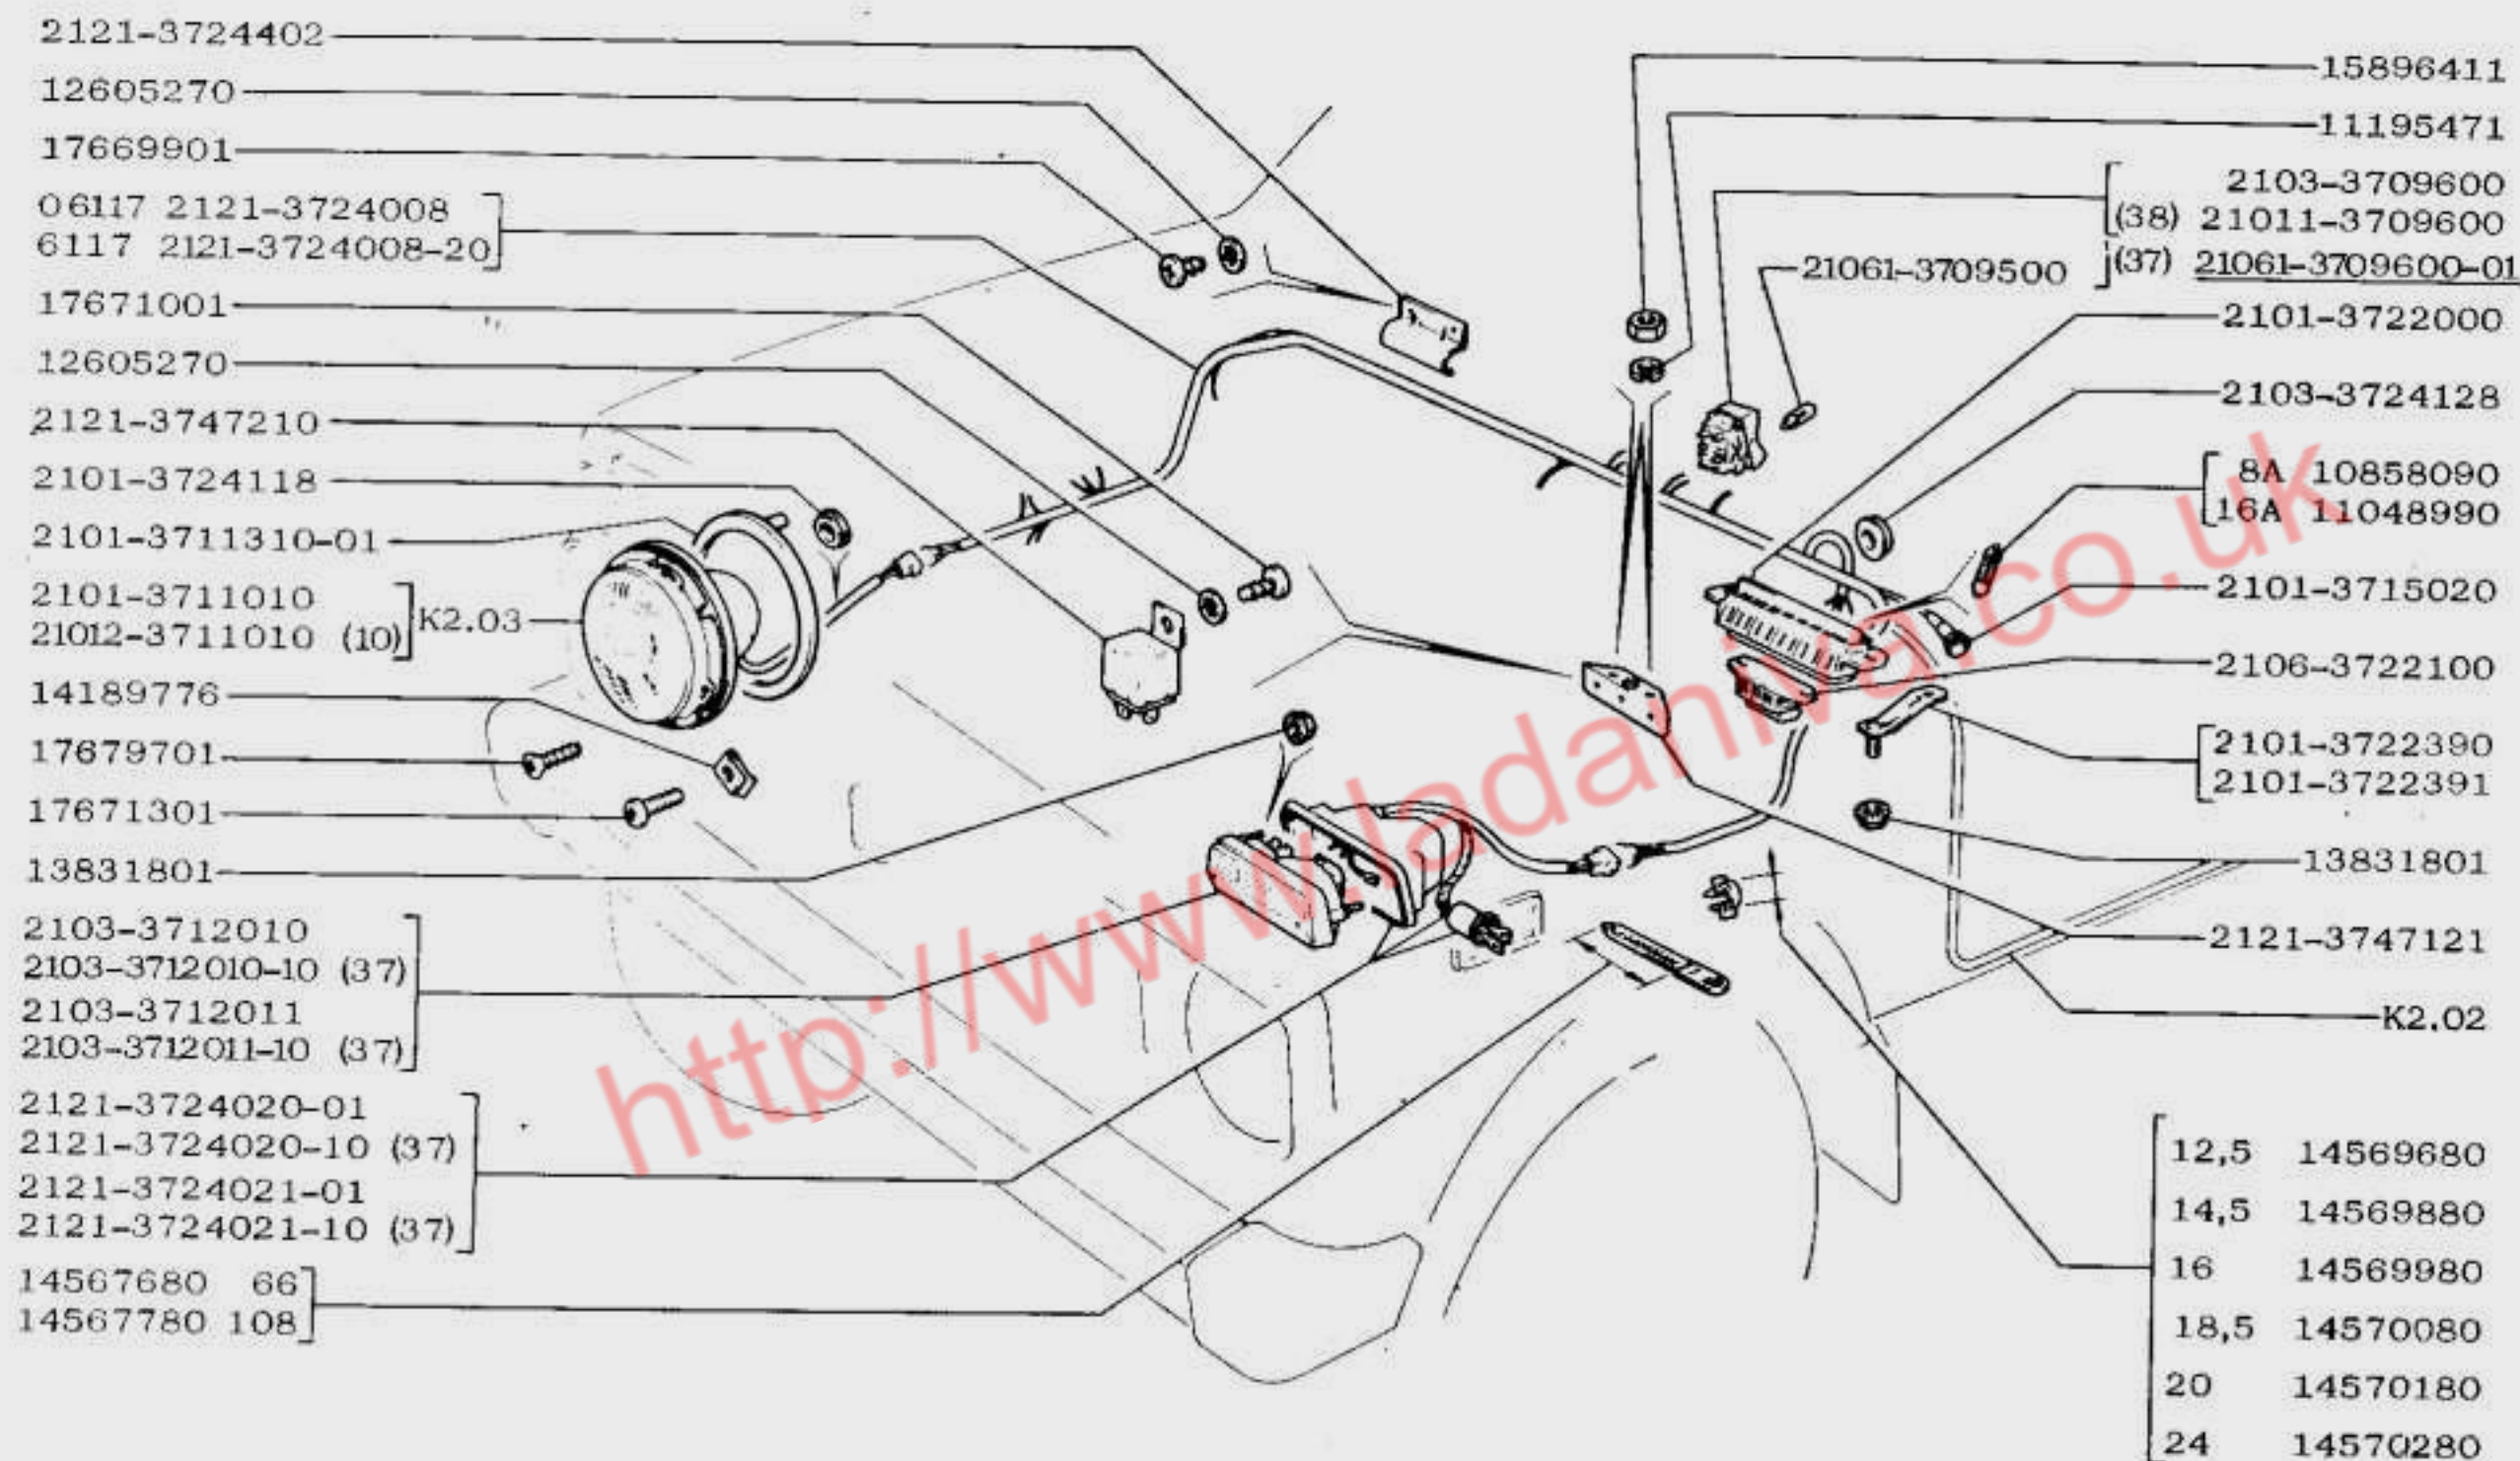

BA3-2121
BA3-21211

Освещение переднее
Front Lighting Units
Eclairage avant
Vordere Beleuchtung
Alumbrado delantero


K2.01

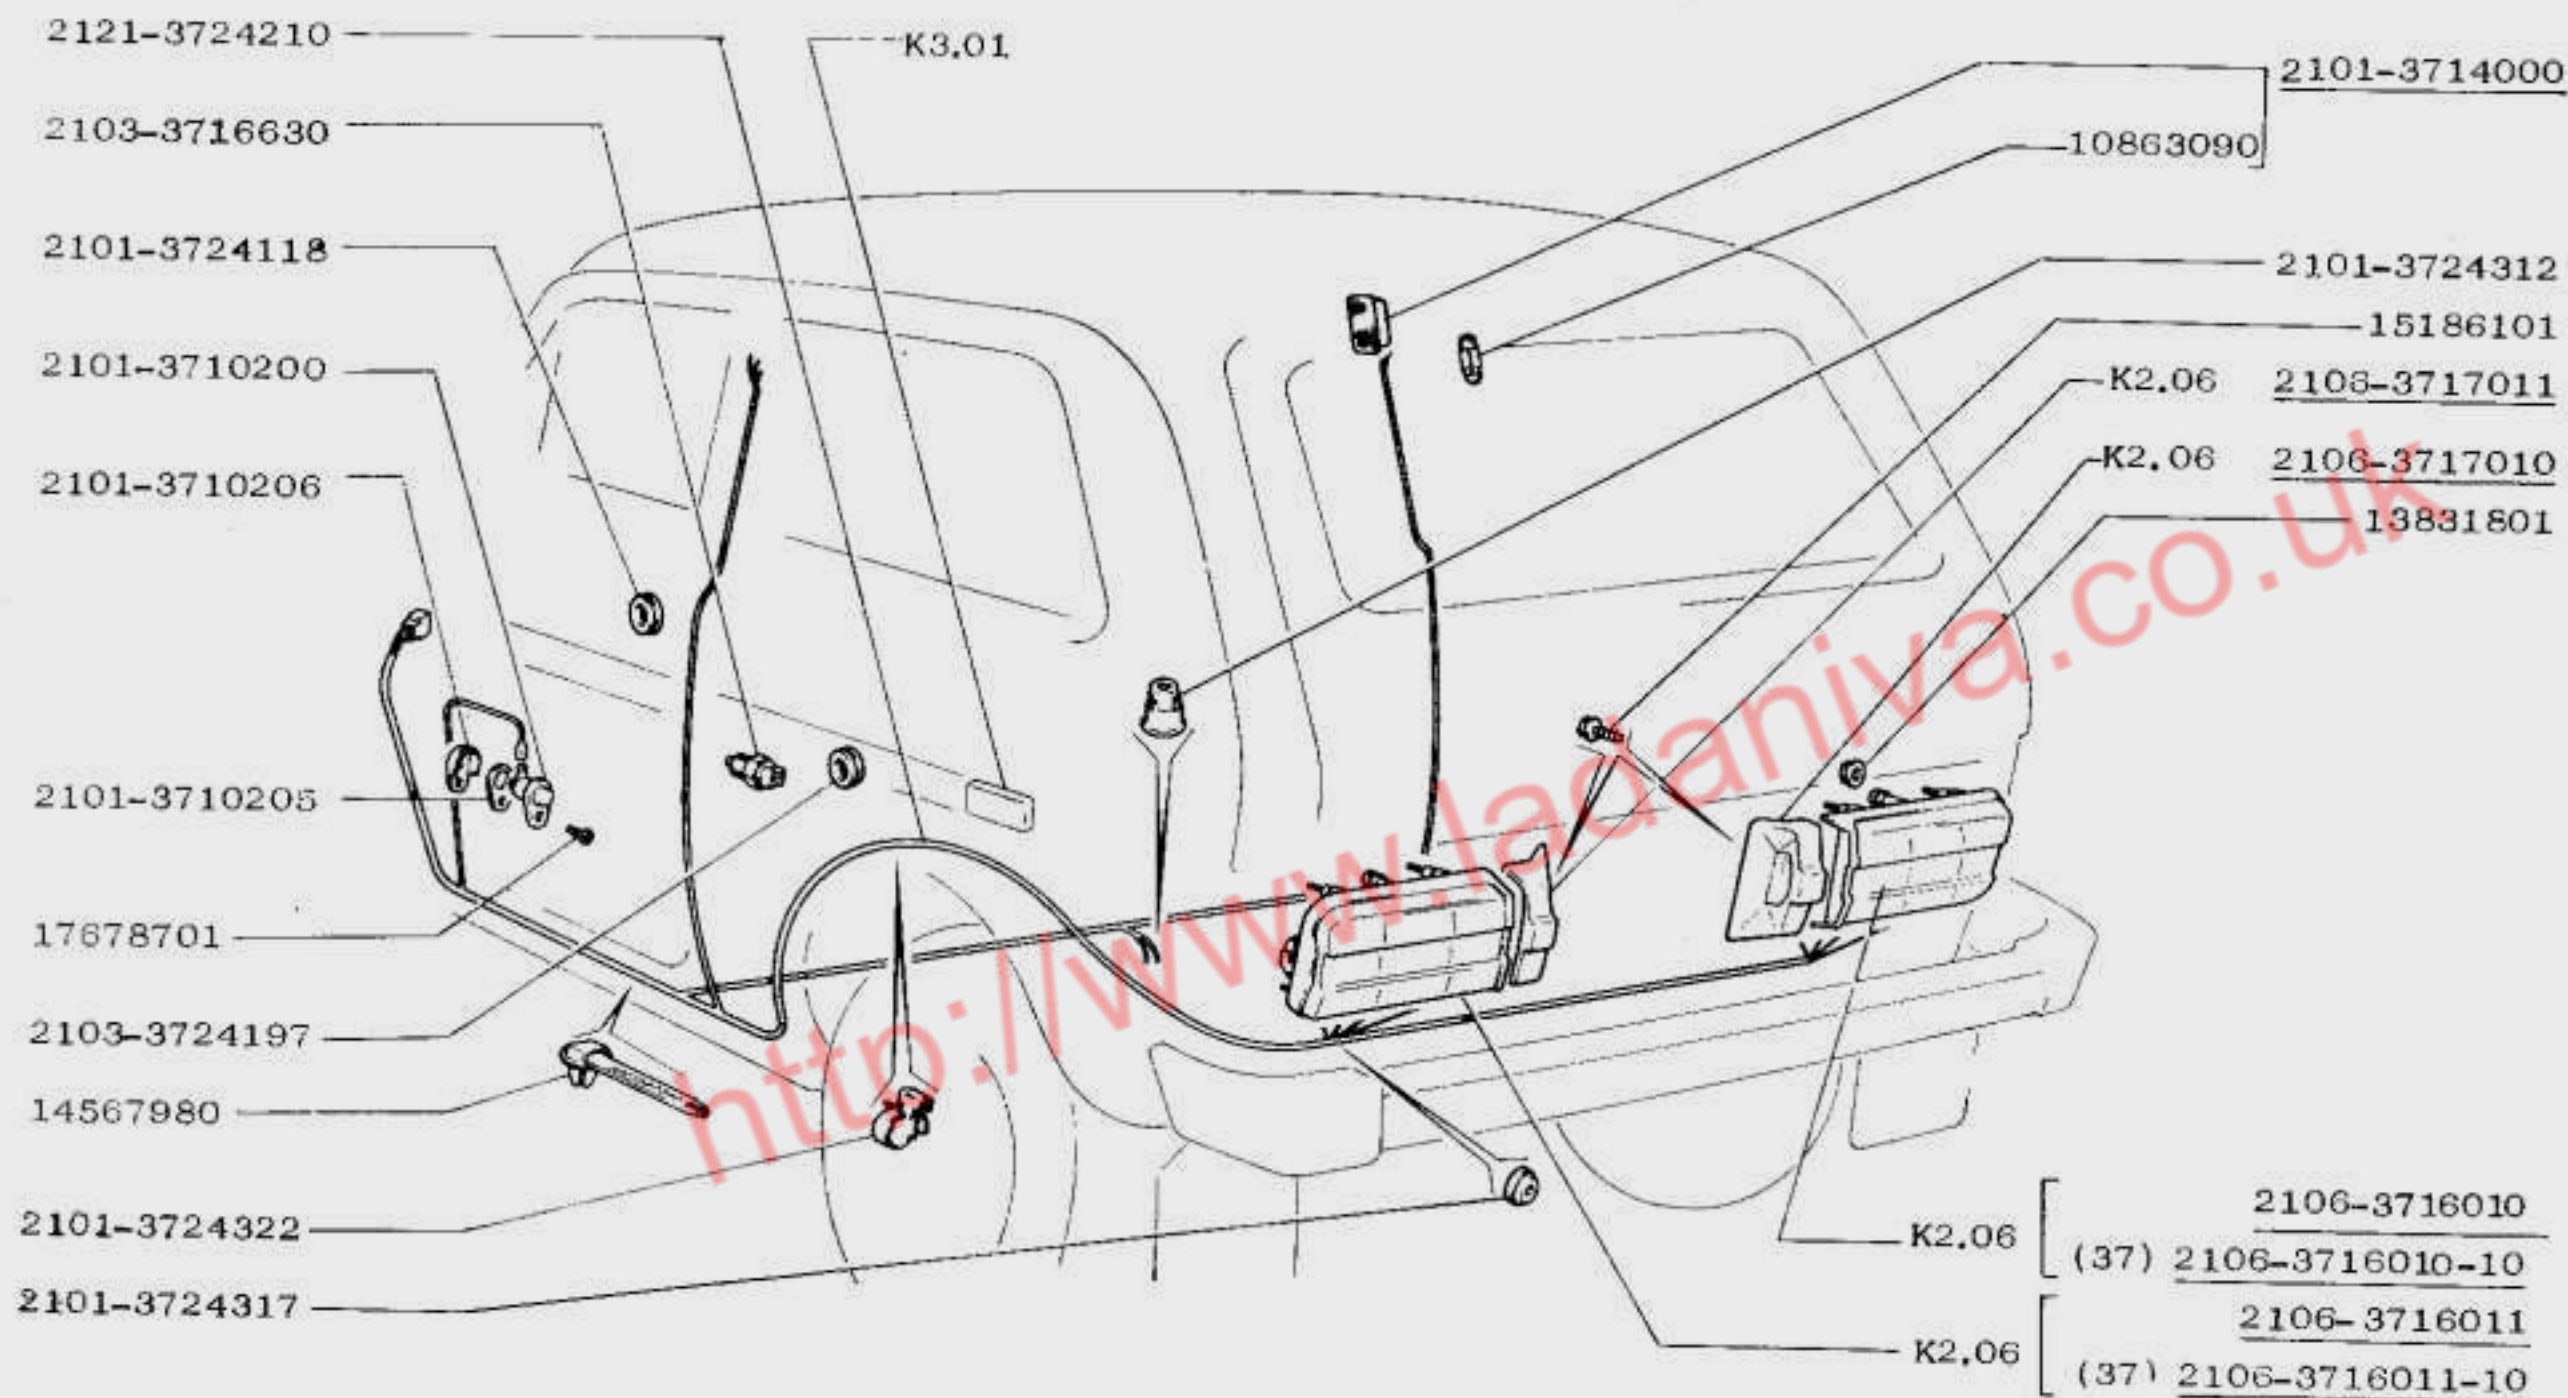

BA3-2121
BA3-21211

Освещение заднее
Rear Lighting Units
Eclairage arrière
Hintere Beleuchtung
Alumbrado trasero


K2.02

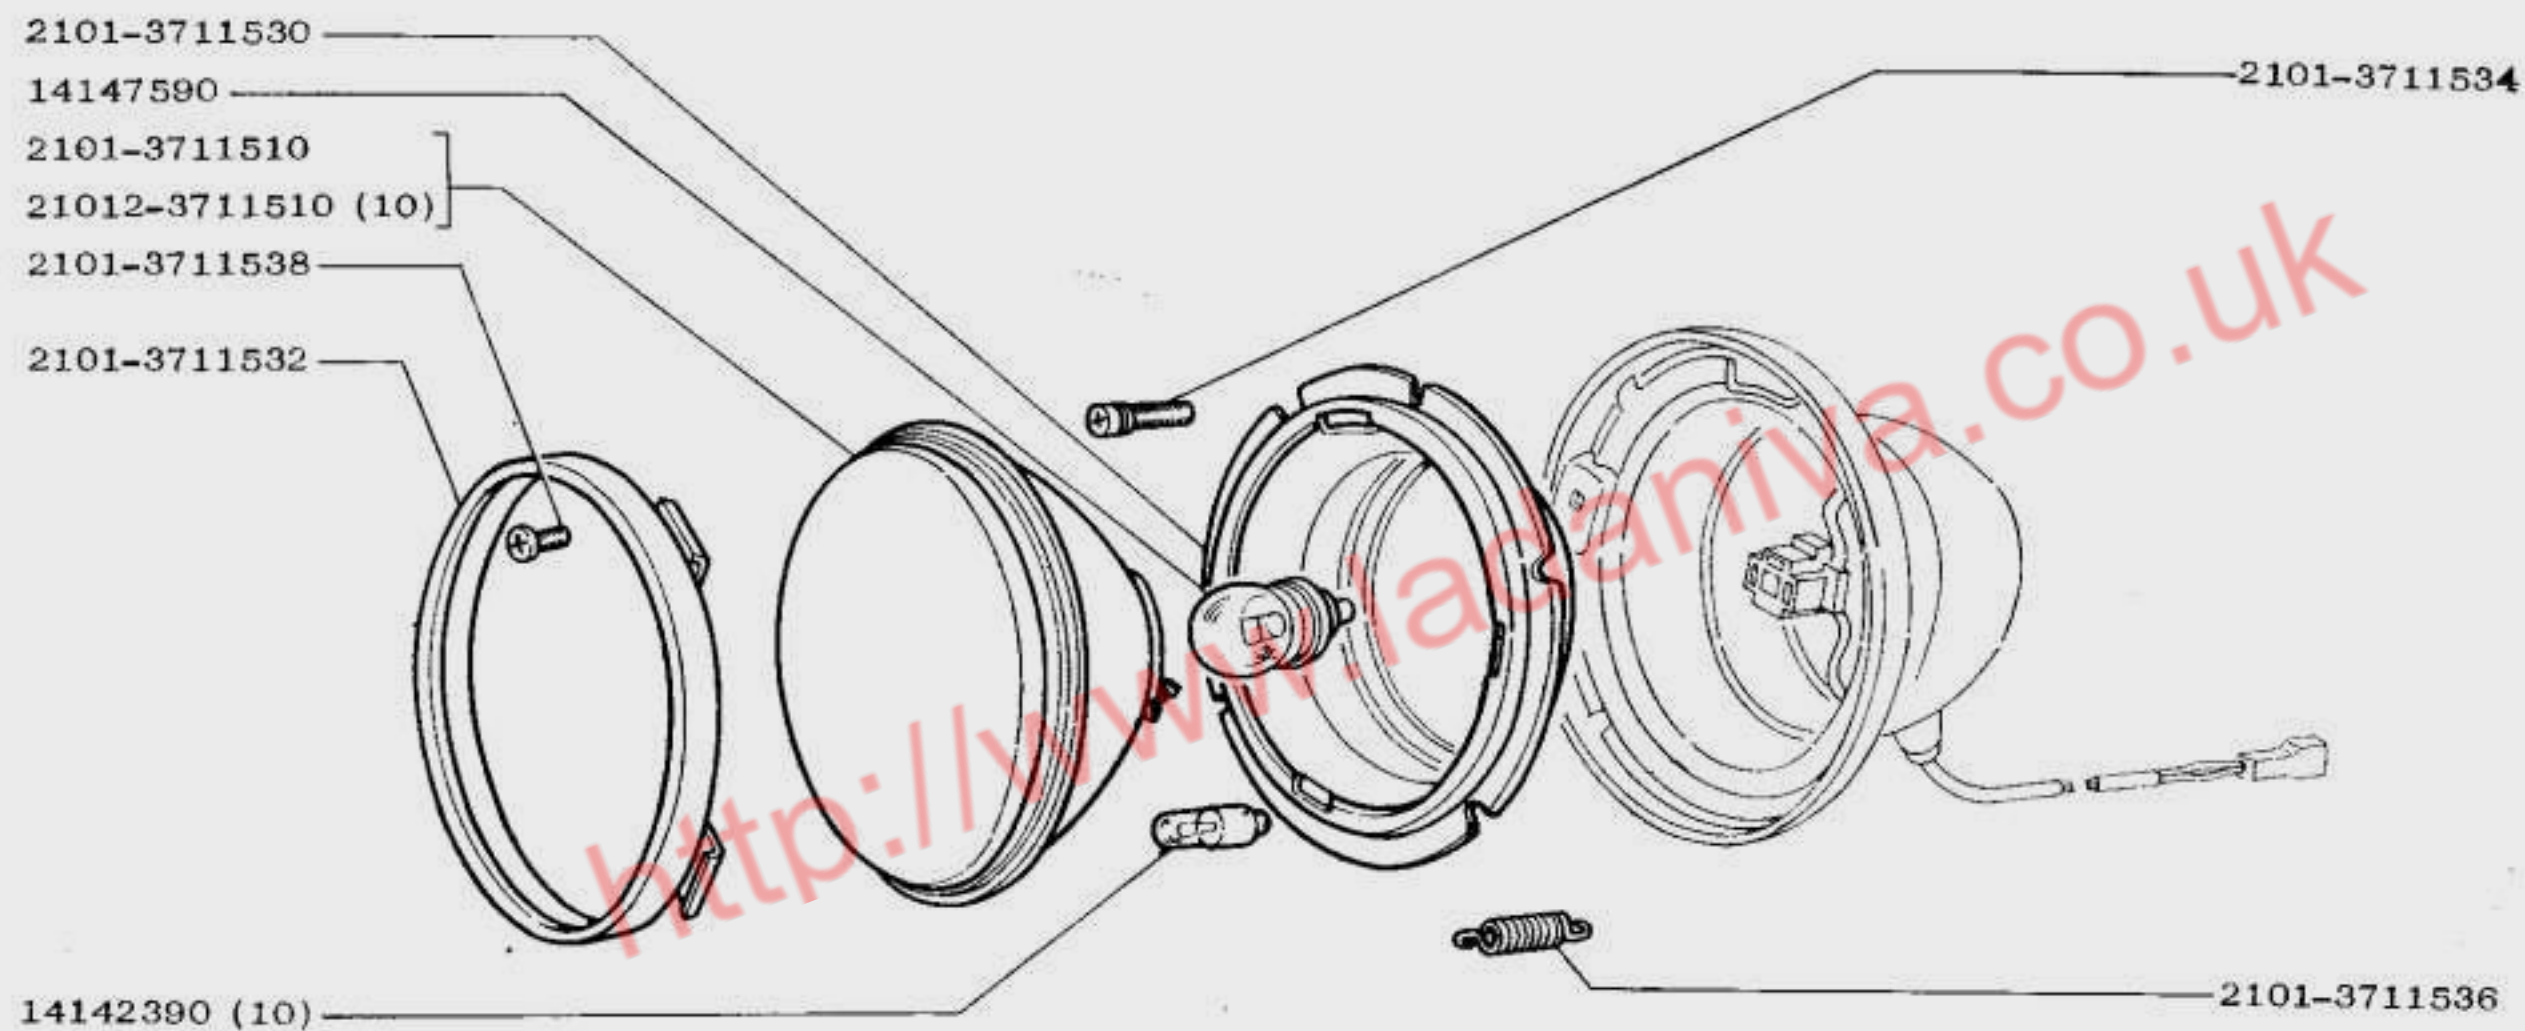

BA3-2121
BA3-21211

Фара
Headlamp
Projecteur
Scheinwerfer
Faro


K2.03

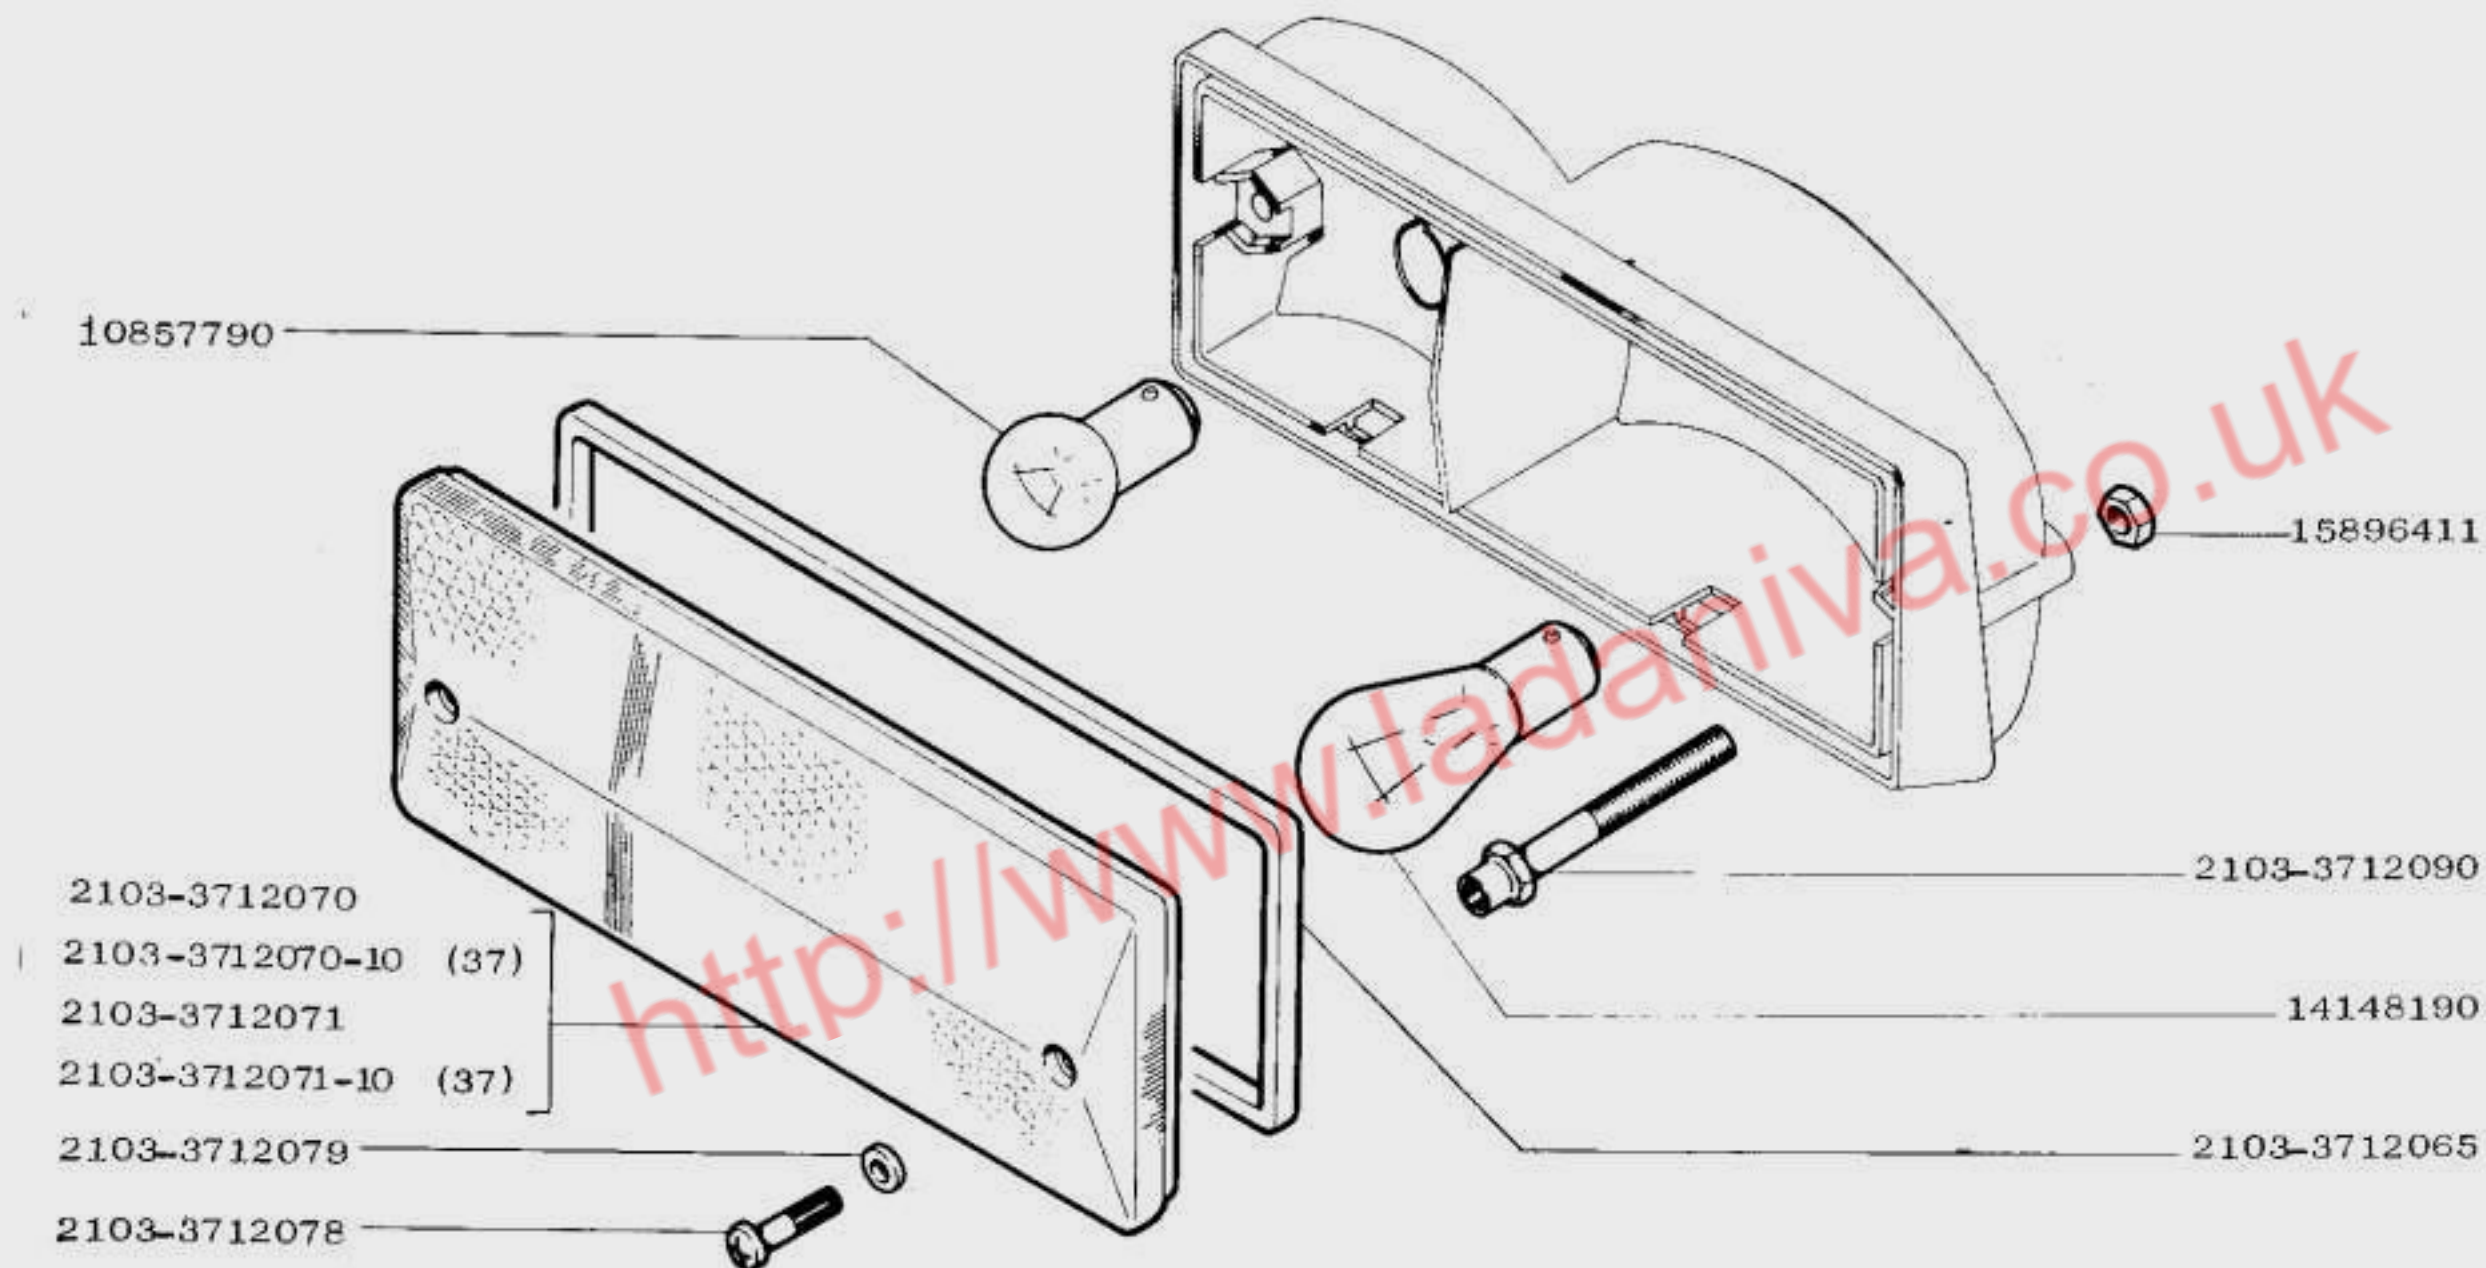

BA3-2121
BA3-21211

Подфарник
Side Lamp
Lanterne avant
Parklicht
Piloto


K2.04

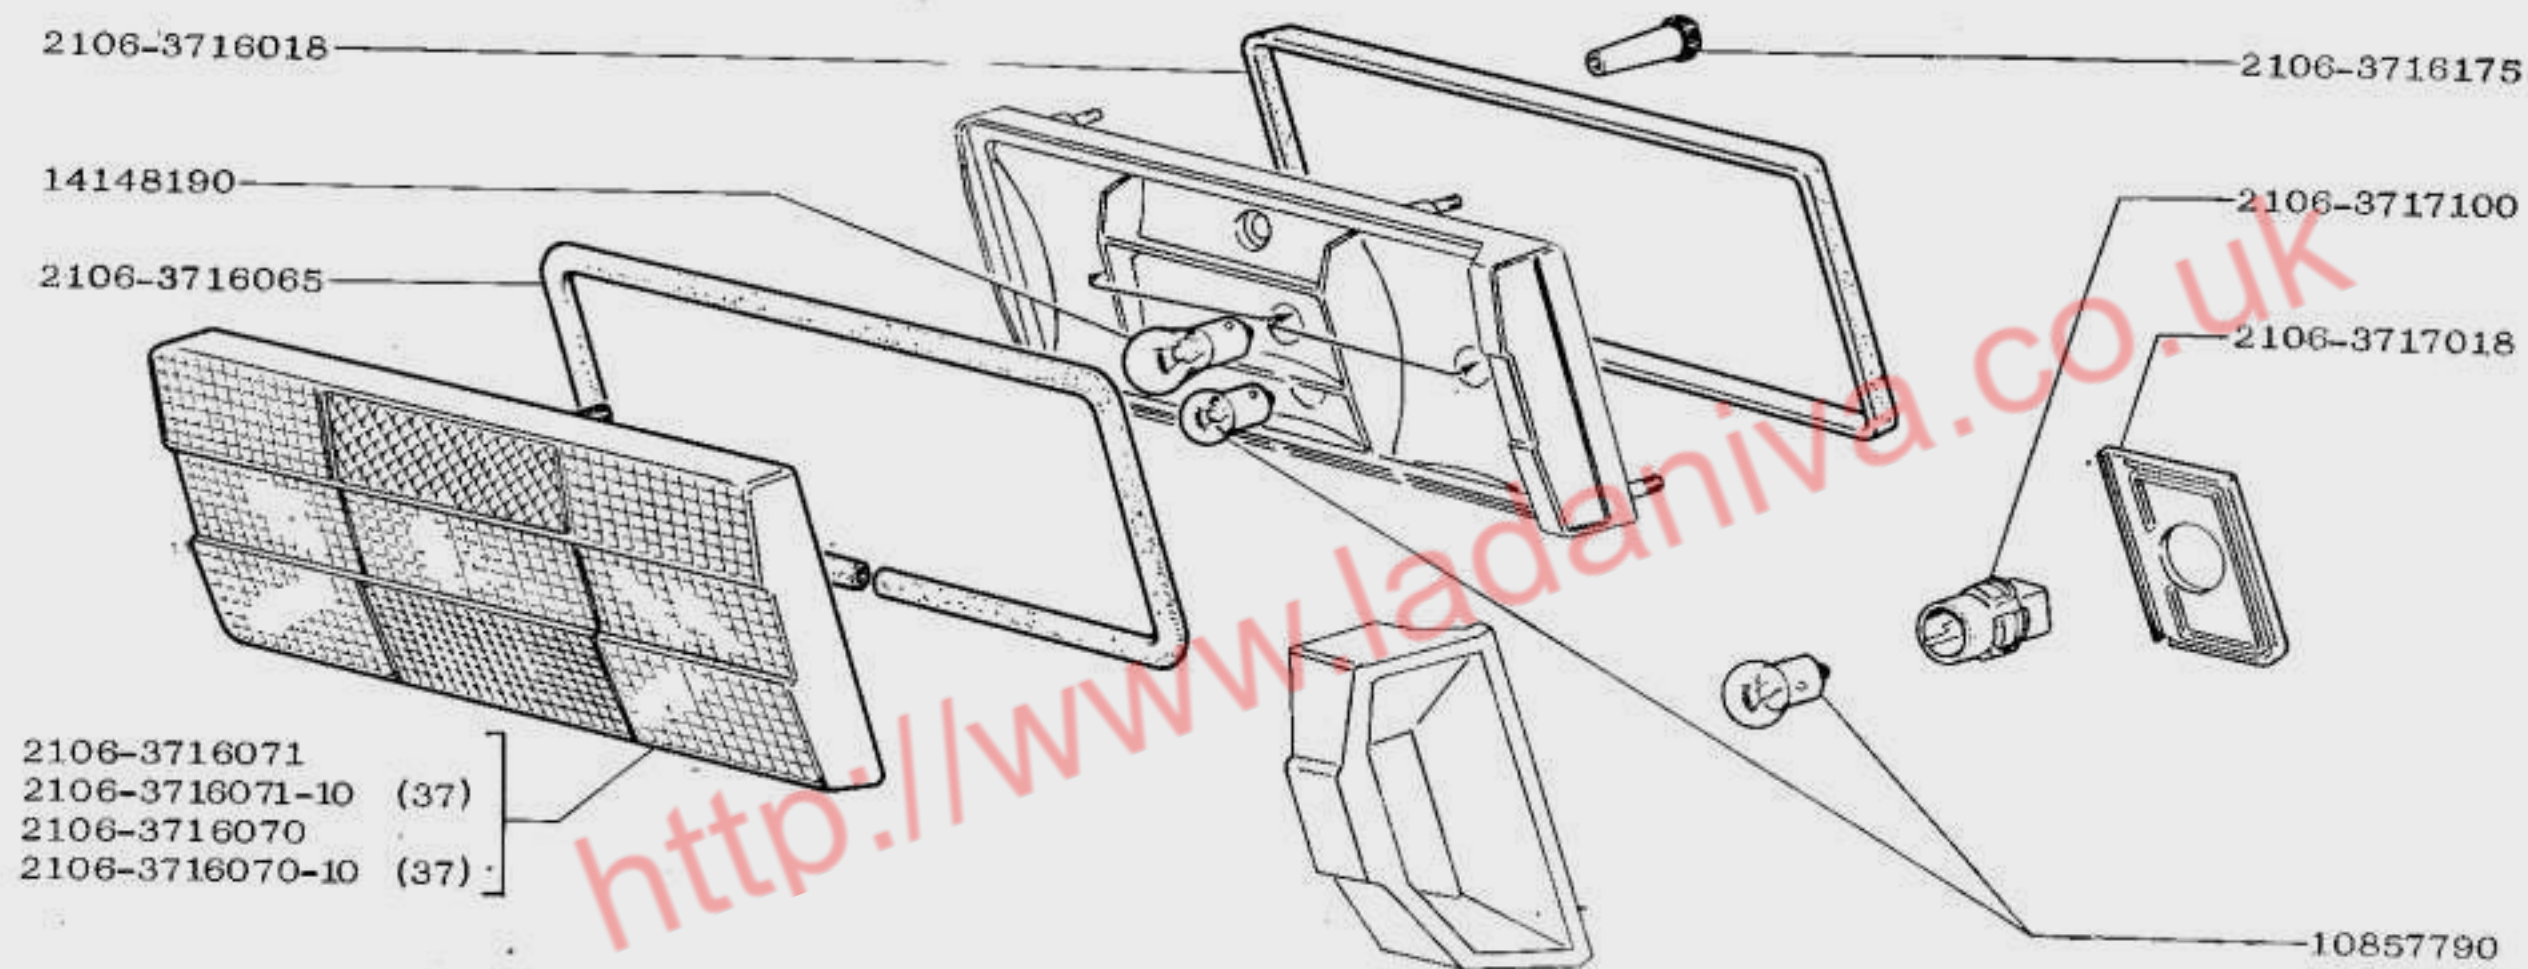

BA3-2121
BA3-21211

Фонари задние
Tail Lamps
Lanternes arrière
Schlußleuchten
Linternas traseras


K2.06

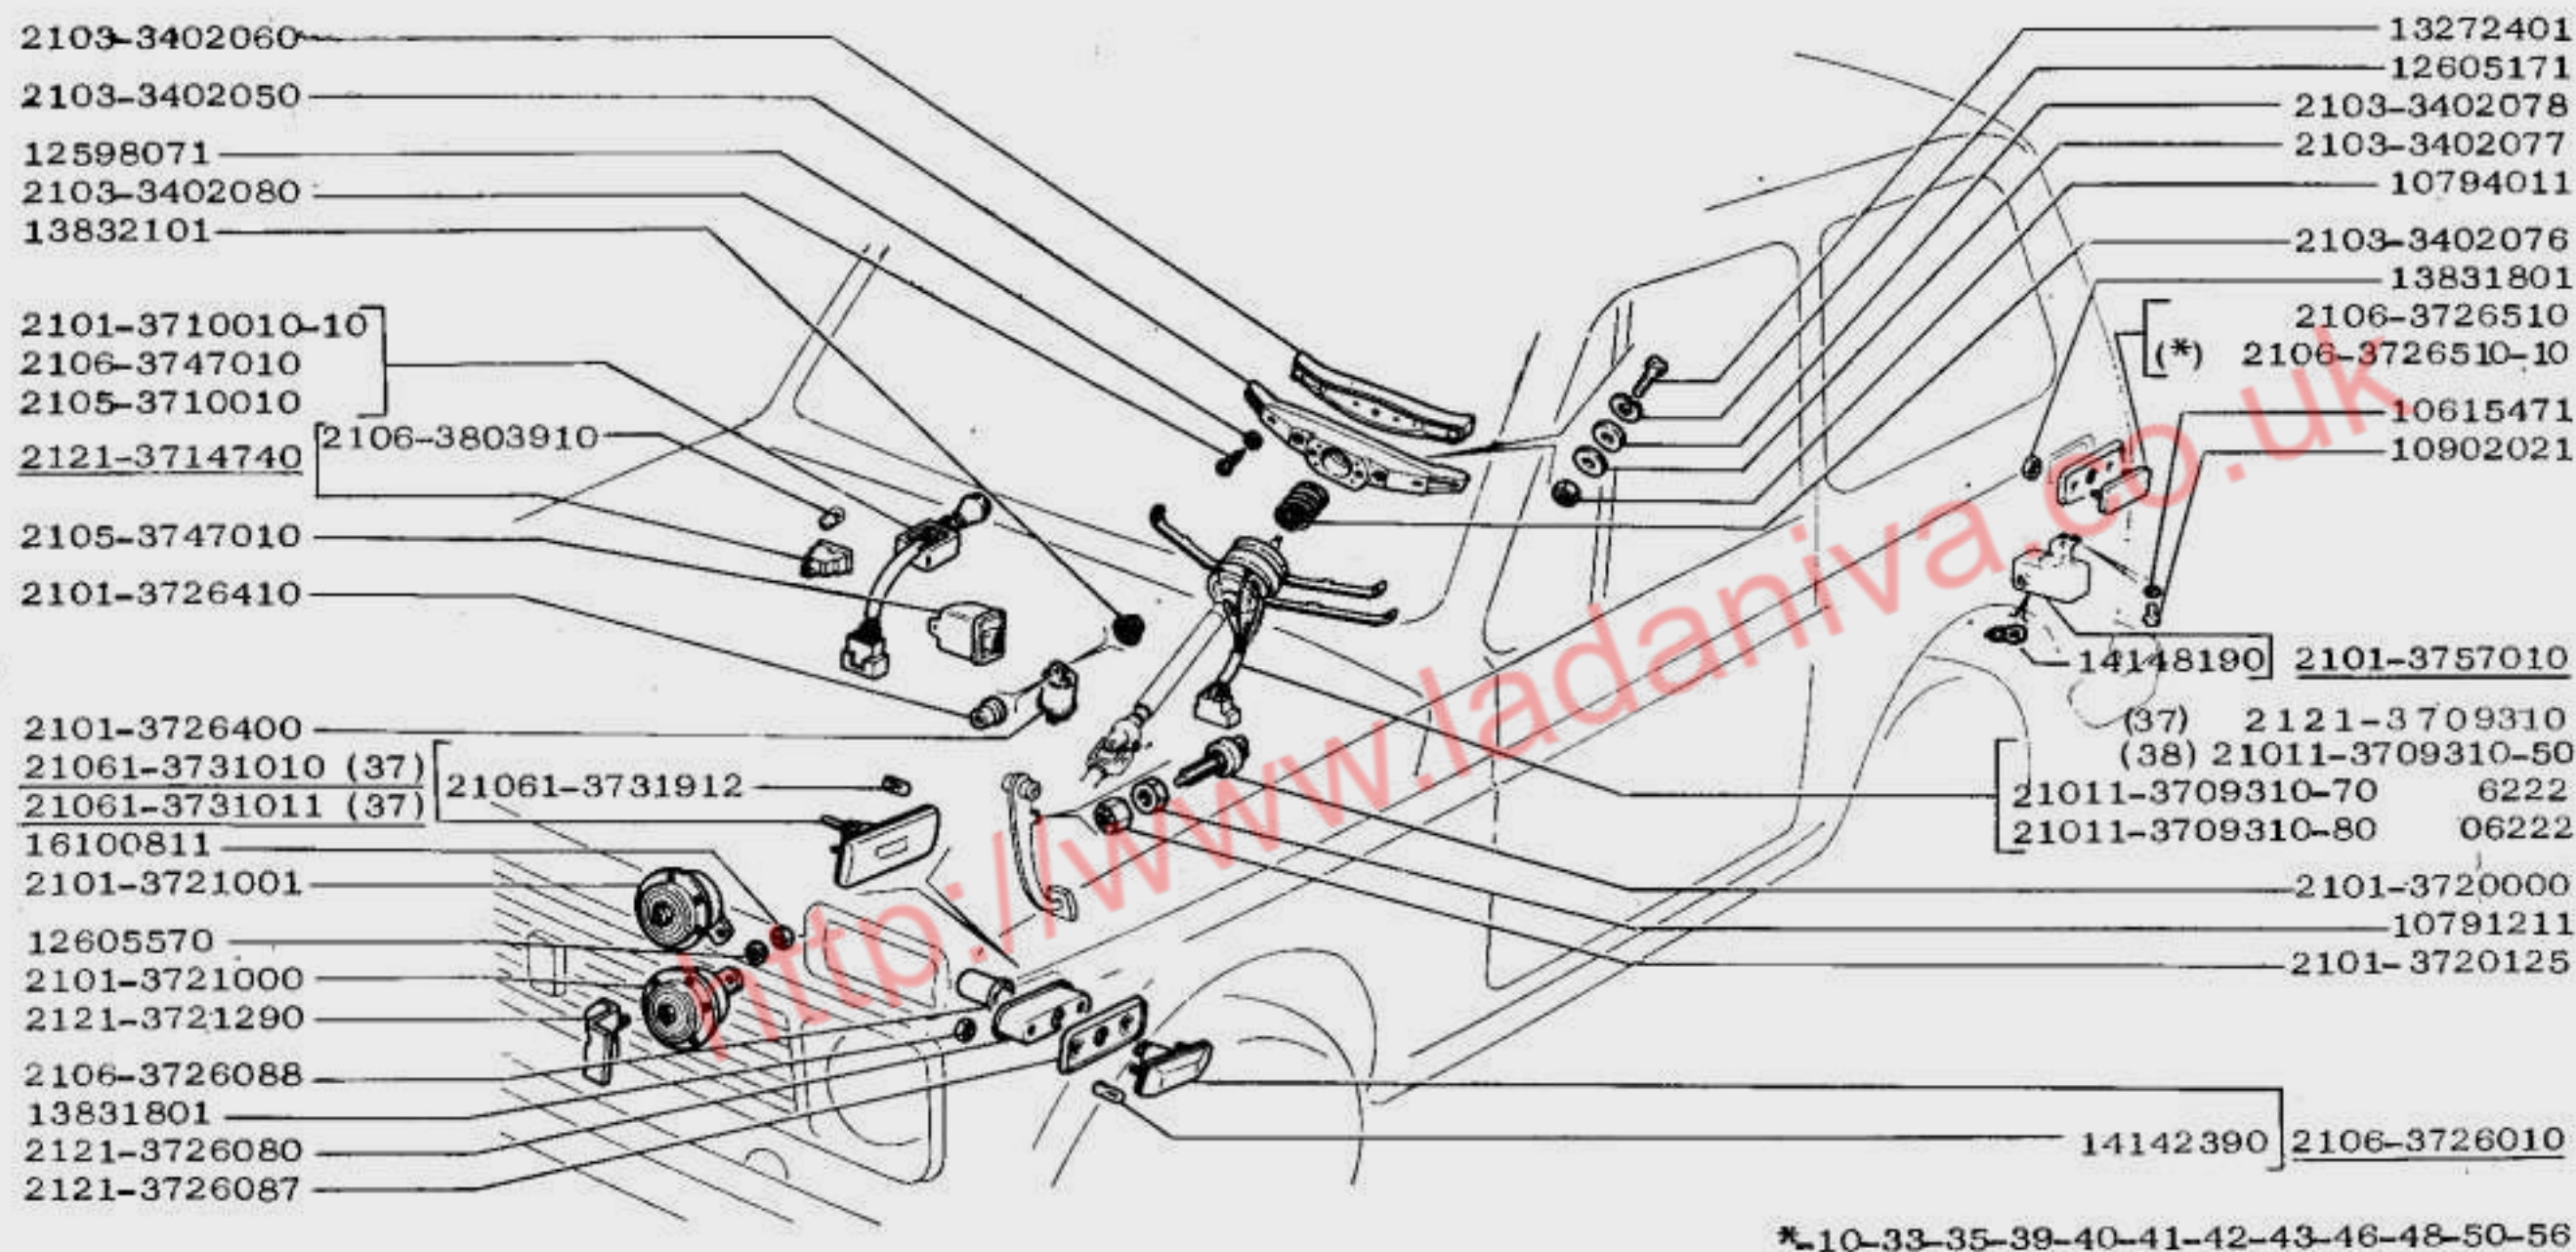

BA3-2121
BA3-21211

Сигналы
 Horns
 Avertisseurs
 Hörner
 Señales


K3.01

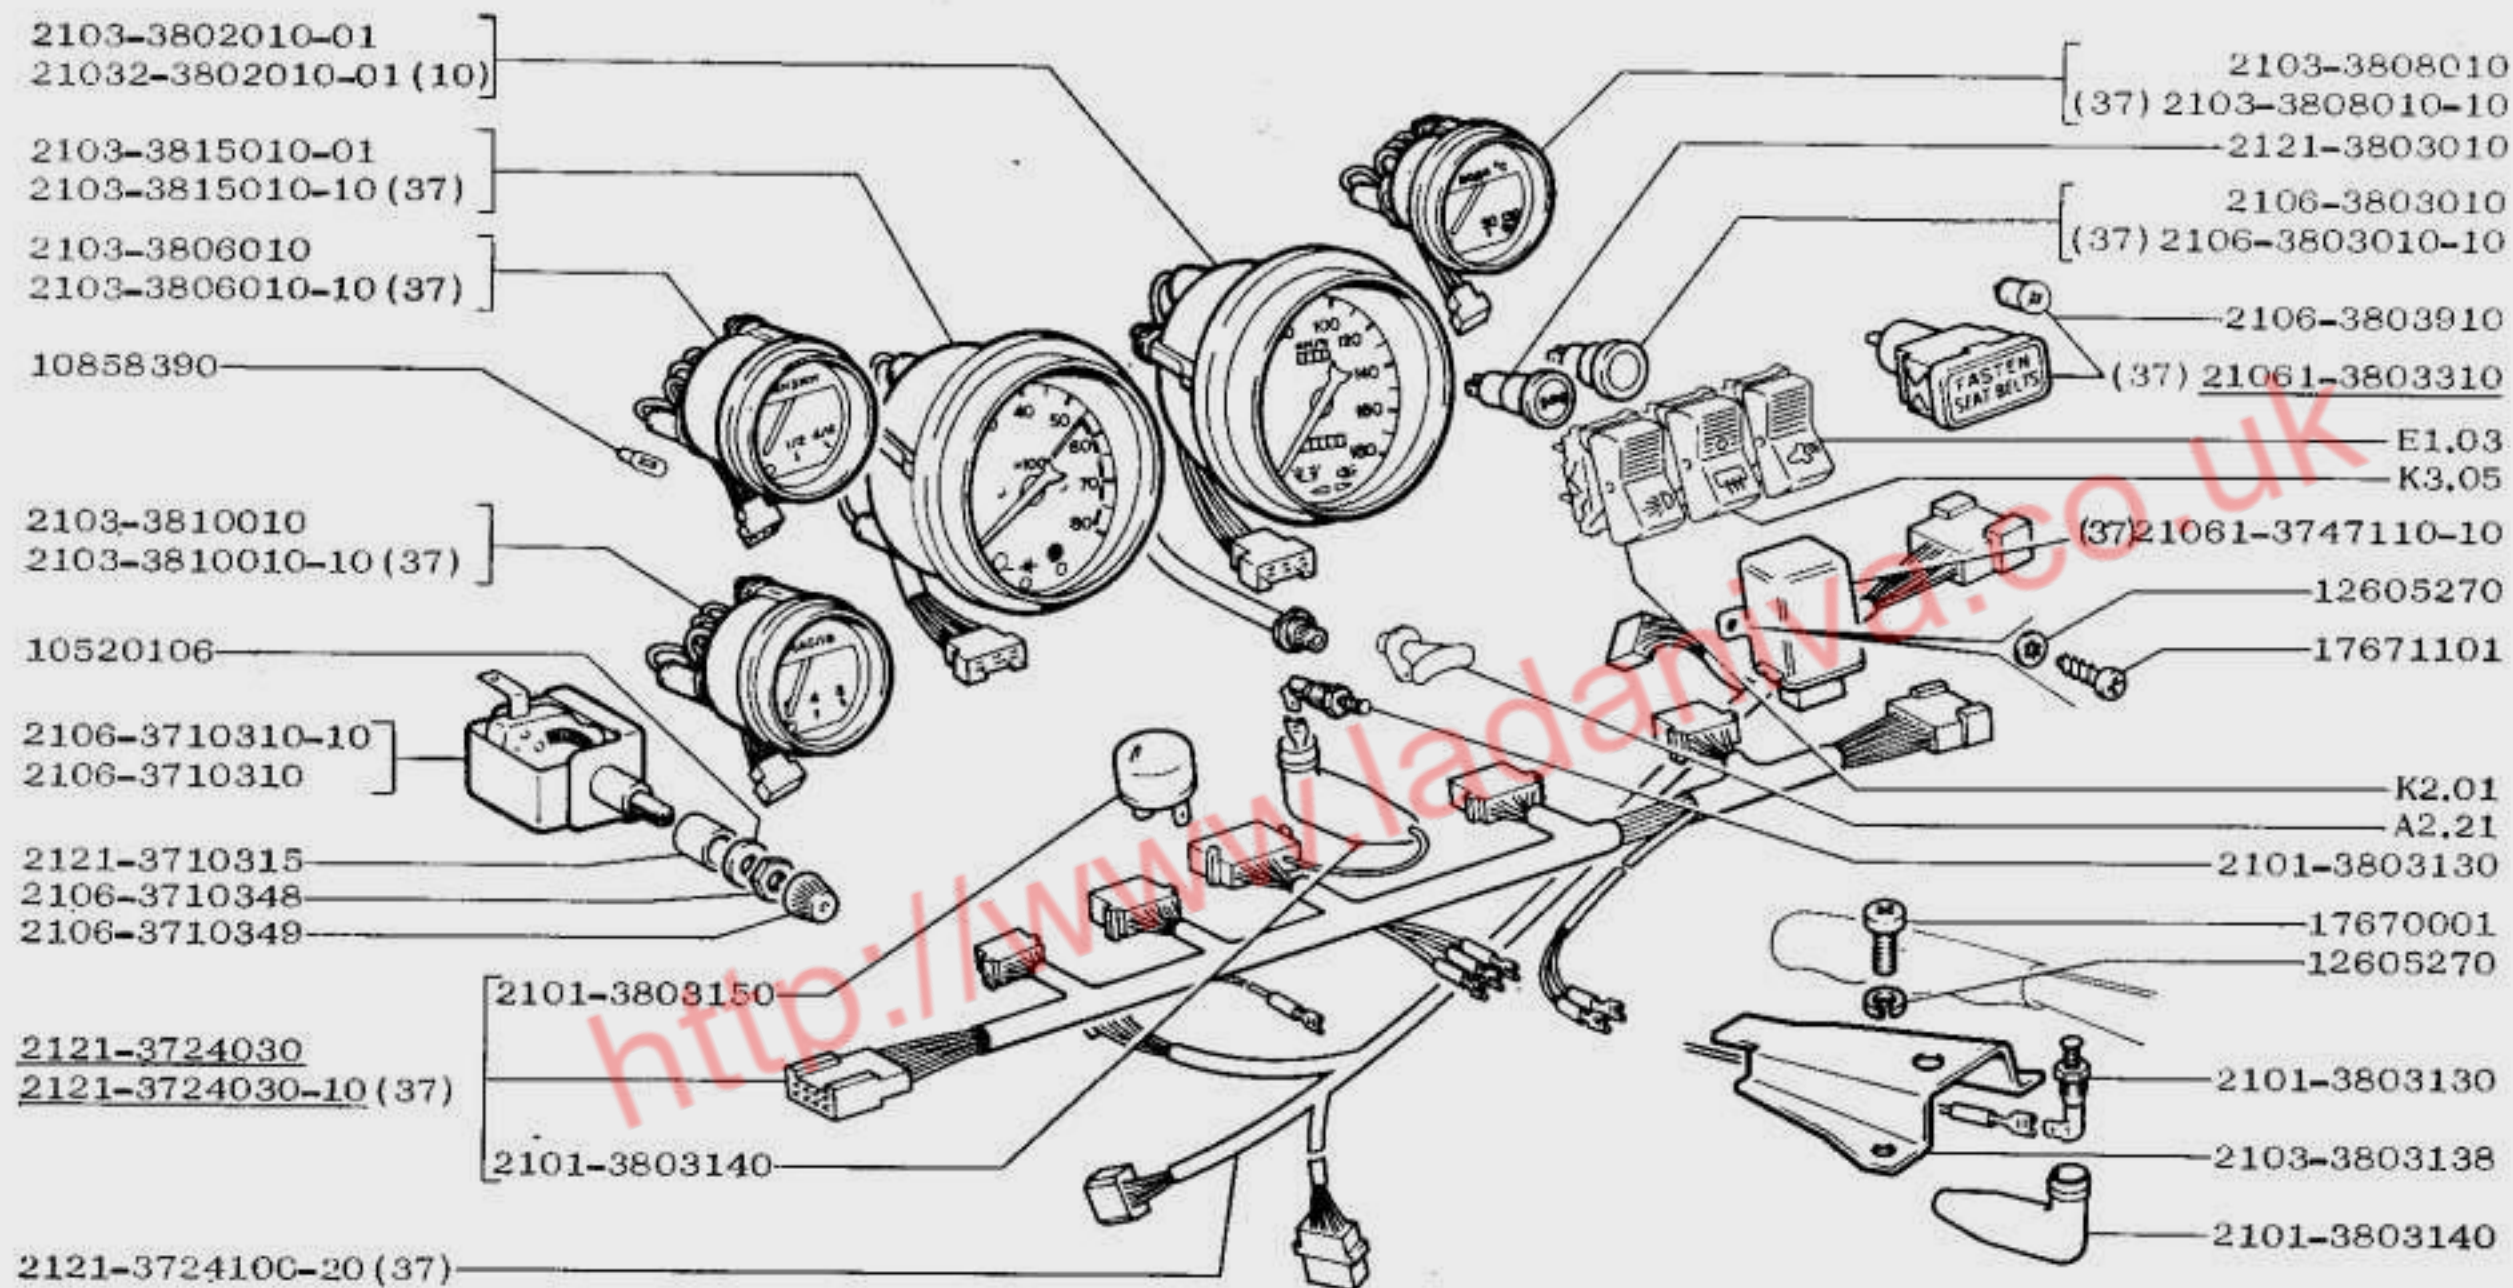

BA3-2121
BA3-21211

Приборы
Instruments
Appareils
Geräte
Instrumentos


K3.03

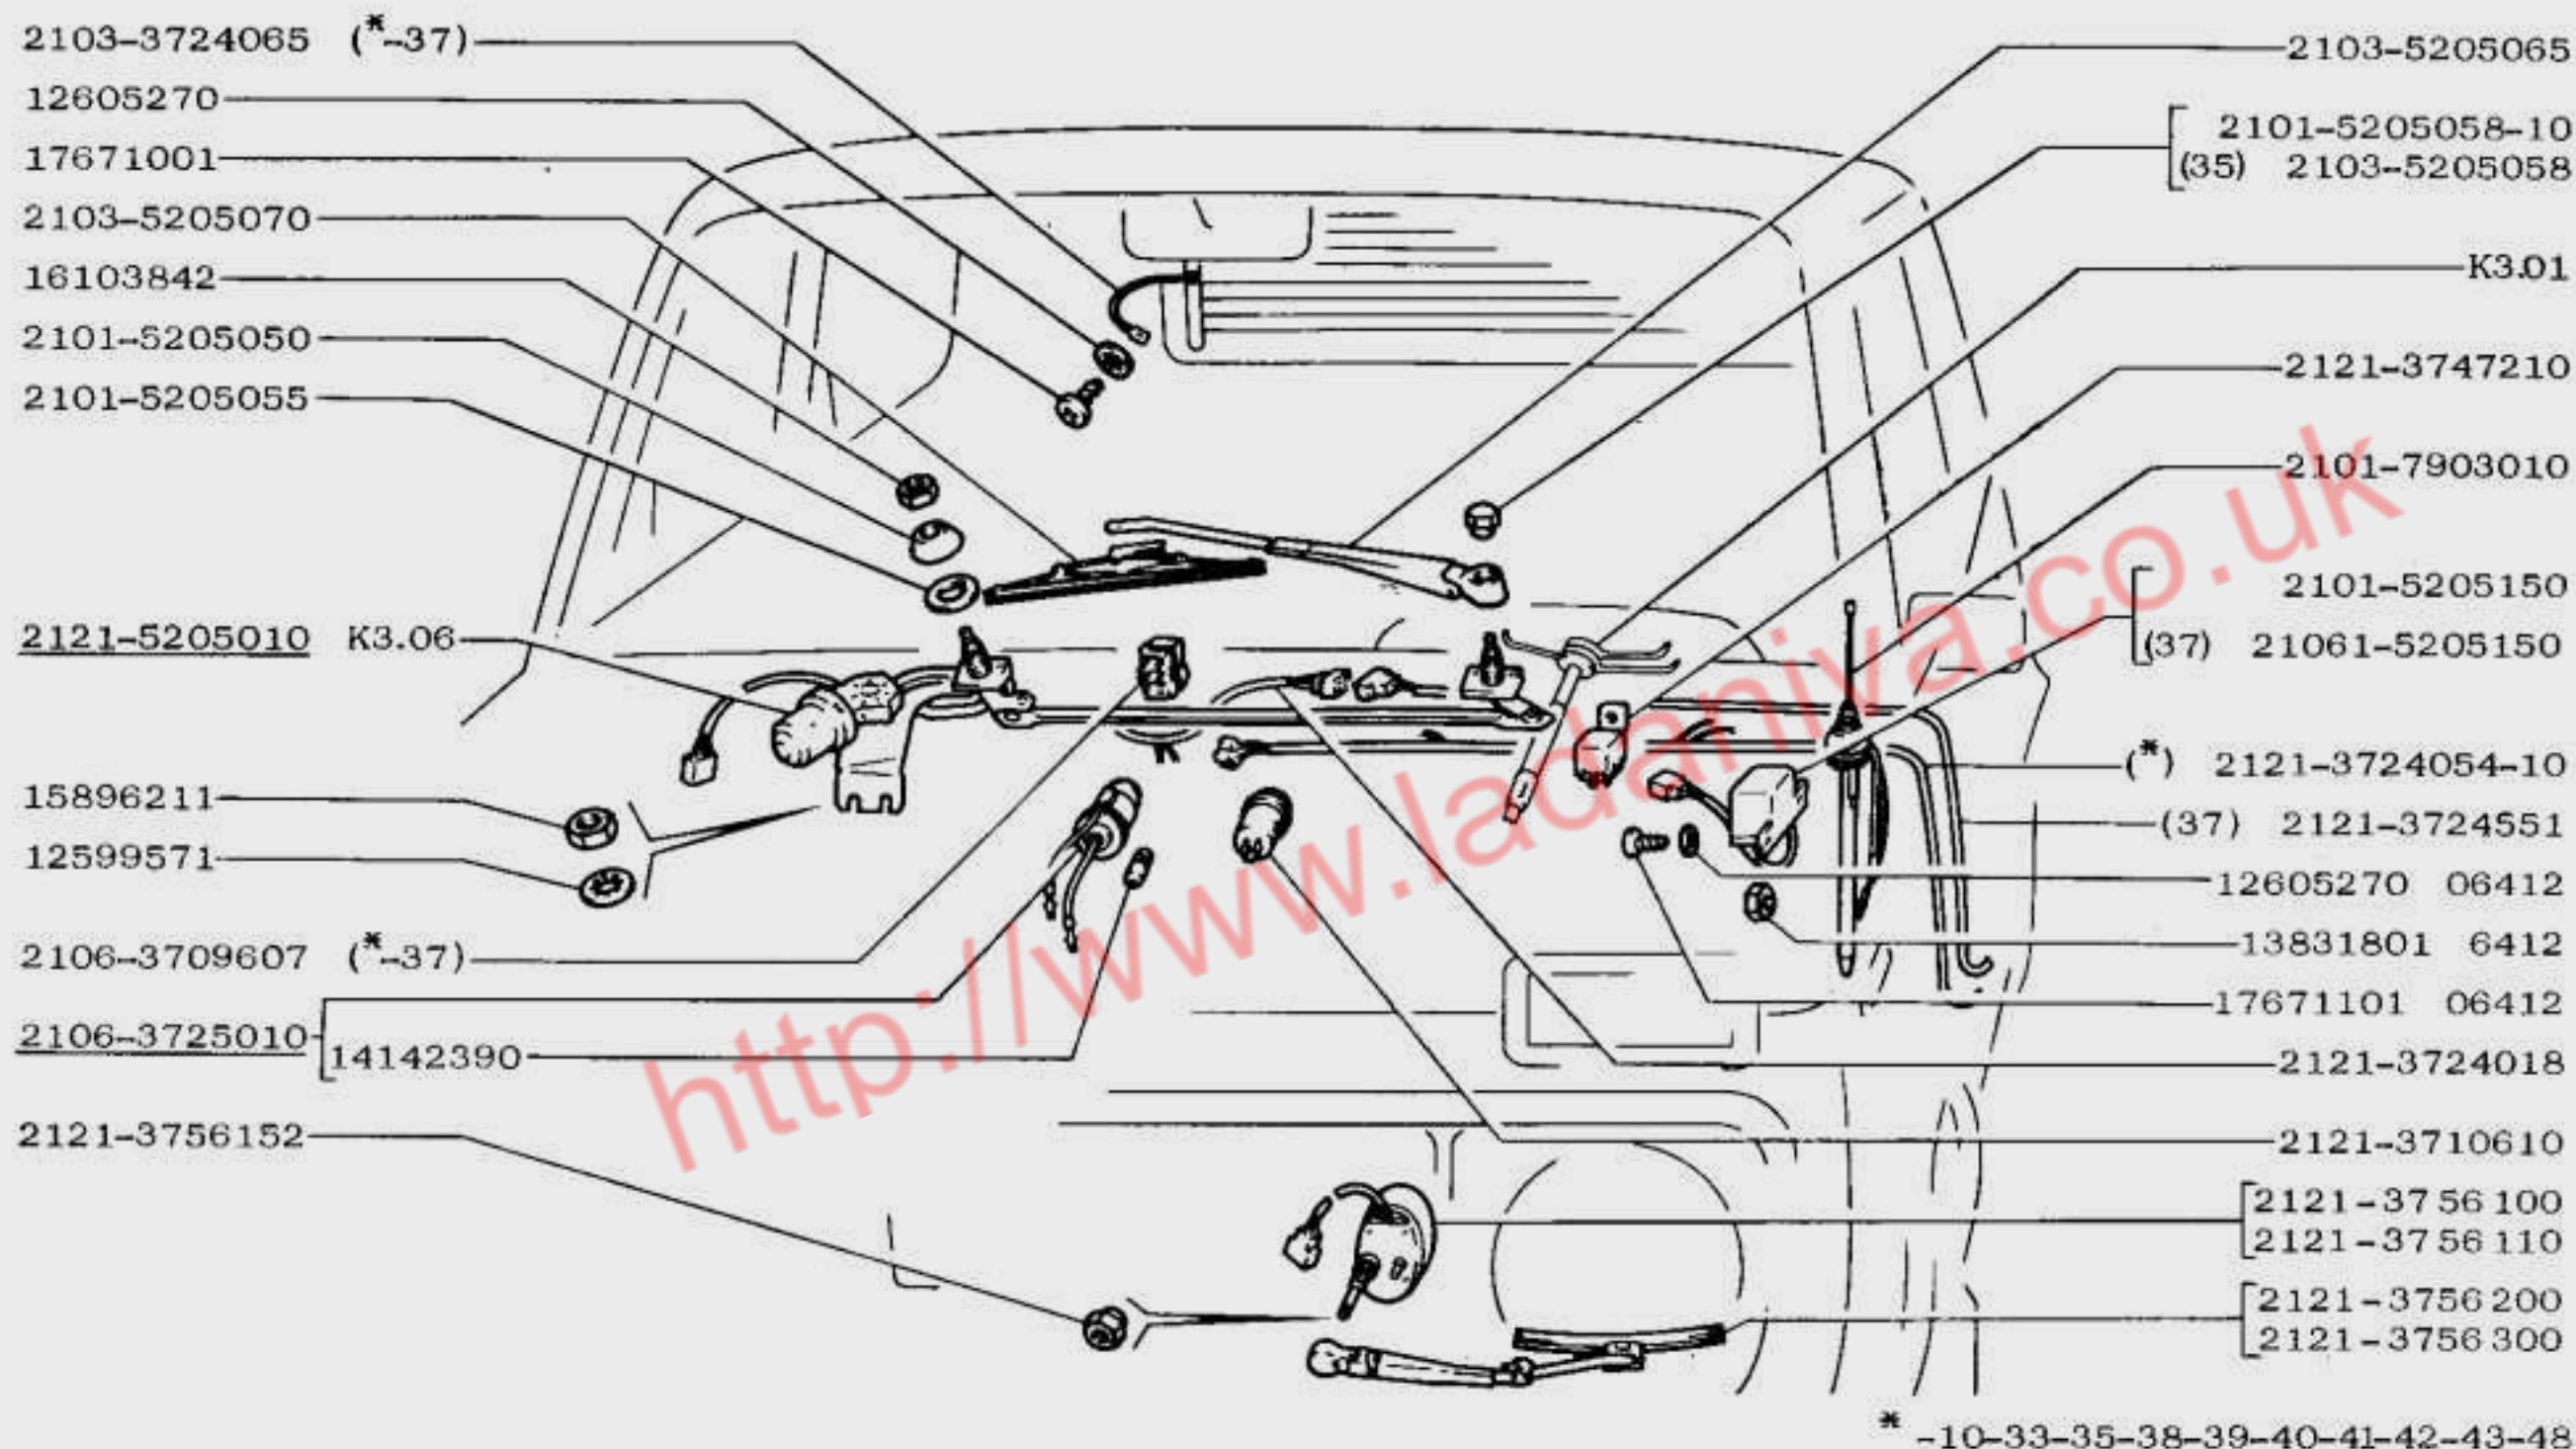

BA3-2121
BA3-21211

Стеклоочиститель и другое оборудование
Windshield Wiper and Other Equipment
Essuie-glace et autre équipement
Scheibenwischer und sonstige Einrichtungen
Limpiaparabrisas y otro equipo


K3.05

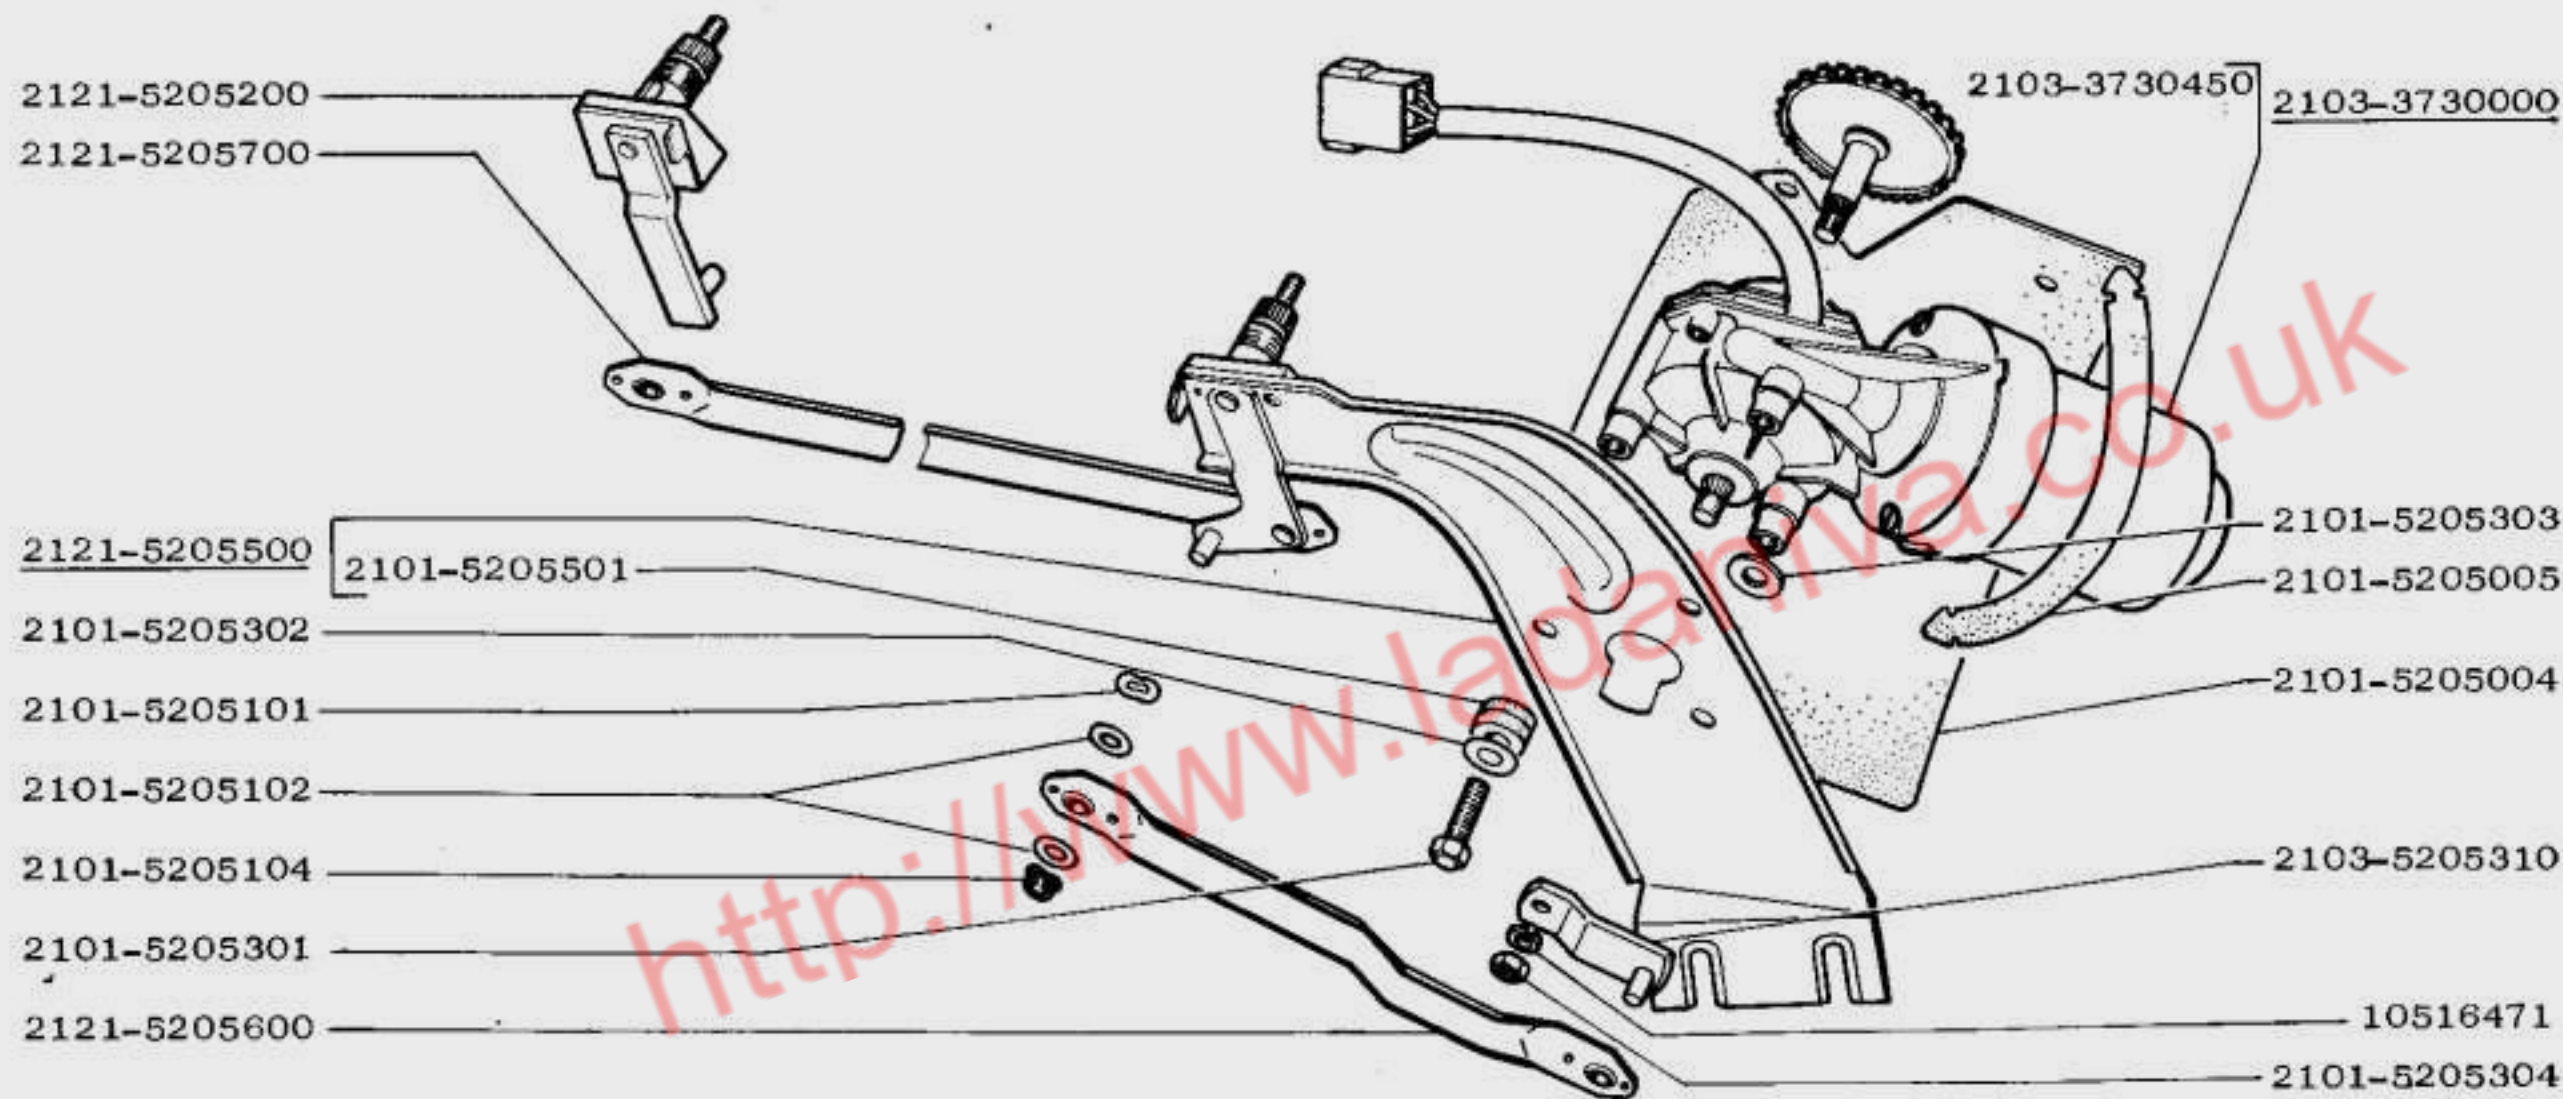

BA3-2121
BA3-21211

Стеклоочиститель
Windshield Wiper
Essuie-glace
Scheibenwischer
Limpiaparabrisas


K3.06

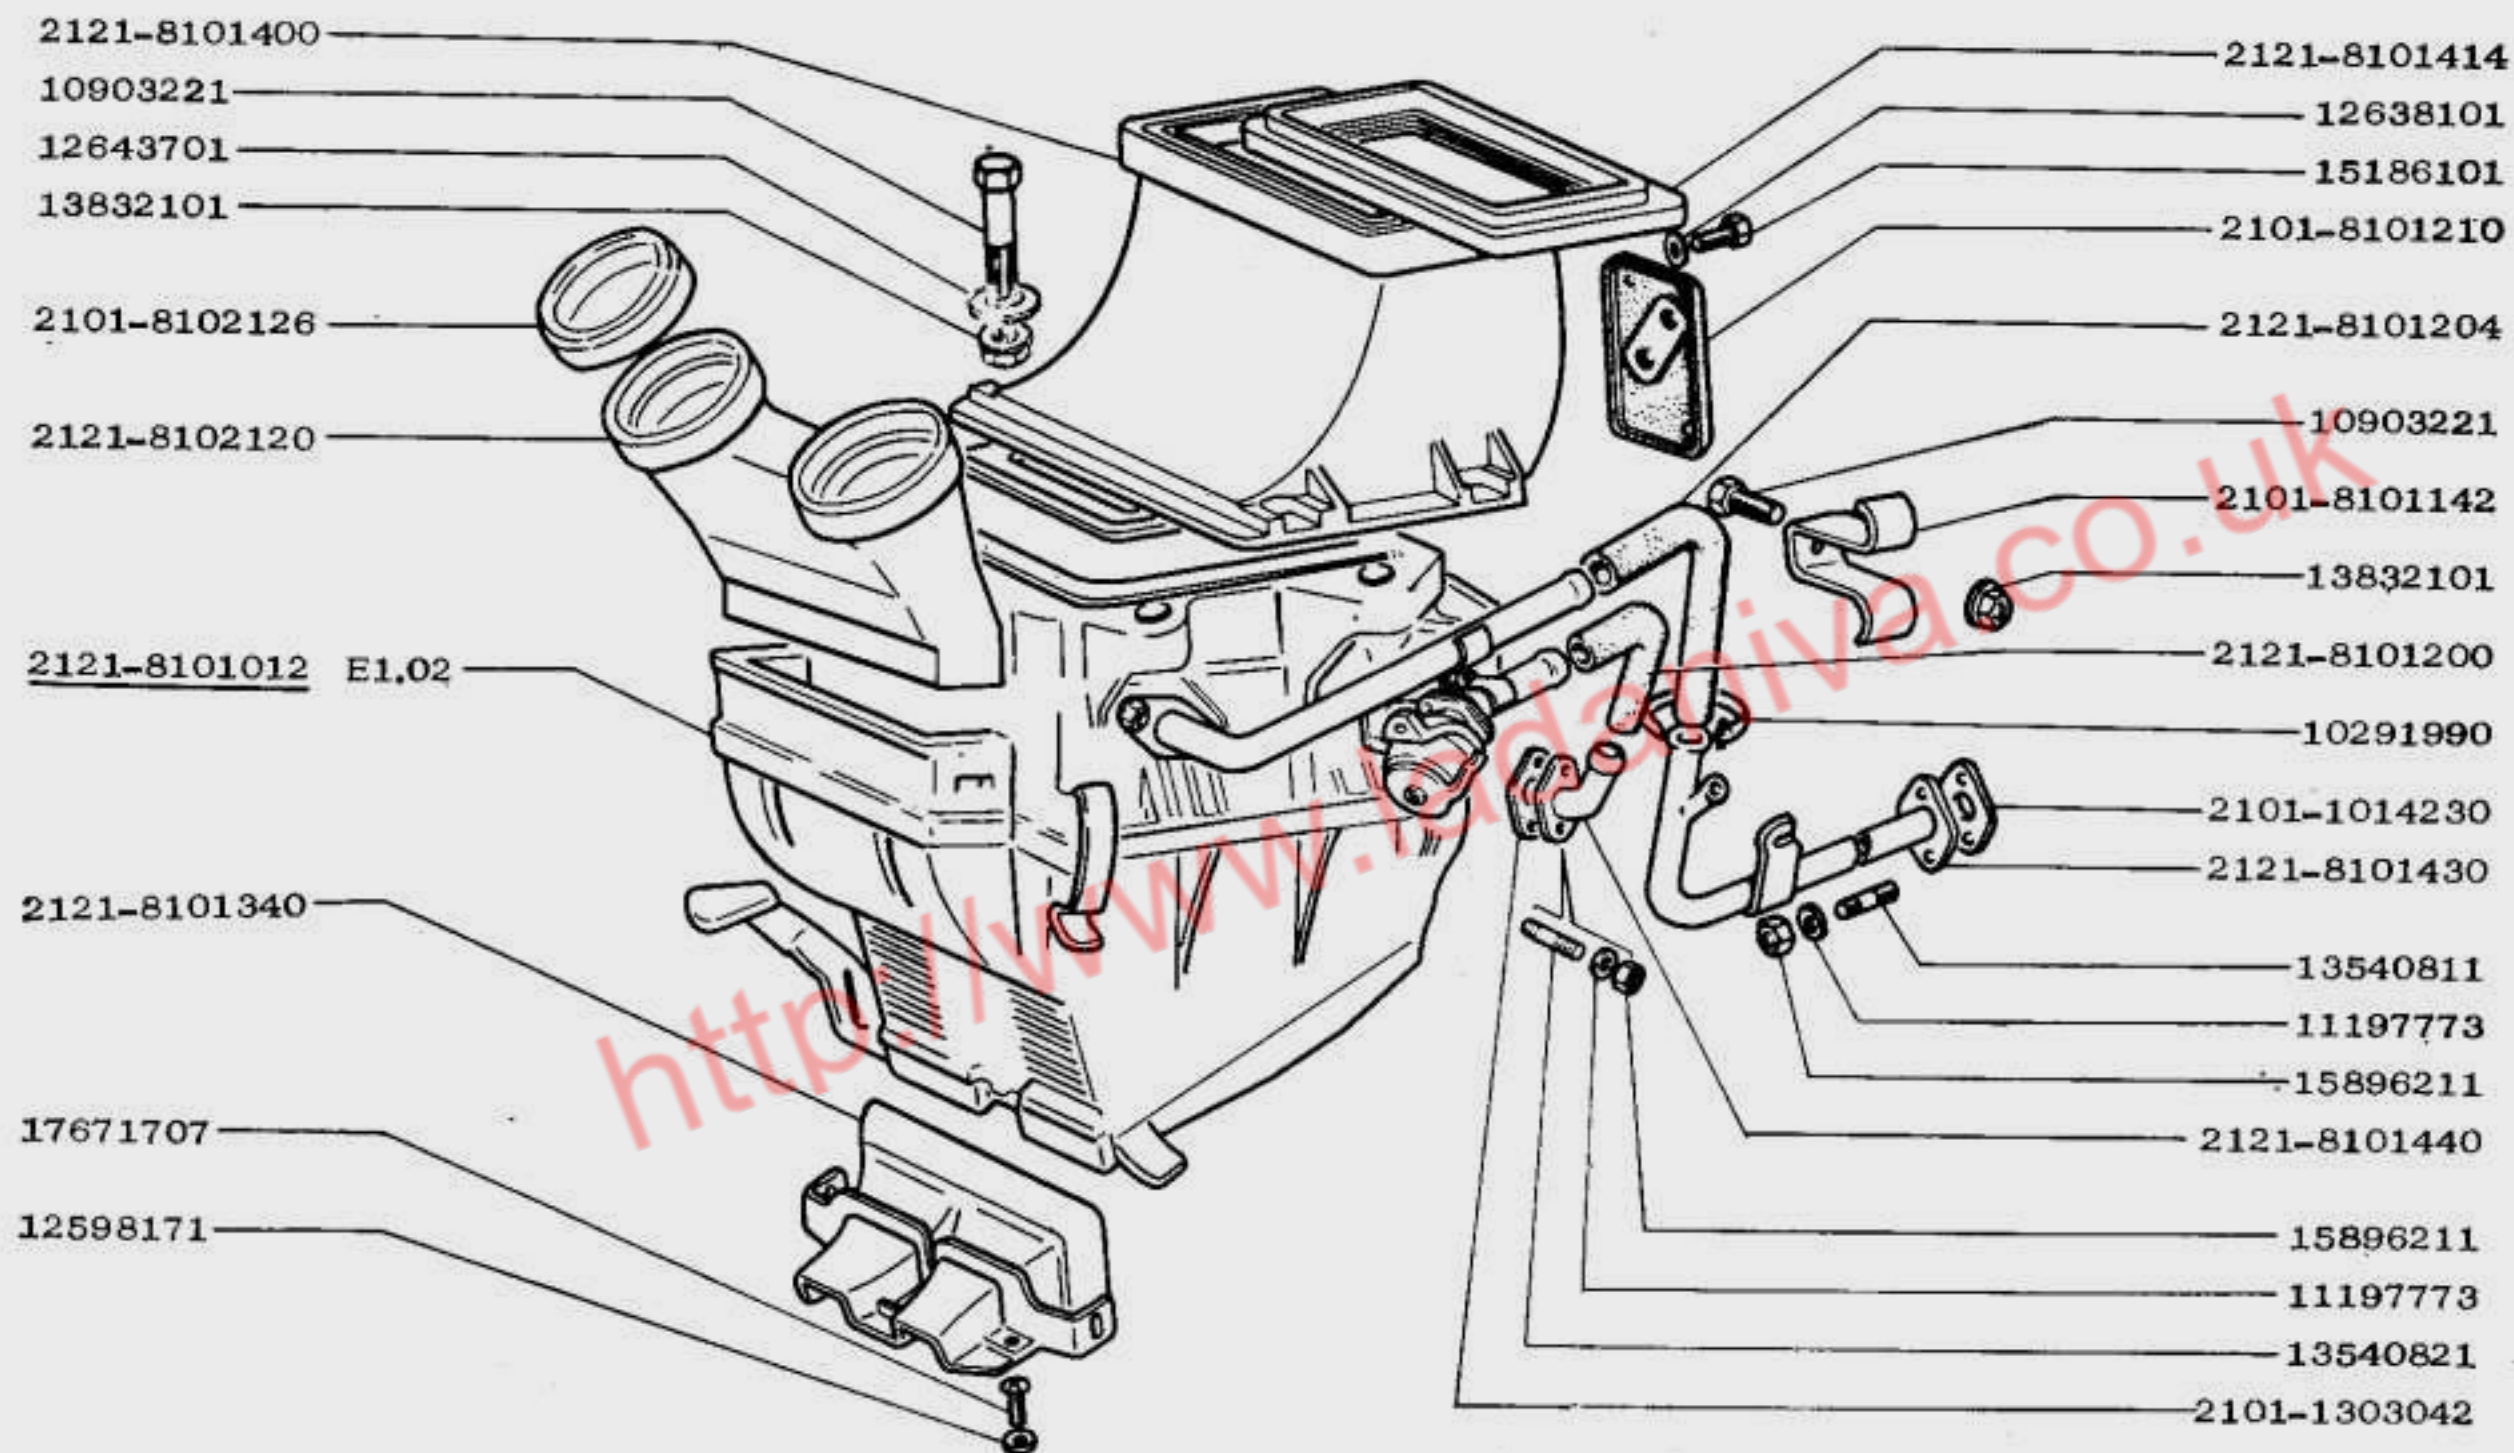

BA3-2121
BA3-21211

Система вентиляции и отопления
Ventilation and Heating System
Système de chauffage-ventilation
Lüftung und Heizung
Sistema de la ventilación y calefacción


E1.01

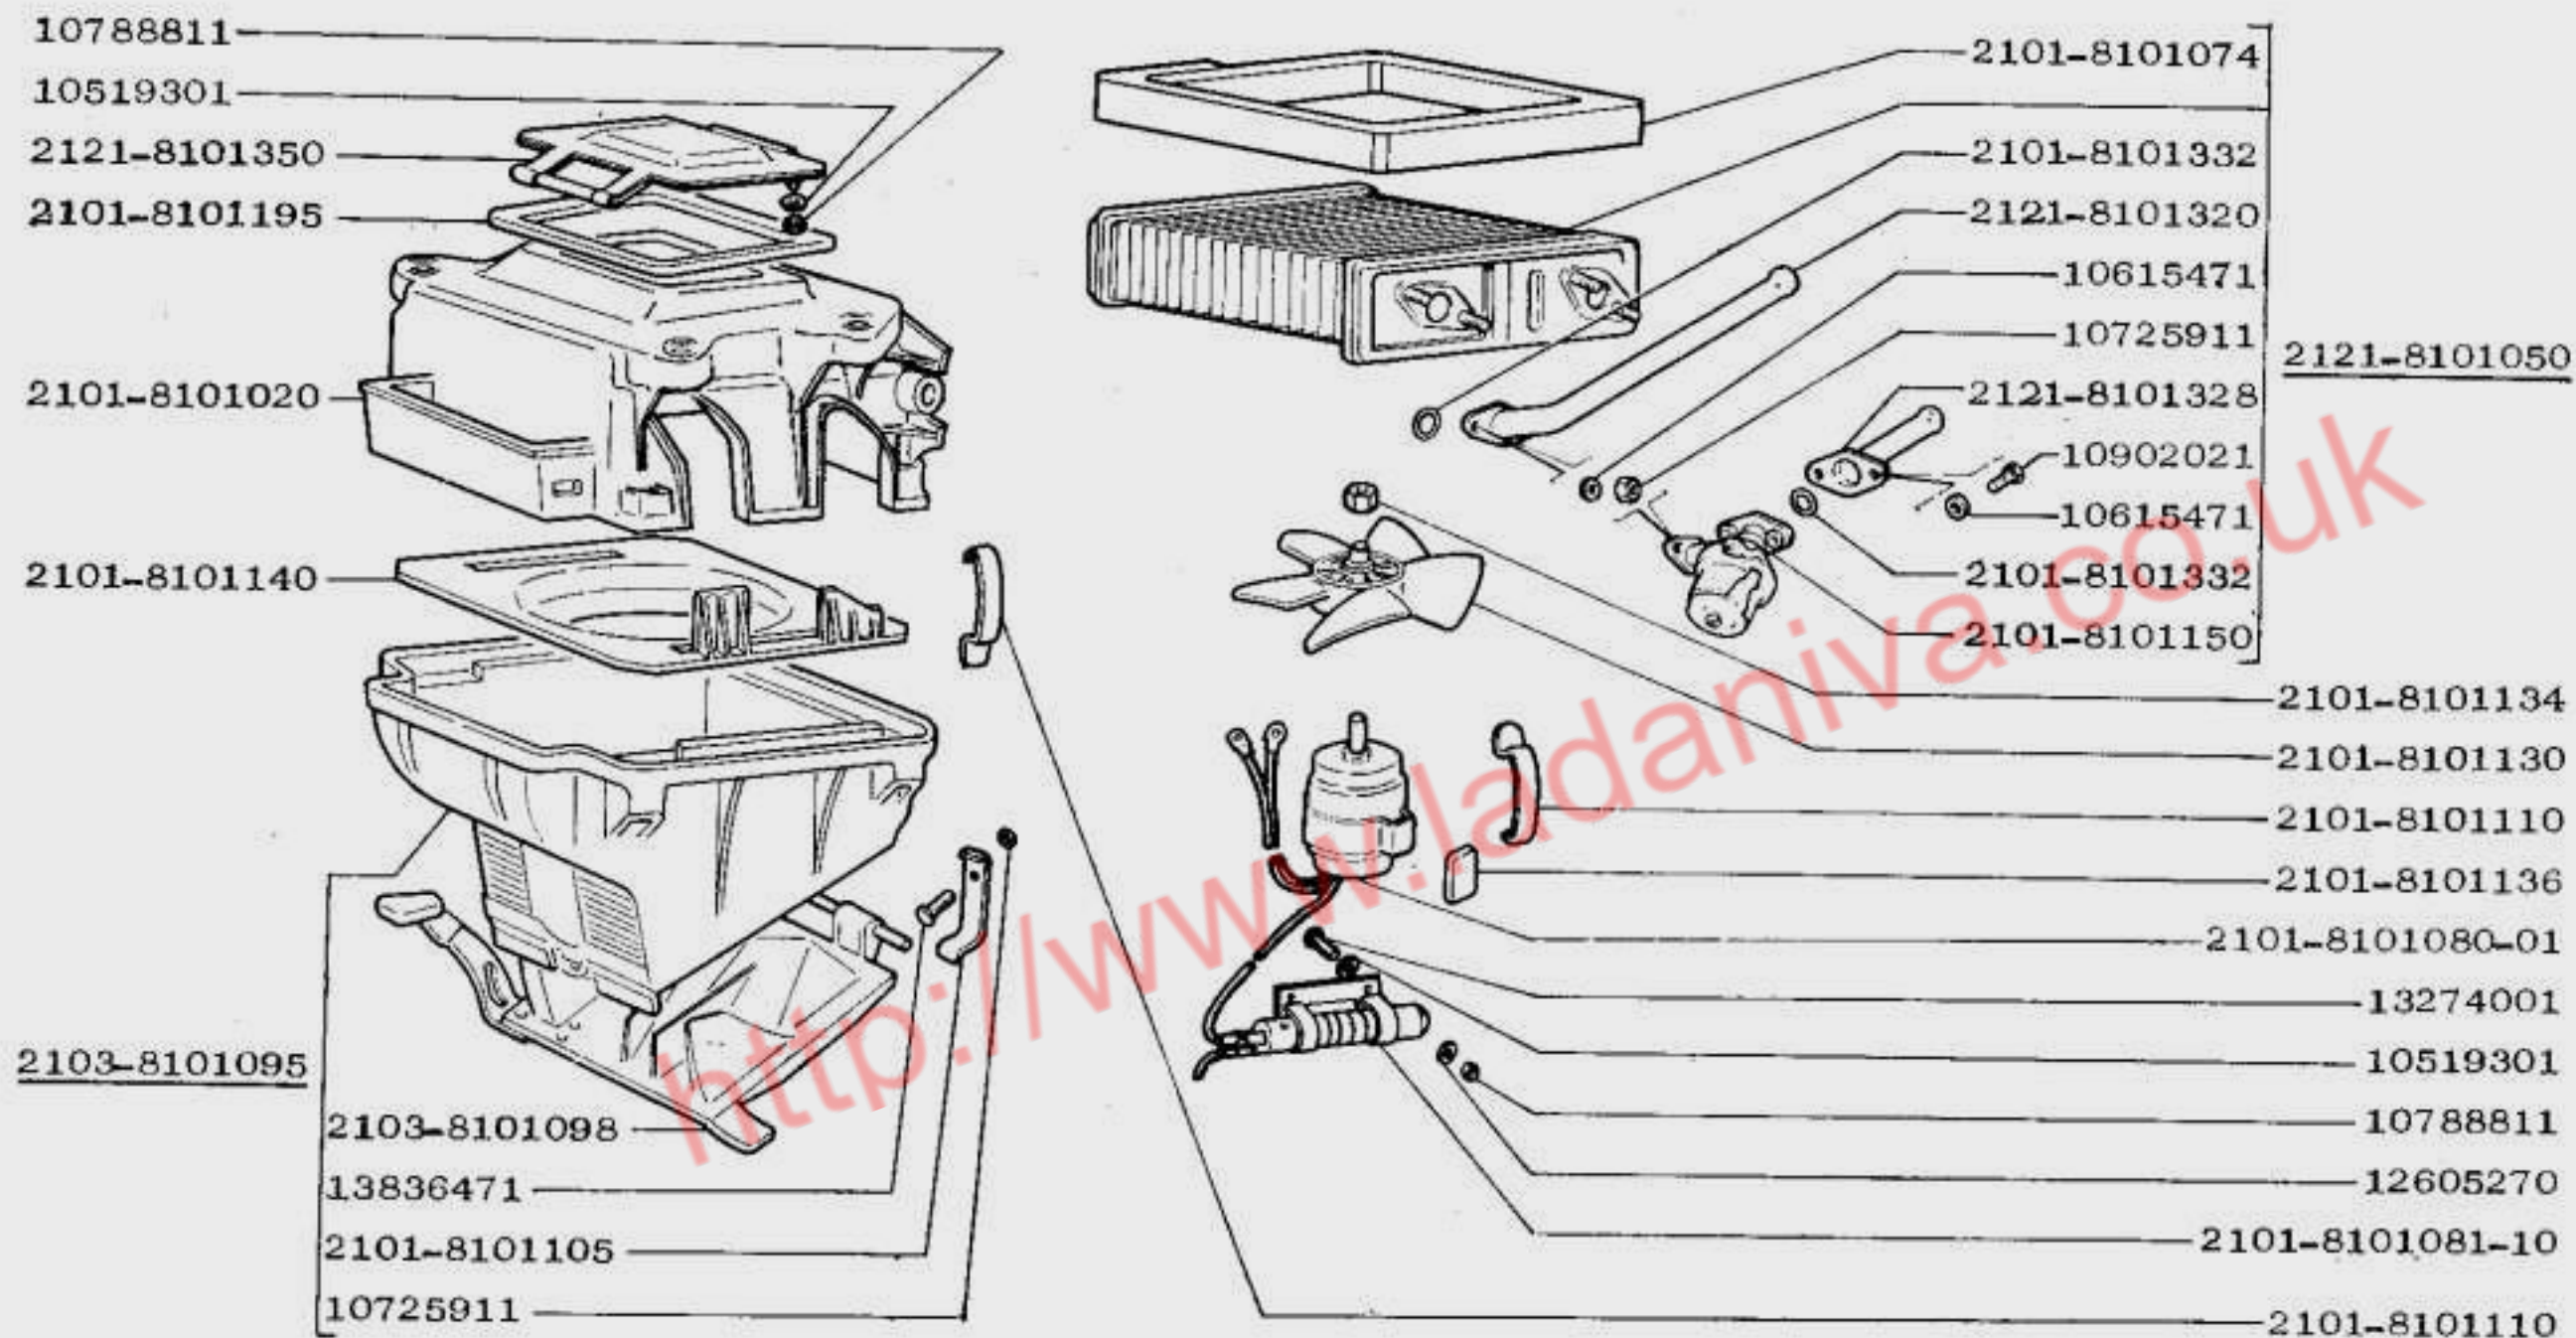

BA3-2121
BA3-21211

Отопитель
Heater
Appareil de chauffage-ventilation
Heizkörper
Calefactor


E1.02

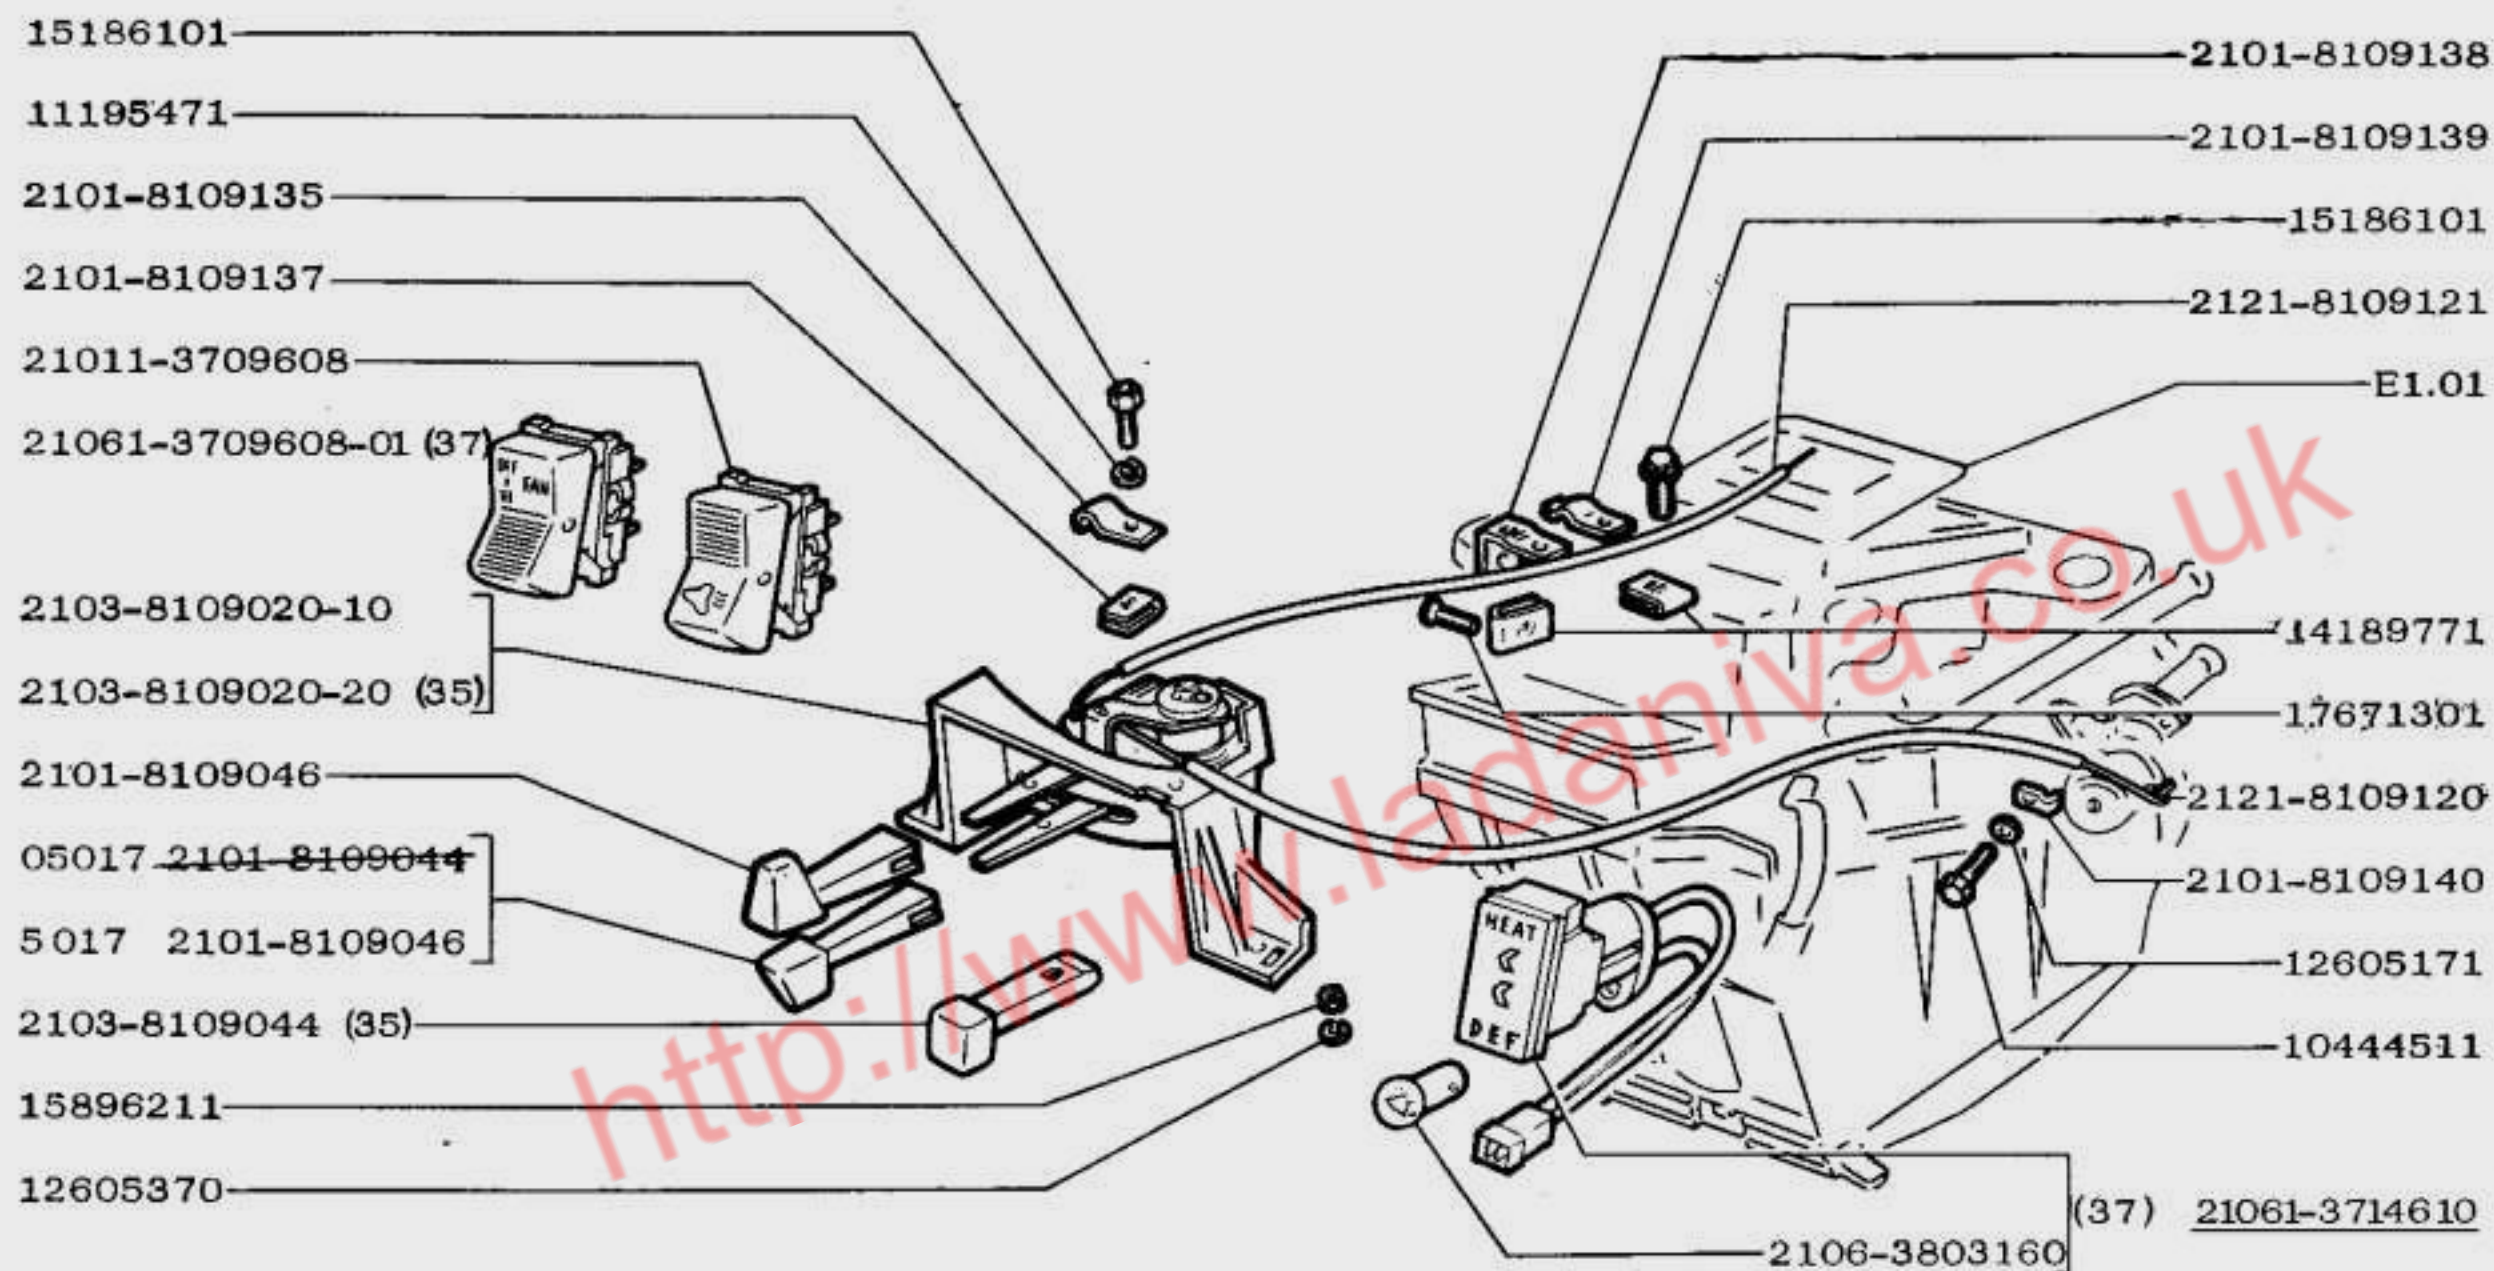

BA3-2121
BA3-21211

Управление вентиляцией и отоплением
Ventilation and Heating Controls
Commande d'appareil de chauffage-ventilation
Lüftungs- und Heizungsbetätigung
Mando de la ventilación y calefacción

E1.03

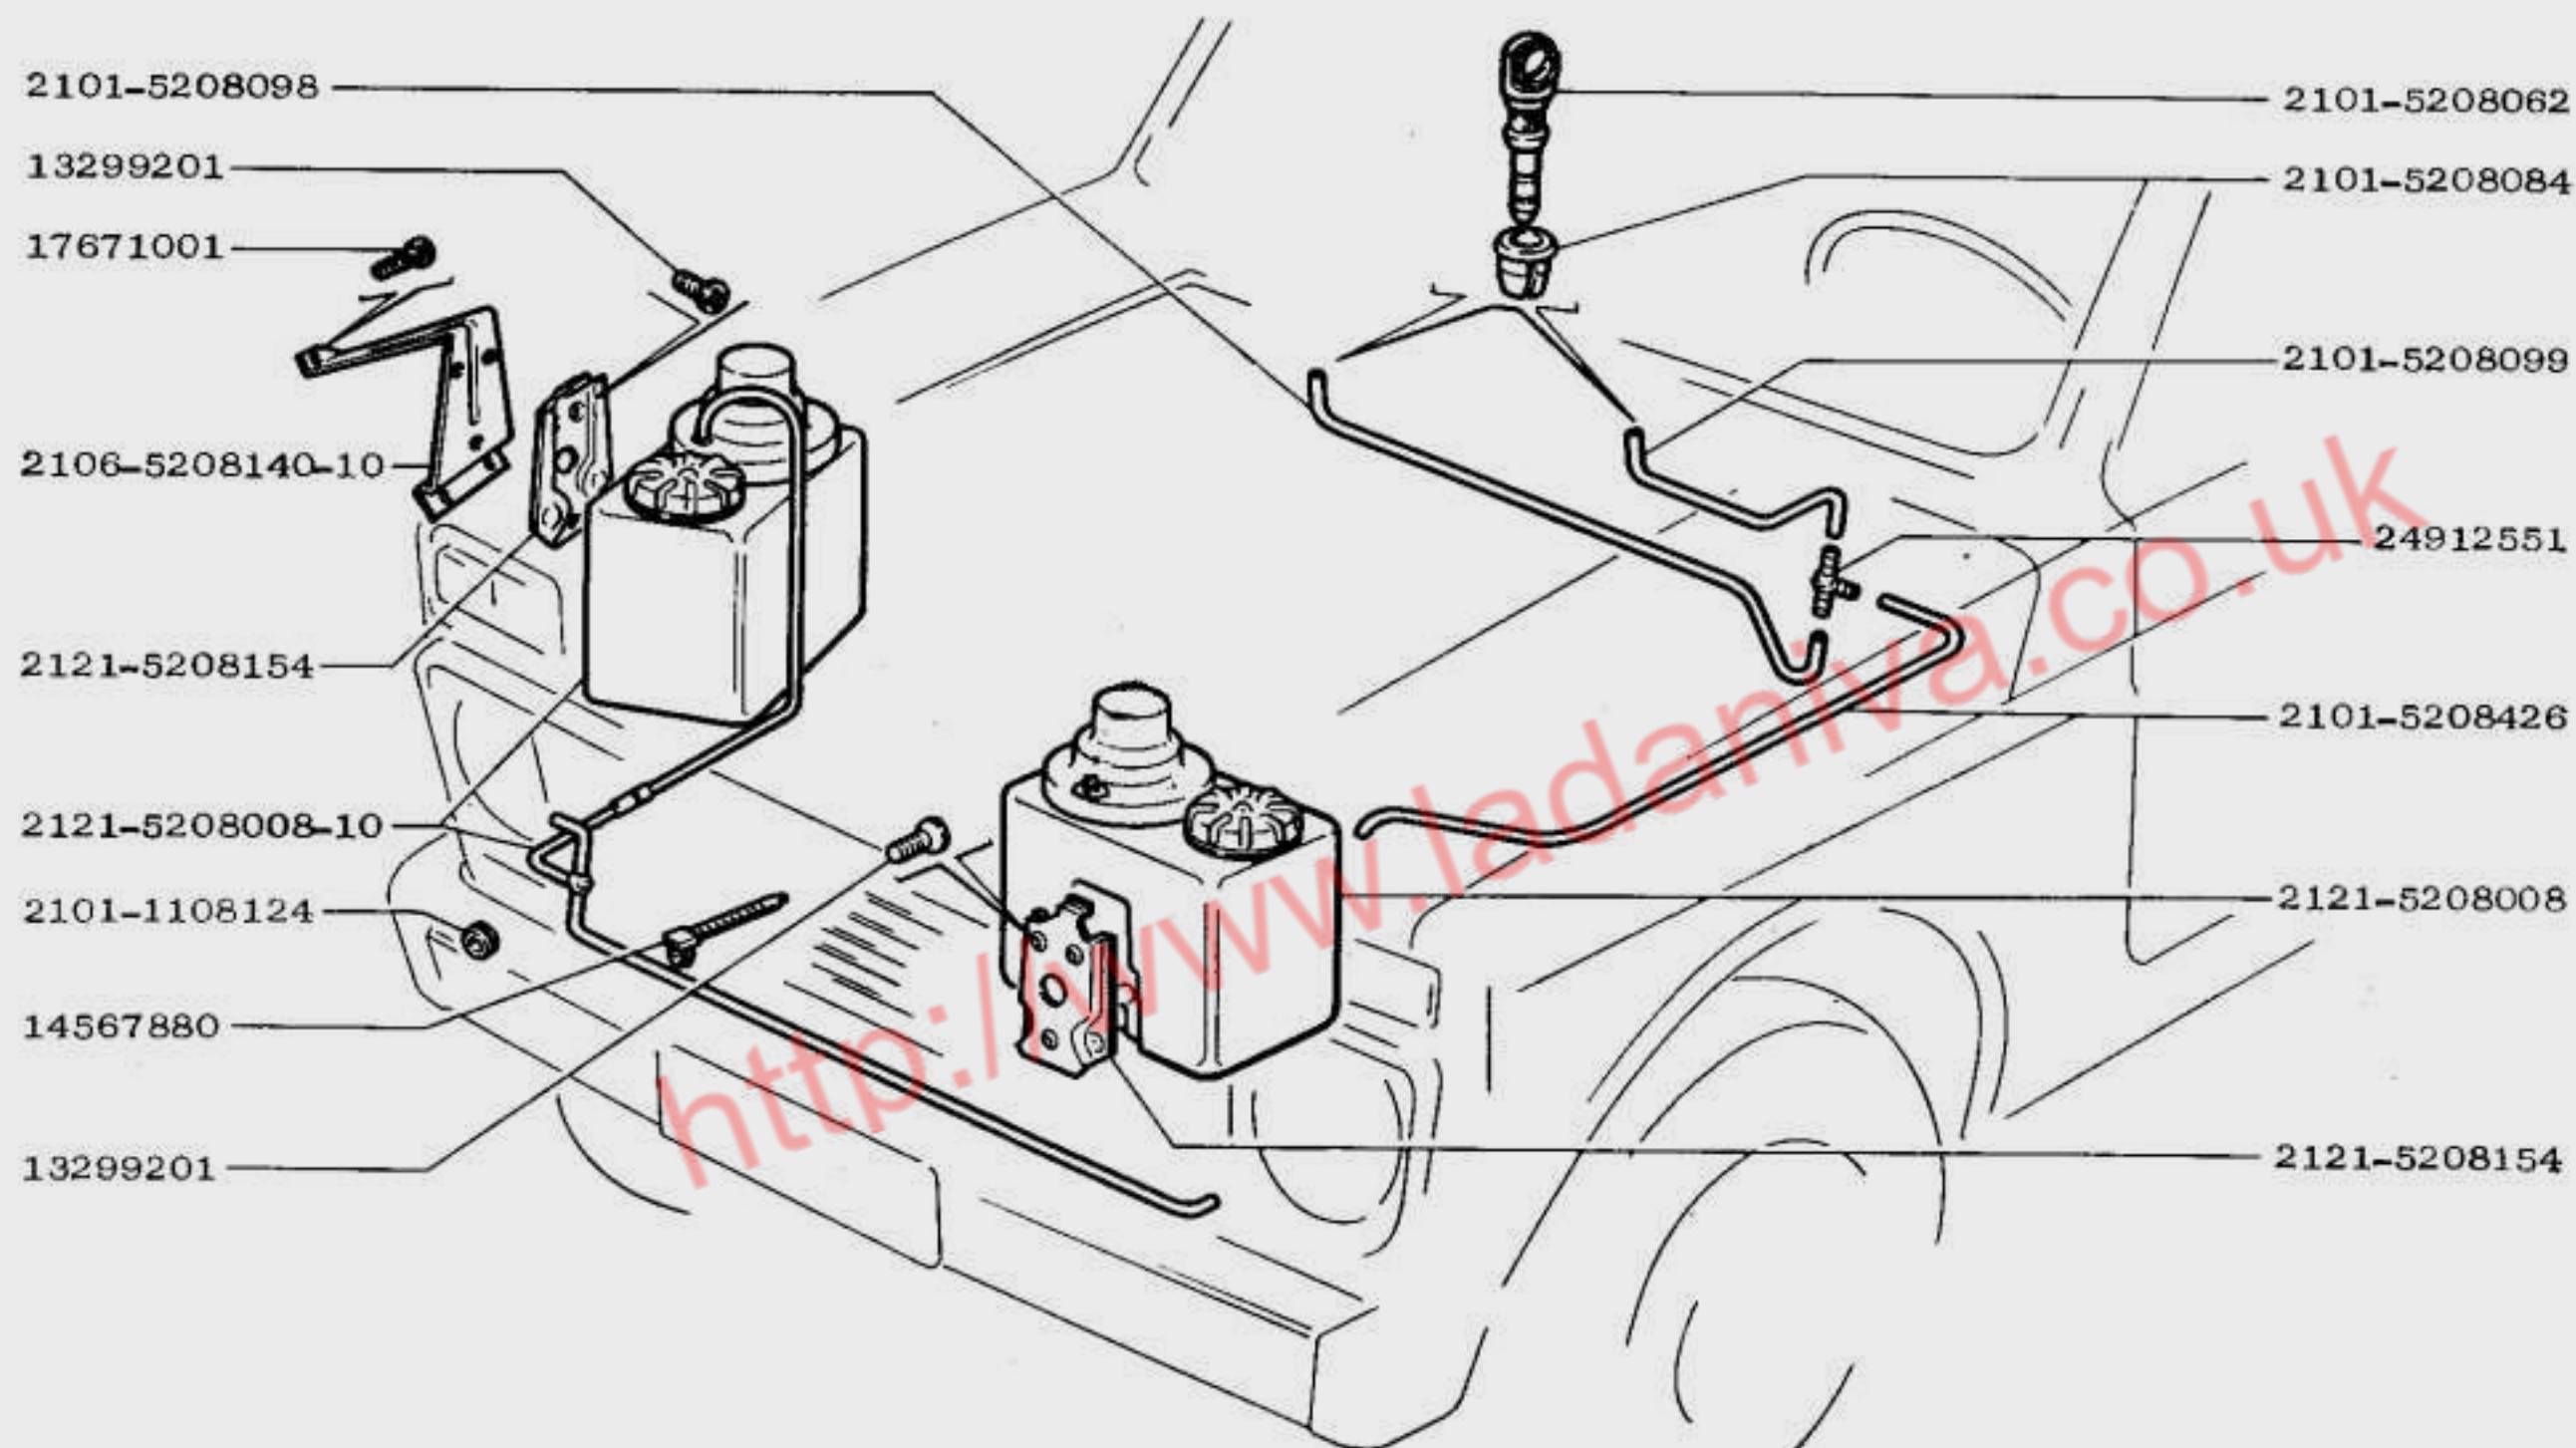


BA3-2121
BA3-21211

Омыватели
Washers
Lave-glace et lave-projecteurs
Scheibenwäscher
Lavadores

E1.07



2121-5000014

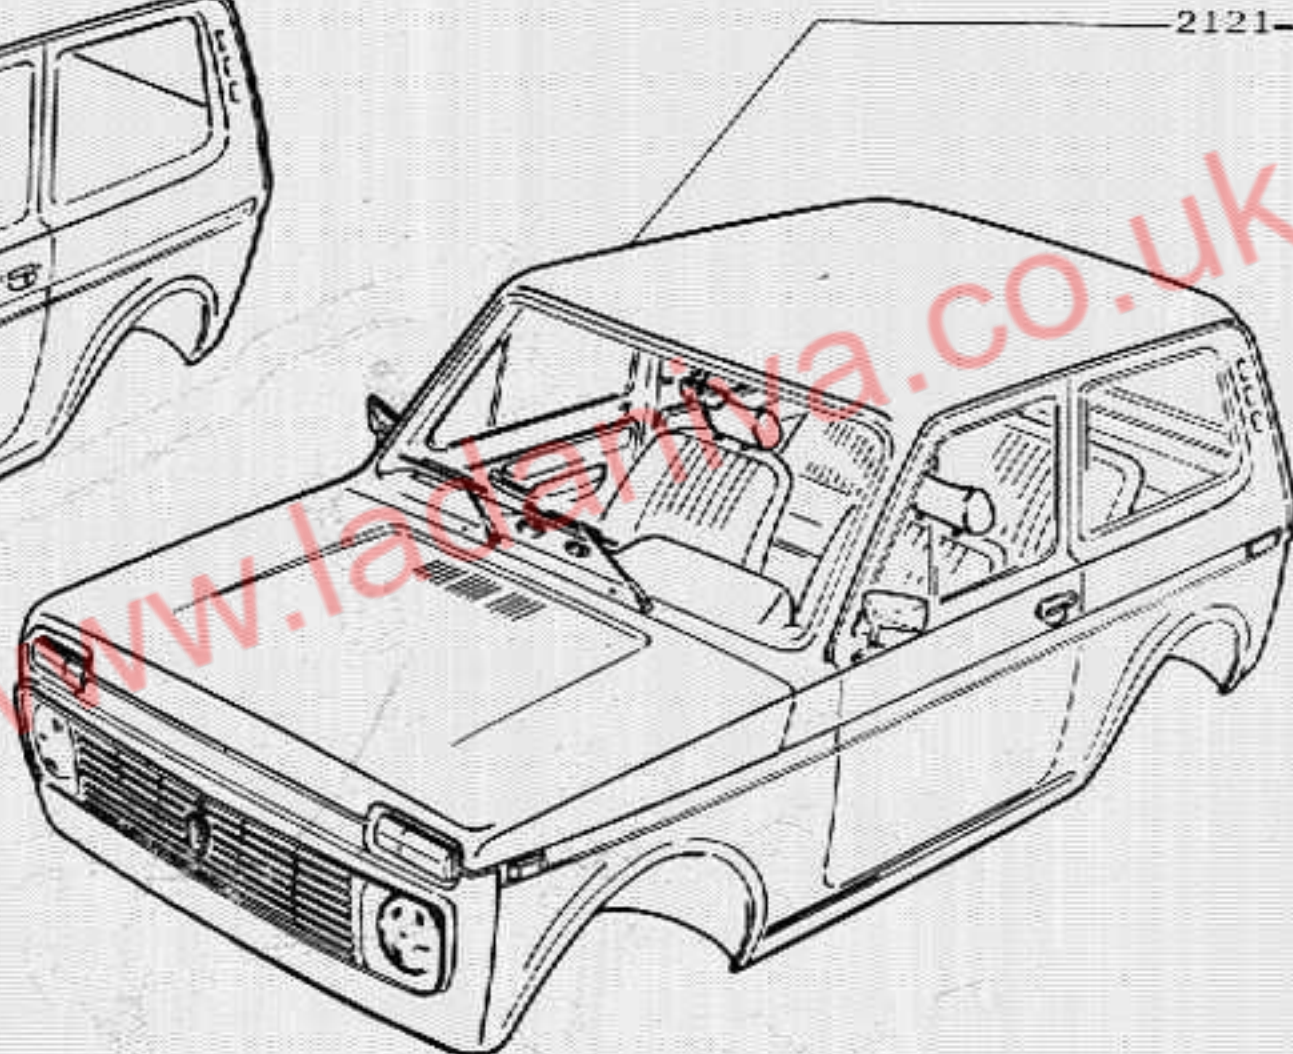

2121-5000010

<http://www.lada-ua.co.uk>


BA3-2121
BA3-21211

Кузов
Body
Carrosserie
Karosserie

M0.01


BA3-2121

BA3-2121
BA3-21211

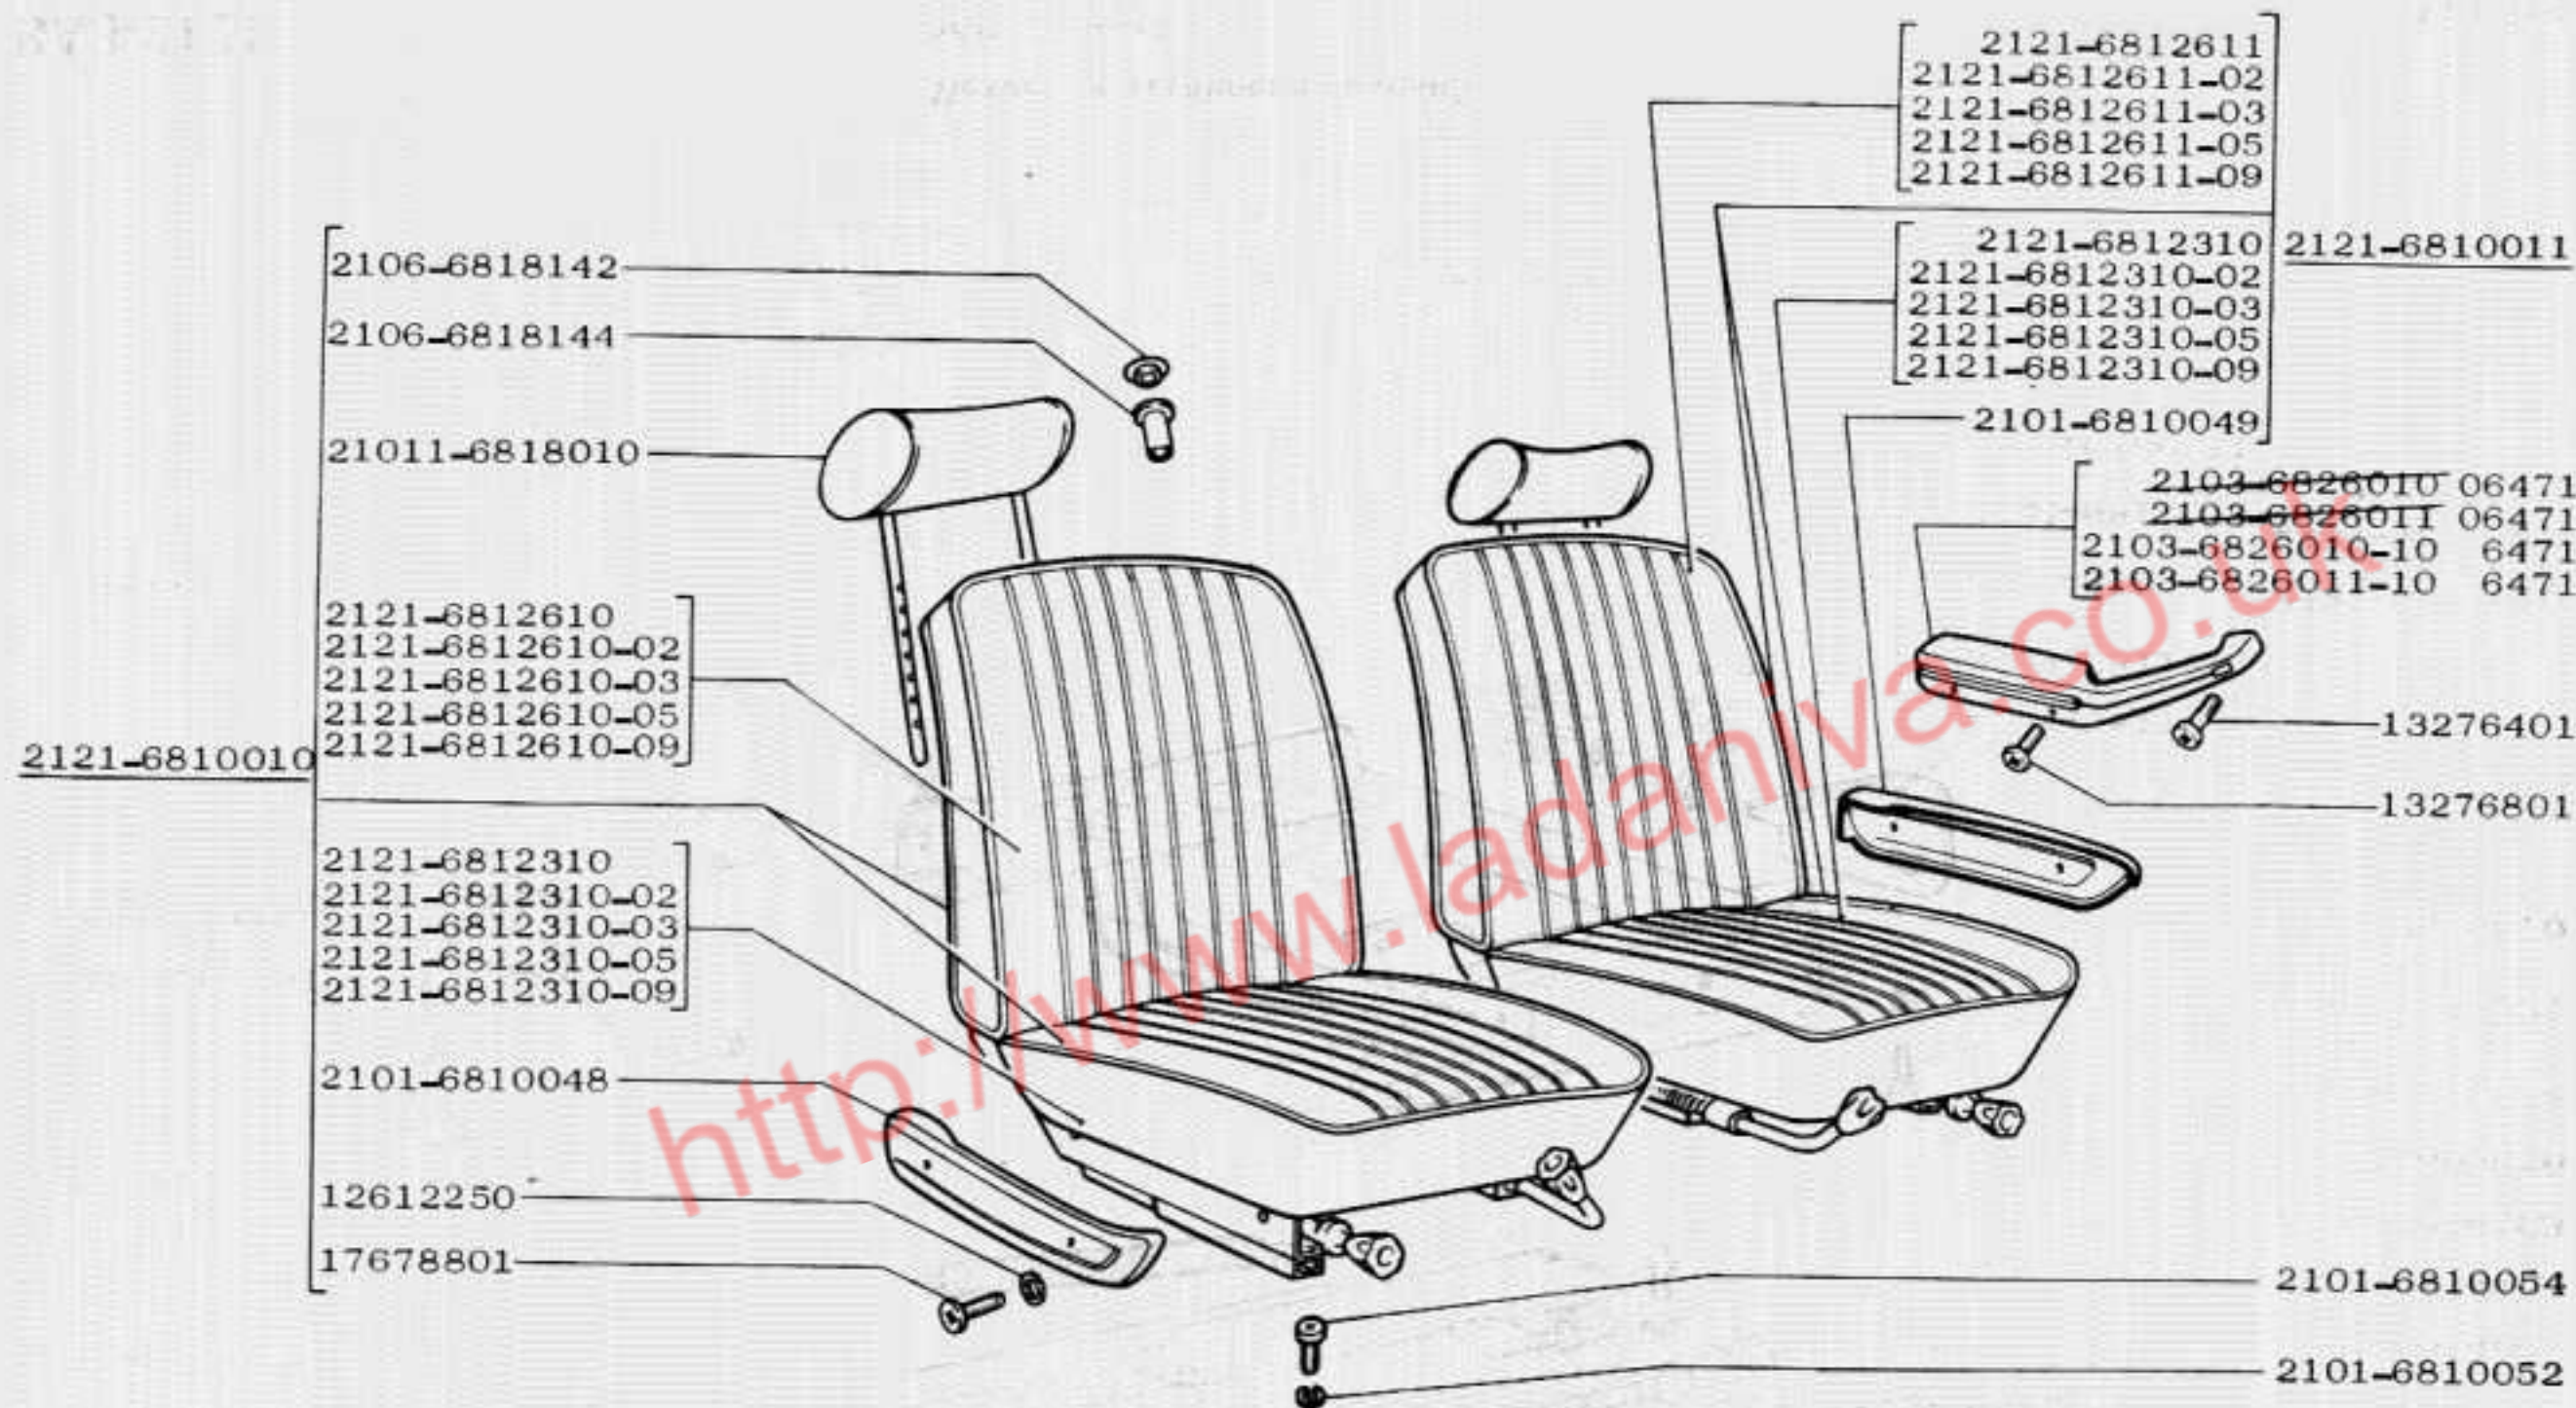

Сиденья передние
Front Seats
Sièges avant
Vordersitze
Asientos delanteros


M1.01

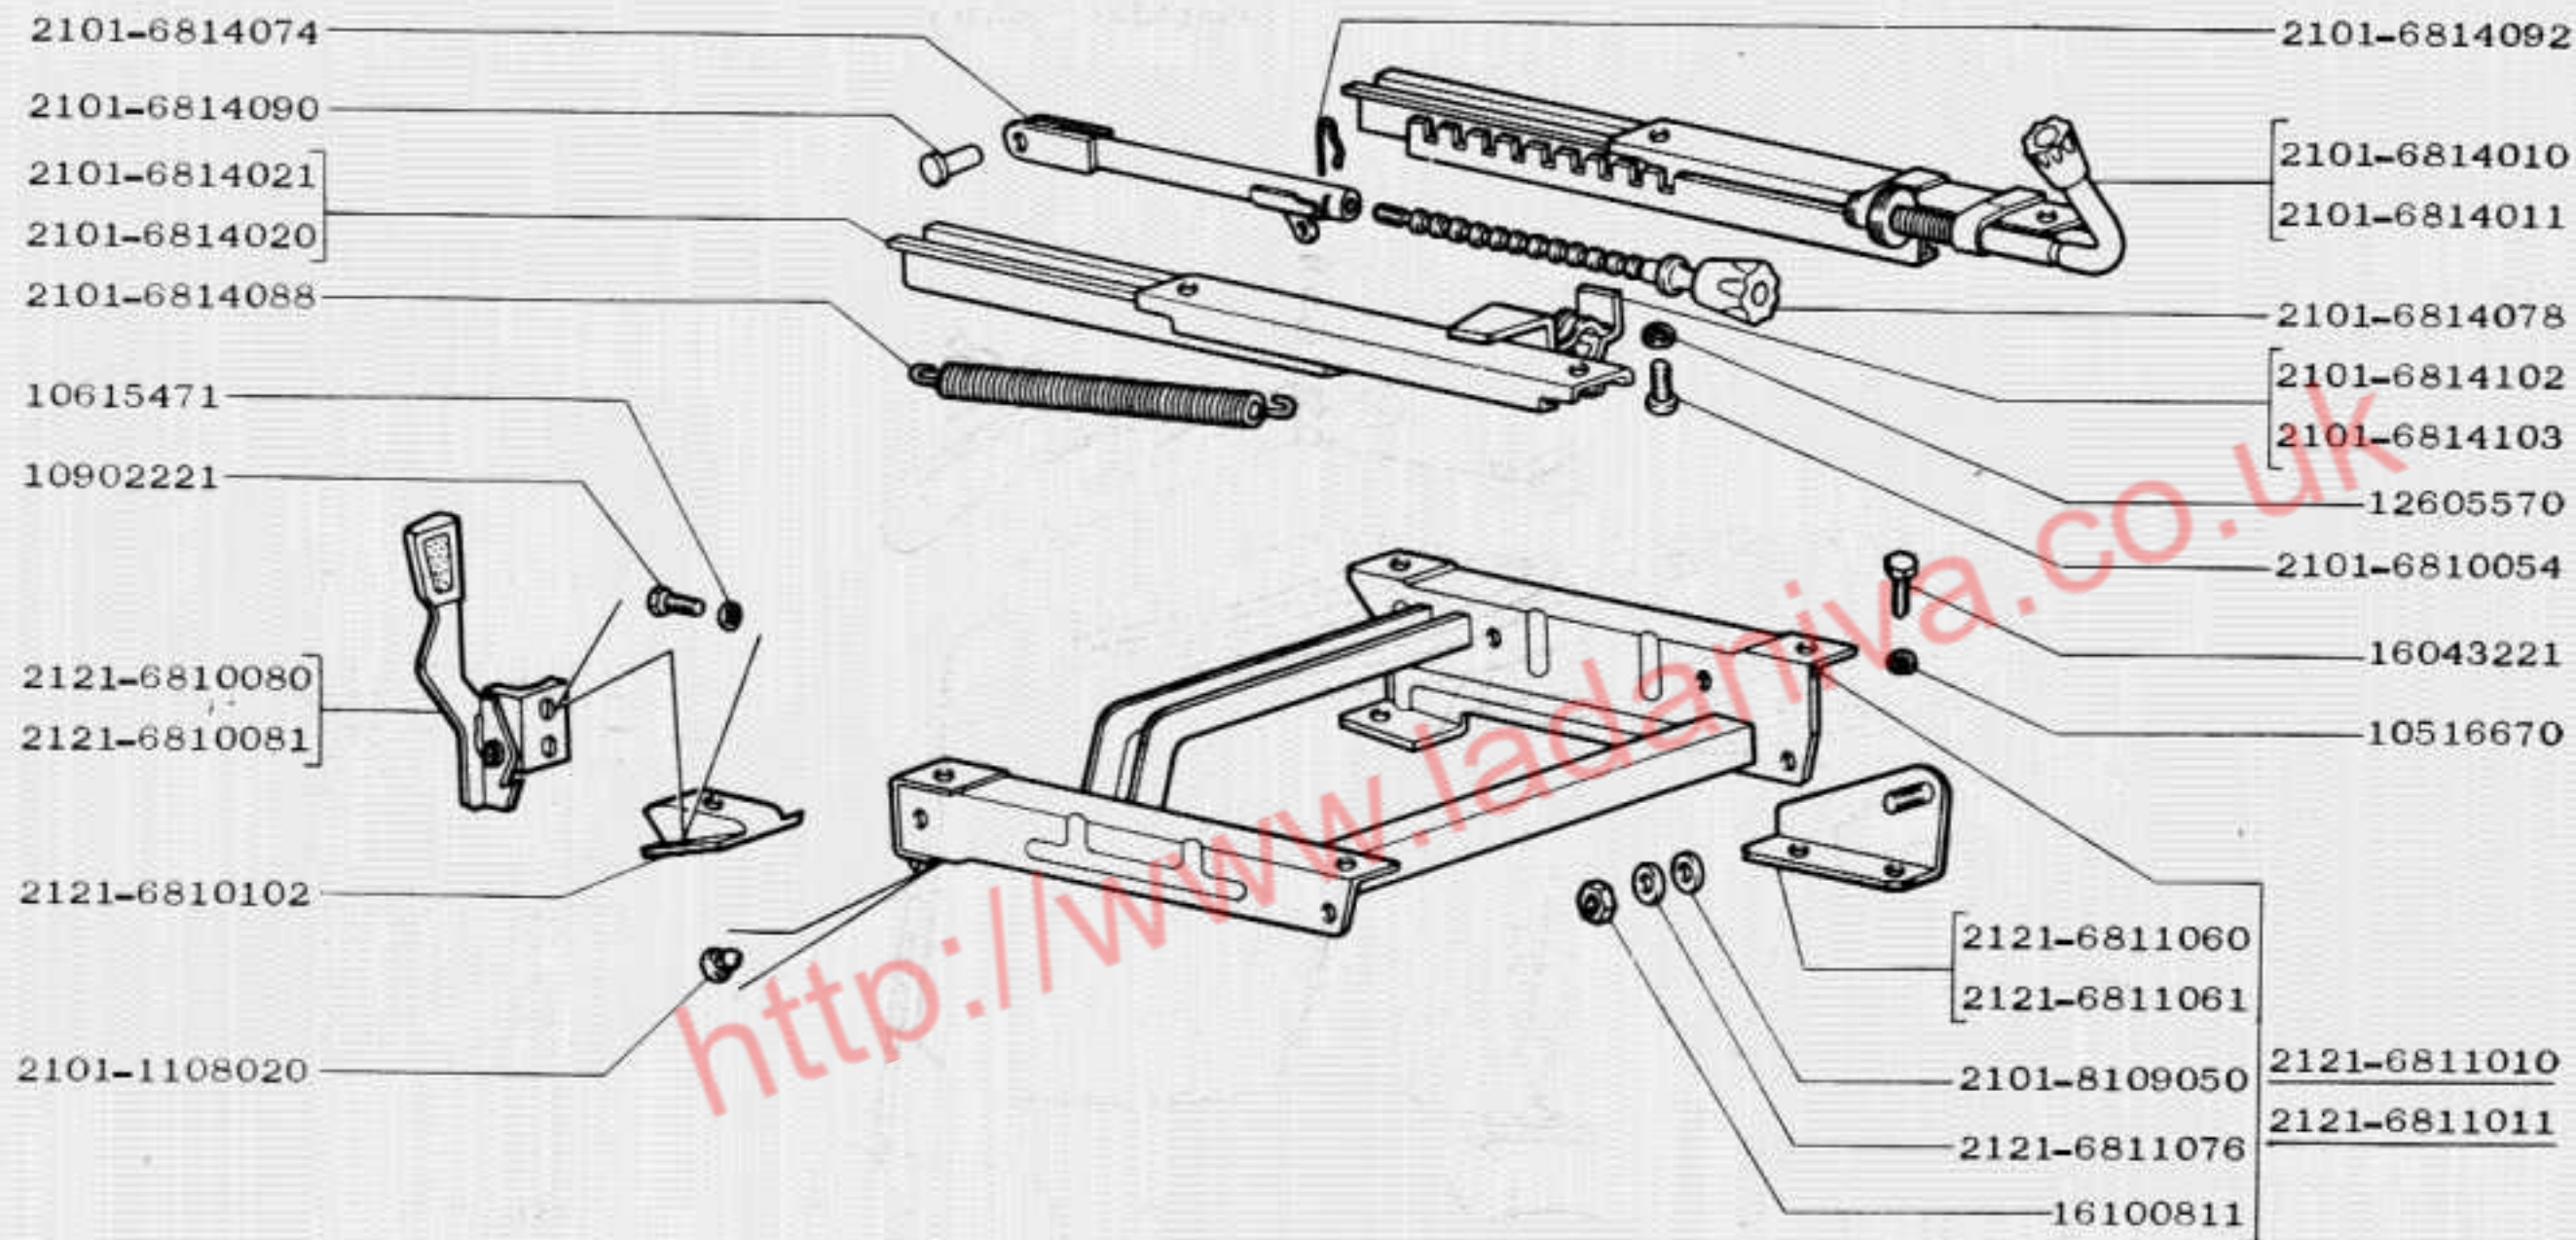

BA3-2121
BA3-21211

Механизм установки сидений
Seat Adjuster
Mécanisme de réglage des sièges
Sitzverstellung
Mecanismo de instalación de los asientos


M1.03

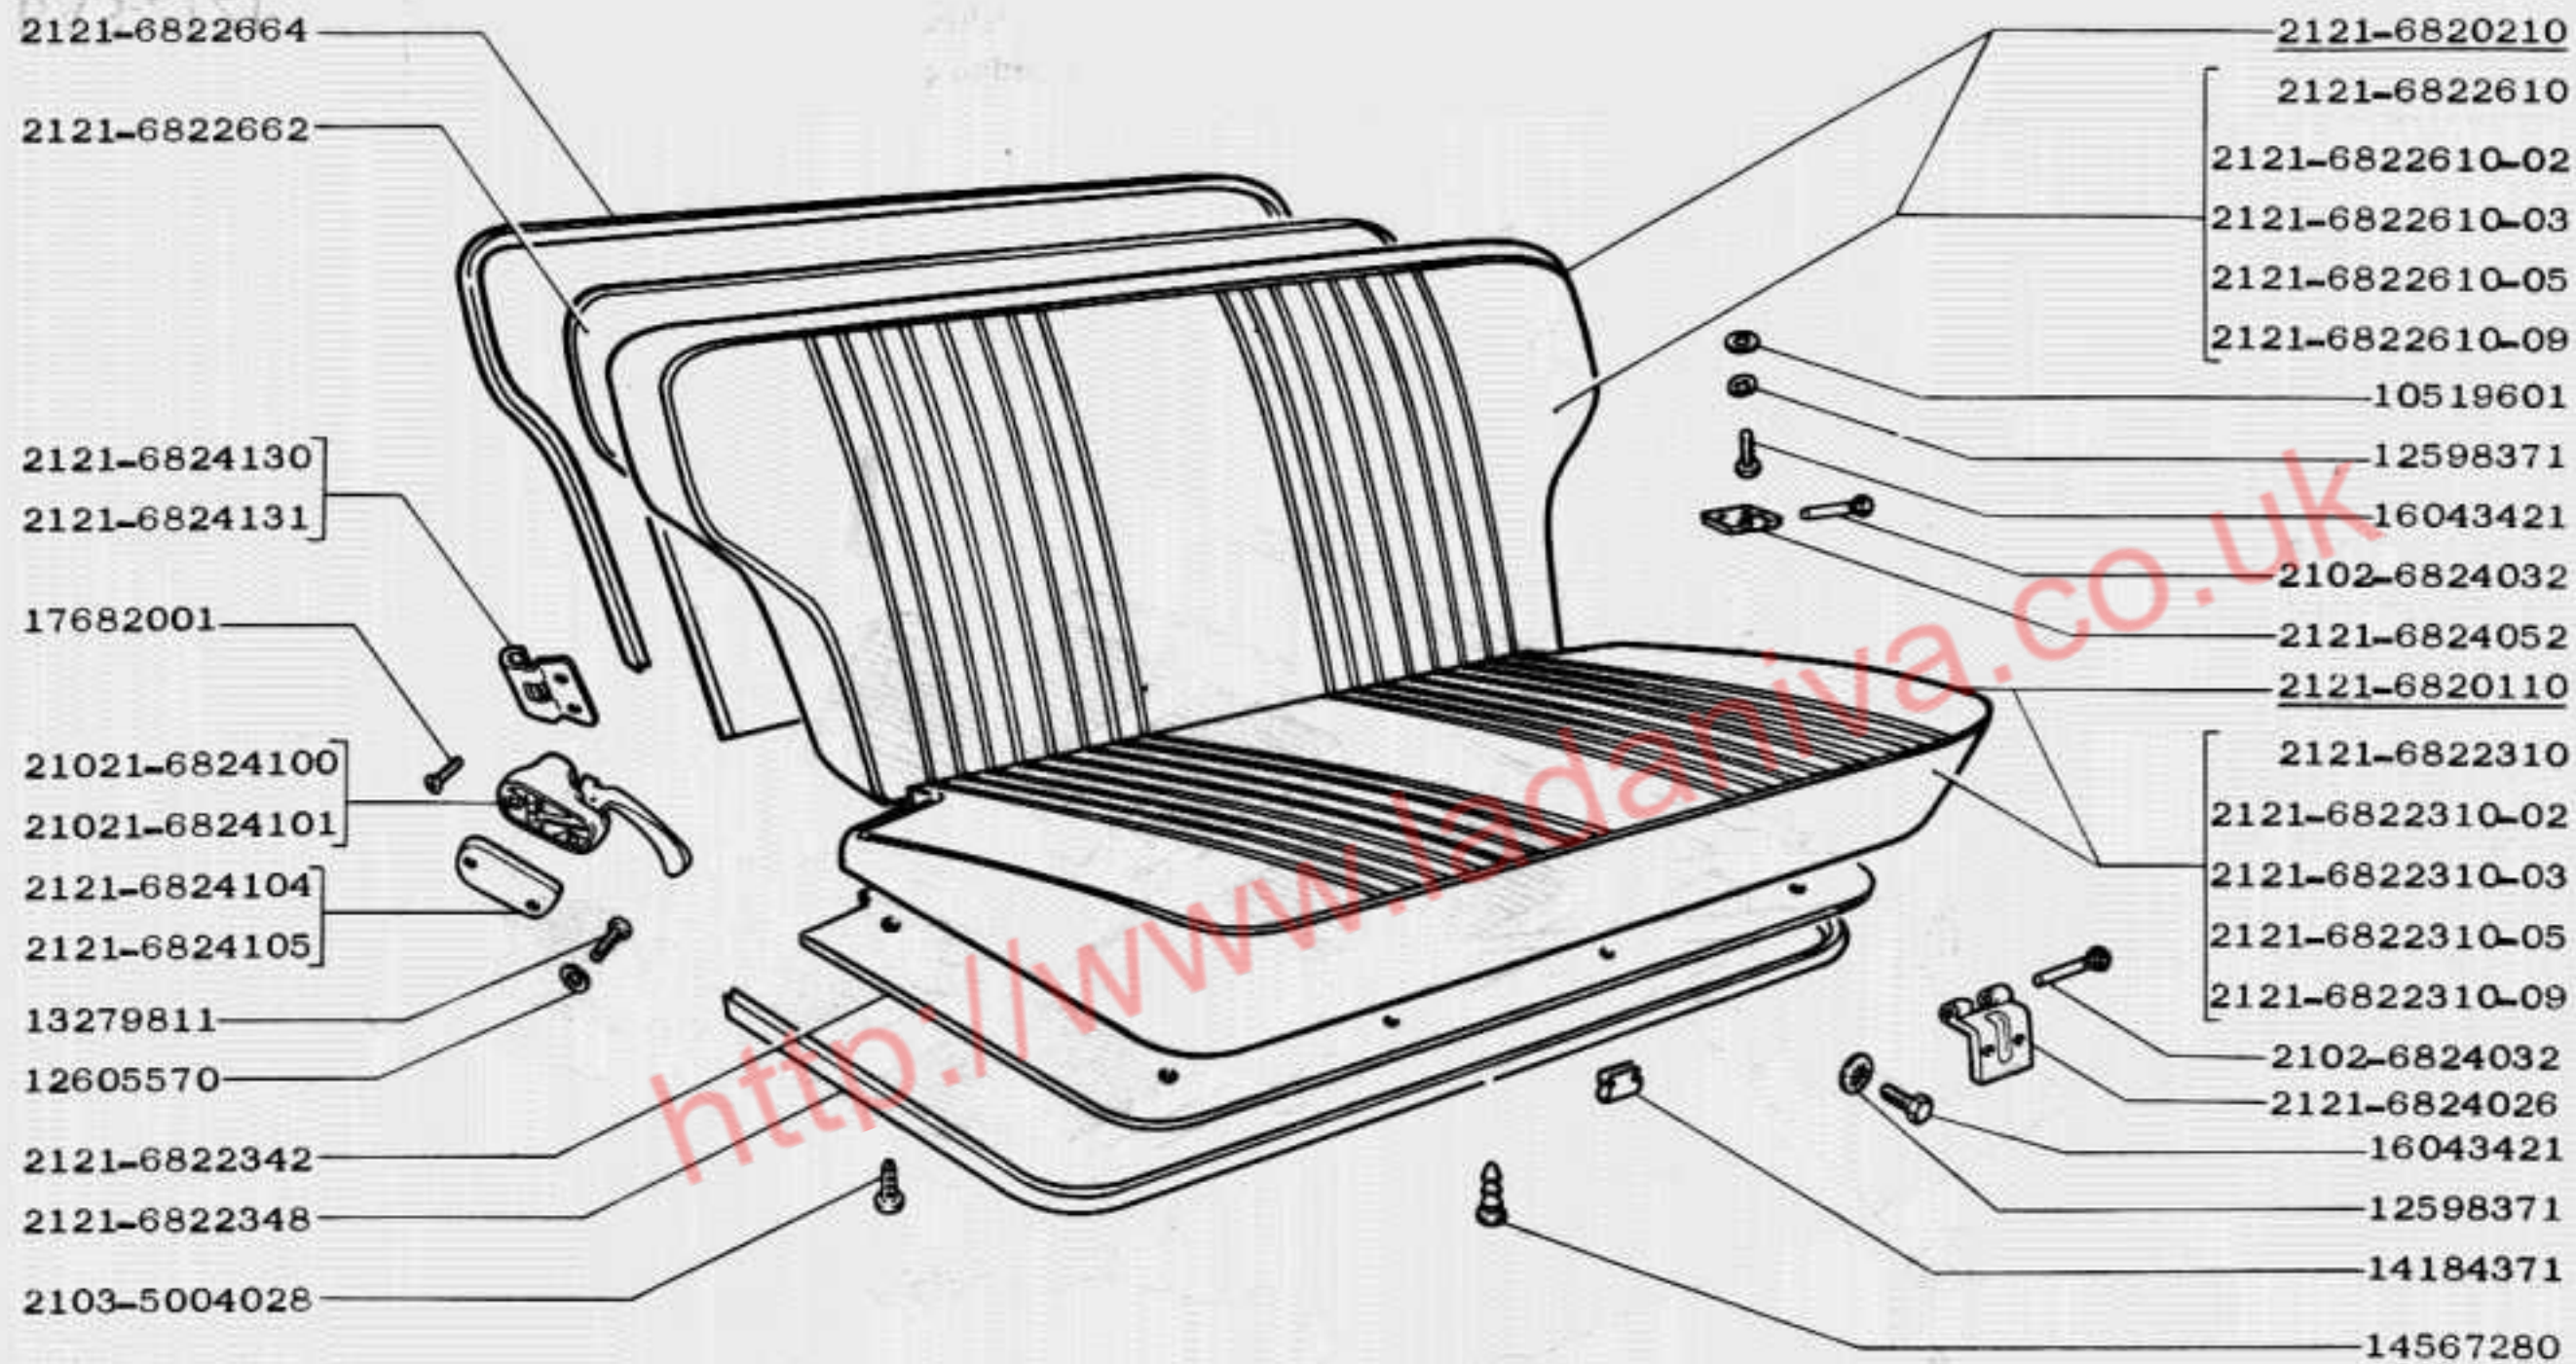

BA3-2121
BA3-21211

Сиденье заднее
Rear Seat
Banquette arrière
Hintersitz
Asiento trasero


M1.04

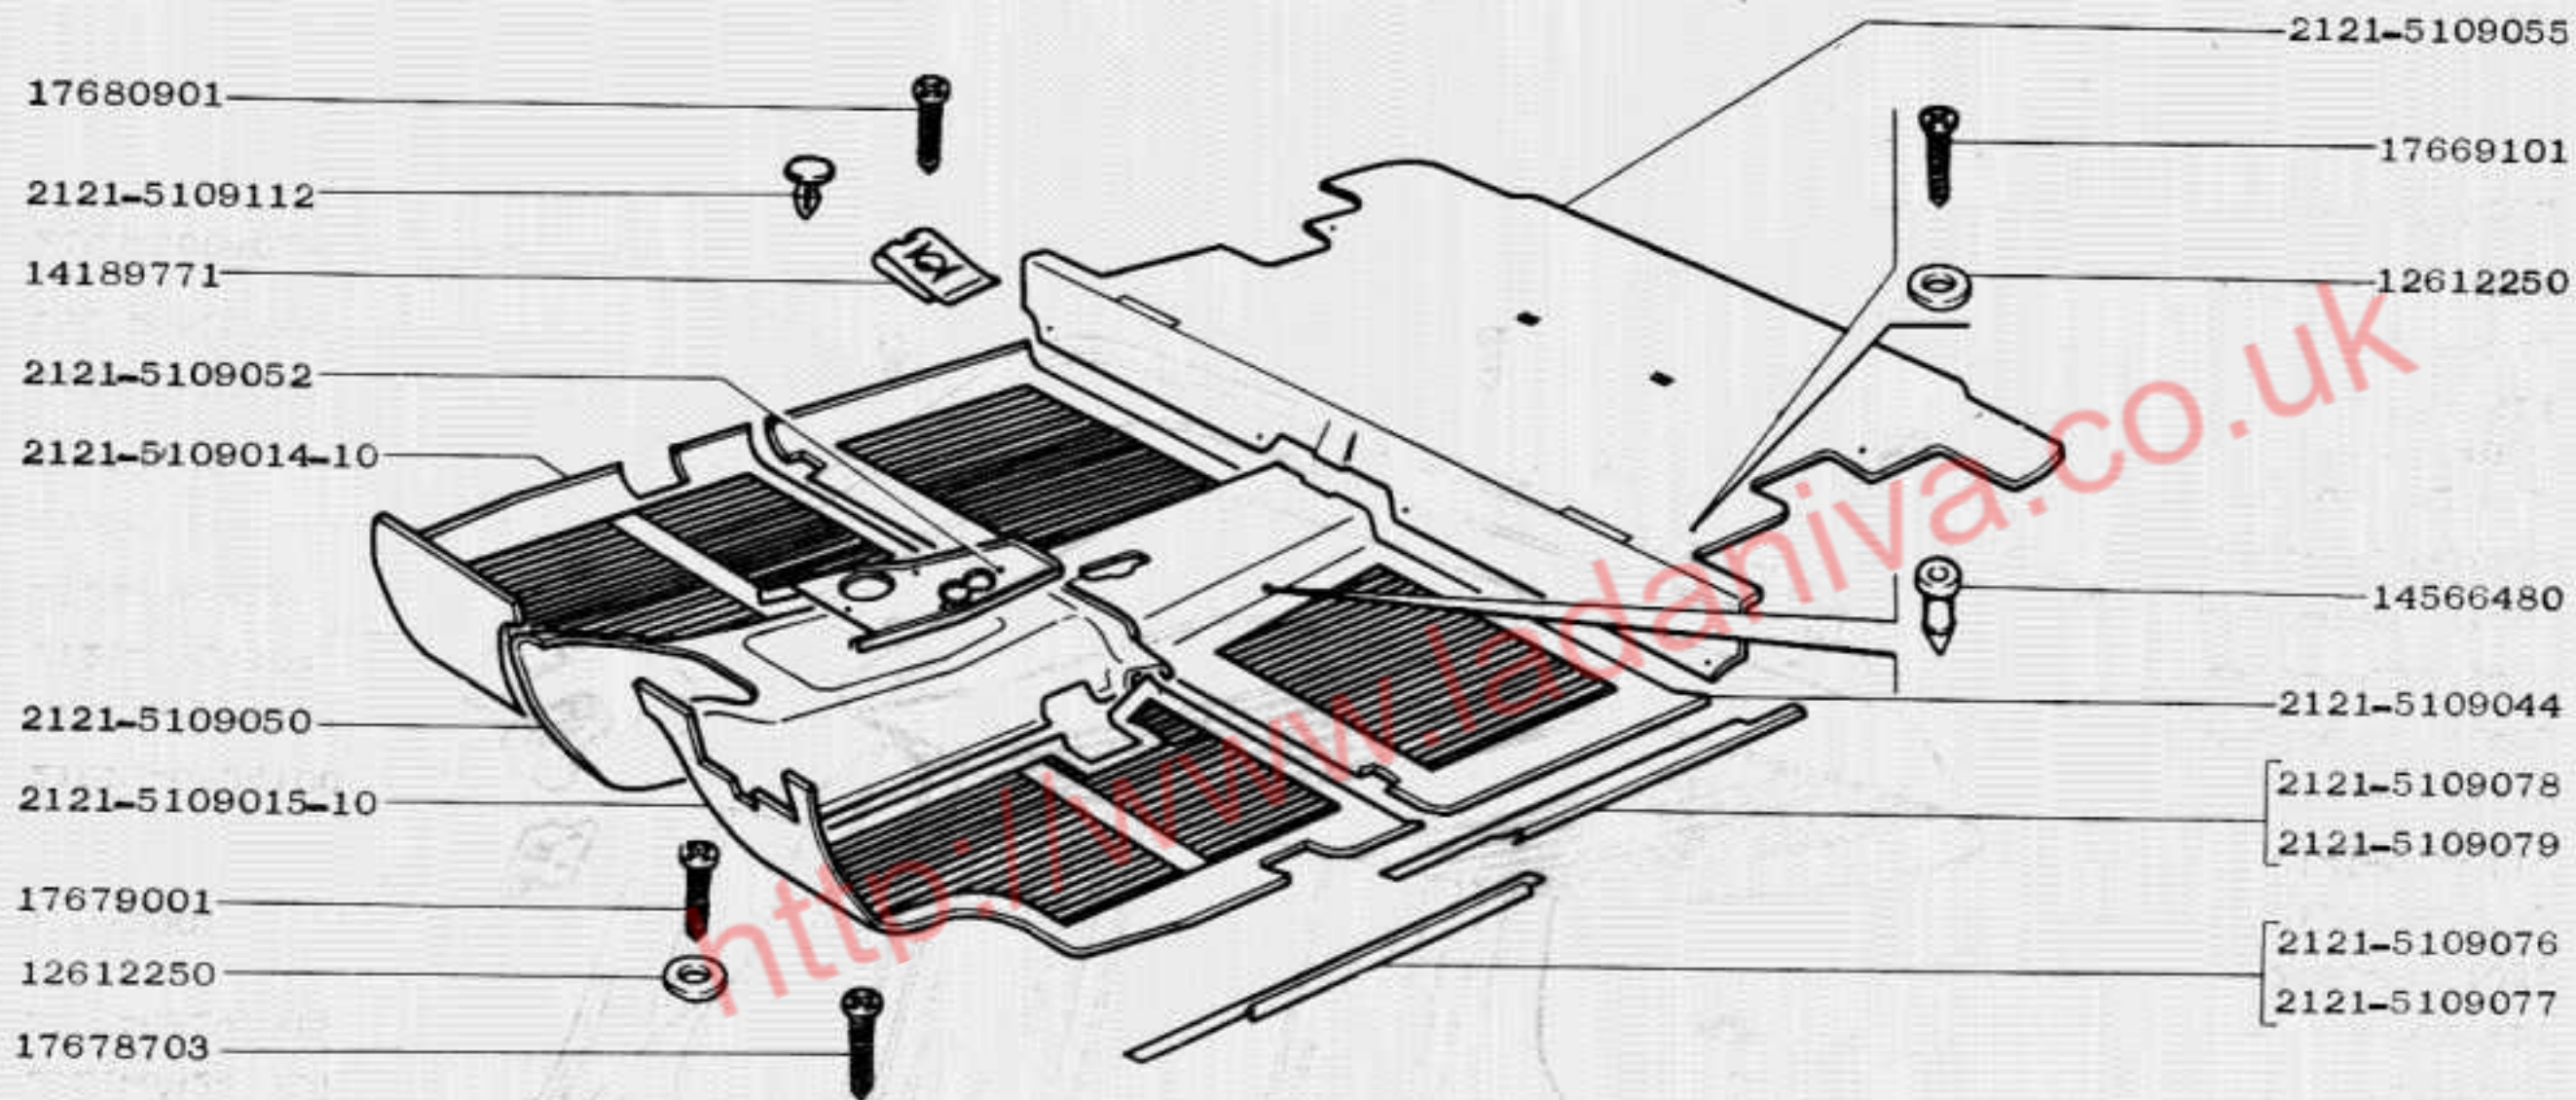

BA3-2121
BA3-21211

Коврики
 Mats
 Tapis
 Matten
 Alfombrillas


M1.06

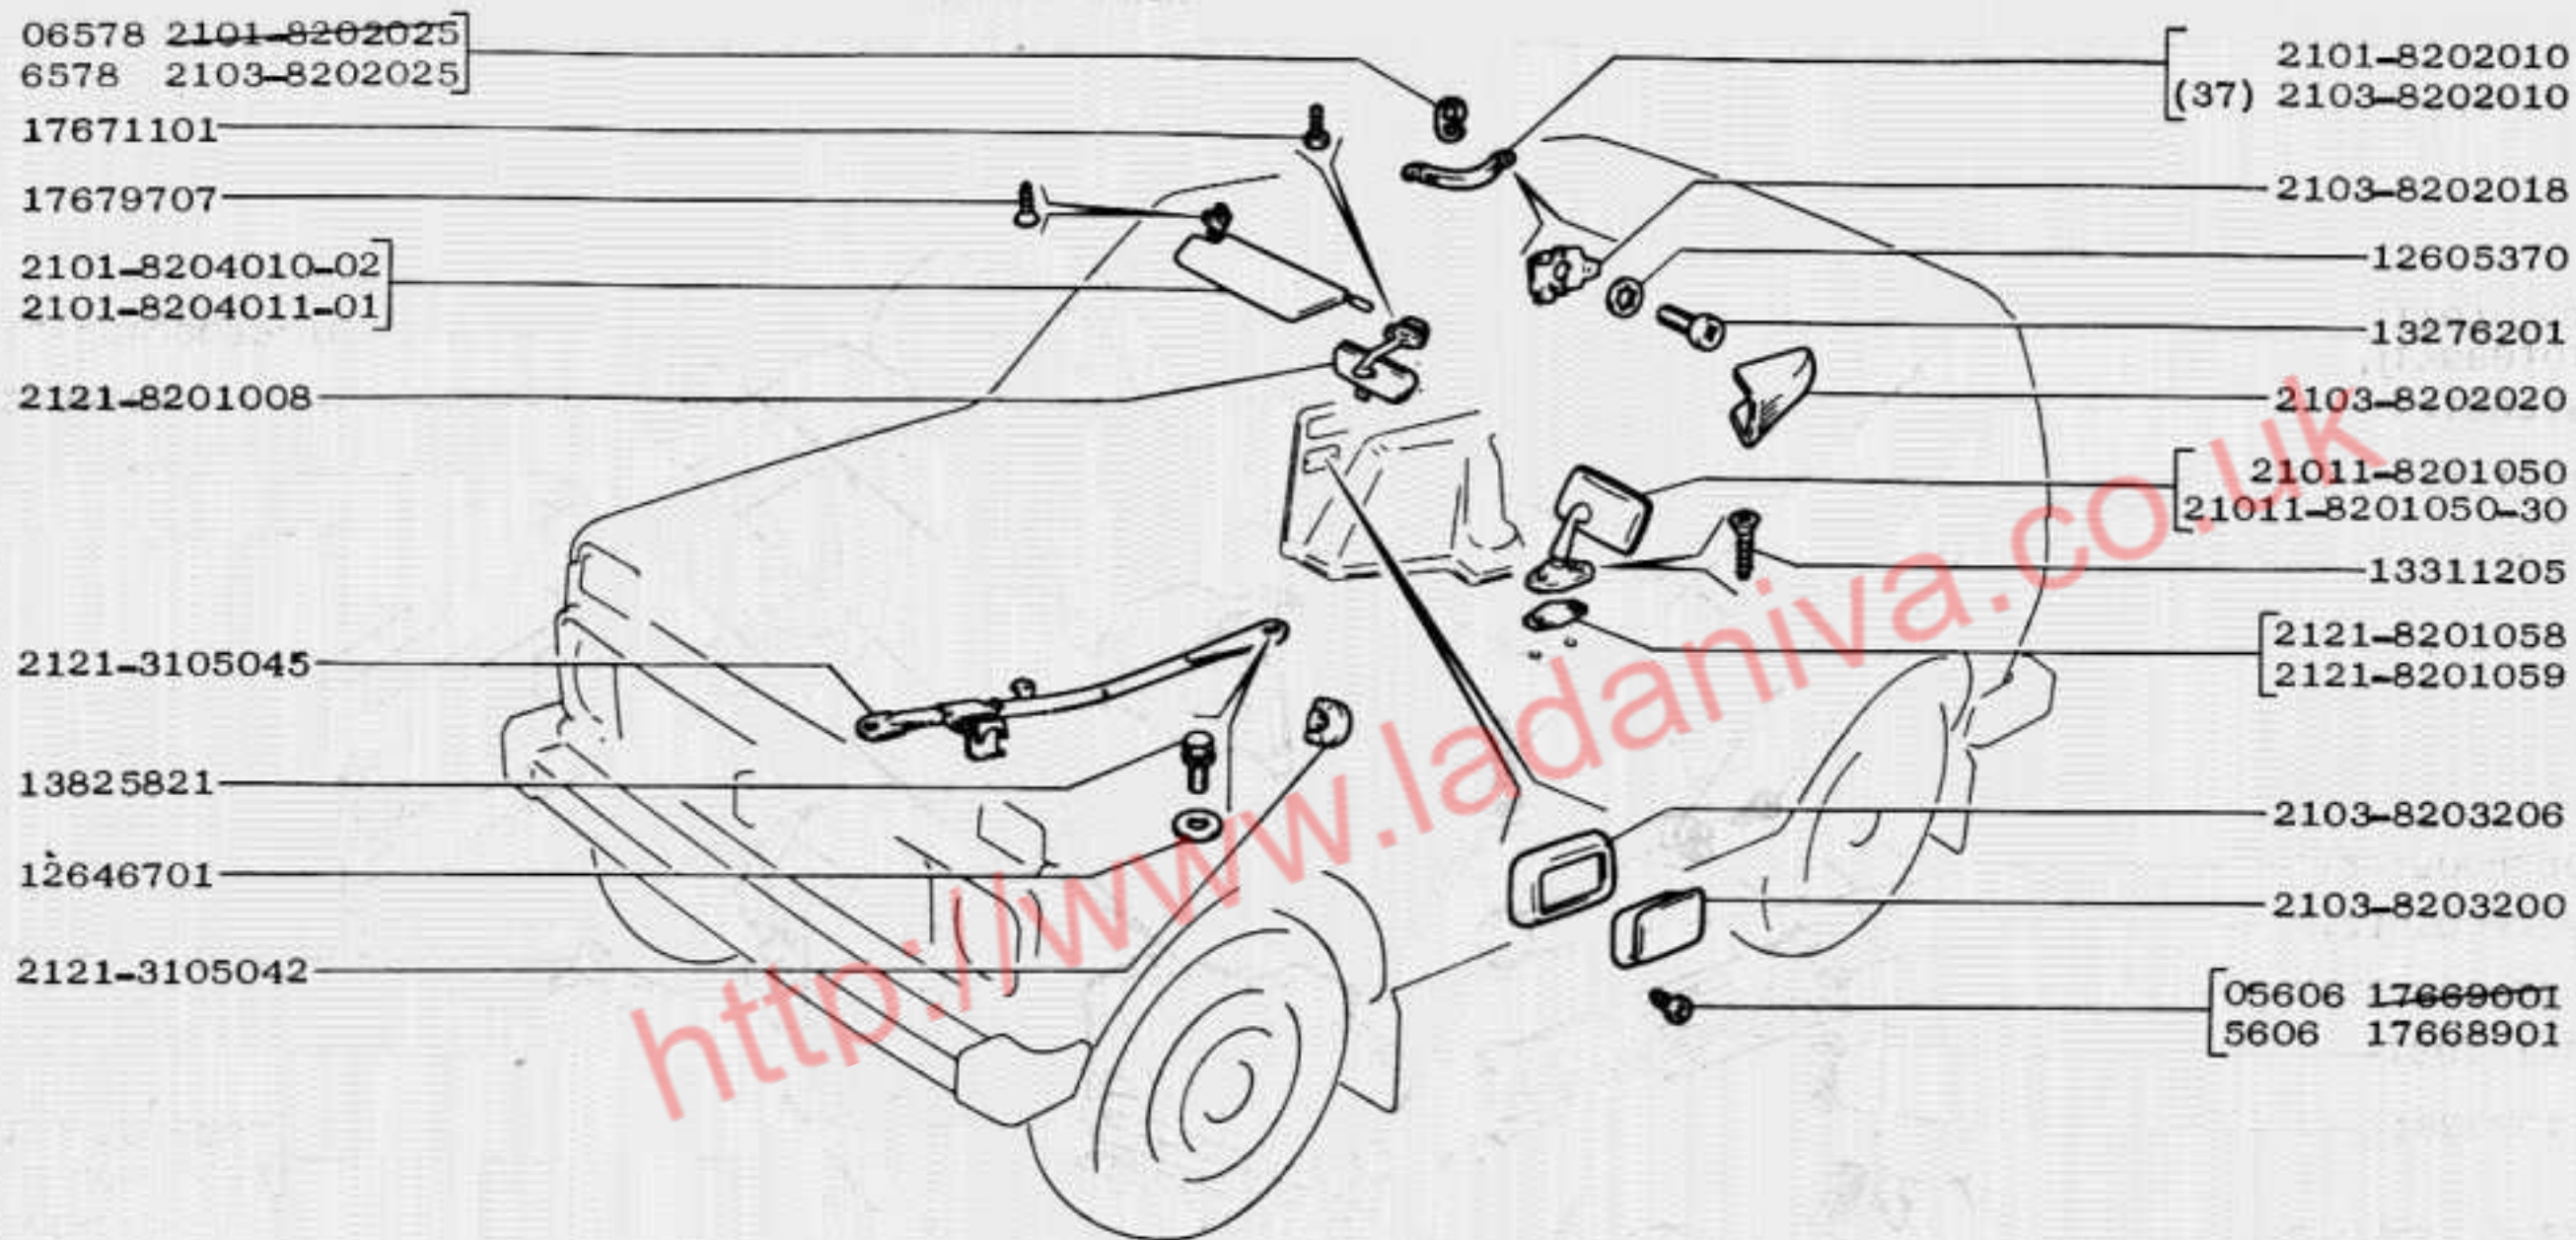

BA3-2121
BA3-21211

Принадлежности салона
Body Appointments
Accessoires de l'habitacle
Innenraumausrüstung
Accesorios del salón


M1.07

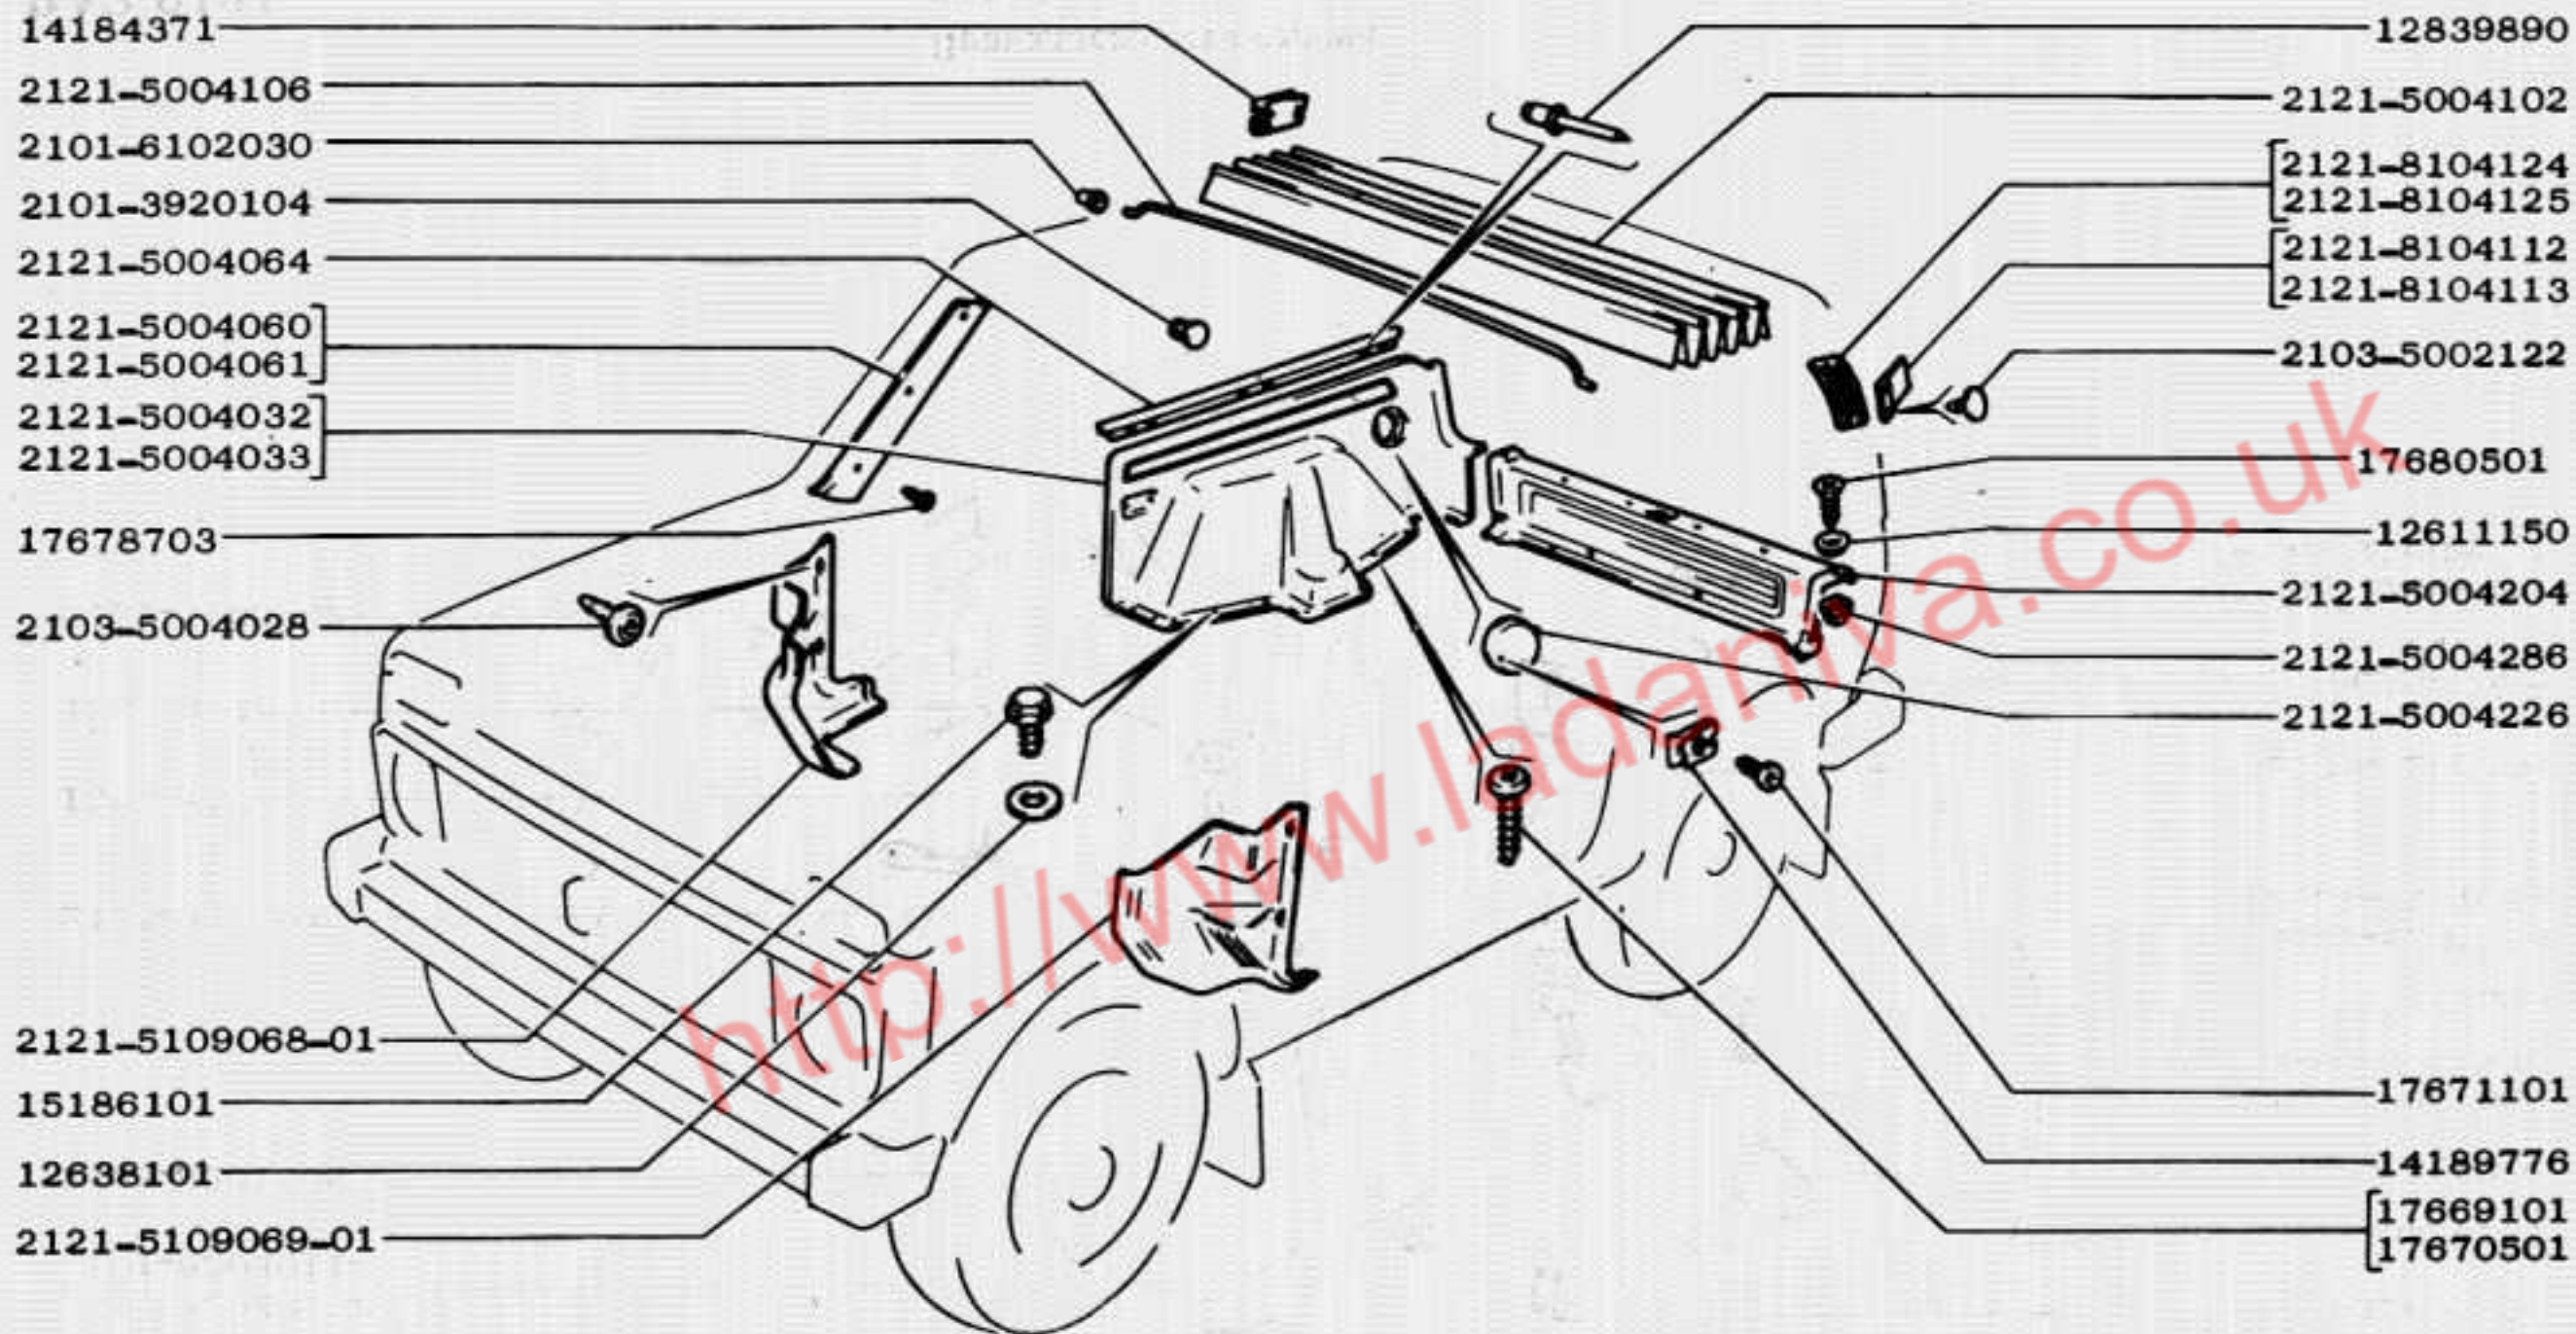

BA3-2121
BA3-21211

Обивка салона
Upholstery
Garnissage de l'habitacle
Innenraumverkleidung
Tapizado del salón


M1.08

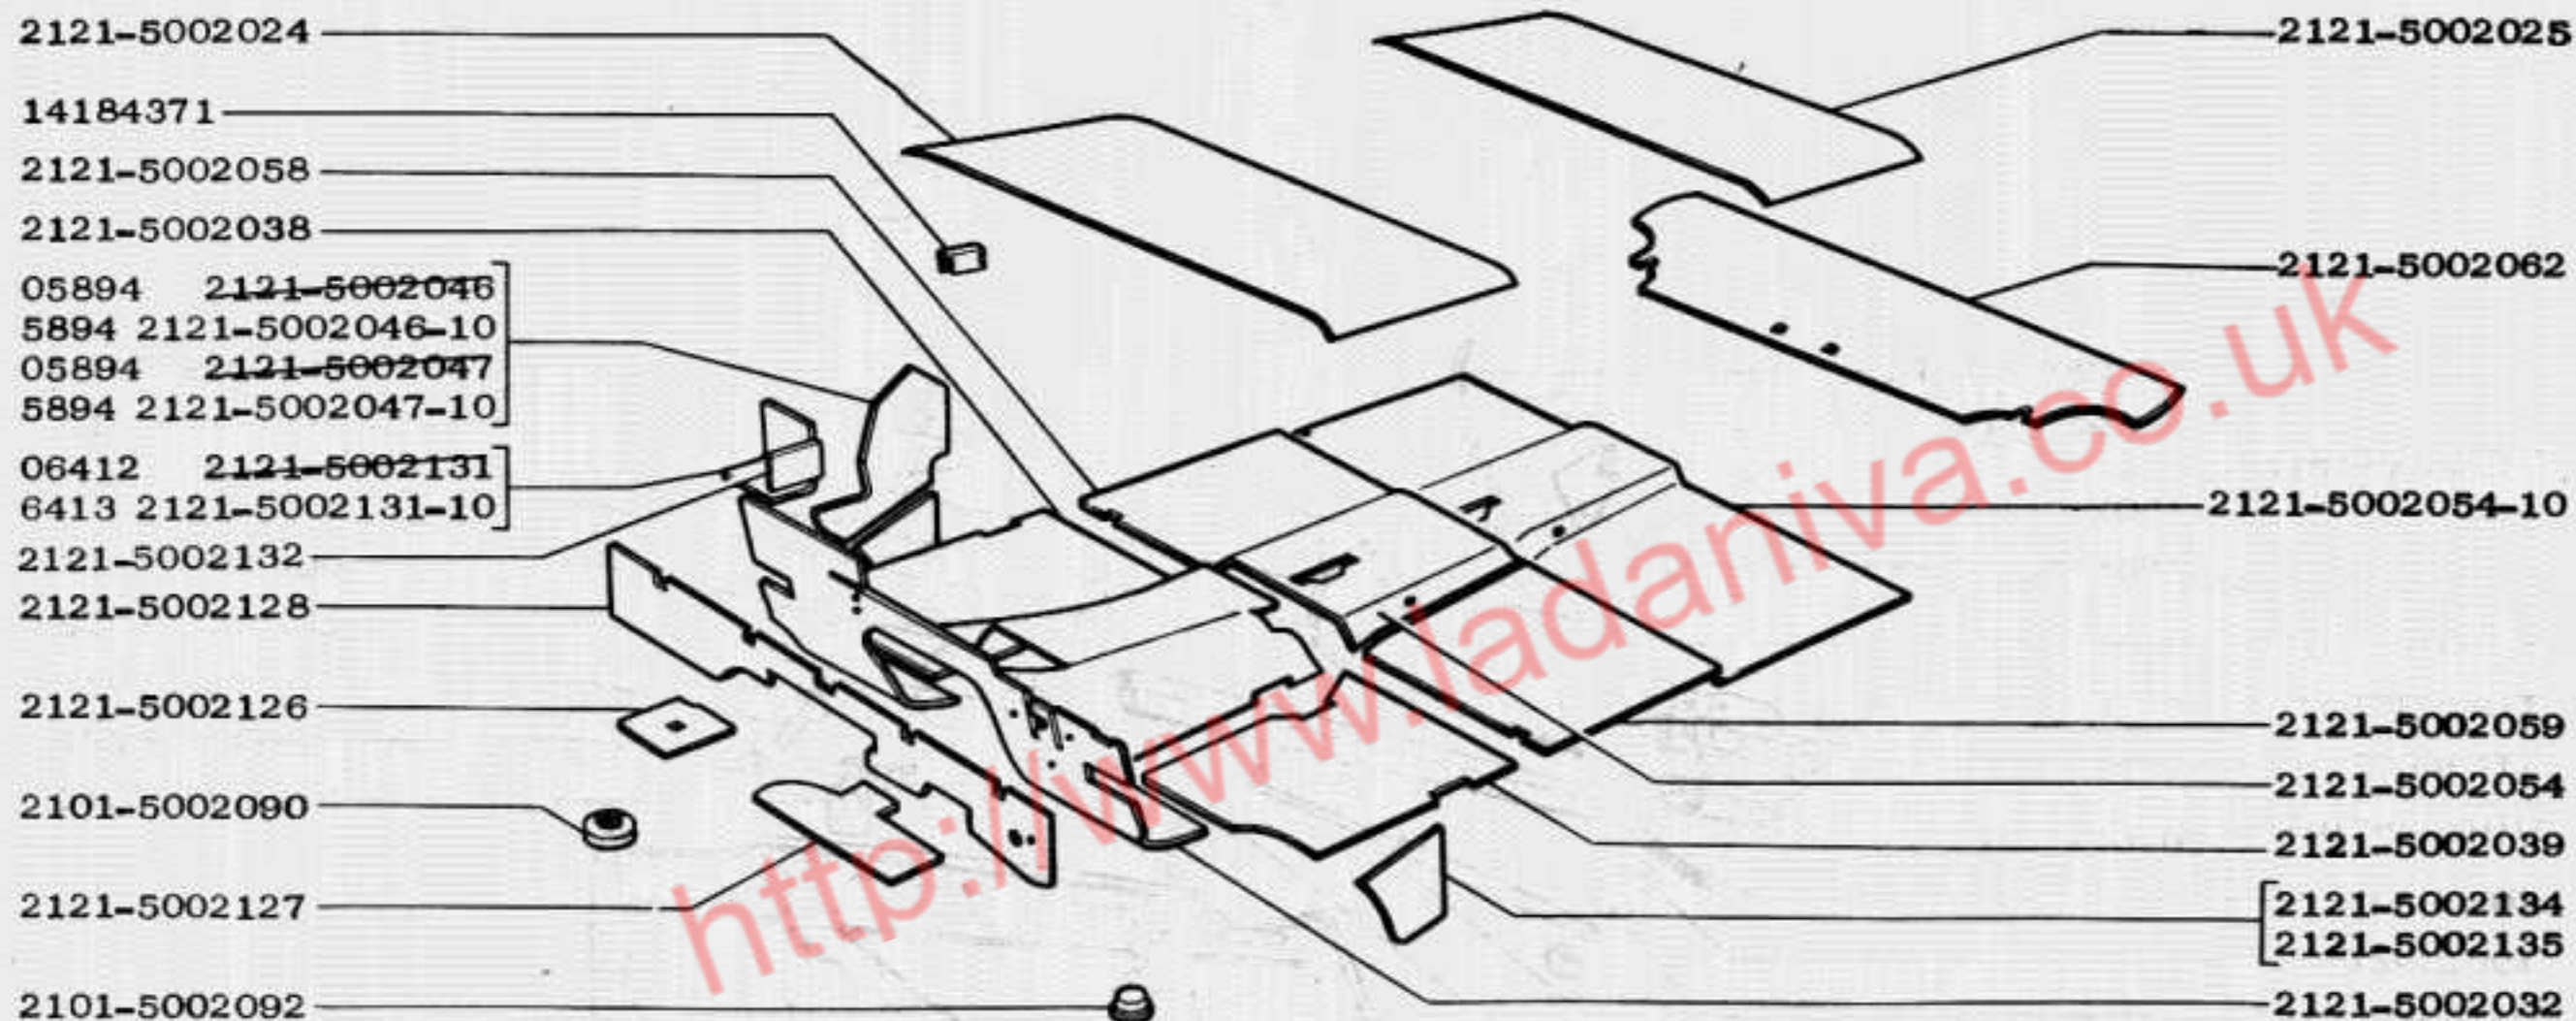

BA3-2121
BA3-21211

Термошумоизоляция
Sound and Noise Insulation
Isolation thermique et phonique
Wärme- und Geräuschisolation
Aislamiento térmico y contrarruido

M1.10

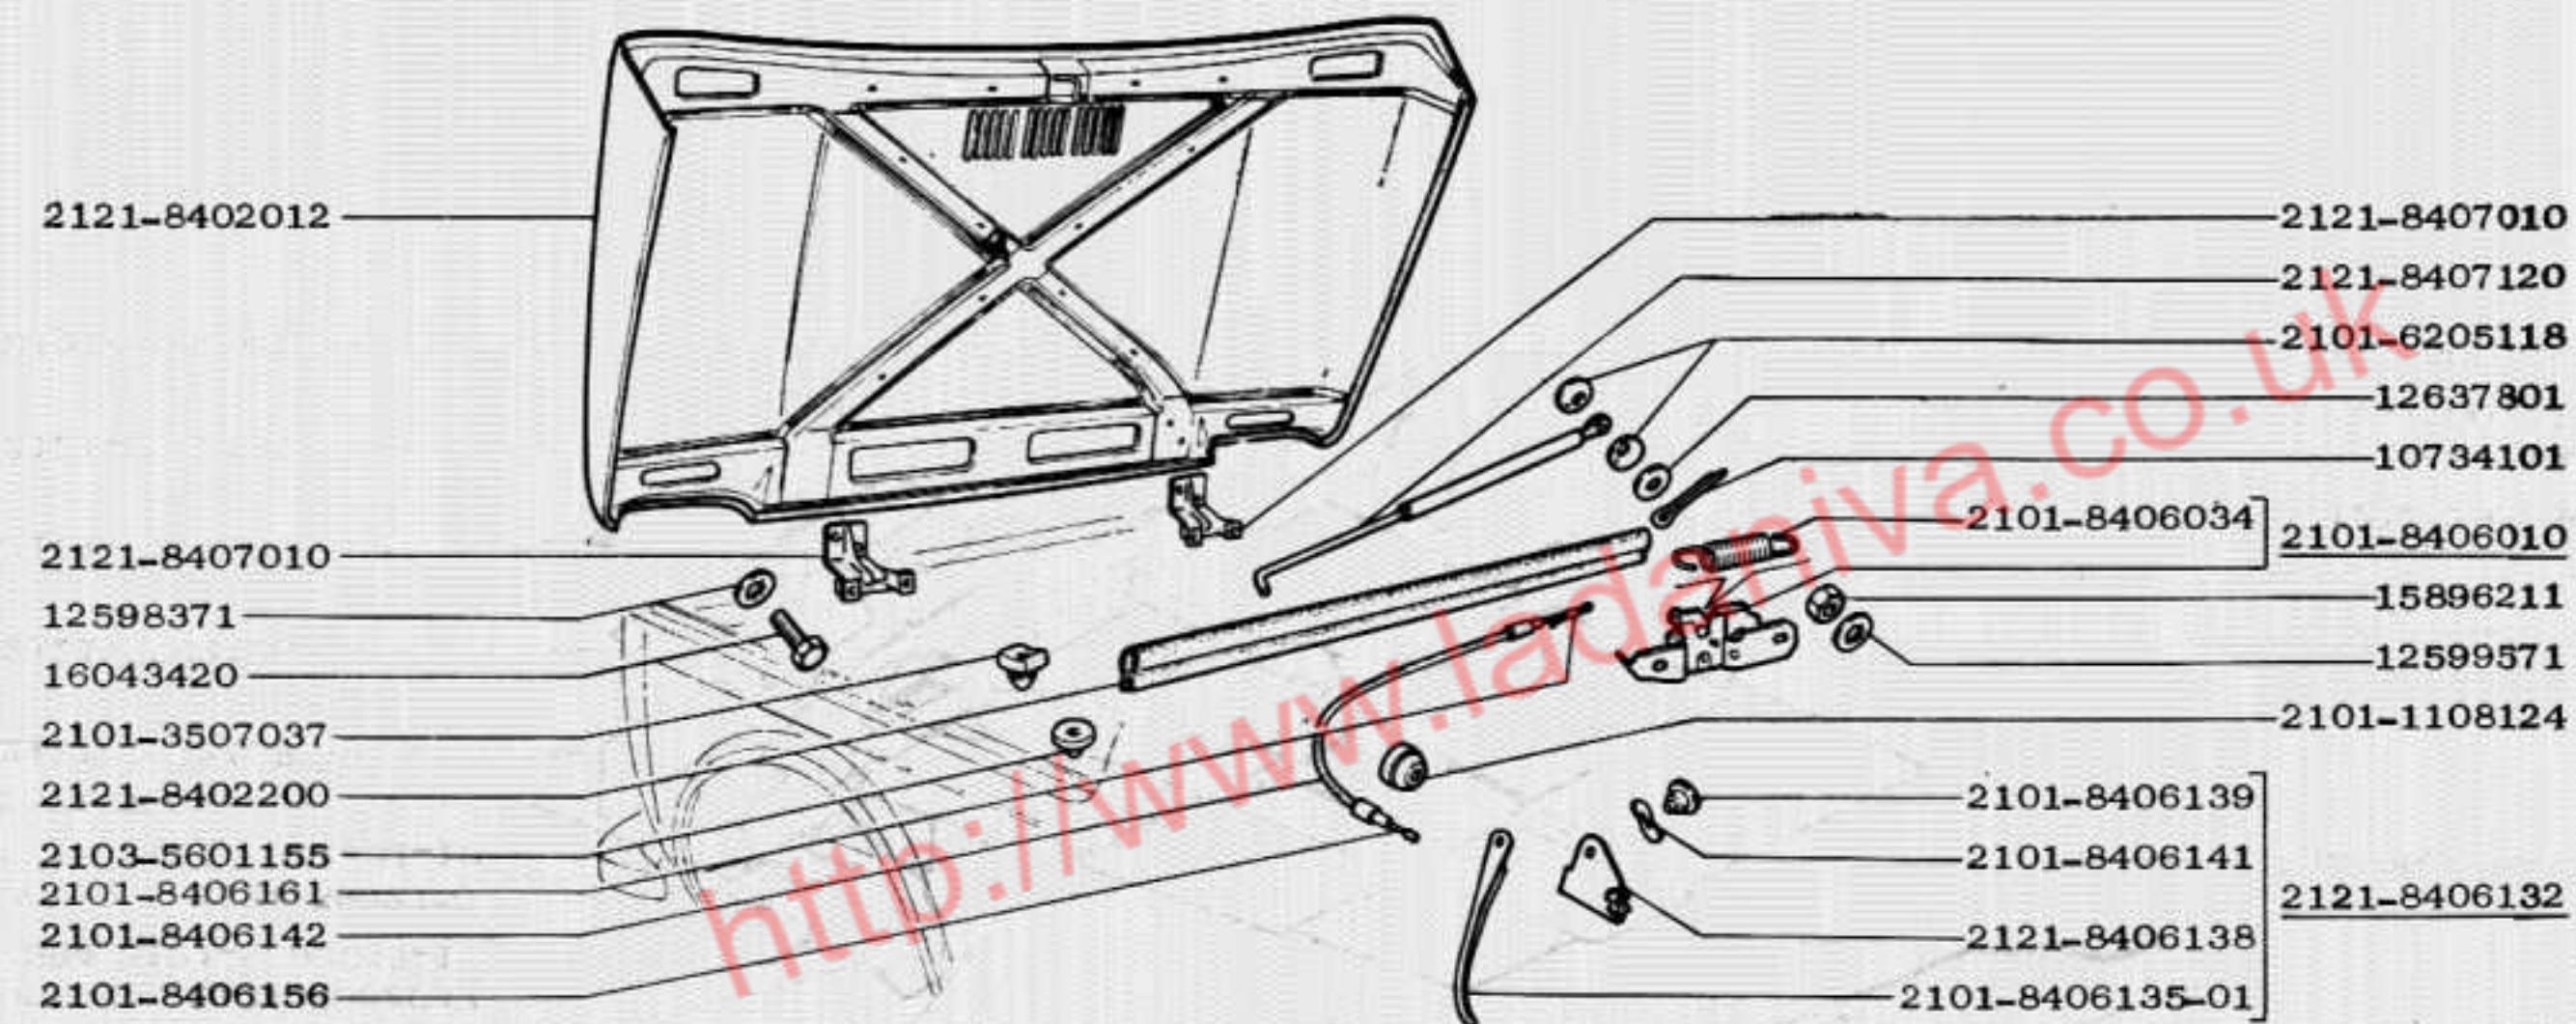


BA3-2121
BA3-21211

Kanor
Hood
Capot
Motorhaube
Capó

M2.01


2106-8102132 5123
~~2103-8102132 05123~~
 2106-8102134 5123
~~2101-8102134 05123~~
 13832101
 2103-3709680
 2121-5325010
 14195076
 2121-5325062
 2121-5325062-10. (37)
 17669101
 12598071
 2103-5325128
 2121-5325120
 2121-8203010
 13272111
 12598071
 2121-5325210
 2103-5325220
 2103-5325232

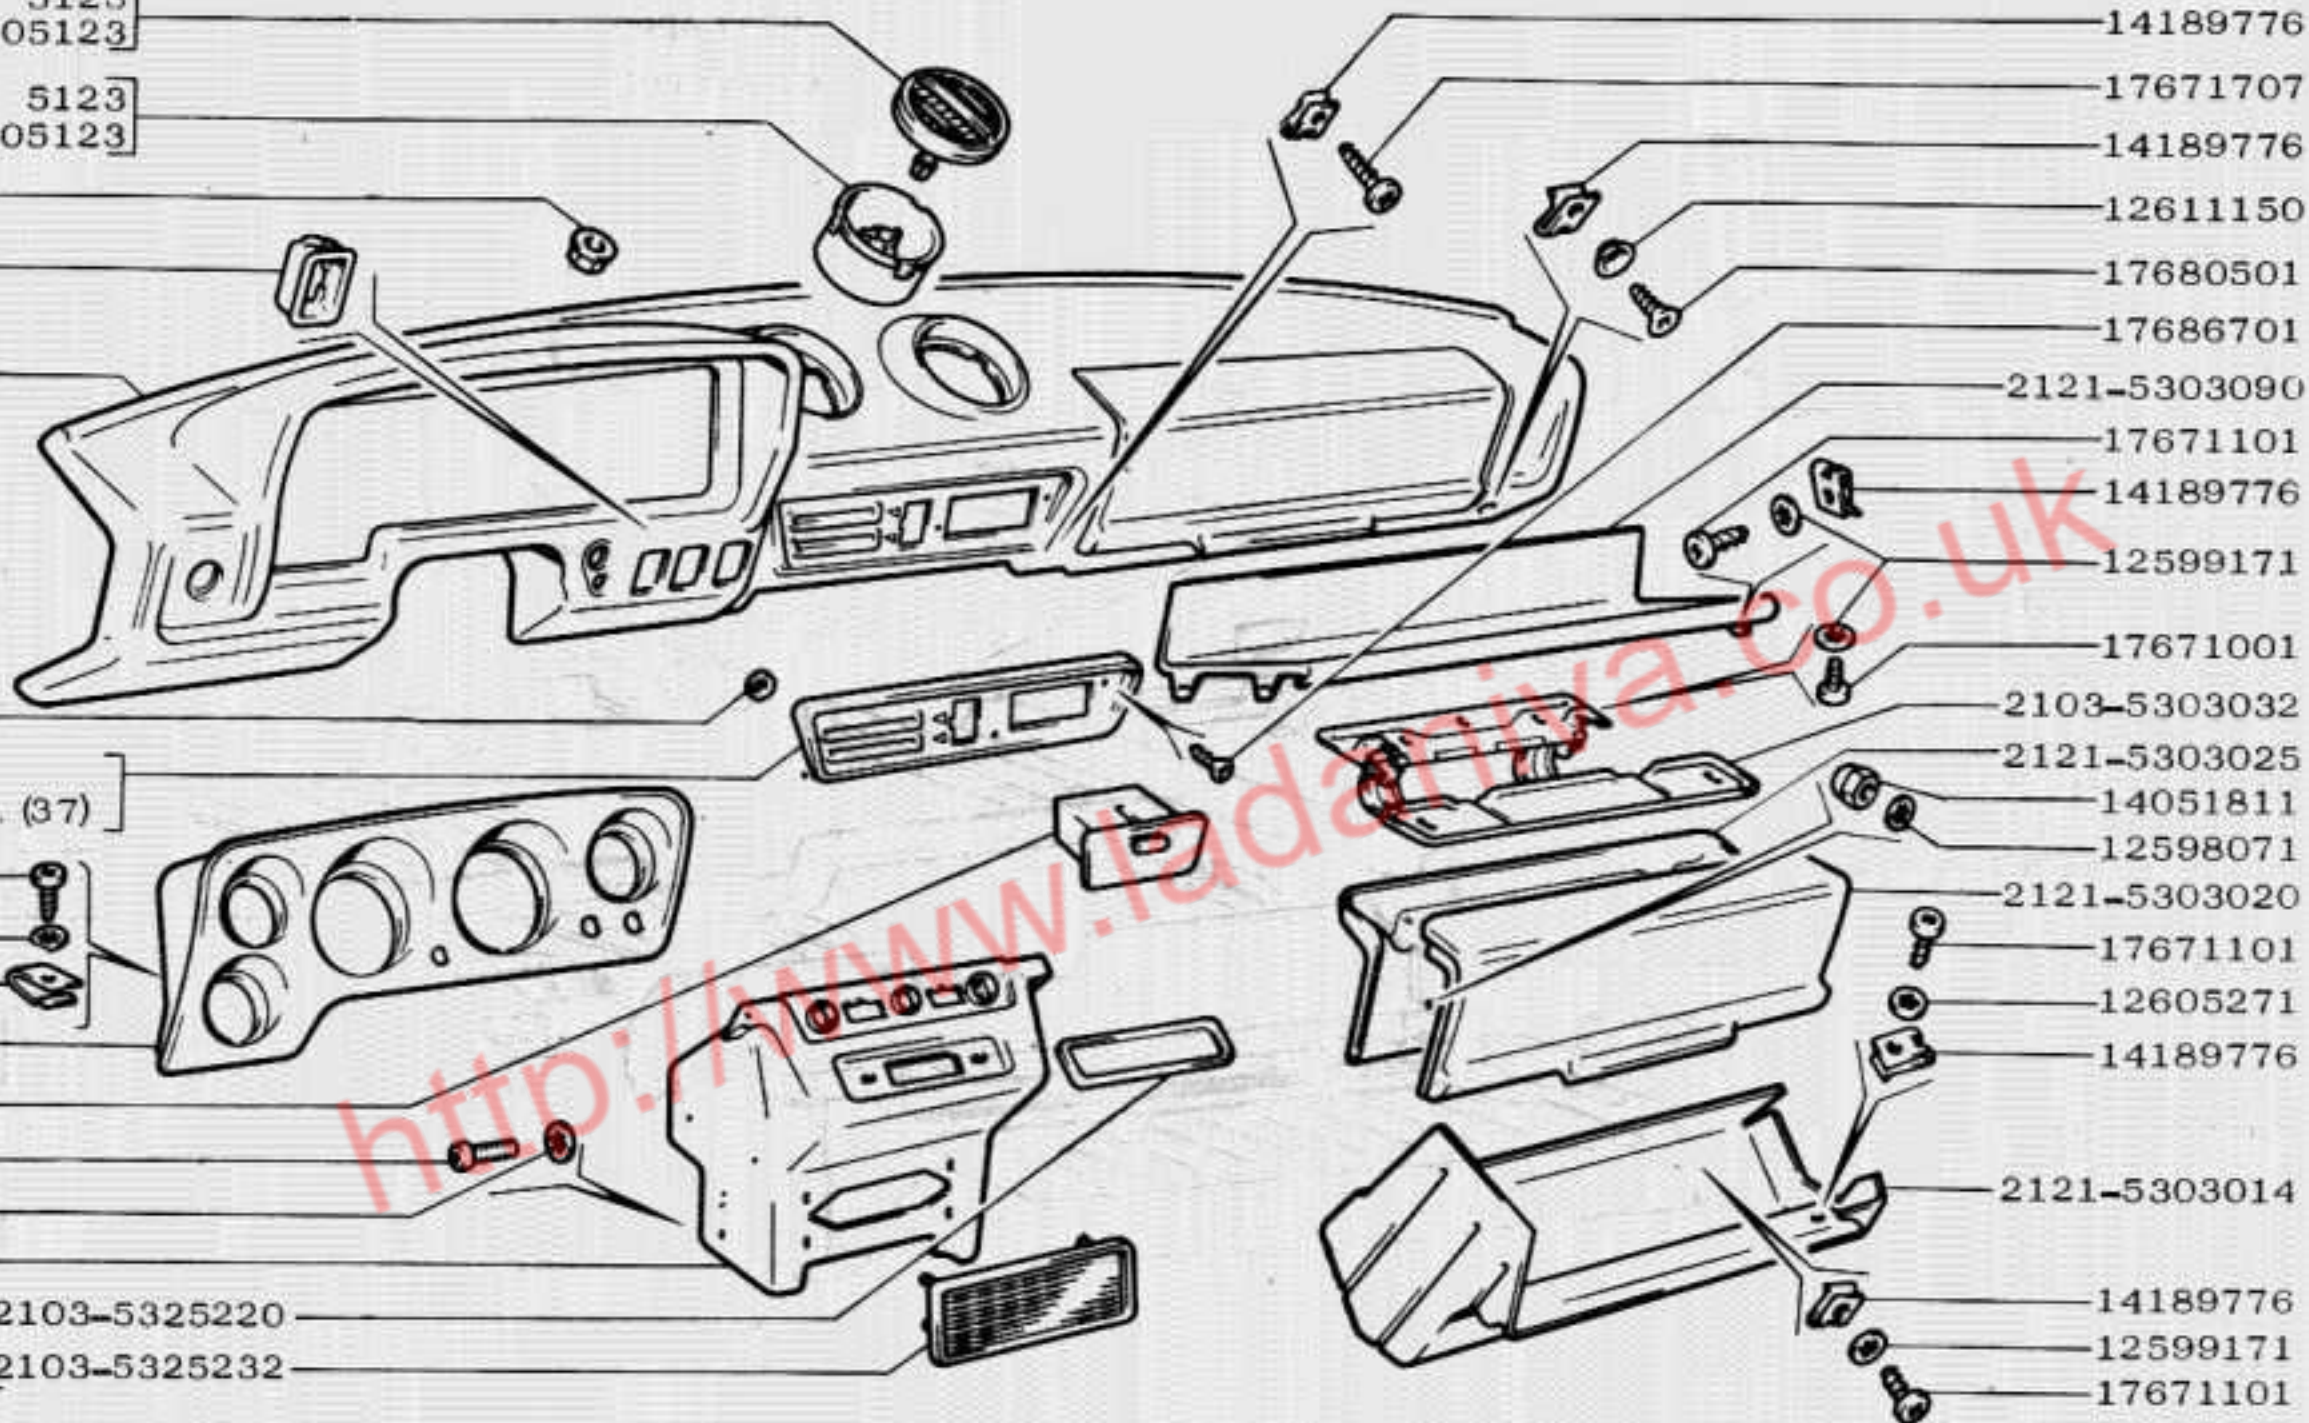

BA3-2121
 BA3-21211

Панель приборов
 Instrument Panel
 Planche de bord
 Armaturenbrett
 Tablero de los instrumentos


M2.02

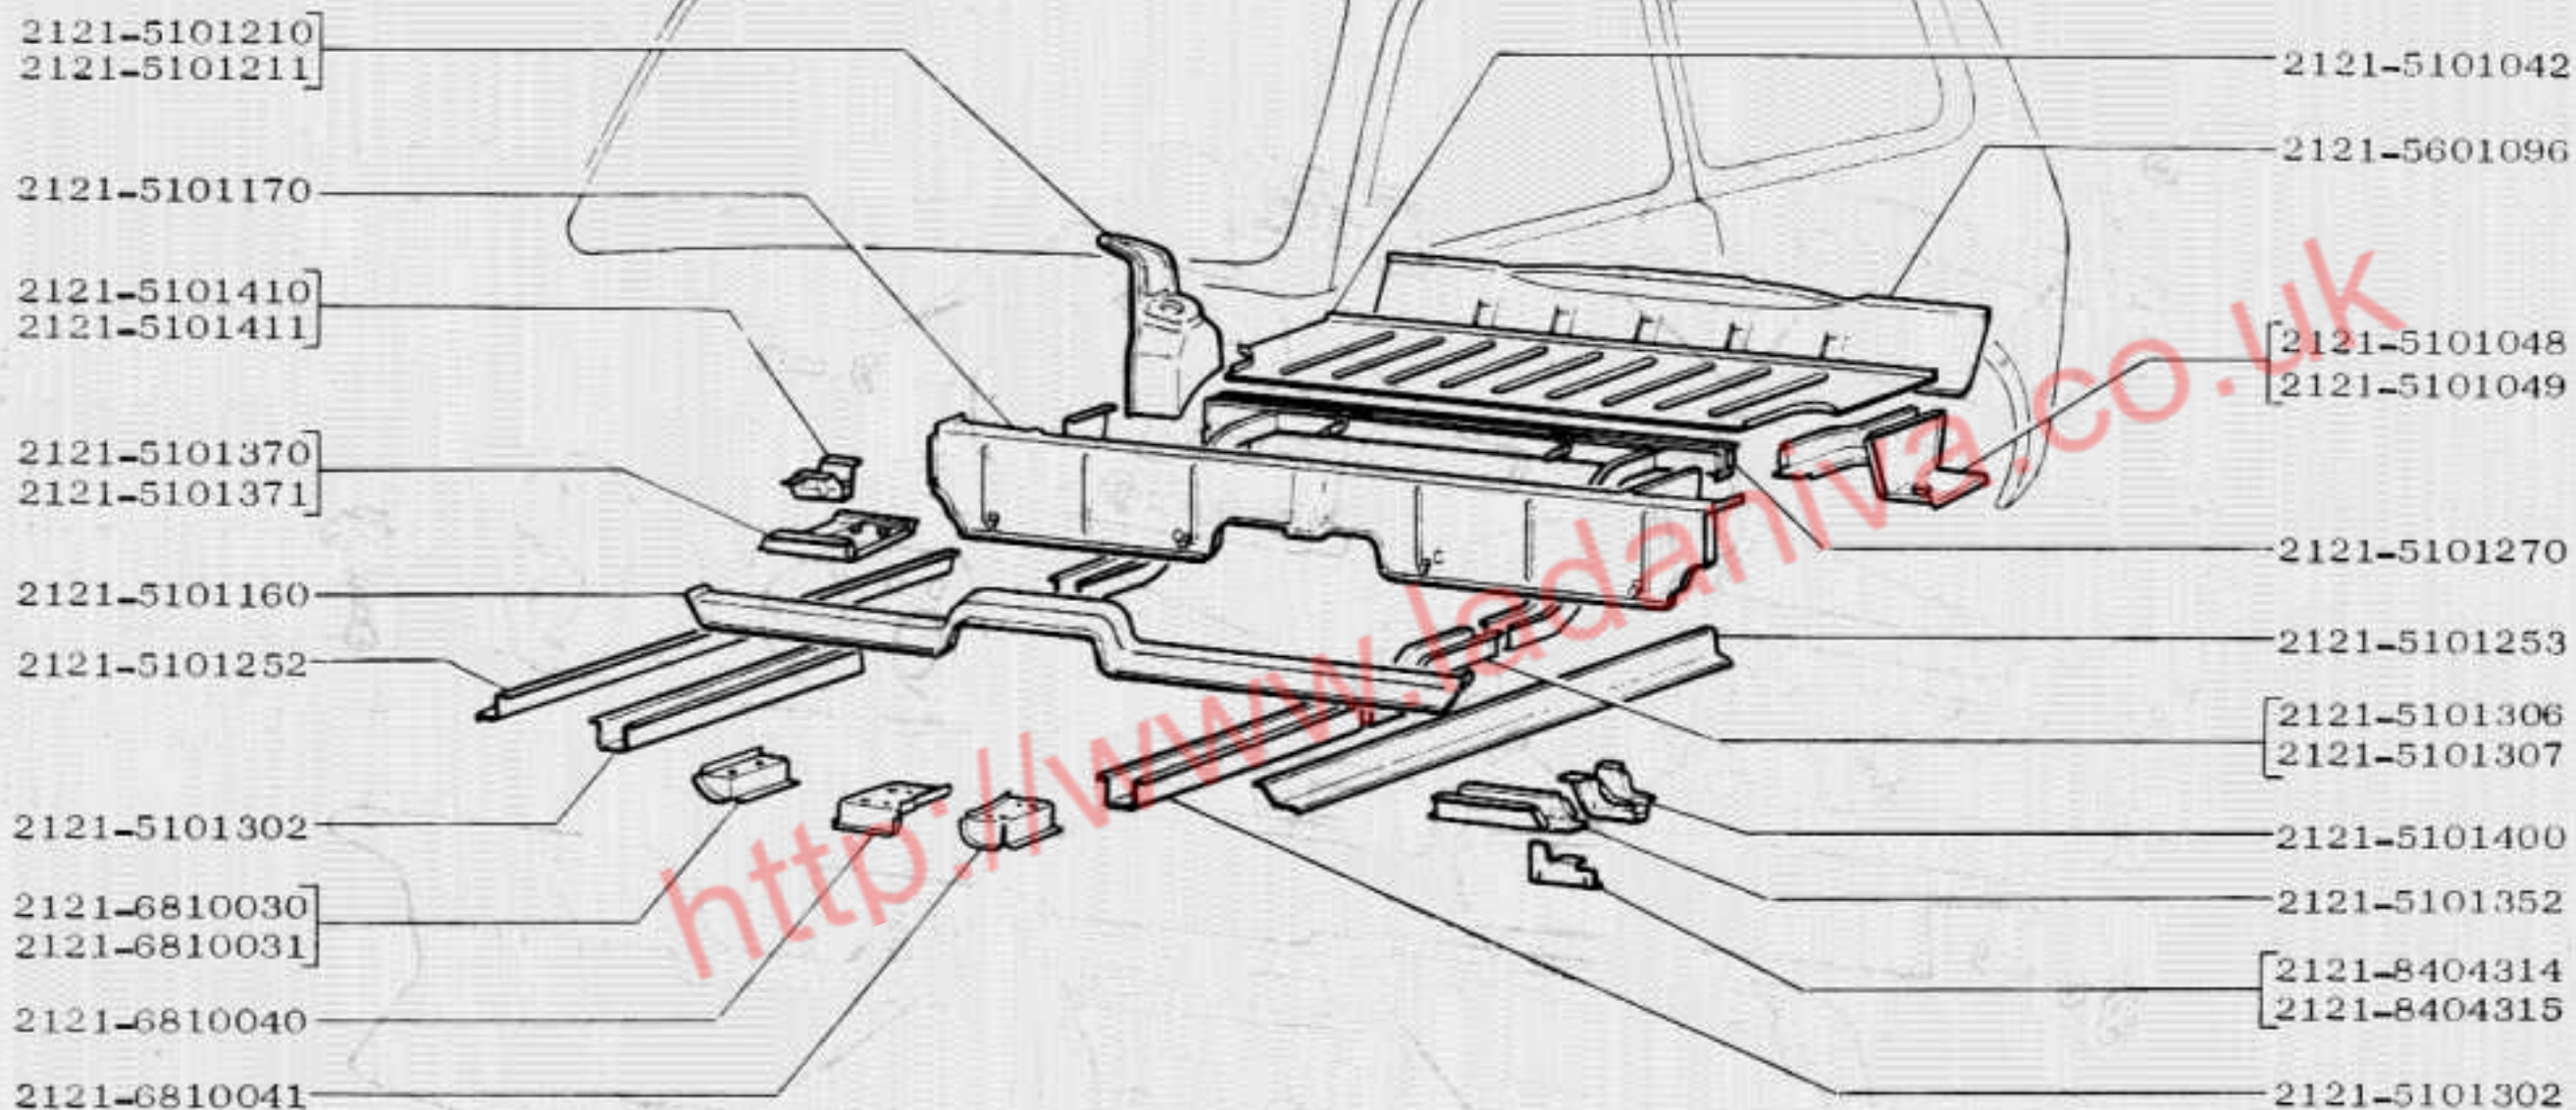

BA3-2121
BA3-21211

Пол кузова
Body Floor
Plancher de carrosserie
Karosserieboden
Piso de la carrocería


M2.03

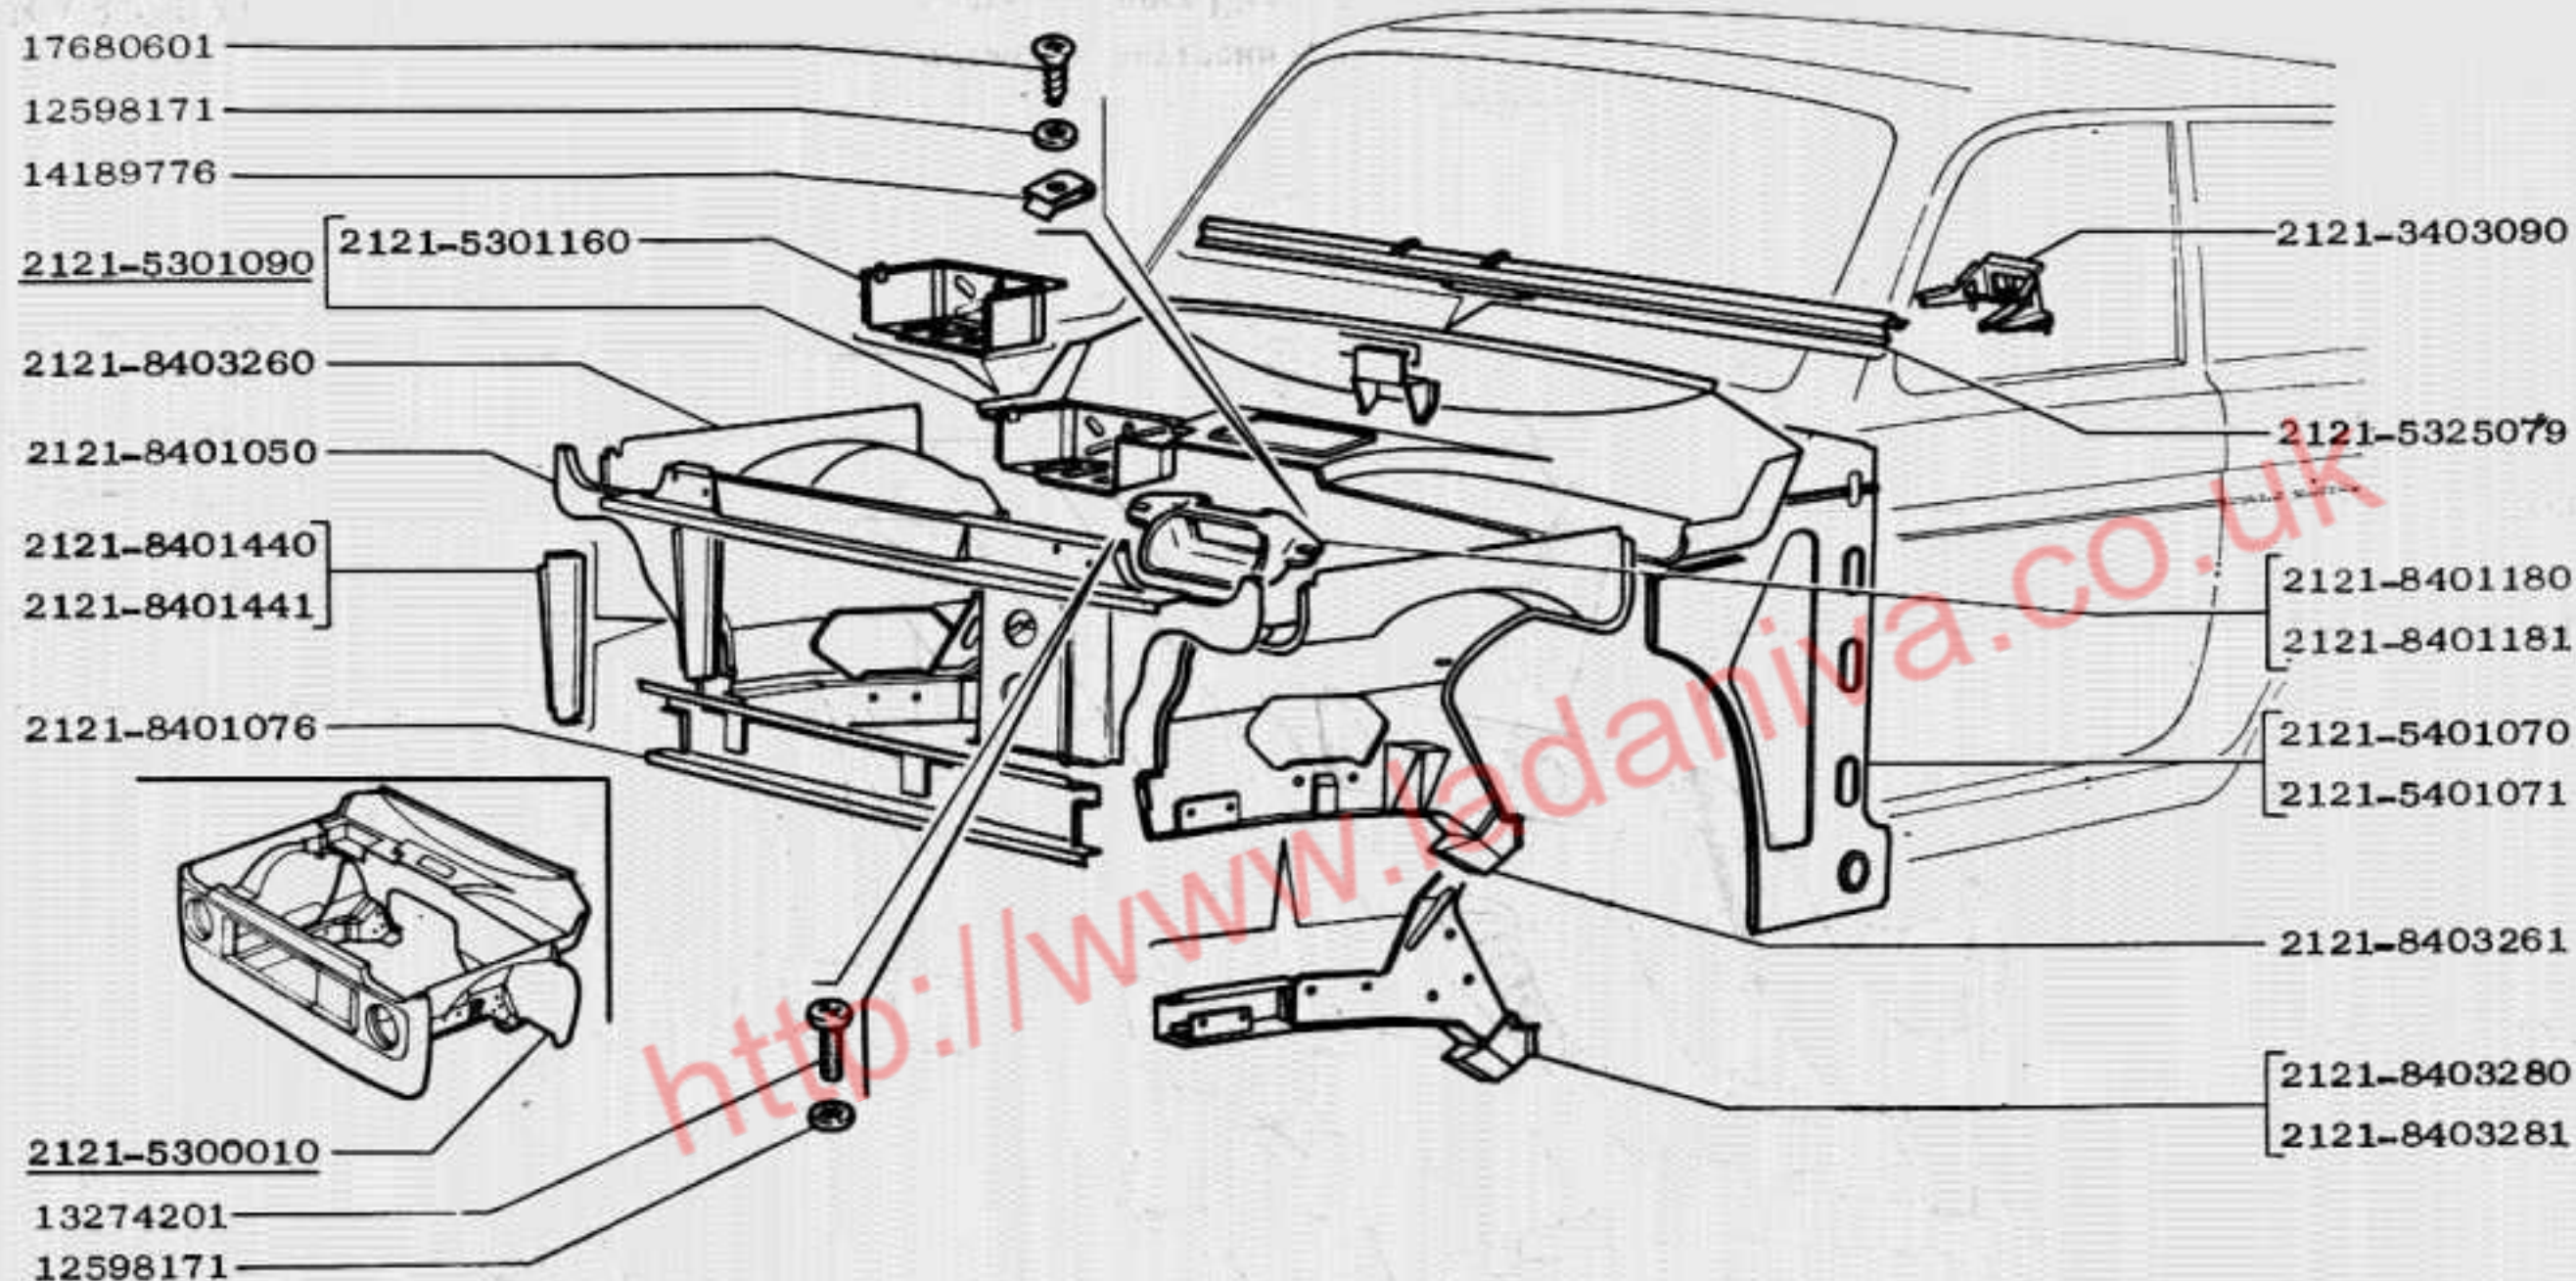

BA3-2121
BA3-21211

Элементы внутренние передние
Front-End Inner Elements
Eléments intérieurs avant
Vordere Innenteile
Elementos interiores delanteros

M2.04

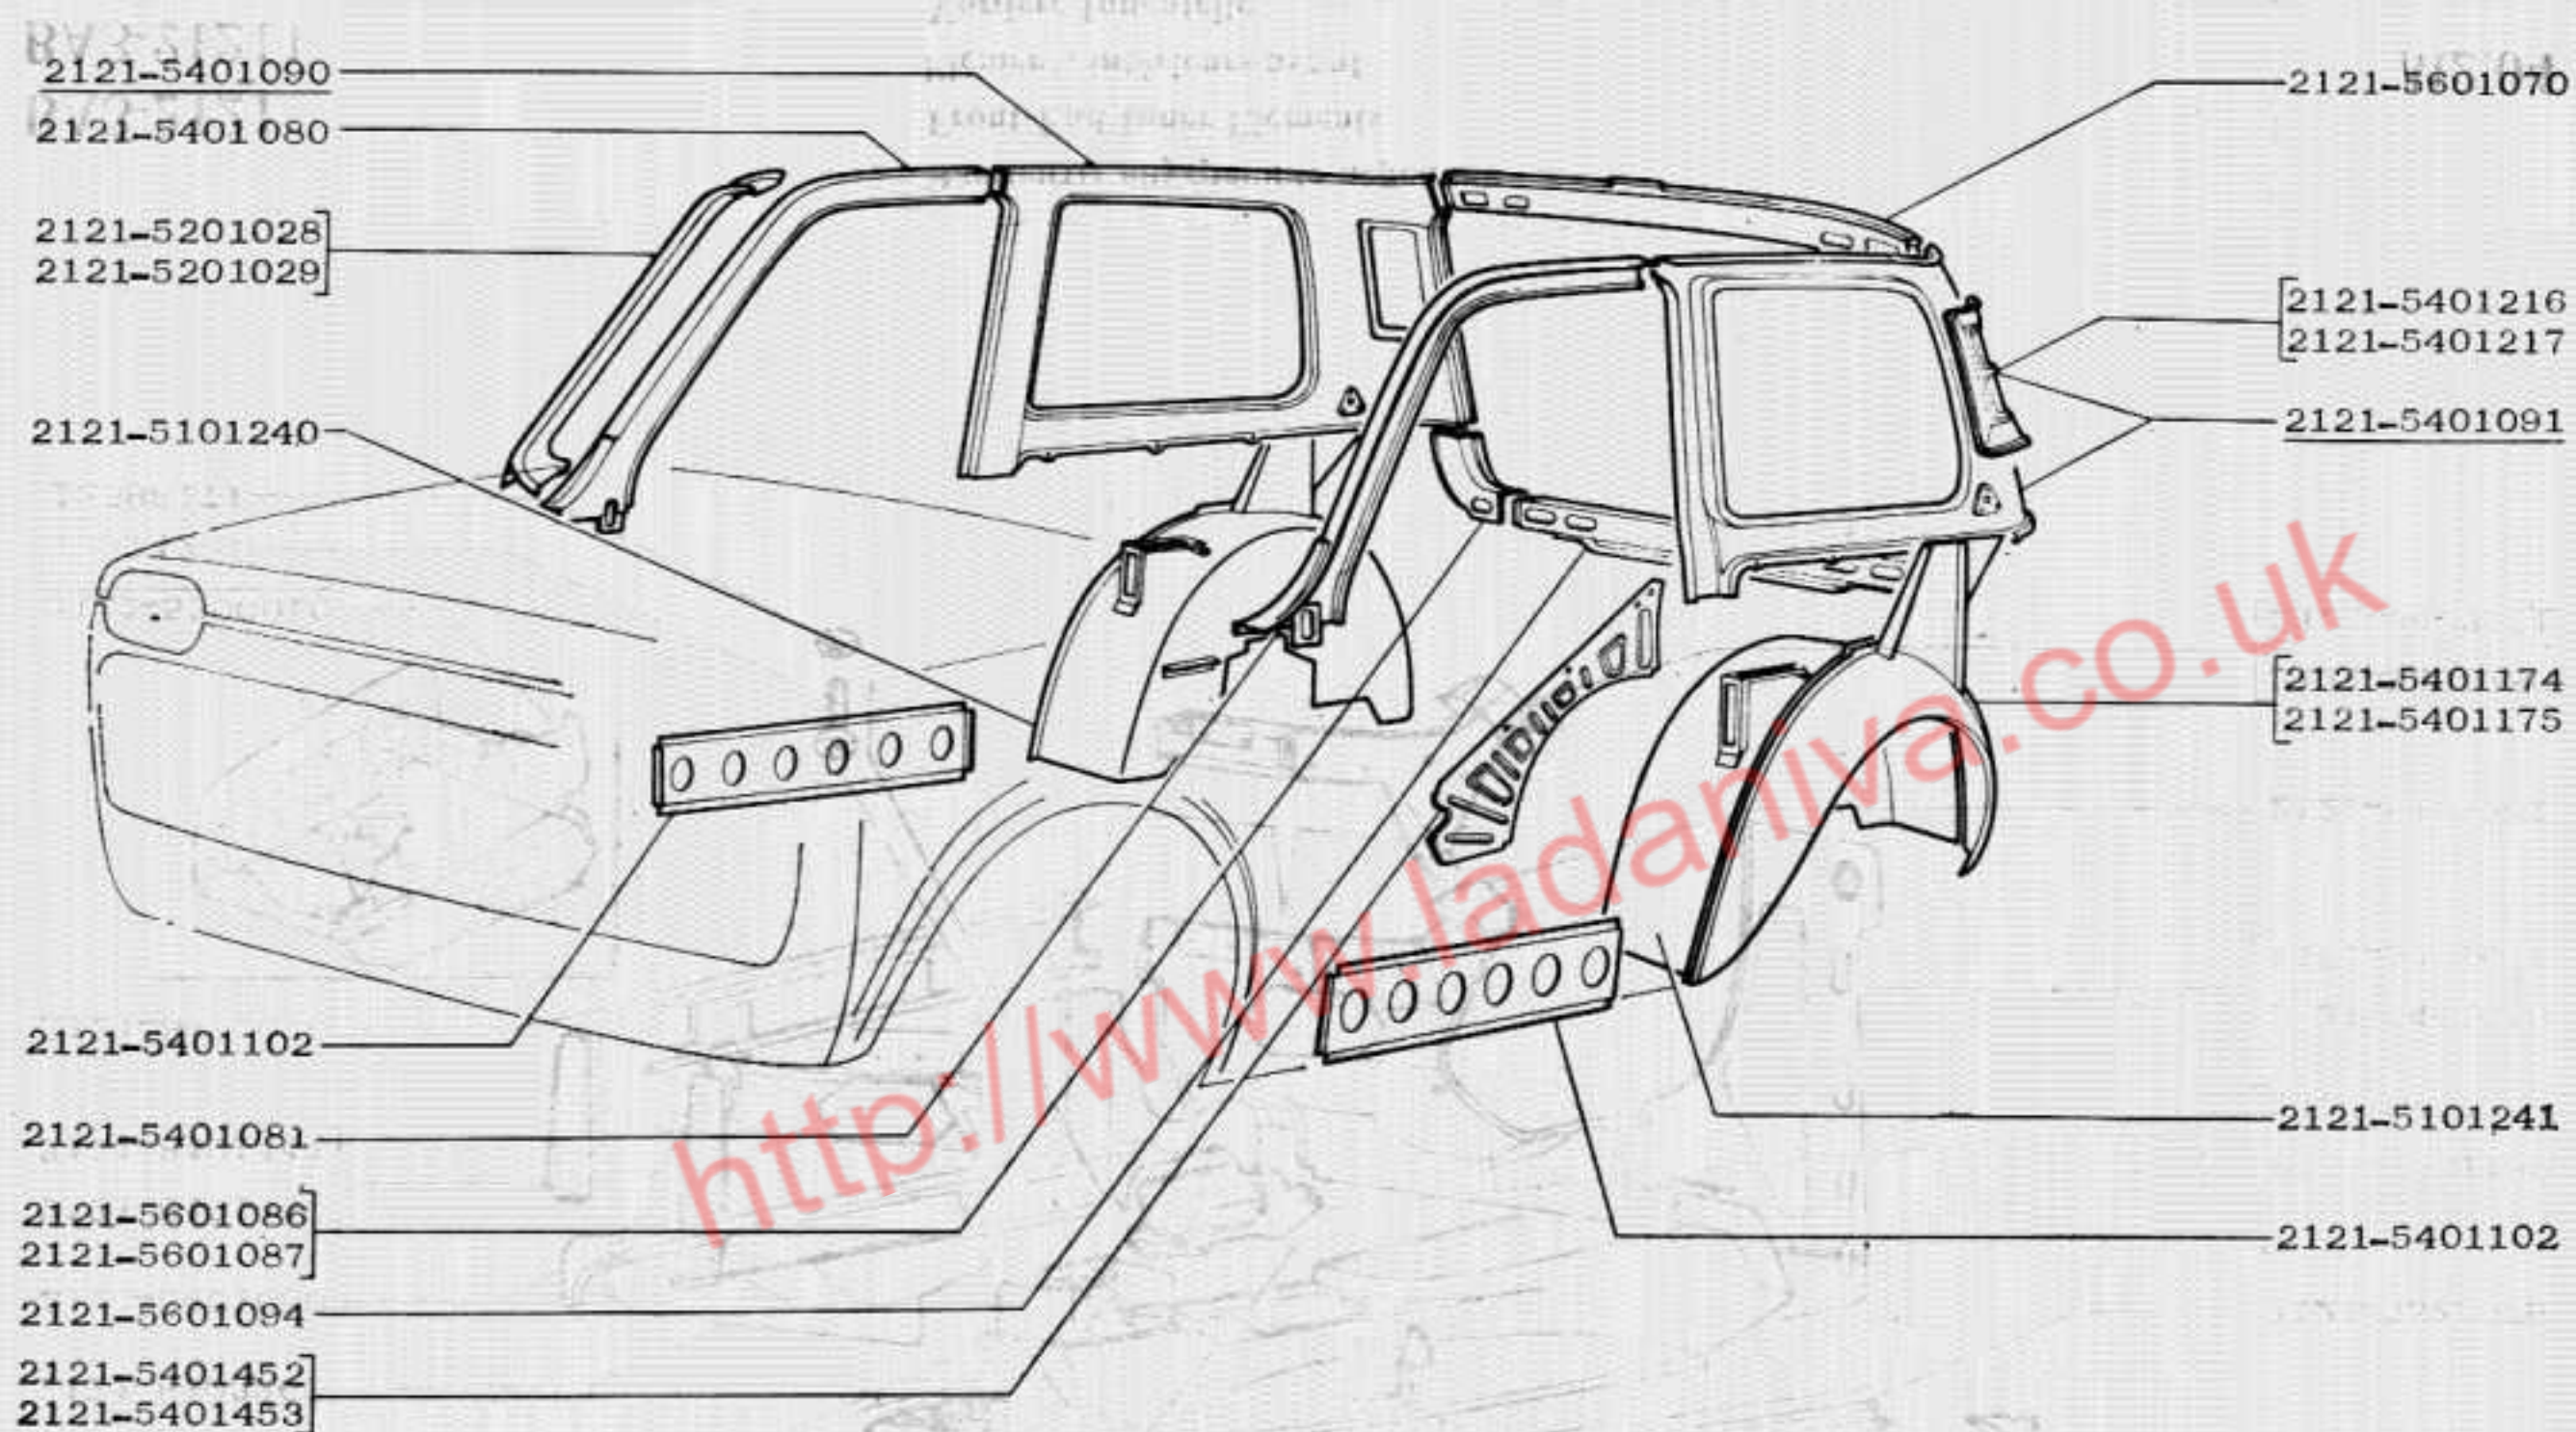

BA3-2121
BA3-21211

Элементы внутренние задние
Rear-End Inner Elements
Eléments intérieurs arrière
Hintere Innenteile
Elementos interiores traseros

M2.05

873-5151

2121-5701014

2121-5201040

2121-5201012

2121-5401078

2121-5401079

2121-5401064

2121-8403024

2121-8401120

2121-8403025

2121-5701018

2121-5701012

2101-6206123

2121-5601082

2121-5401065

2121-5401150

2121-5401151

2121-5401130

2121-5401131

2101-6106128

2121-5401126

2121-5401127


2121-5401120

2121-5401121

BA3-2121
BA3-21211

Элементы наружные
Outer Elements
Eléments extérieurs
Außenteile
Elementos exteriores


M2.07

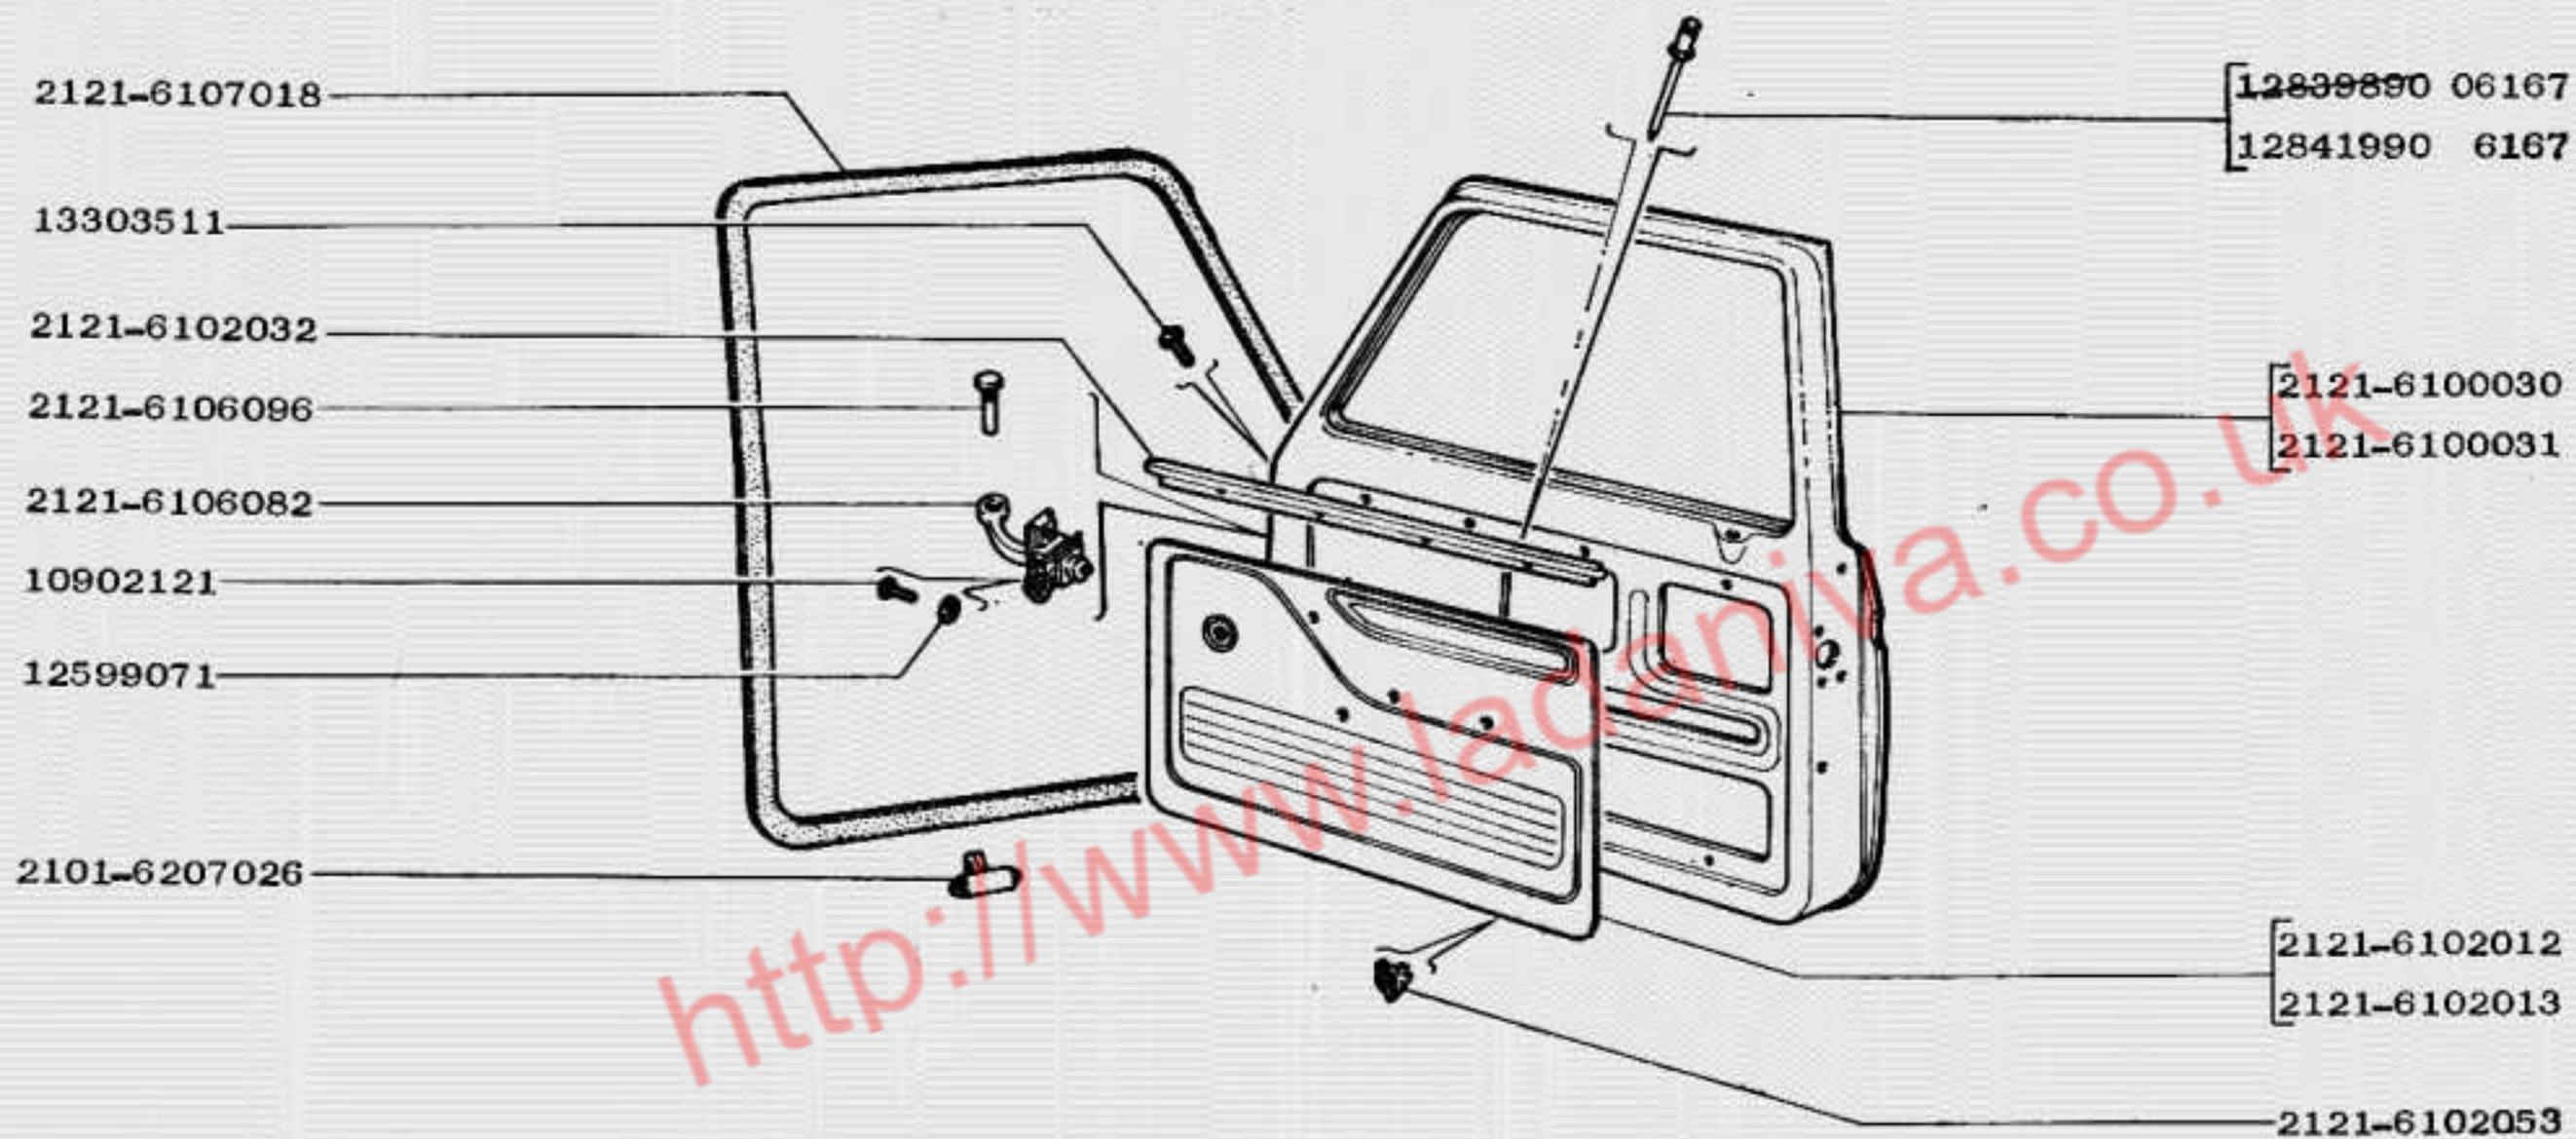


BA3-2121
BA3-21211

Дверь боковая
Side Door
Porte latérale
Seitentür
Puerta lateral

M3.01

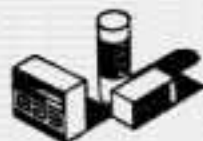

2102-6100045 = 1 (M3,75)

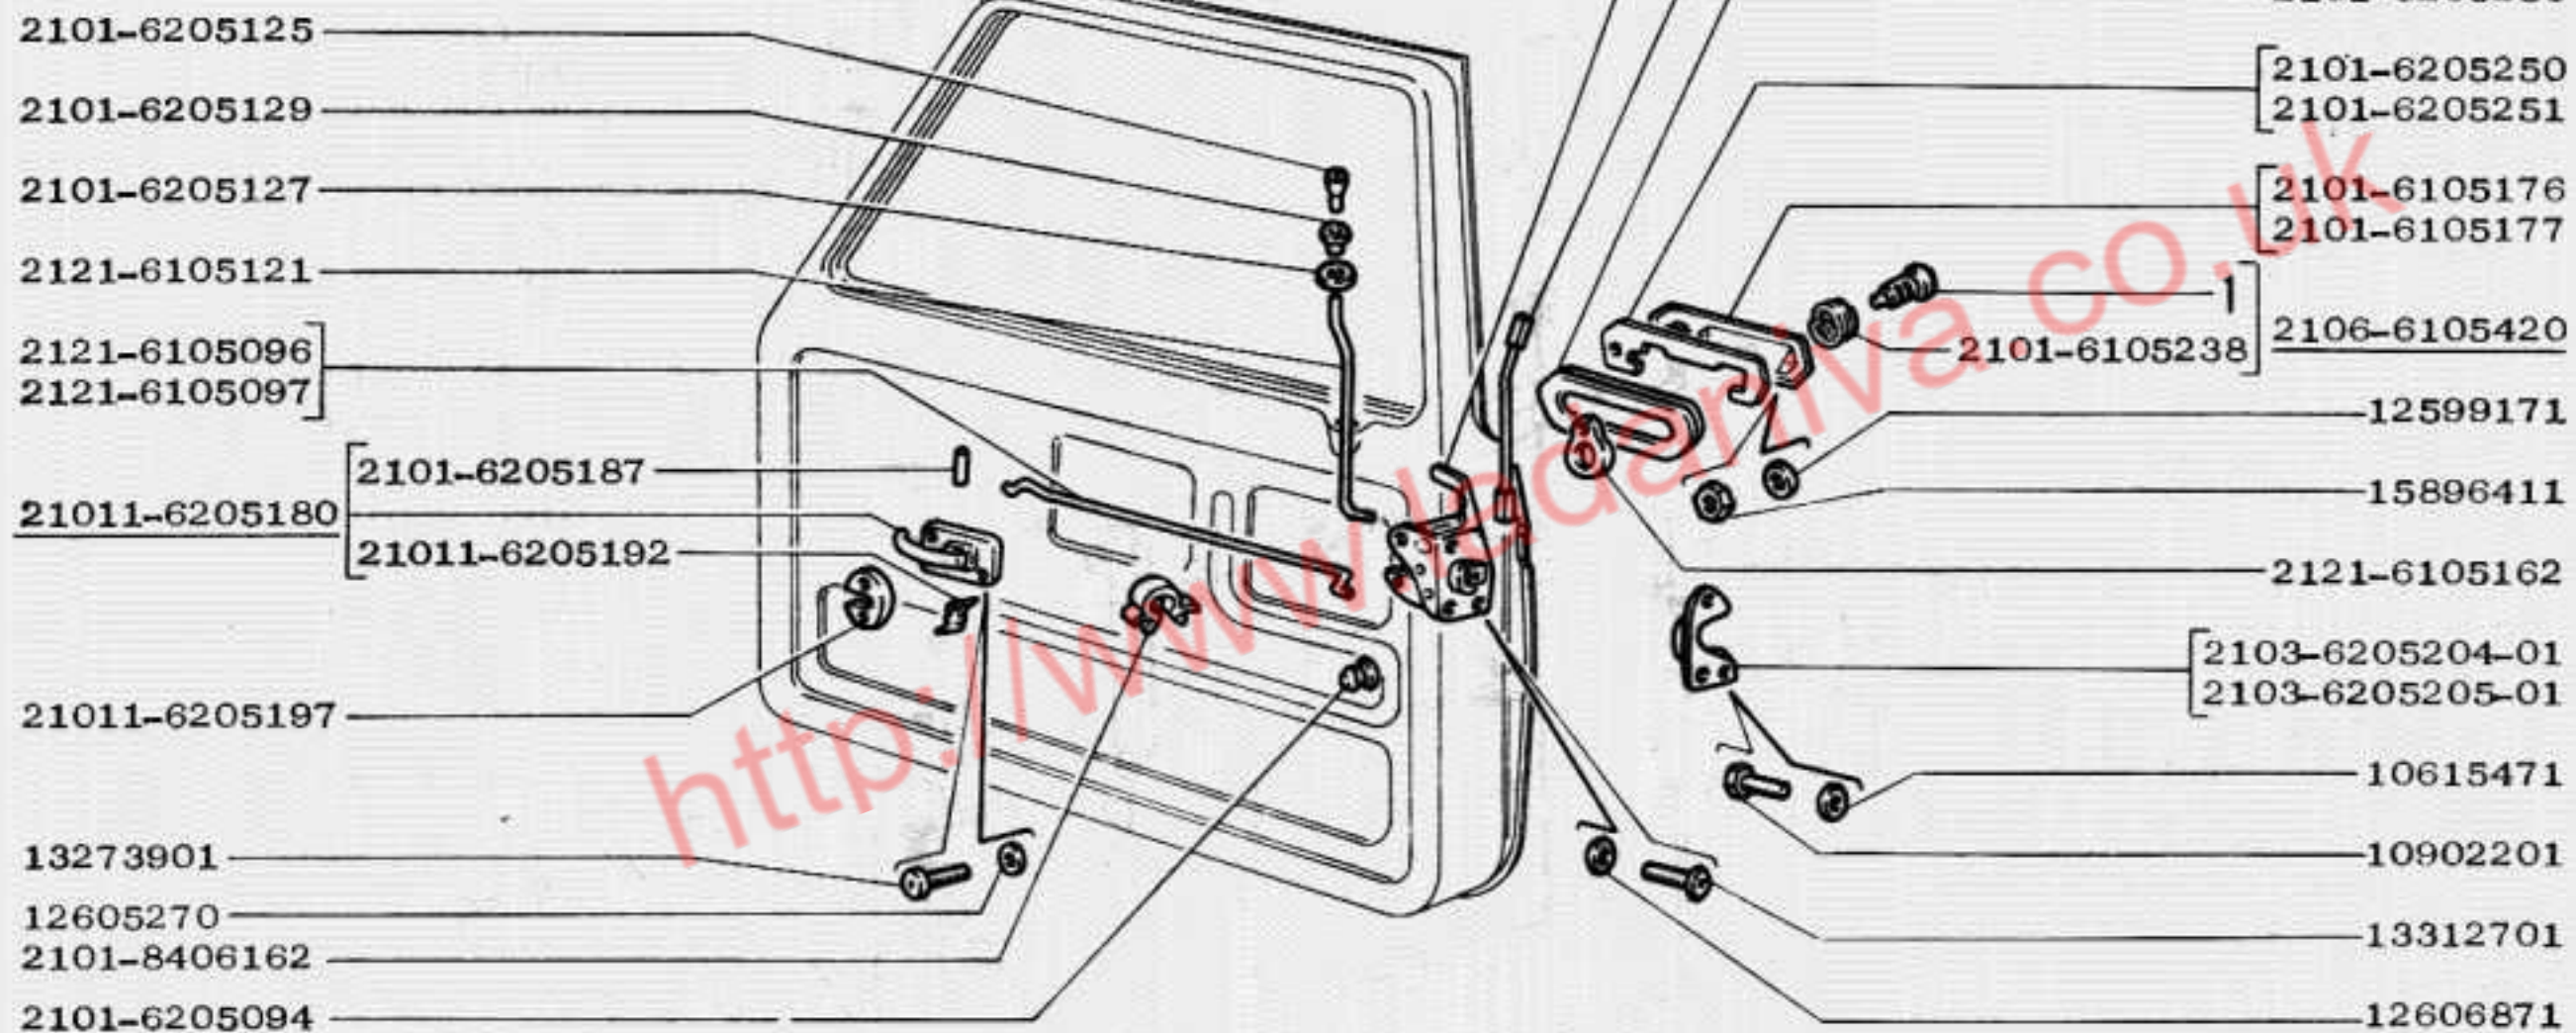


BA3-2121
BA3-21211

Замки боковых дверей
Side Door Locks
Serrures de portes latérales
Seitentürschlösser
Cerraduras de las puertas laterales

M3.30

BA3-2121

2121-6103062
2121-6103063

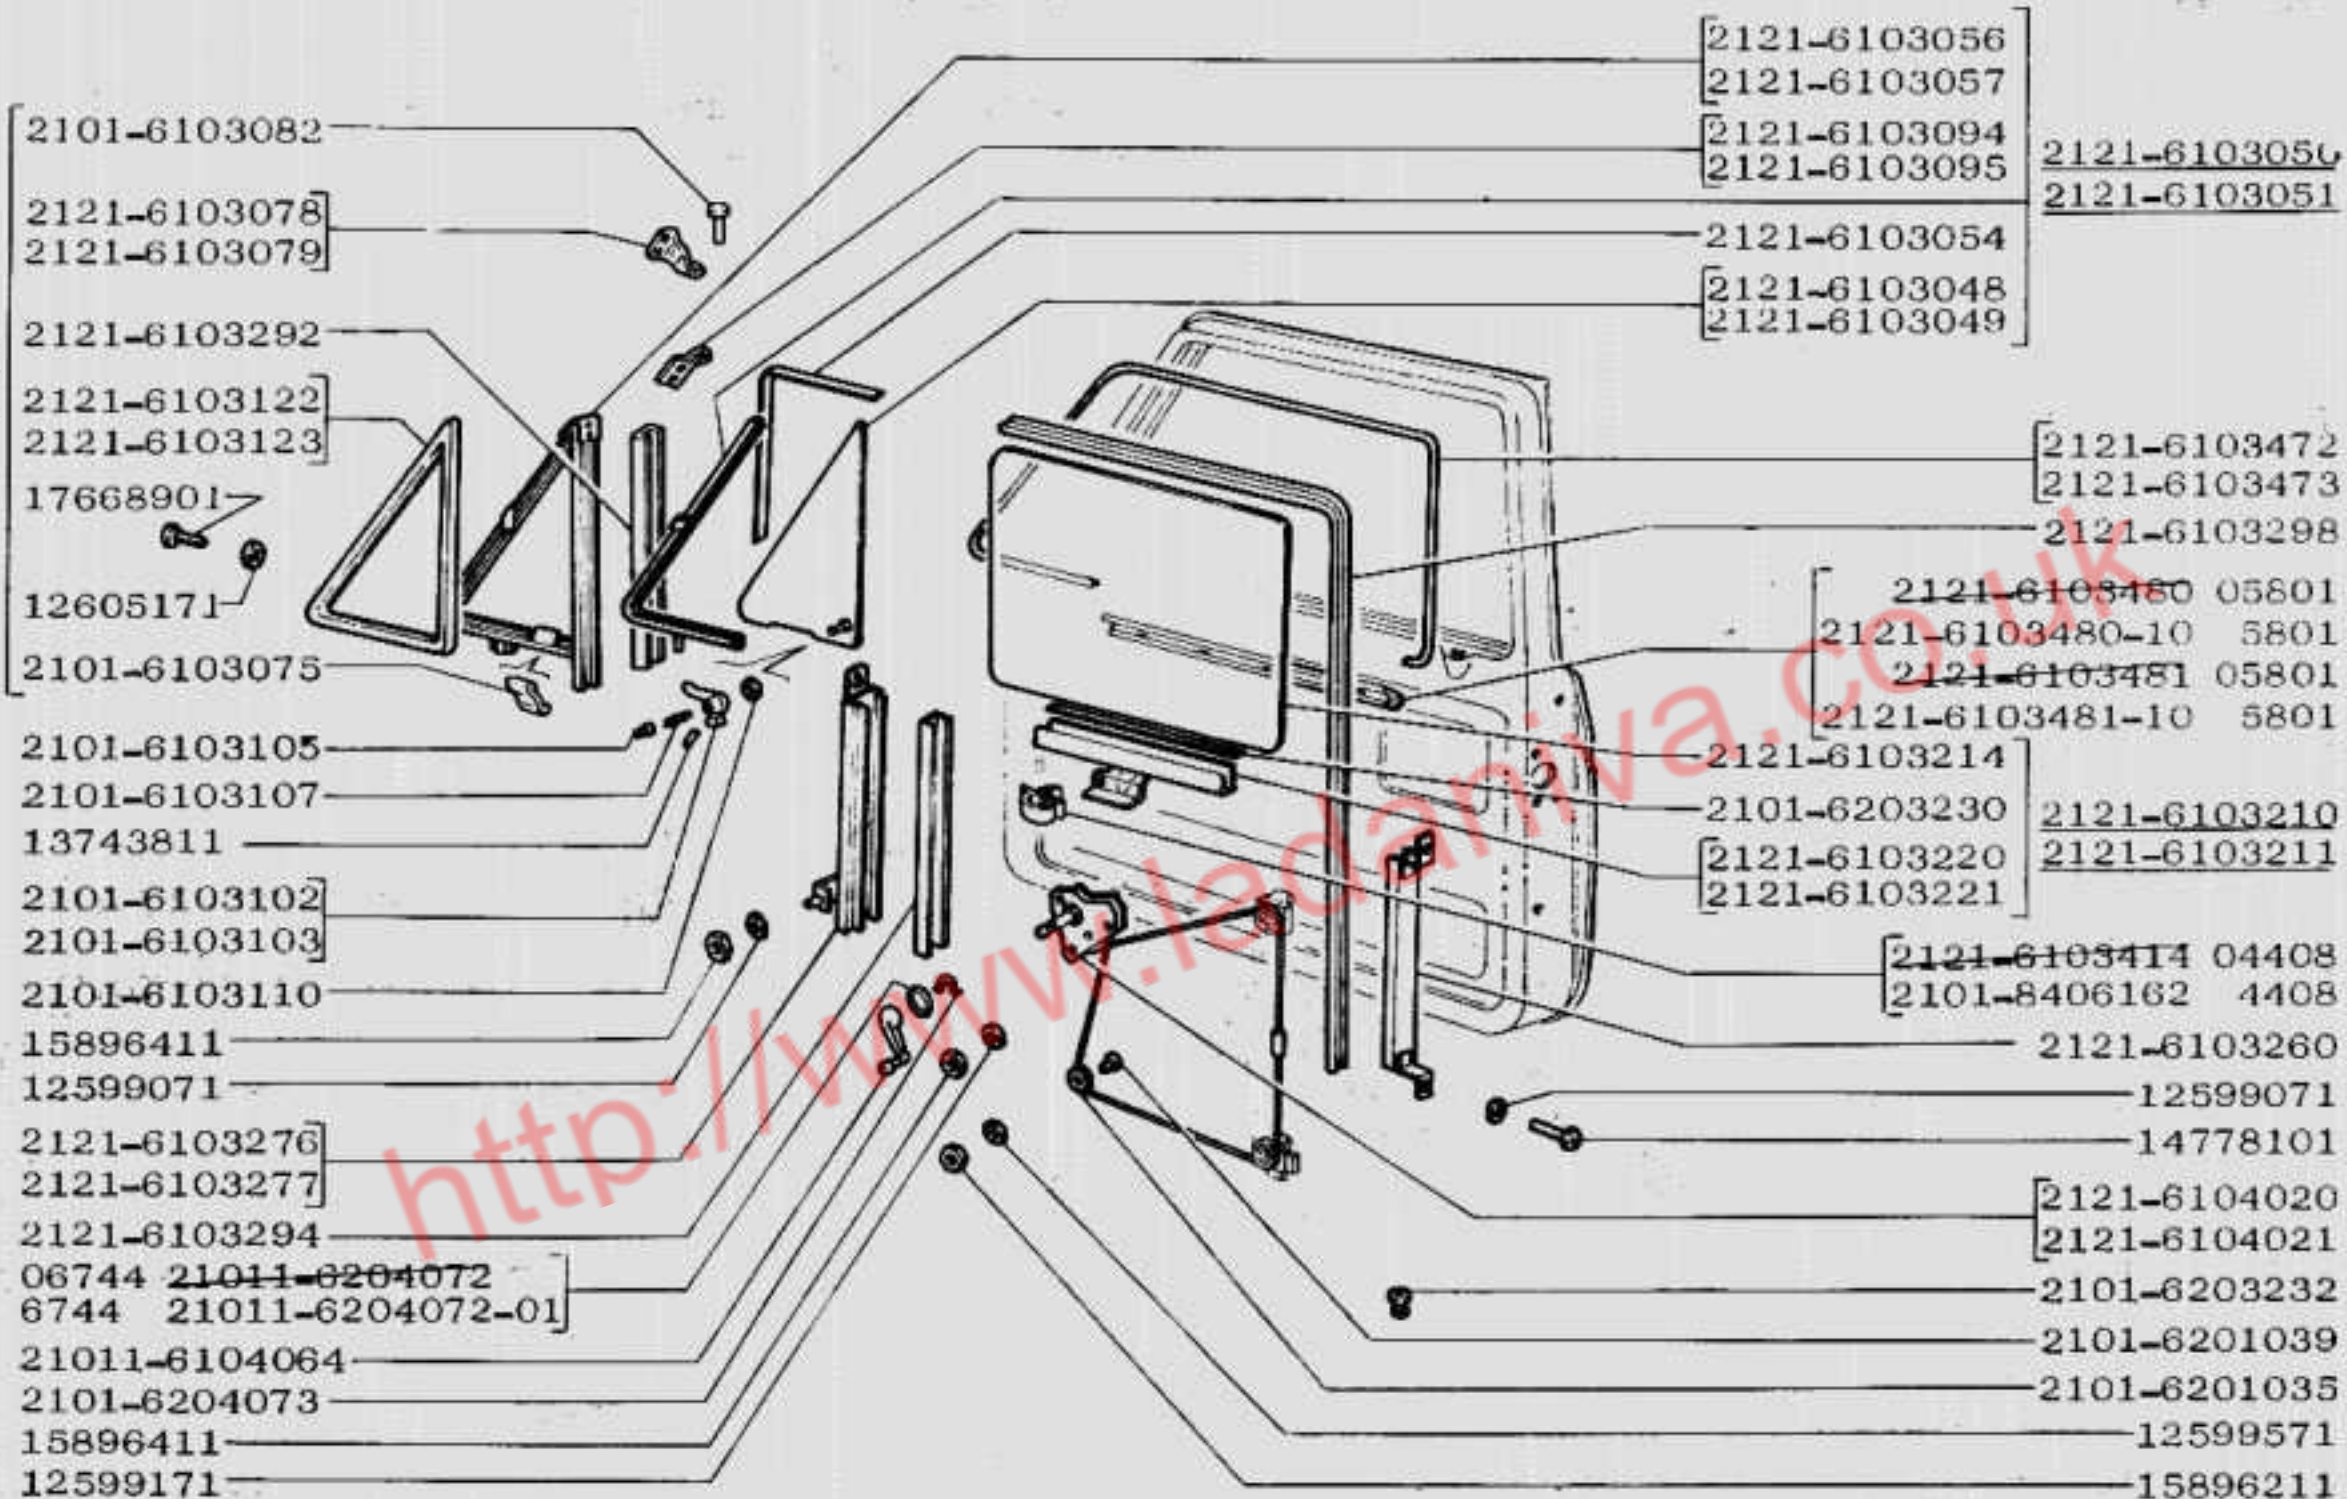

BA3-2121
BA3-21211

Окна боковых дверей
Side Door Windows
Fenêtres de portes latérales
Seitentürfenster
Ventanas de las puertas laterales

M3.60

2121-6306010

2121-6306011

2121-6306034

2121-6306036

12598271

15896211

14054511

2121-6306300

12839890

10249980

2121-6307024

13303911


2121-6306316

12598471

16102311

12598071

17669101

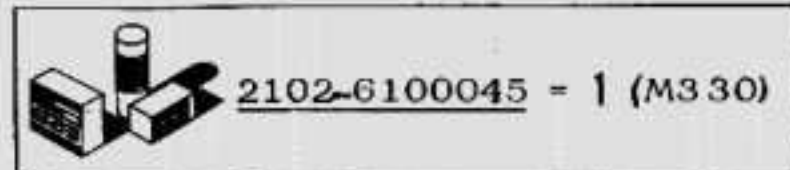

2121-6302030

2121-6300014

2121-6302010

13831801

2102-6306150

1-2102-6305012

2101-5606075

2102-6305150

2102-6306120

2102-6306129

13836471

BA3-2121
BA3-21211

Дверь задняя
Tailgate
Hayon arrière
Hecktür
Puerta trasera


M3.75



BA3-2121
BA3-21211

Окно ветровое
Windshield
Pare-brise
Windschutzscheibe
Parabrisas

M3.80

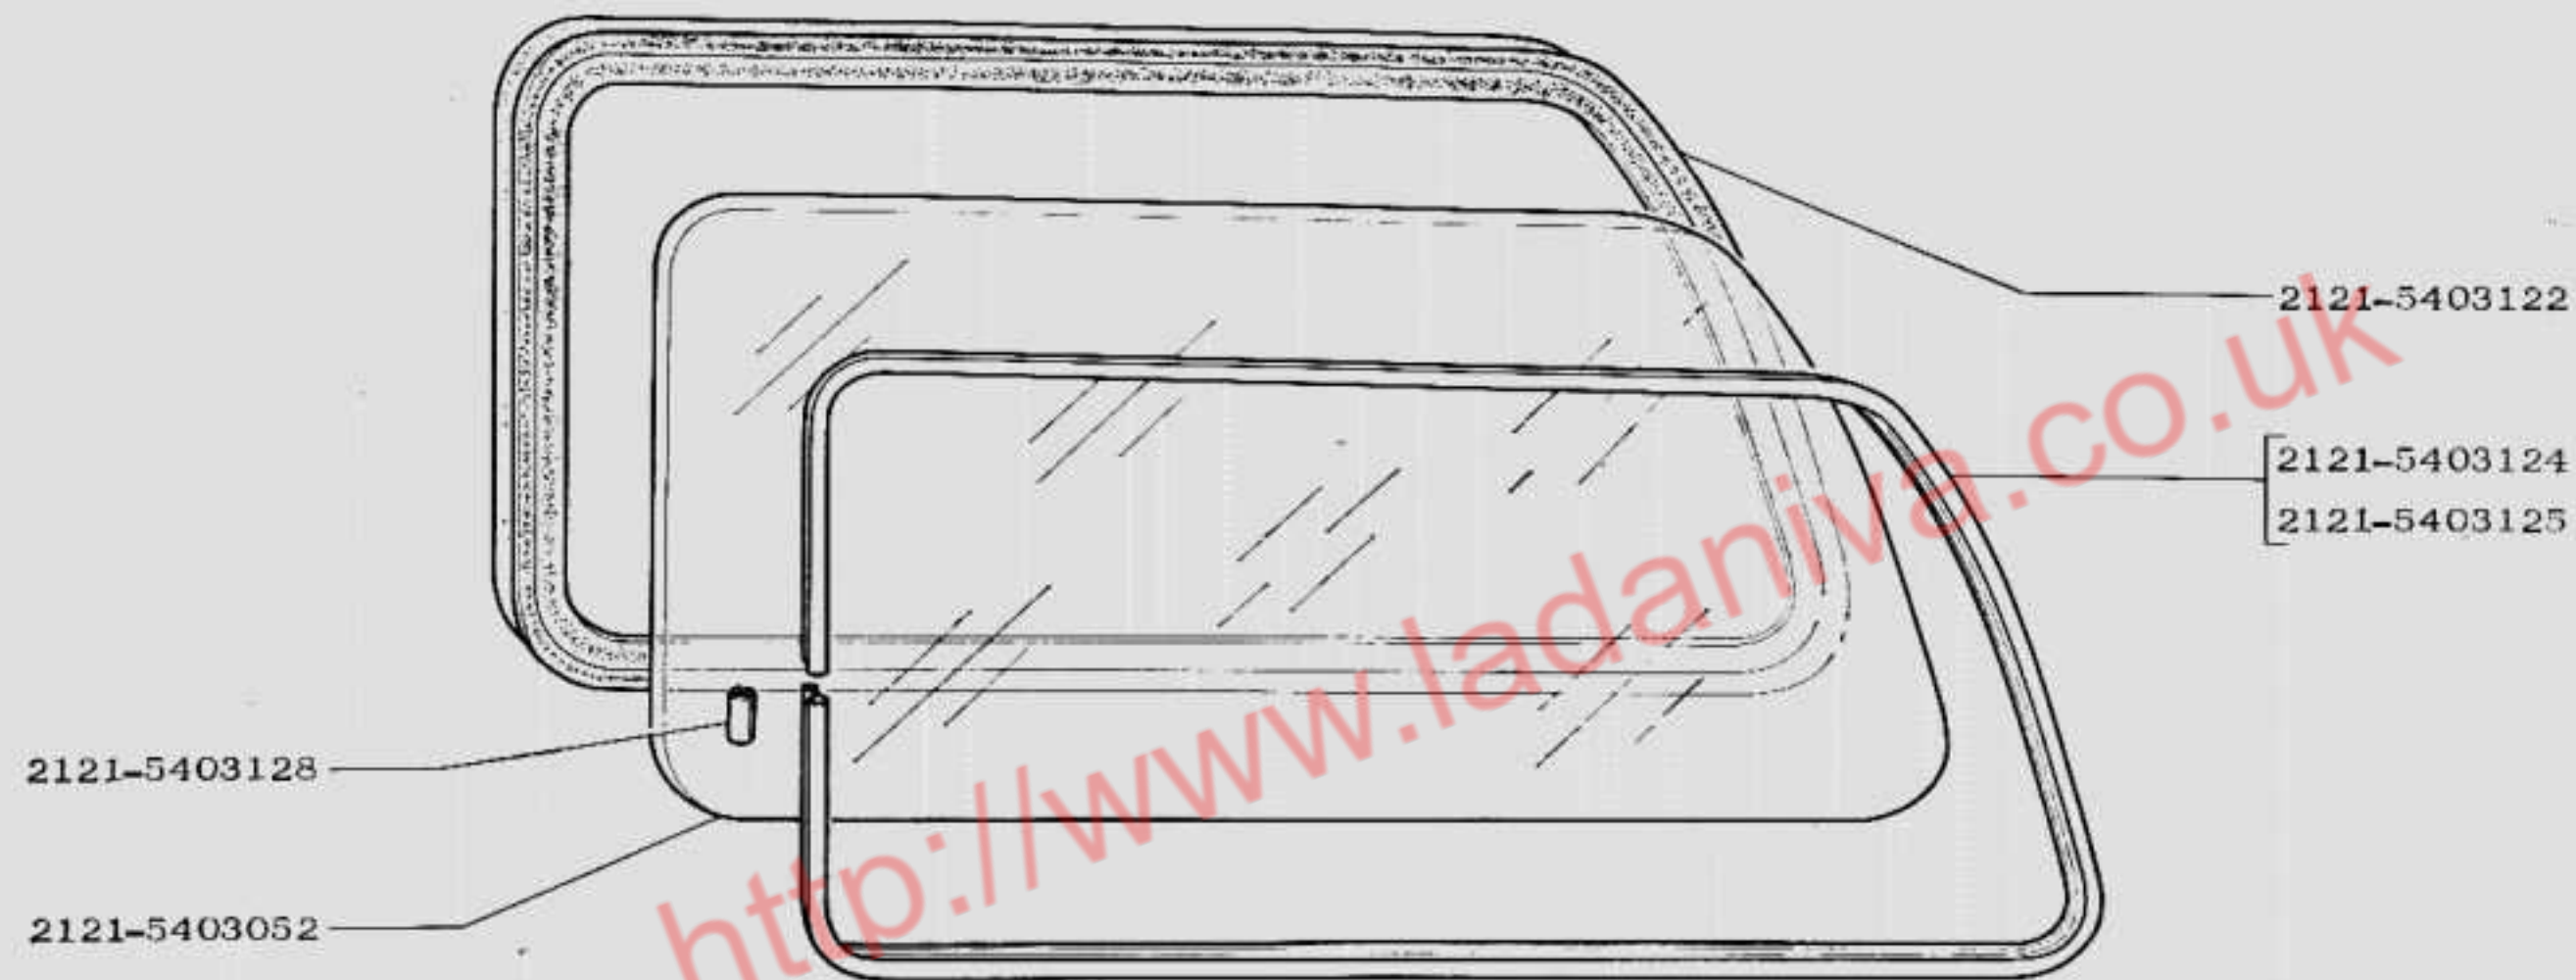

BA3-2121
BA3-21211

Окно боковины кузова
Body Side Window
Fenêtre latérale
Seitenfenster der Karosserie
Ventana de la parte lateral de la carrocería

M3.83


2121-6303016-10

2121-6303060

2121-6303018

2121-6303016


2101-5206066

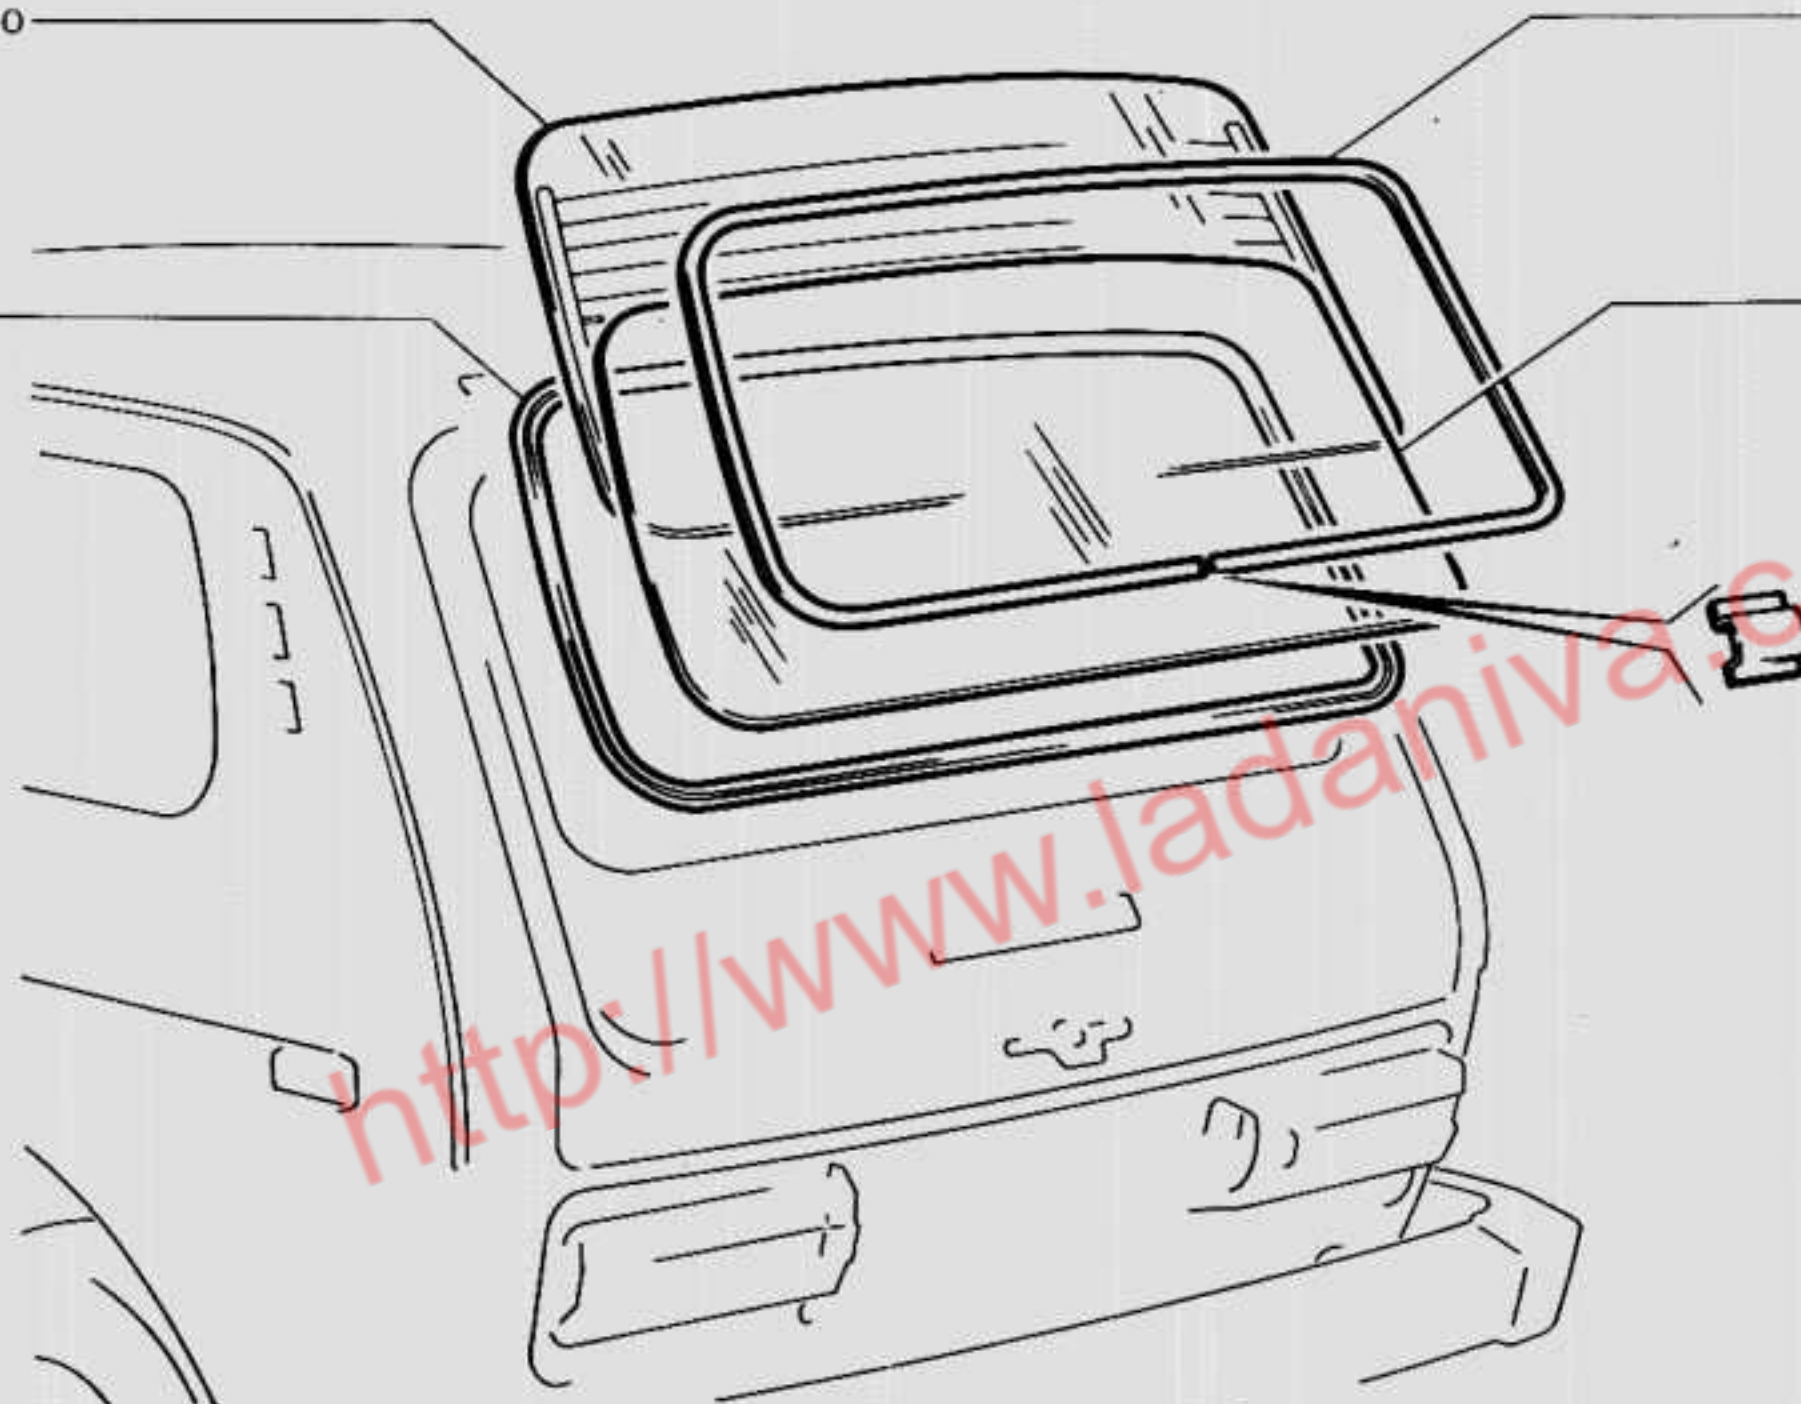

BA3-2121
BA3-21211

Окно заднее
Tailgate Window
Lunette arrière
Heckscheibe
Ventana trasera


M3.85

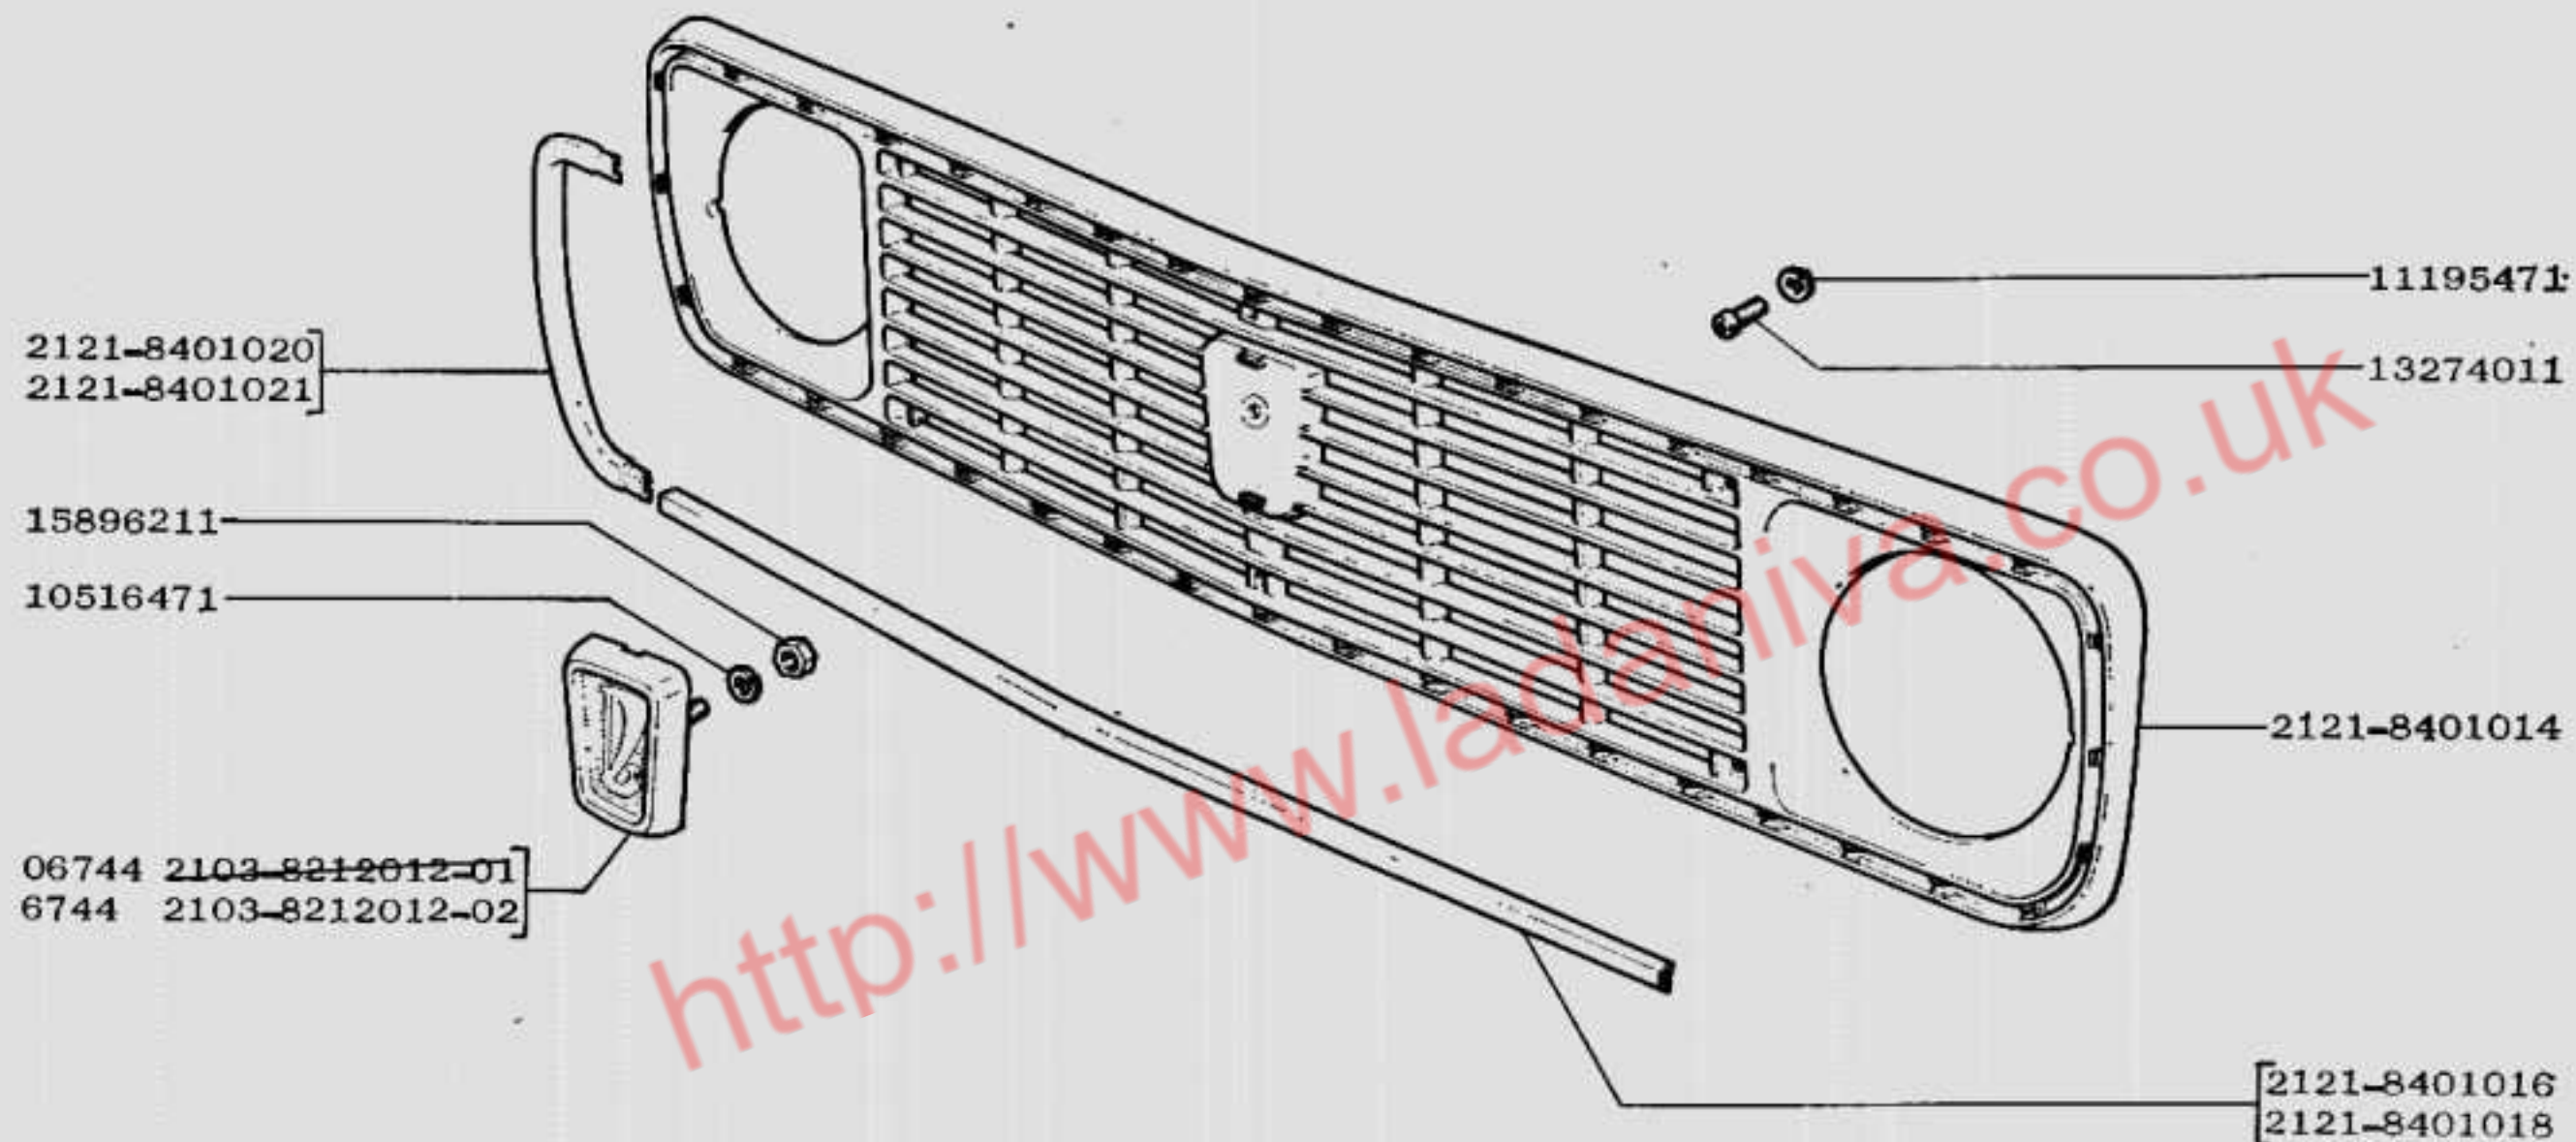

BA3-2121
BA3-21211

Облицовка радиатора
Radiator Grille
Calandre de radiateur
Kühlerverkleidung
Revestimiento del radiador


M4.01

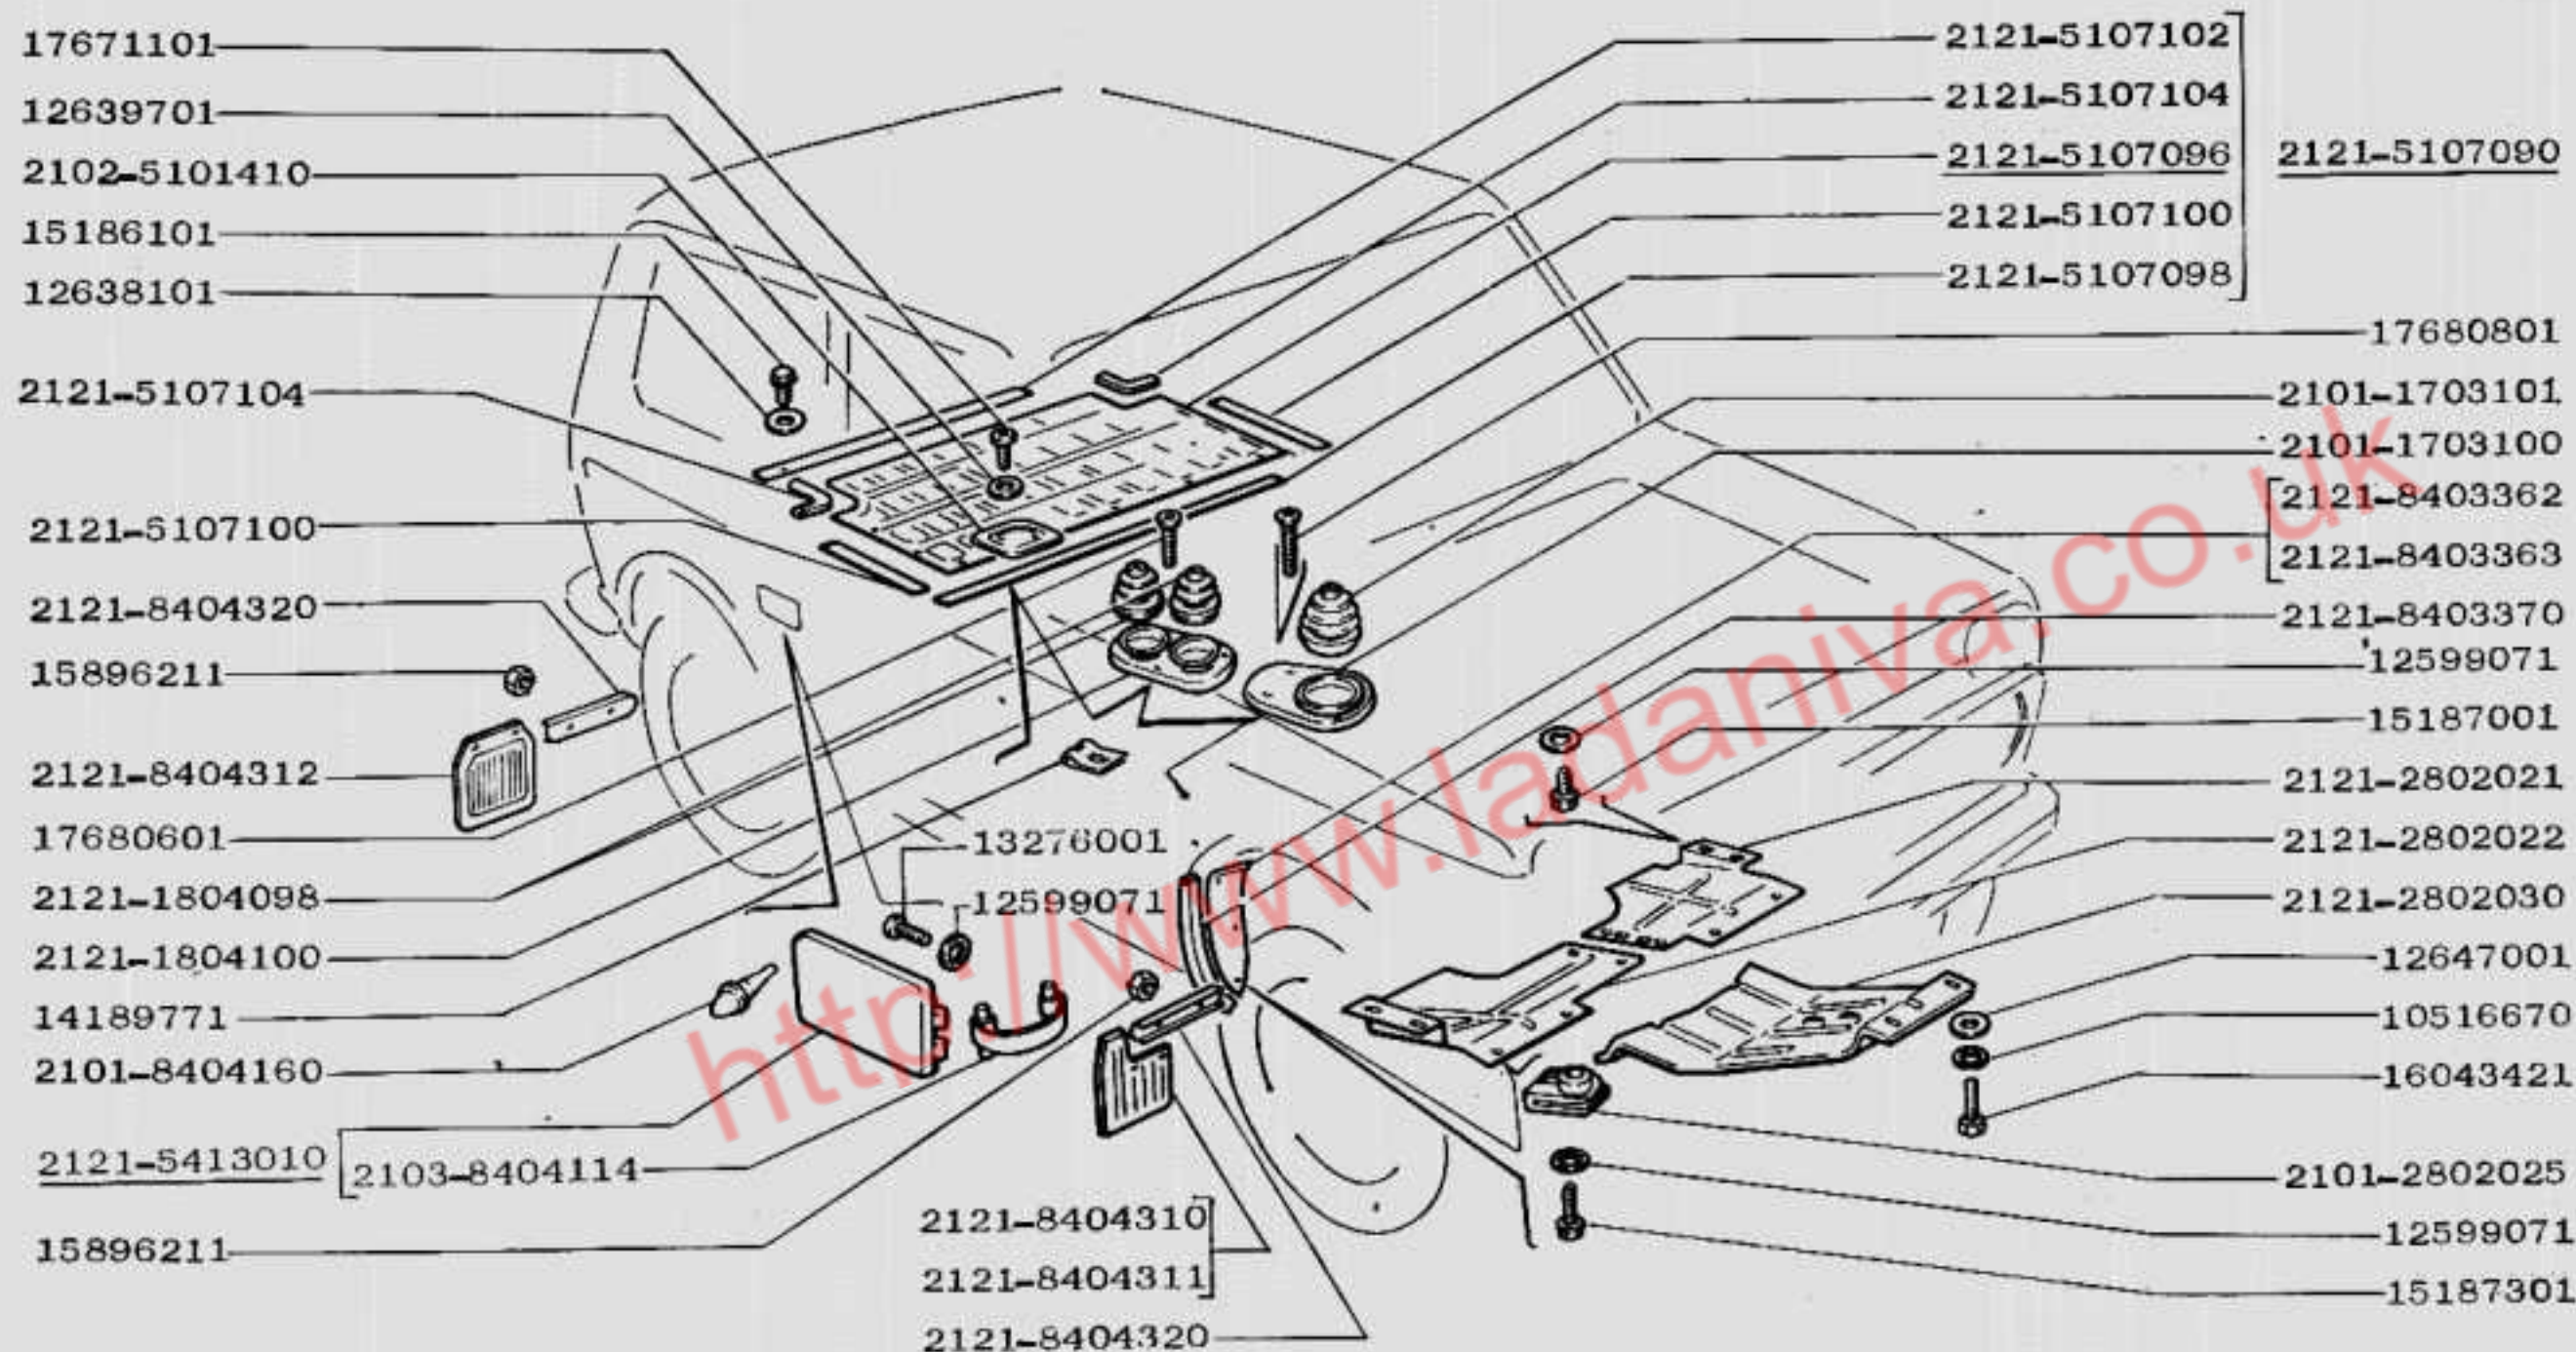

BA3-2121
BA3-21211

Щитки и уплотнительные детали
Shields and Seals
Tôles et pièces d'étanchéité
Schilder und Abdichtungsteile
Tableros y piezas de empaquetadura


M4. 02

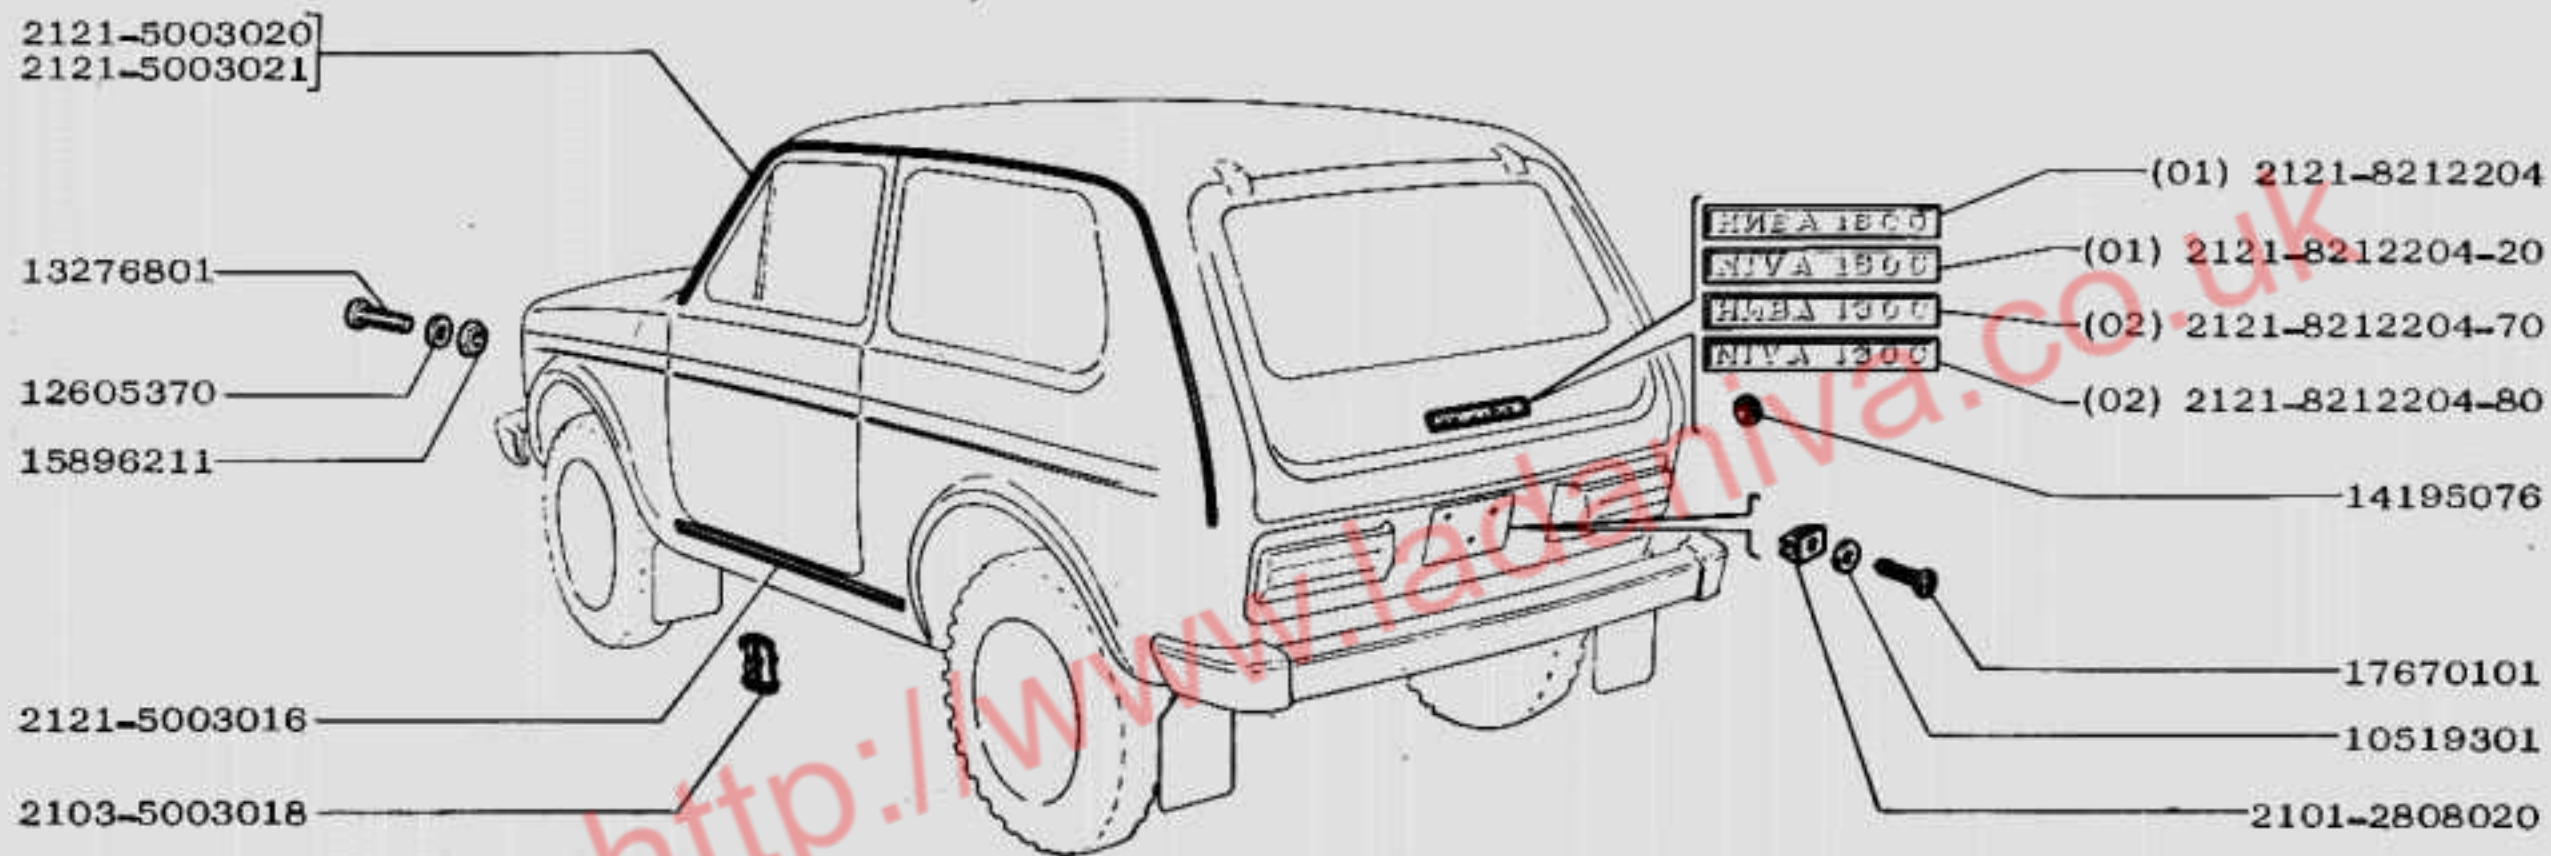

BA3-2121 (01)
BA3-21211(02)

Накладки облицовочные
Mouldings
Moulures
Zierbeschläge
Aplicaciones de revestimiento


M4.04

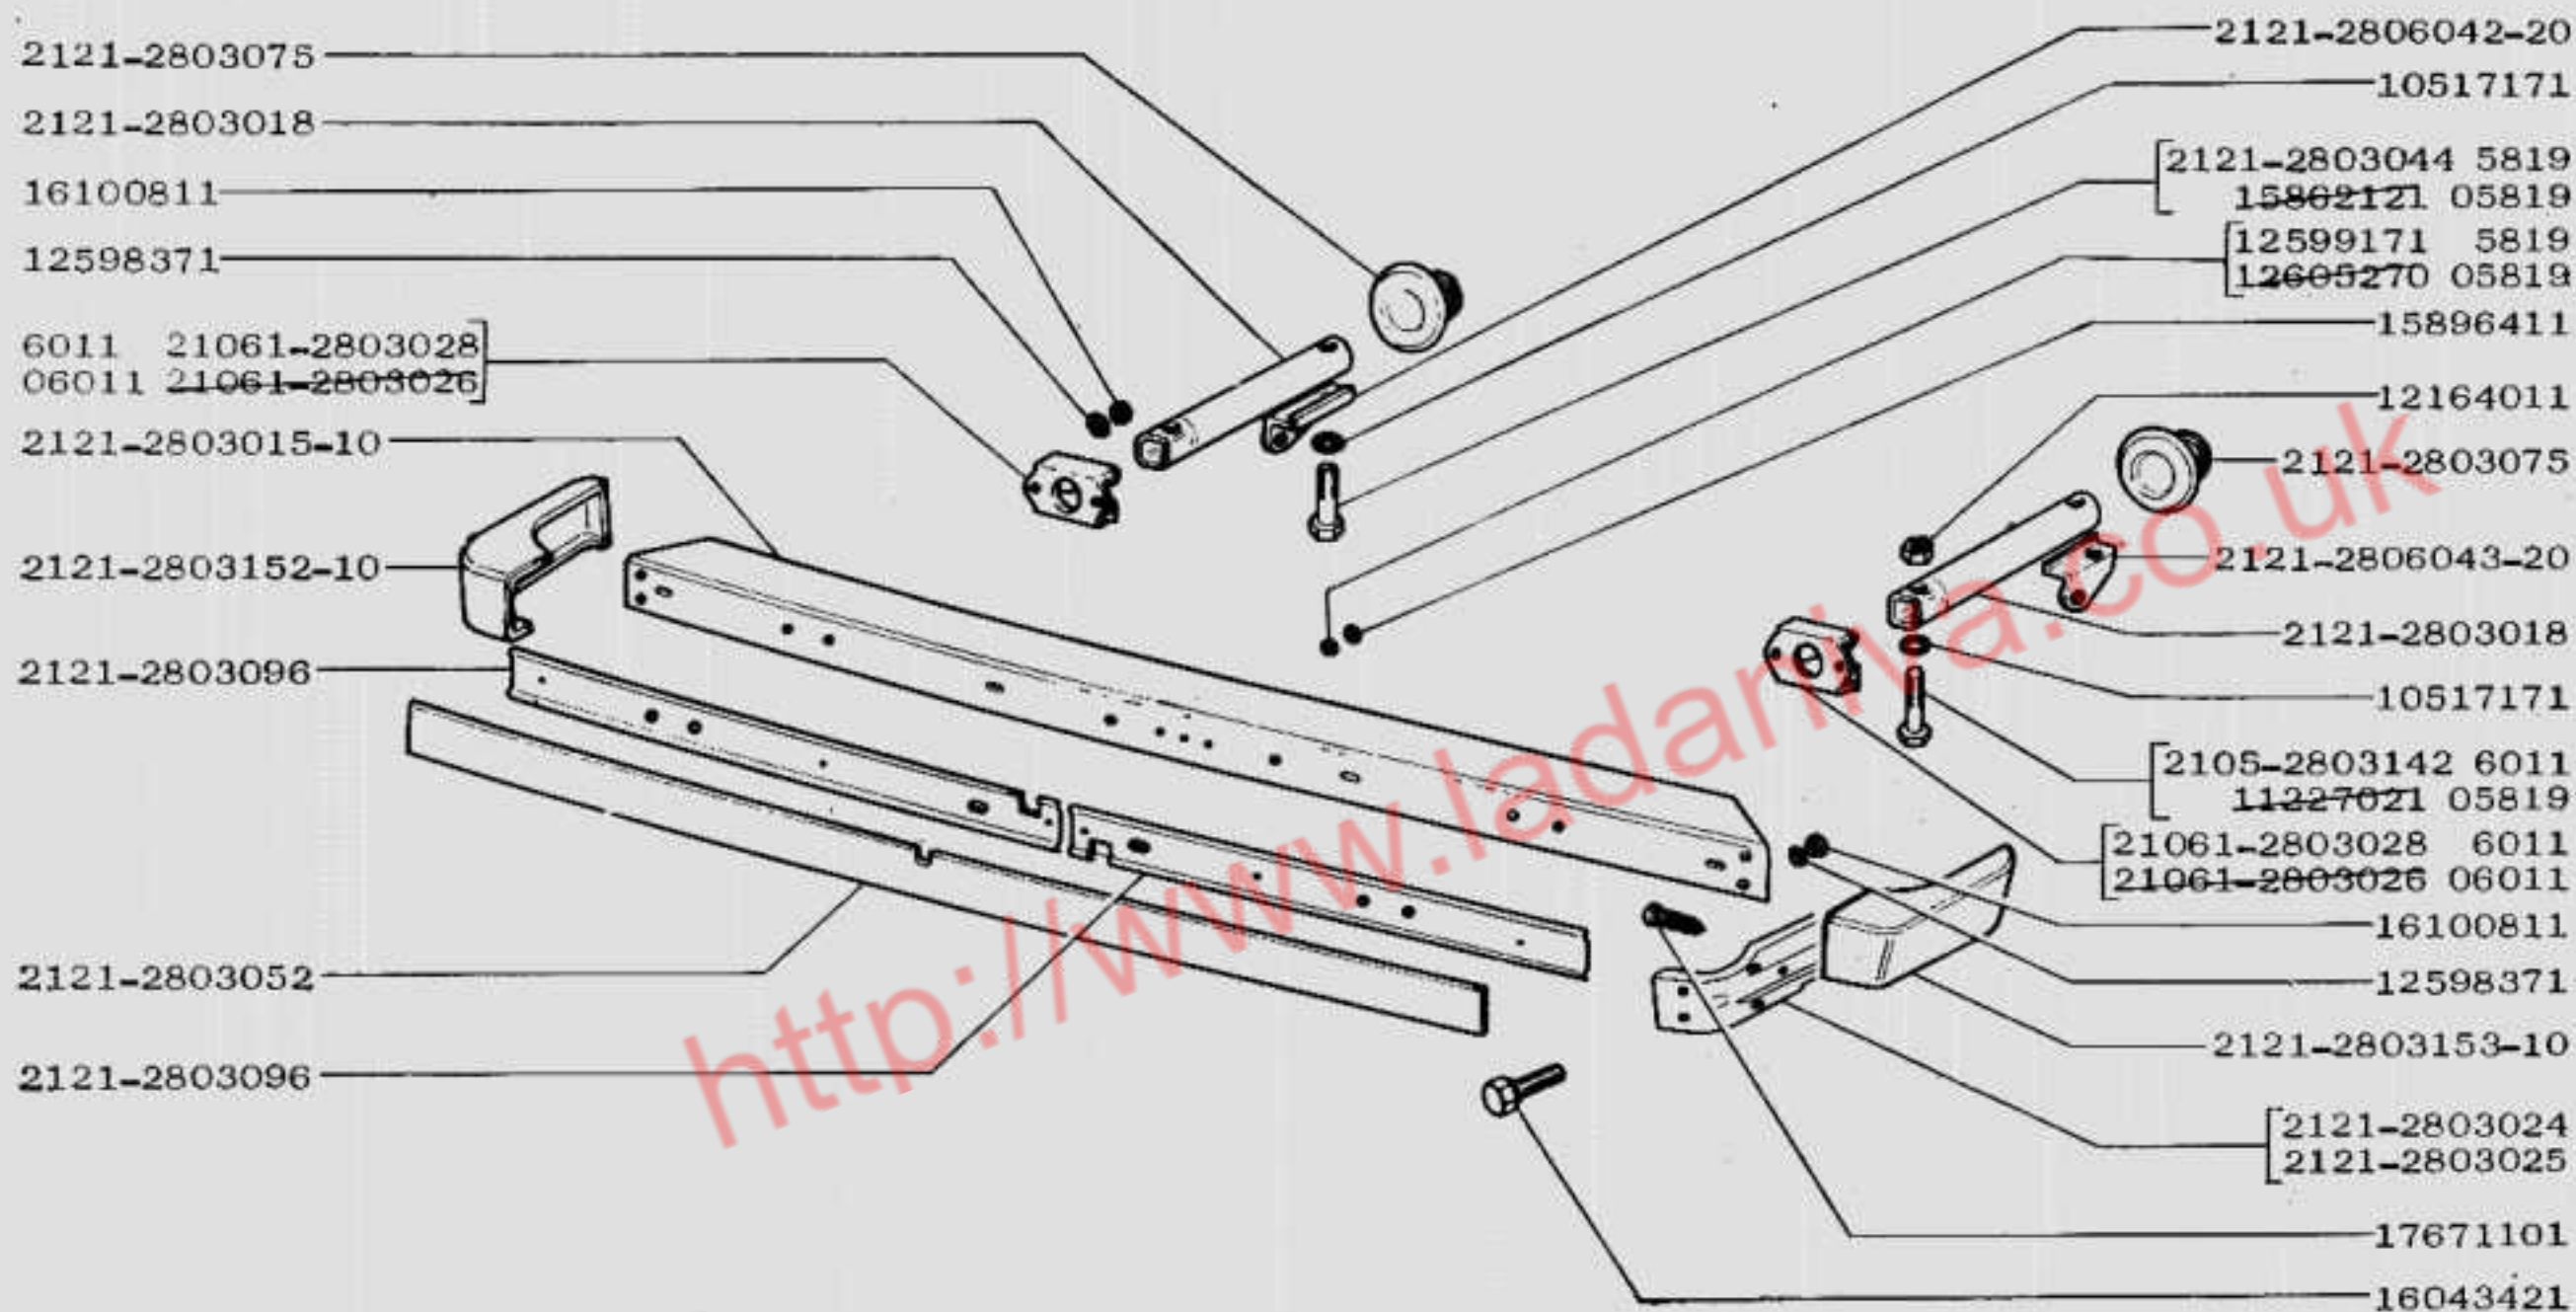

BA3-2121
BA3-21211

Буфер передний
Front Bumper
Pare-chocs avant
Vordere Stoßstange
Parachoques delantero


M4.10

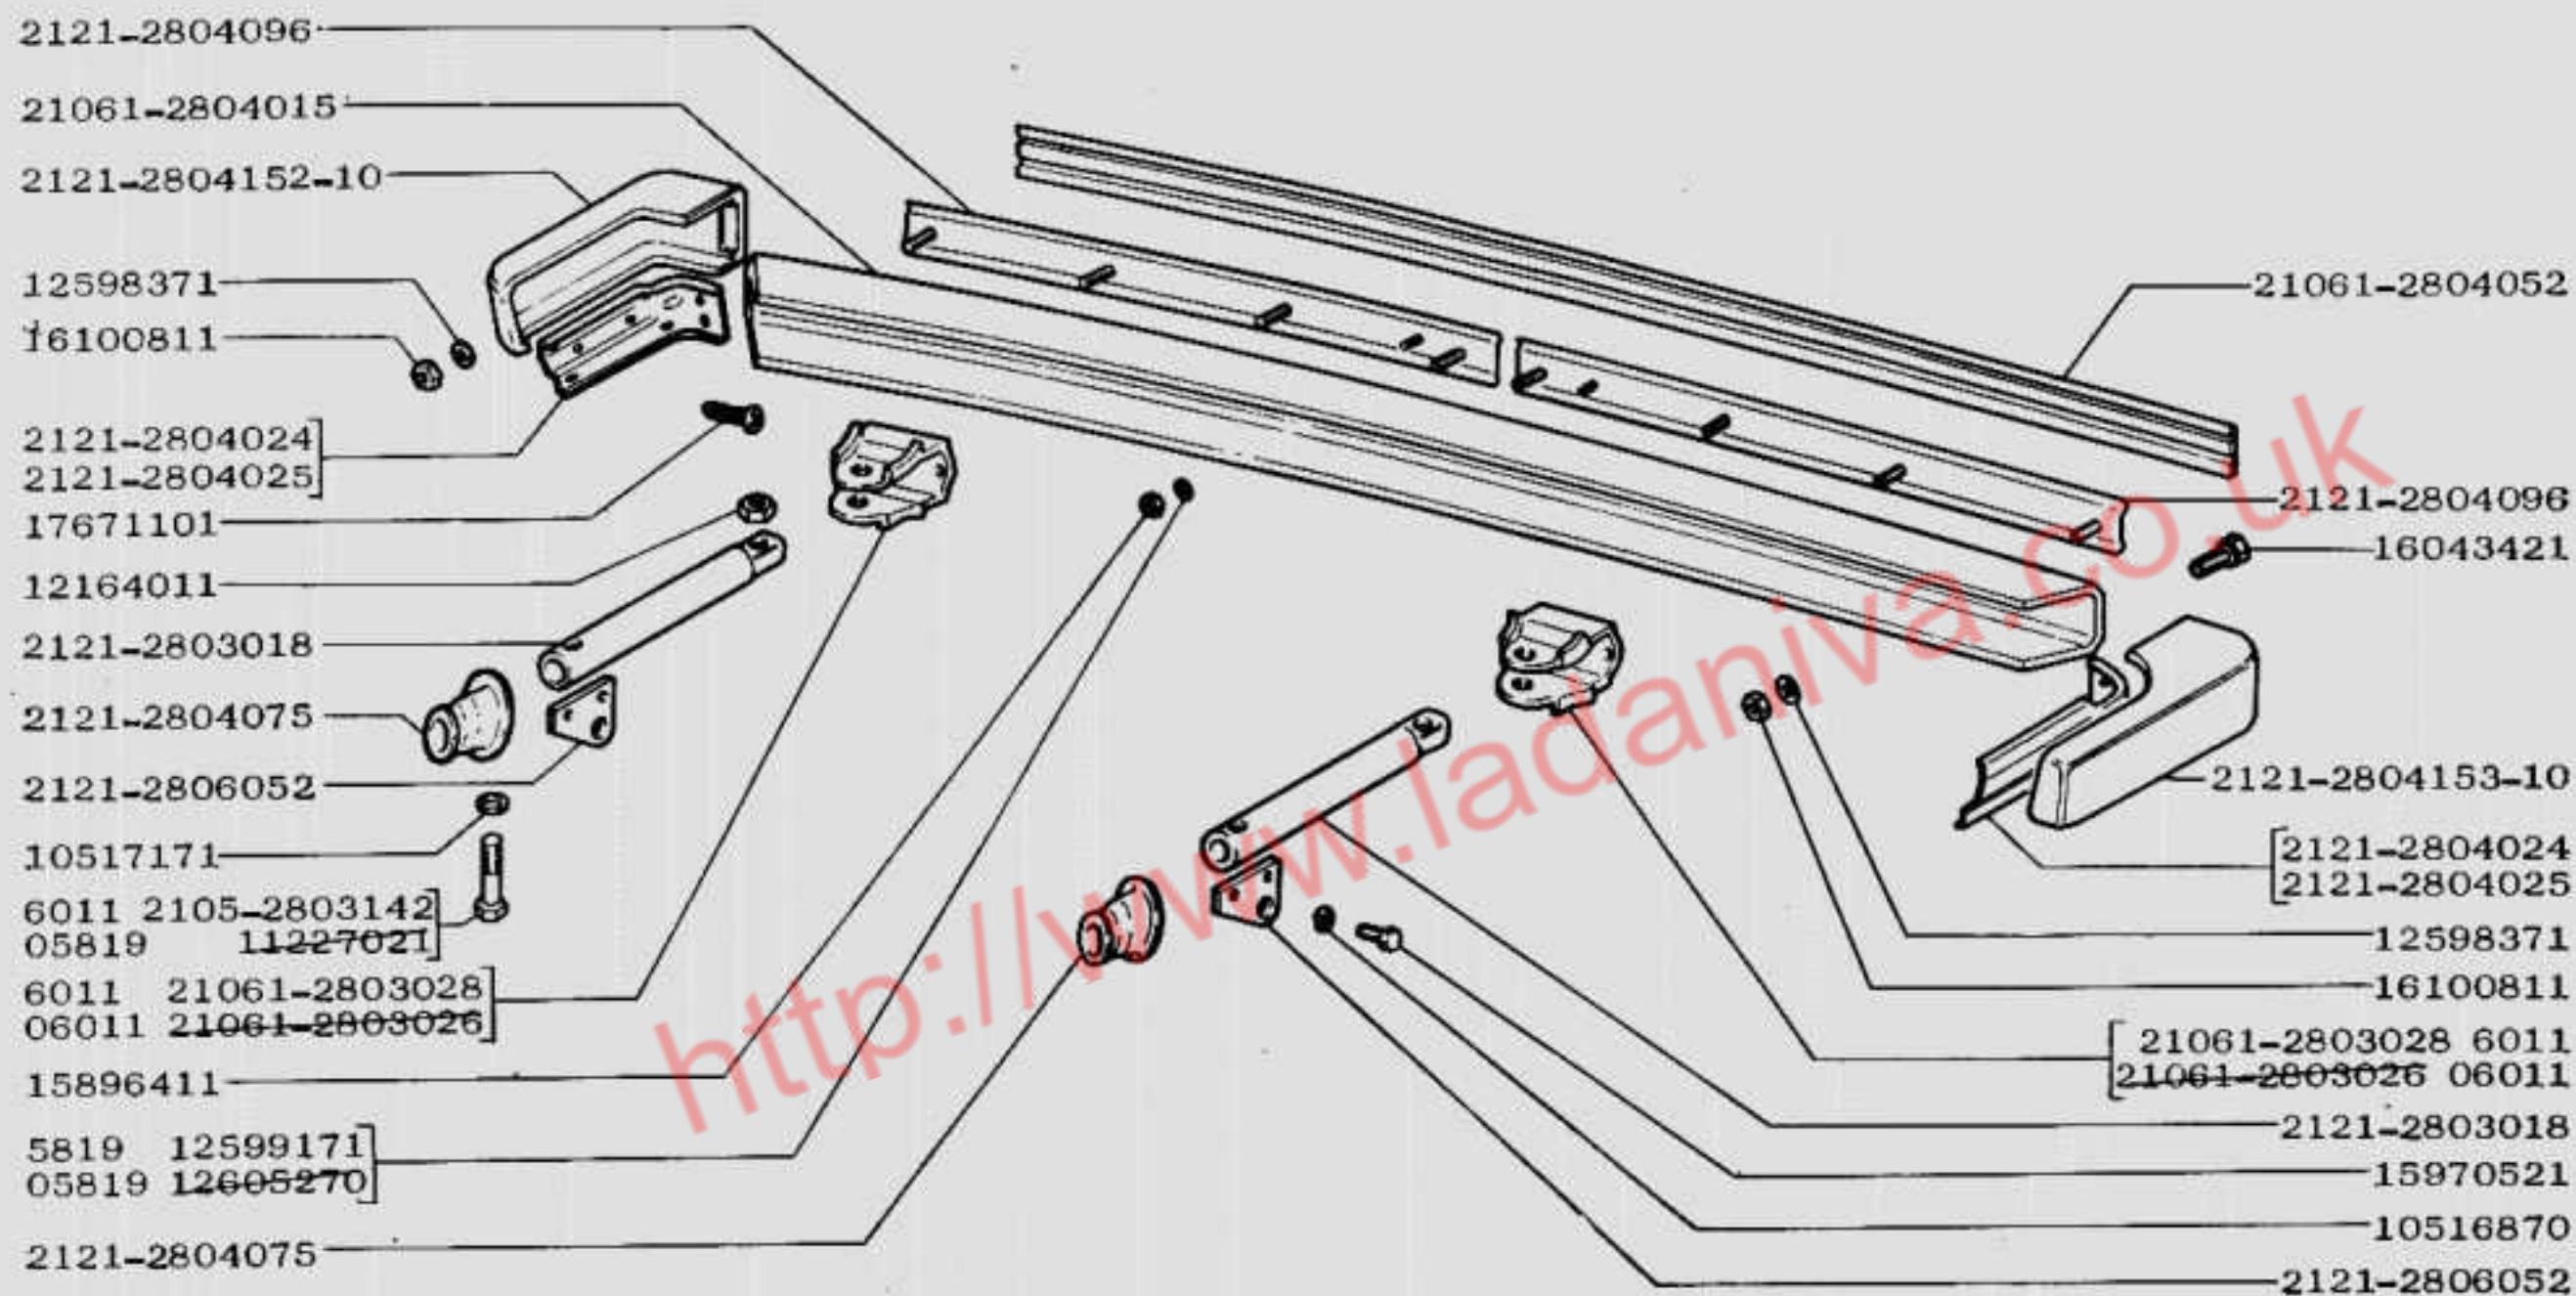

BA3-2121
BA3-21211

Буфер задний
Rear Bumper
Pare-chocs arrière
Hintere Stoßstange
Parachoques trasero

M4. 20

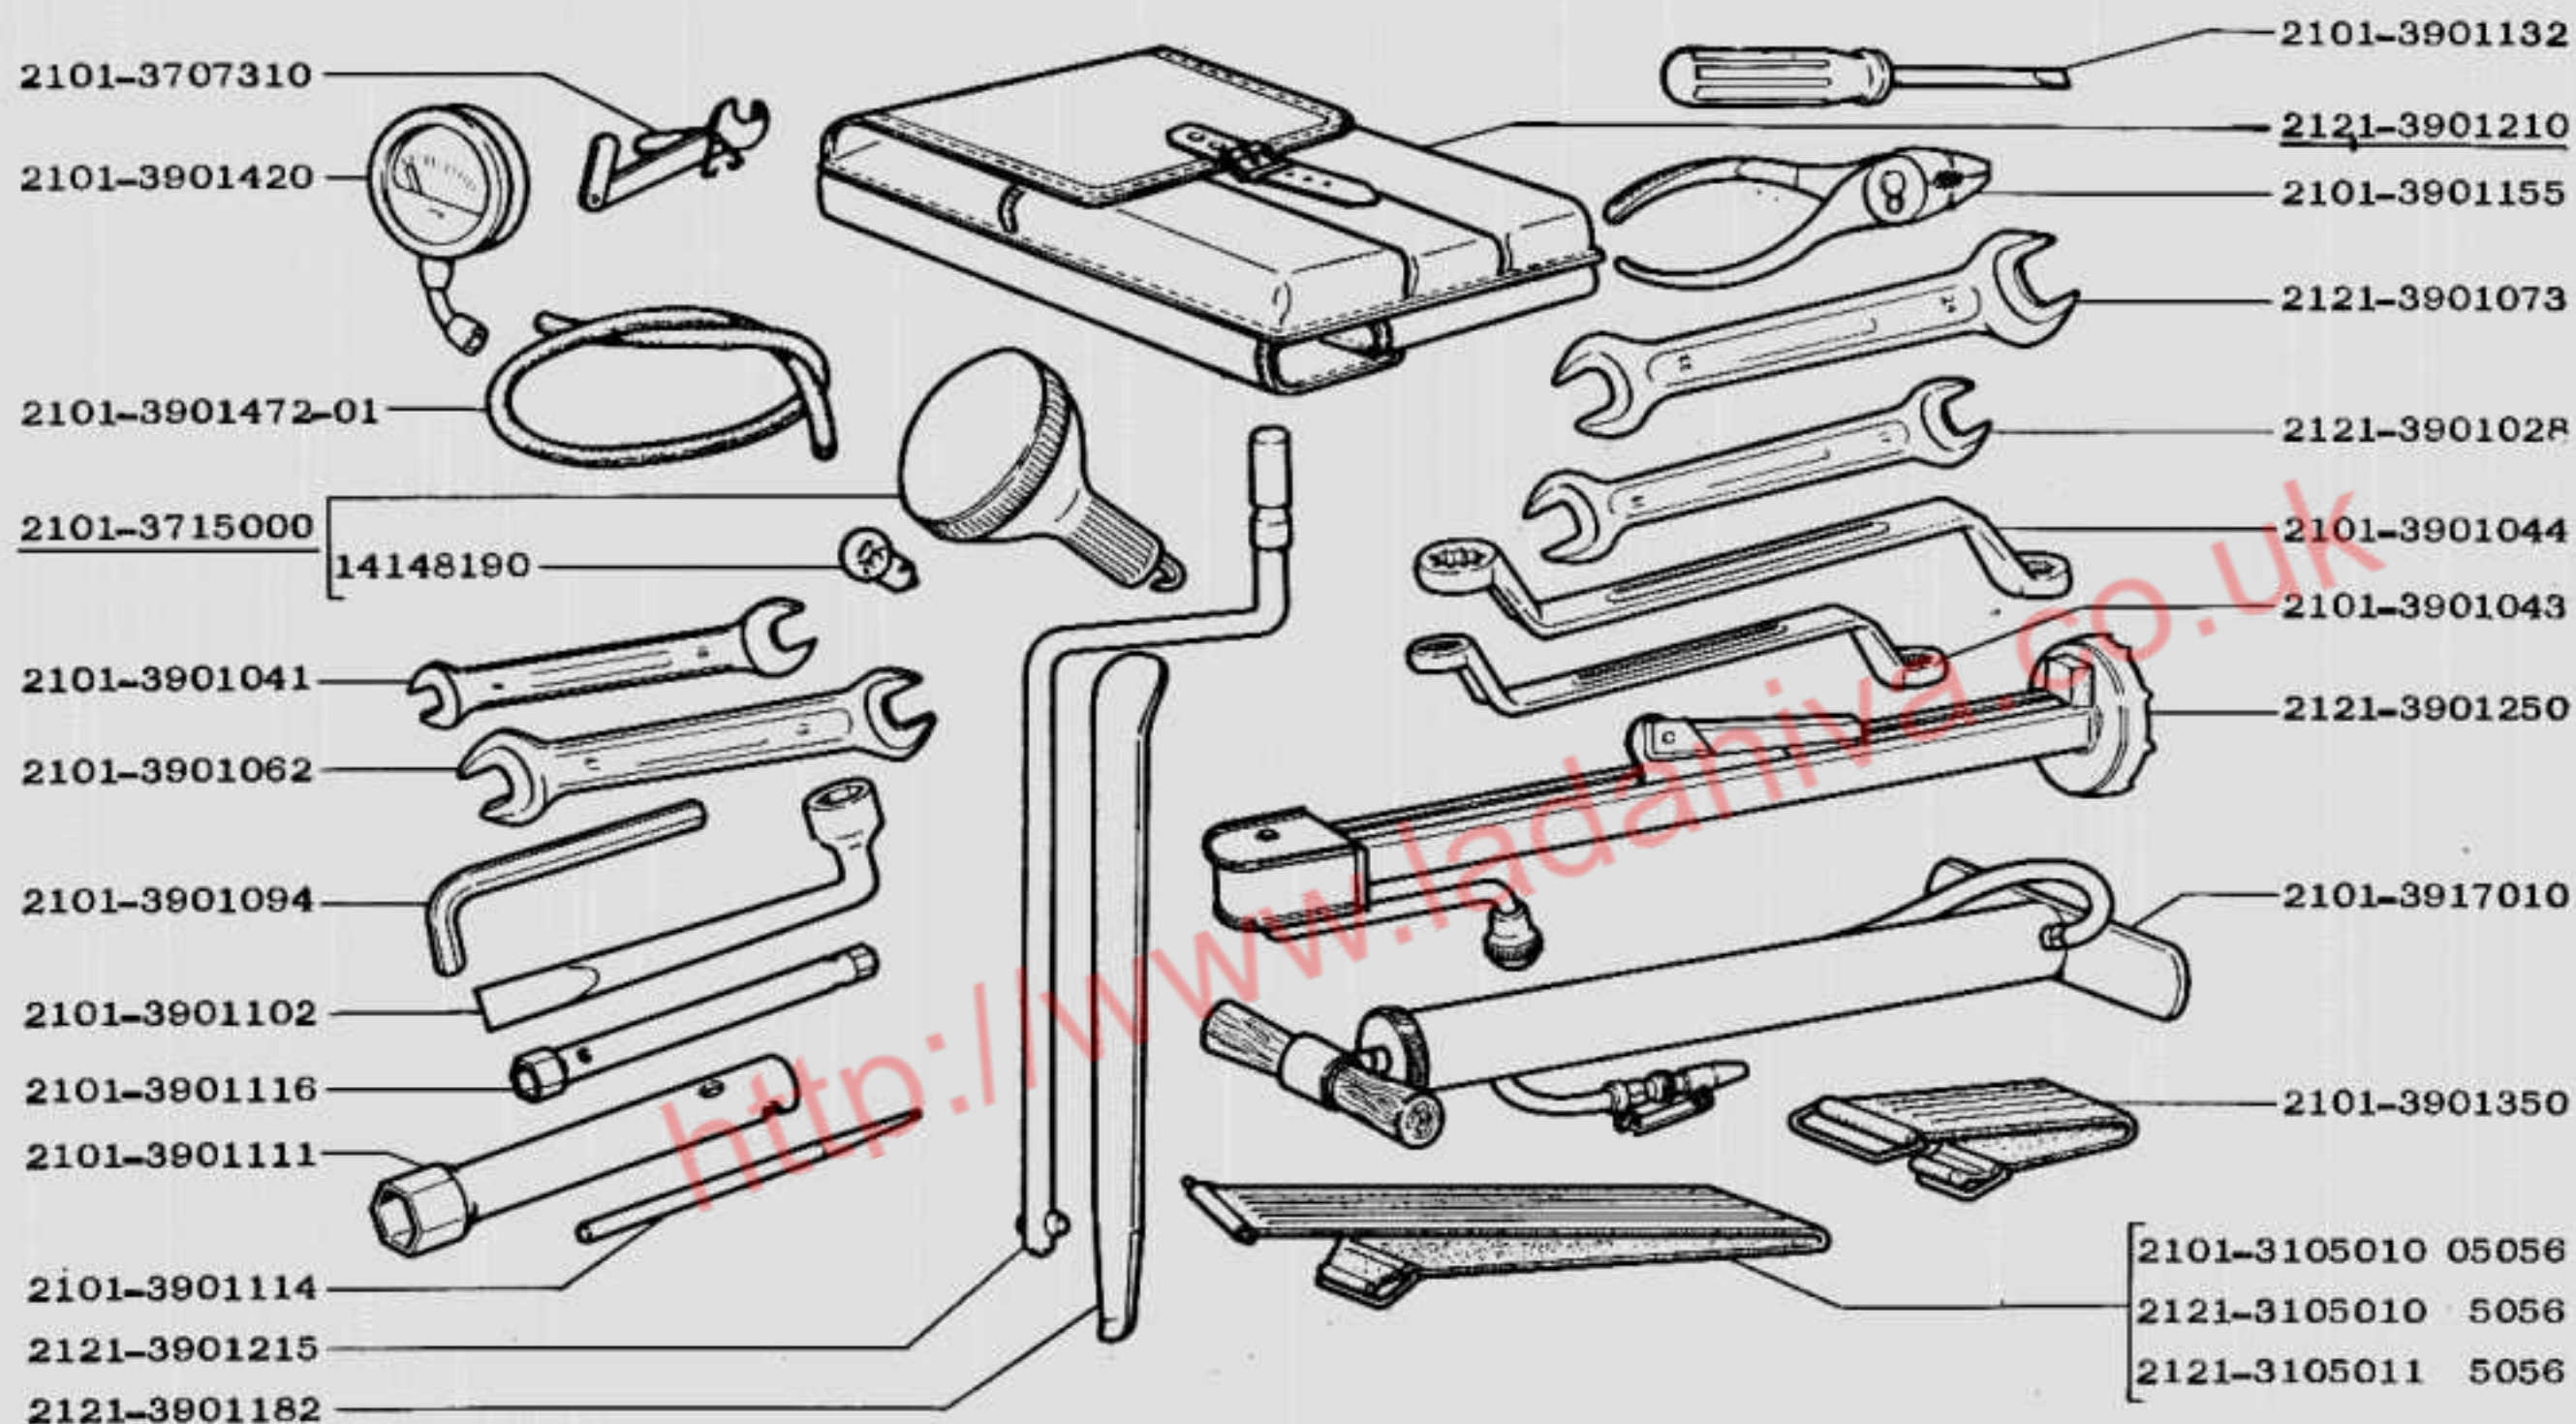

BA3-2121
BA3-21211

Инструмент шоферский
Driver's Tool Kit
Outillage de bord
Fahrerwerkzeuge
Herramientas para el chófer

Y1.01